

# R&S®SMB100B

 海洋儀器

致力于电子测试、维护领域!

## RF and Microwave Signal Generator User Manual



1178371102  
Version 09

**ROHDE & SCHWARZ**  
Make ideas real



北京海洋兴业科技股份有限公司 (股票代码: 839145) | 电话: 010-62178811 传真: 010-62176619 | 网址: www.hyxyyq.com

This document describes the R&S®SMB100B signal generator models (1422.1000.02) and options.

R&S®SMB100B RF signal generator options:

- R&S®SMBB-B101/-B103/-B106
- R&S®SMBB-B1/-B1H
- R&S®SMBB-B3
- R&S®SMBB-B5
- R&S®SMBB-B32
- R&S®SMBB-B86
- R&S®SMBB-K22/-K23/-K24/-K27
- R&S®SMBB-K31
- R&S®SMBB-K704
- R&S®SMBB-K720
- R&S®SMBB-K980

R&S®SMB100B microwave signal generator options:

- R&S®SMBB-B112/-B120/-B131/-B140(N)
- R&S®SMBB-B1/-B1H
- R&S®SMBB-B3
- R&S®SMBB-B85
- R&S®SMBB-K22/-K23/-K24/-K27
- R&S®SMBB-K33/-K35
- R&S®SMBB-K704
- R&S®SMBB-K720
- R&S®SMBB-K980
- R&S®SMBB-K986

This manual describes firmware version FW 5.30.132.xx and later of the R&S®SMB100B.

© 2024 Rohde & Schwarz

Muehldorfstr. 15, 81671 Muenchen, Germany

Phone: +49 89 41 29 - 0

Email: [info@rohde-schwarz.com](mailto:info@rohde-schwarz.com)

Internet: [www.rohde-schwarz.com](http://www.rohde-schwarz.com)

Subject to change – data without tolerance limits is not binding.

R&S® is a registered trademark of Rohde & Schwarz GmbH & Co. KG.

All other trademarks are the properties of their respective owners.

1178.3711.02 | Version 09 | R&S®SMB100B

Throughout this document, R&S® is indicated as R&S.

# Contents

<b>1</b>	<b>Safety and regulatory information.....</b>	<b>13</b>
1.1	Safety instructions.....	13
1.2	Labels on R&S SMB100B.....	16
1.3	Warning messages in the documentation.....	16
1.4	Where to find key documents on Rohde & Schwarz.....	16
1.5	Korea certification class A.....	17
<b>2</b>	<b>Welcome.....</b>	<b>18</b>
2.1	Key features.....	18
2.2	What's new.....	18
2.3	Documentation overview.....	19
2.3.1	Getting started manual.....	19
2.3.2	User manuals and help.....	19
2.3.3	Service manual.....	19
2.3.4	Instrument security procedures.....	19
2.3.5	Printed safety instructions.....	19
2.3.6	Specifications and product brochures.....	20
2.3.7	Calibration certificate.....	20
2.3.8	Release notes and open source acknowledgment.....	20
2.3.9	Application notes, application cards, white papers, etc.....	20
2.3.10	Videos.....	20
<b>3</b>	<b>Getting started.....</b>	<b>21</b>
3.1	Preparing for use.....	21
3.1.1	Lifting and carrying.....	21
3.1.2	Unpacking and checking.....	21
3.1.3	Choosing the operating site.....	21
3.1.4	Setting up the R&S SMB100B.....	22
3.1.5	Considerations for test setup.....	24
3.1.6	Connecting to power.....	24
3.1.7	Connecting to LAN.....	25
3.1.8	Connecting USB devices.....	25
3.1.9	Connecting to RF coaxial connectors.....	26

3.1.10	Connecting to RF 50 Ω.....	28
3.1.11	Connecting to Ref In/Ref Out.....	28
3.1.12	Switching on or off.....	28
<b>3.2</b>	<b>Instrument tour.....</b>	<b>29</b>
3.2.1	Front panel tour.....	30
3.2.2	Rear panel tour.....	35
<b>3.3</b>	<b>Trying out the instrument.....</b>	<b>38</b>
3.3.1	Generating an unmodulated carrier.....	38
3.3.2	Generating an RF frequency sweep signal.....	41
3.3.3	Saving and recalling settings.....	43
<b>3.4</b>	<b>Instrument control.....</b>	<b>45</b>
3.4.1	Possible ways to operate the instrument.....	46
3.4.2	Means of manual interaction.....	46
3.4.3	Understanding the display information.....	47
3.4.4	Accessing the functionality.....	50
3.4.5	Entering data.....	51
3.4.6	Getting information and help.....	53
3.4.7	Remote control.....	54
3.4.8	Remote operation over VNC.....	55
<b>4</b>	<b>RF signal configuration.....</b>	<b>56</b>
<b>4.1</b>	<b>Activating RF signal output.....</b>	<b>57</b>
<b>4.2</b>	<b>How to set the frequency and level.....</b>	<b>57</b>
<b>4.3</b>	<b>RF frequency settings.....</b>	<b>59</b>
<b>4.4</b>	<b>RF level settings.....</b>	<b>61</b>
<b>4.5</b>	<b>RF phase settings.....</b>	<b>66</b>
<b>5</b>	<b>Analog modulations.....</b>	<b>68</b>
<b>5.1</b>	<b>Required options.....</b>	<b>68</b>
<b>5.2</b>	<b>Modulation types and signal sources.....</b>	<b>68</b>
<b>5.3</b>	<b>Activating analog modulations.....</b>	<b>70</b>
<b>5.4</b>	<b>Modulation settings.....</b>	<b>71</b>
5.4.1	Pulse modulation settings.....	71
5.4.2	FM, PhiM and AM modulation settings.....	72
5.4.3	Stereo modulation.....	78

5.4.4	Pulse generator.....	87
5.4.5	Pulse graph.....	98
5.4.6	Pulse external / trigger settings.....	99
5.4.7	FM, PhiM and AM modulation sources.....	100
5.4.8	LF signal output settings.....	107
5.4.9	Overview.....	109
<b>5.5</b>	<b>How to generate an amplitude modulated signal.....</b>	<b>111</b>
<b>5.6</b>	<b>How to generate a pulse modulated signal.....</b>	<b>111</b>
<b>5.7</b>	<b>How to generate a pulse train modulated signal.....</b>	<b>112</b>
<b>6</b>	<b>List and sweep mode.....</b>	<b>114</b>
<b>6.1</b>	<b>Signal generation and triggering in the sweep and list modes.....</b>	<b>116</b>
<b>6.2</b>	<b>About sweep mode.....</b>	<b>123</b>
6.2.1	Correlating parameters in sweep mode.....	124
6.2.2	Sweep signal shapes.....	126
<b>6.3</b>	<b>About list mode.....</b>	<b>127</b>
<b>6.4</b>	<b>Significant parameters and functions.....</b>	<b>128</b>
<b>6.5</b>	<b>Sweep mode settings.....</b>	<b>130</b>
6.5.1	General sweep settings.....	130
6.5.2	Frequency range settings.....	136
6.5.3	Level range settings.....	138
<b>6.6</b>	<b>List mode settings.....</b>	<b>140</b>
6.6.1	General settings.....	141
6.6.2	List mode data settings.....	143
6.6.3	Import/export settings.....	144
<b>6.7</b>	<b>List editor.....</b>	<b>147</b>
<b>6.8</b>	<b>How to generate a signal in list or sweep mode.....</b>	<b>150</b>
<b>7</b>	<b>Improving level performance.....</b>	<b>153</b>
<b>7.1</b>	<b>Attenuator.....</b>	<b>153</b>
7.1.1	Attenuator settings.....	154
7.1.2	Reverse power protection.....	155
<b>7.2</b>	<b>Automatic level control (ALC).....</b>	<b>156</b>
7.2.1	ALC settings.....	157
<b>7.3</b>	<b>User correction.....</b>	<b>158</b>

7.3.1	User correction settings.....	161
7.3.2	List editor.....	163
7.3.3	Fill with sensor.....	167
7.3.4	Import/export list files.....	169
<b>7.4</b>	<b>Using power sensors.....</b>	<b>171</b>
7.4.1	About.....	172
7.4.2	Connecting R&S NRP power sensors to the R&S SMB100B.....	174
7.4.3	NRP power viewer.....	175
7.4.4	NRP power control.....	176
7.4.5	NRP sensor configuration.....	181
7.4.6	NRP sensor mapping.....	185
<b>7.5</b>	<b>Improving the RF signal performance.....</b>	<b>188</b>
<b>8</b>	<b>Reference oscillator.....</b>	<b>193</b>
8.1	Required options.....	193
8.2	Reference frequency settings.....	193
8.3	Reference output settings.....	197
8.4	Adjustment settings.....	198
8.5	Using the reference frequency for instruments synchronization.....	198
<b>9</b>	<b>File and data management.....</b>	<b>202</b>
9.1	About the file system.....	202
9.2	Restoring an instrument configuration.....	205
9.2.1	Preset, set to default and factory preset settings.....	207
9.2.2	Identifying parameters with non-default values.....	208
9.2.3	Presetting the instrument to a user-defined state.....	208
9.2.4	Reference.....	209
9.3	Protecting data.....	210
9.4	Saving and recalling settings.....	211
9.4.1	Save/Recall settings.....	211
9.4.2	Saving and recalling instrument settings.....	214
9.5	Accessing files with user data.....	215
9.5.1	File select settings.....	215
9.6	Exporting and importing remote command lists.....	217
9.7	Loading, importing and exporting lists.....	218

<b>9.8 Using the file manager.....</b>	<b>218</b>
9.8.1 File manager settings.....	219
9.8.2 Map network share settings.....	220
9.8.3 Displaying all saved files.....	222
9.8.4 Mapping a network folder.....	222
<b>9.9 Transferring files from and to the instrument.....</b>	<b>224</b>
9.9.1 Removing file system protection.....	225
9.9.2 Accessing the file system using FTP.....	226
9.9.3 Accessing the R&S SMB100B file system using SMB (Samba).....	227
9.9.4 Using a USB storage device for file transfer.....	229
9.9.5 Using a file server for test files exchange.....	229
<b>9.10 Creating screenshots of current settings.....</b>	<b>230</b>
9.10.1 Hardcopy settings.....	230
9.10.2 Creating a hardcopy of the display.....	234
<b>10 General instrument functions.....</b>	<b>236</b>
<b>10.1 Customizing the user interface.....</b>	<b>236</b>
10.1.1 Display and keyboard settings.....	237
10.1.2 Display update settings.....	239
10.1.3 Defining the RF signal state on power on.....	240
10.1.4 How to set the initial instrument settings.....	240
<b>10.2 Organizing frequently used settings as favorites.....</b>	<b>242</b>
10.2.1 User menu settings.....	243
10.2.2 How to use the user menu for fast adjustments.....	244
10.2.3 Define user key actions settings.....	246
10.2.4 How to assign actions to the [★ (User)] key.....	248
<b>10.3 Managing licenses and license keys.....</b>	<b>249</b>
10.3.1 Manage license keys settings.....	250
10.3.2 Using the license server.....	253
10.3.3 How to move a portable license.....	257
<b>10.4 Using the security settings.....</b>	<b>259</b>
10.4.1 Protection level settings.....	260
10.4.2 Setting security parameters.....	261
10.4.3 Configuring LAN services.....	266

10.4.4	Password management.....	270
10.4.5	Preventing unauthorized access.....	272
<b>10.5</b>	<b>Undoing or restoring actions.....</b>	<b>276</b>
<b>10.6</b>	<b>Shutting down and rebooting the instrument.....</b>	<b>278</b>
<b>11</b>	<b>Network operation and remote control.....</b>	<b>279</b>
<b>11.1</b>	<b>Overview of remote access modes.....</b>	<b>280</b>
<b>11.2</b>	<b>Remote control interfaces and protocols.....</b>	<b>281</b>
11.2.1	LAN interface.....	282
11.2.2	USB interface.....	284
11.2.3	GPIB interface (IEC/IEEE bus interface).....	285
11.2.4	LXI browser interface.....	286
<b>11.3</b>	<b>Remote control programs and libraries.....</b>	<b>286</b>
<b>11.4</b>	<b>Status reporting system.....</b>	<b>289</b>
11.4.1	Overview of the status registers.....	289
11.4.2	Instrument-specific status operation register.....	291
11.4.3	Instrument-specific status questionable register.....	291
11.4.4	Reset values of the status reporting system.....	292
<b>11.5</b>	<b>Remote access settings.....</b>	<b>292</b>
11.5.1	Network settings.....	294
11.5.2	VISA resource strings.....	297
11.5.3	GPIB address settings.....	299
11.5.4	RS232 settings.....	300
11.5.5	Instrument emulations settings.....	301
11.5.6	Remote connections settings.....	302
11.5.7	HUMS settings.....	304
11.5.8	HUMS enhanced settings.....	305
11.5.9	QR code.....	314
<b>11.6</b>	<b>LXI settings.....</b>	<b>315</b>
11.6.1	LXI status settings.....	315
11.6.2	LXI browser settings.....	316
<b>11.7</b>	<b>To configure the instrument for remote access.....</b>	<b>323</b>
11.7.1	To find the VISA resource string.....	323
11.7.2	To configure the access over LAN.....	324



11.7.3	To configure the access over GPIB.....	327
<b>11.8</b>	<b>To establish a remote control session over LAN.....</b>	<b>328</b>
11.8.1	To establish the connection with the LXI web browser.....	328
11.8.2	To establish the connection using VXI-11 protocol.....	329
11.8.3	To establish the connection using socket communication.....	334
<b>11.9</b>	<b>To establish a remote control session over GPIB.....</b>	<b>335</b>
<b>11.10</b>	<b>To establish a remote control session over USB.....</b>	<b>336</b>
<b>11.11</b>	<b>To trace messages with the LXI web browser interface.....</b>	<b>337</b>
<b>11.12</b>	<b>To return to manual operation.....</b>	<b>337</b>
<b>11.13</b>	<b>To automate tasks with remote command scripts.....</b>	<b>338</b>
11.13.1	Show SCPI command settings.....	340
11.13.2	Displaying a SCPI list.....	341
11.13.3	SCPI recording export settings.....	342
11.13.4	How to record / create SCPI lists.....	343
11.13.5	How to convert and save SCPI lists.....	347
11.13.6	How to find out the SCPI commands for GUI functions.....	348
<b>11.14</b>	<b>To operate the instrument using VNC.....</b>	<b>349</b>
11.14.1	Enabling VNC service.....	350
11.14.2	How to set up remote operation from a desktop system.....	350
11.14.3	How to set up remote operation from a smart device.....	352
<b>11.15</b>	<b>References.....</b>	<b>355</b>
11.15.1	LXI functionality.....	355
11.15.2	Code generator templates.....	356
11.15.3	Remote control states.....	358
<b>12</b>	<b>Remote control commands.....</b>	<b>360</b>
<b>12.1</b>	<b>Conventions used in SCPI command descriptions.....</b>	<b>360</b>
<b>12.2</b>	<b>Programming examples.....</b>	<b>361</b>
<b>12.3</b>	<b>Common commands.....</b>	<b>362</b>
<b>12.4</b>	<b>Preset commands.....</b>	<b>366</b>
<b>12.5</b>	<b>MMEMory subsystem.....</b>	<b>368</b>
12.5.1	File naming conventions.....	368
12.5.2	Handling files in the default or in a specified directory.....	369
12.5.3	Programming examples.....	370

12.5.4	Remote control commands.....	372
<b>12.6</b>	<b>CALibration subsystem.....</b>	<b>378</b>
<b>12.7</b>	<b>DIAGnostic subsystem.....</b>	<b>382</b>
<b>12.8</b>	<b>HUMS remote control commands.....</b>	<b>385</b>
<b>12.9</b>	<b>DISPlay subsystem.....</b>	<b>392</b>
<b>12.10</b>	<b>FORMat subsystem.....</b>	<b>397</b>
<b>12.11</b>	<b>HCOPy subsystem.....</b>	<b>398</b>
12.11.1	Hard copy settings.....	399
12.11.2	Automatic naming.....	401
<b>12.12</b>	<b>KBOard subsystem.....</b>	<b>403</b>
<b>12.13</b>	<b>OUTPut subsystem.....</b>	<b>404</b>
<b>12.14</b>	<b>SENSe, READ, INITiate and SLISt subsystems.....</b>	<b>407</b>
<b>12.15</b>	<b>SOURce subsystem.....</b>	<b>422</b>
12.15.1	Analog modulation subsystems.....	423
12.15.2	SOURce:CORRection subsystem.....	457
12.15.3	SOURce:FREQuency subsystem.....	465
12.15.4	SOURce:INPut subsystem.....	471
12.15.5	SOURce:LFOutput subsystem.....	472
12.15.6	SOURce:LIST subsystem.....	485
12.15.7	SOURce:NOISe subsystem.....	498
12.15.8	SOURce:PGEN subsystem.....	500
12.15.9	SOURce:PHASe subsystem.....	501
12.15.10	SOURce:POWer subsystem.....	502
12.15.11	SOURce:ROSCillator subsystem.....	515
12.15.12	SOURce:SWEep subsystem.....	520
<b>12.16</b>	<b>SYSTem subsystem.....</b>	<b>531</b>
<b>12.17</b>	<b>STATus subsystem.....</b>	<b>562</b>
<b>12.18</b>	<b>TEST subsystem.....</b>	<b>566</b>
<b>12.19</b>	<b>TRIGger subsystem.....</b>	<b>568</b>
<b>12.20</b>	<b>UNIT subsystem.....</b>	<b>572</b>
<b>12.21</b>	<b>Direct commands for the stereo/rds coder option R&amp;S SMBB-B5.....</b>	<b>572</b>
12.21.1	Programming examples.....	573
12.21.2	Remote-control commands.....	575

<b>13</b>	<b>Troubleshooting and notifications.....</b>	<b>594</b>
<b>13.1</b>	<b>Notifications.....</b>	<b>594</b>
13.1.1	Volatile notifications.....	594
13.1.2	Permanent notifications.....	595
<b>13.2</b>	<b>SCPI notifications.....</b>	<b>595</b>
<b>13.3</b>	<b>Device-specific notifications.....</b>	<b>595</b>
<b>13.4</b>	<b>Querying notifications.....</b>	<b>596</b>
<b>13.5</b>	<b>Resolving network connection failures.....</b>	<b>598</b>
<b>13.6</b>	<b>Resolving errors during internal adjustments.....</b>	<b>599</b>
<b>13.7</b>	<b>Measuring USB cable quality.....</b>	<b>599</b>
<b>13.8</b>	<b>Checking the instrument configuration.....</b>	<b>600</b>
13.8.1	Hardware configuration settings.....	602
13.8.2	Versions and options settings.....	603
<b>13.9</b>	<b>Collecting information for technical support.....</b>	<b>605</b>
<b>13.10</b>	<b>Contacting customer support.....</b>	<b>606</b>
<b>14</b>	<b>Transporting.....</b>	<b>608</b>
<b>15</b>	<b>Maintenance, storage and disposal.....</b>	<b>609</b>
<b>15.1</b>	<b>Cleaning.....</b>	<b>609</b>
<b>15.2</b>	<b>Storage.....</b>	<b>609</b>
<b>15.3</b>	<b>Performing maintenance tasks.....</b>	<b>609</b>
15.3.1	Internal adjustments.....	609
15.3.2	Date and time.....	613
15.3.3	Check front panel.....	616
15.3.4	Check display screen.....	619
15.3.5	FPGA/uC update settings.....	620
15.3.6	Delete temporary files.....	622
<b>15.4</b>	<b>Disposal.....</b>	<b>623</b>
	<b>Annex.....</b>	<b>624</b>
<b>A</b>	<b>Reference information for remote control.....</b>	<b>624</b>
<b>A.1</b>	<b>Telnet program examples.....</b>	<b>624</b>
<b>A.2</b>	<b>Extensions for user files.....</b>	<b>629</b>
<b>B</b>	<b>Unit shortcuts.....</b>	<b>630</b>

<b>C</b>	<b>GPIB interface.....</b>	<b>632</b>
	<b>Glossary: Terms and abbreviations.....</b>	<b>634</b>
	<b>List of commands.....</b>	<b>638</b>
	<b>Index.....</b>	<b>650</b>

# 1 Safety and regulatory information

The product documentation helps you use the product safely and efficiently. Follow the instructions provided here and in the following chapters.

## Intended use

The product generates radio frequency (RF) signals for the development, production and verification of electronic components, modules or devices. The product is intended for industrial use, for example for production and conformance testing, maintenance and engineering laboratories.

Use the product only for its designated purpose. Any other use is considered improper use. Observe the operating conditions and performance limits stated in the specifications document.

## Target audience

This document targets at all users, including technicians, operators, administrators and maintenance personnel. The required skills and experience of the users depend on the test setup and application of the product.

## Where do I find safety information?

Safety information is part of the product documentation. It warns you of potential dangers and gives instructions on how to prevent personal injury or damage caused by dangerous situations. Safety information is provided as follows:

- In [Chapter 1.1, "Safety instructions"](#), on page 13. The same information is provided in many languages in printed format. The printed "Safety Instructions" for "Mains-Powered Products, Not Heavy" (document number 1171.1771.99) are delivered with the product.
- Throughout the documentation, safety instructions are provided when you need to take care during setup or operation.

## 1.1 Safety instructions

Products from the Rohde & Schwarz group of companies are manufactured according to the highest technical standards. To use the products safely, follow the instructions provided here and in the product documentation. Keep the product documentation nearby and offer it to other users.

Use the product only for its intended use and within its performance limits. Intended use and limits are described in the product documentation such as the specifications document, manuals and the printed "Safety Instructions" document. If you are unsure about the appropriate use, contact Rohde & Schwarz customer support.

Using the product requires specialists or specially trained personnel. These users also need sound knowledge of at least one of the languages in which the user interfaces and the product documentation are available.

Reconfigure or adjust the product only as described in the product documentation or the specifications document. Any other modifications can affect safety and are not permitted.

Never open the casing of the product. Only service personnel authorized by Rohde & Schwarz are allowed to repair the product. If any part of the product is damaged or broken, stop using the product. Contact Rohde & Schwarz customer support at <https://www.rohde-schwarz.com/support>.

### **Lifting and carrying the product**

The maximum weight of the product is provided in the specifications document. You can lift or carry the product by yourself, if you can manage the weight on your own. Alternatively, you can use lifting or transporting equipment. Follow the instructions provided by the equipment manufacturer.

### **Choosing the operating site**

Only use the product indoors. The product casing is not waterproof. Water that enters can electrically connect the casing with live parts, which can lead to electric shock, serious personal injury or death if you touch the casing.

If Rohde & Schwarz provides accessories designed for outdoor use of your product, e.g. a protective cover, you can use the product outdoors.

You can operate the product up to an altitude of 2000 m above sea level. If a higher altitude is permissible, the value is provided in the specifications document. The product is suitable for pollution degree 2 environments where nonconductive contamination can occur. For more information on environmental conditions such as ambient temperature and humidity, see the specifications document.

### **Setting up the product**

Always place the product on a stable, flat and level surface with the bottom of the product facing down. If the product is designed for different positions, secure the product so that it cannot fall over.

If the product has foldable feet, always fold the feet completely in or out to ensure stability. The feet can collapse if they are not folded out completely or if the product is moved without lifting it. The foldable feet are designed to carry the weight of the product, but not an extra load.

If stacking is possible, keep in mind that a stack of products can fall over and cause injury.

If you mount products in a rack, ensure that the rack has sufficient load capacity and stability. Observe the specifications of the rack manufacturer. Always install the products from the bottom shelf to the top shelf so that the rack stands securely. Secure the product so that it cannot fall off the rack.

### **Connecting the product**

Before connecting the interfaces and measuring inputs of the product to other products or electrical circuits, make sure that the other products or electrical circuits provide

special protection against electric shock. This protection principle is referred to as SELV (safety extra-low voltage) and is based on a low voltage level and increased insulation. Exceptions are indicated by a measurement category on the product and given in the specifications document.

### Connecting to power

The product is an overvoltage category II product. Connect the product to a fixed installation used to supply energy-consuming equipment such as household appliances and similar loads. Keep in mind that electrically powered products have risks, such as electric shock, fire, personal injury or even death. Replace parts that are relevant to safety only by original parts, e.g. power cables or fuses.

Take the following measures for your safety:




- Before switching on the product, ensure that the voltage and frequency indicated on the product match the available power source. If the power adapter does not adjust automatically, set the correct value and check the rating of the fuse.
- Only use the power cable delivered with the product. It complies with country-specific safety requirements. Only insert the plug into an outlet with protective conductor terminal.
- Only use intact cables and route them carefully so that they cannot be damaged. Check the power cables regularly to ensure that they are undamaged. Also ensure that nobody can trip over loose cables.
- Only connect the product to a power source with a fuse protection of maximum 20 A.
- Ensure that you can disconnect the product from the power source at any time. Pull the power plug to disconnect the product. The power plug must be easily accessible. If the product is integrated into a system that does not meet these requirements, provide an easily accessible circuit breaker at the system level.

### Cleaning the product

Use a dry, lint-free cloth to clean the product. When cleaning, keep in mind that the casing is not waterproof. Do not use liquid cleaning agents.

### Meaning of safety labels

Safety labels on the product warn against potential hazards.

	<p>Potential hazard Read the product documentation to avoid personal injury or product damage.</p>
	<p>Electrical hazard Indicates live parts. Risk of electric shock, fire, personal injury or even death.</p>
	<p>Hot surface Do not touch. Risk of skin burns. Risk of fire.</p>



Protective conductor terminal

Connect this terminal to a grounded external conductor or to protective ground. This connection protects you against electric shock if an electric problem occurs.

## 1.2 Labels on R&S SMB100B

Labels on the casing inform about:

- Personal safety, see "[Connecting to power](#)" on page 15.
- Product and environment safety, see [Table 1-1](#).
- Identification of the product, see the serial number on the rear panel.

**Table 1-1: Labels regarding R&S SMB100B and environment safety**



Labeling in line with EN 50419 for disposal of electrical and electronic equipment after the product has come to the end of its service life. For more information, see [Chapter 15.4, "Disposal"](#), on page 623.

## 1.3 Warning messages in the documentation

A warning message points out a risk or danger that you need to be aware of. The signal word indicates the severity of the safety hazard and how likely it will occur if you do not follow the safety precautions.

### WARNING

Potentially hazardous situation. Could result in death or serious injury if not avoided.

### CAUTION

Potentially hazardous situation. Could result in minor or moderate injury if not avoided.

### NOTICE

Potential risks of damage. Could result in damage to the supported product or to other property.

## 1.4 Where to find key documents on Rohde & Schwarz

Certificates issued to Rohde & Schwarz that are relevant for your country are provided at [www.rohde-schwarz.com/key-documents](http://www.rohde-schwarz.com/key-documents), e.g. concerning:

- Quality management
- Environmental management
- Information security management
- Accreditations



## 1.5 Korea certification class A



이 기기는 업무용(A급) 전자파 적합기기로서 판매자 또는 사용자는 이 점을 주의하시기  
바라며, 가정외의 지역에서 사용하는 것을 목적으로 합니다.

## 2 Welcome

The R&S SMB100B is a high-performance signal generator developed to meet demanding customer requirements. Offering excellent signal characteristic and straightforward and intuitive operation, the signal generator makes signal generation fast and easy.

### 2.1 Key features

Outstanding key features of the R&S SMB100B are:

- Frequency range from 8 kHz up to 40 GHz
- Excellent SSB phase noise
- Low wideband noise
- High output power
- Closed loop power control
- User correction
- Pulse train generation
- SCPI macro recorder and code generator for generating executable remote control code from manual operating steps (for MATLAB®, CVI, etc.)
- Compact racks with a height of 2 U and different widths and depths
- 5" Graphical user interface with touchscreen

For more information, refer to the specifications document.

### 2.2 What's new

This manual describes firmware version FW 5.30.132.xx and later of the R&S®SMB100B.

Compared to the previous version, it provides the new features listed below:

- New instrument R&S SMB100B microwave signal generator with a frequency range from 12.75 GHz up to 40 GHz.  
See [Chapter 3.2, "Instrument tour"](#), on page 29.
- NRP closed loop power control to achieve a constant input power at the DUT in real time, see [Chapter 7.4.4, "NRP power control"](#), on page 176.
- Combined USB/GPIB interface for remote control (option R&S®SMBB-B86/-K986)
- Test function to check the display screen added, see [Chapter 15.3.4, "Check display screen"](#), on page 619.
- Glossary for publications and references added.

## 2.3 Documentation overview

This section provides an overview of the R&S SMB100B user documentation. Unless specified otherwise, you find the documents at:

[www.rohde-schwarz.com/manual/smb100b](http://www.rohde-schwarz.com/manual/smb100b)

### 2.3.1 Getting started manual

Introduces the R&S SMB100B and describes how to set up and start working with the product. Includes basic operations, typical measurement examples, and general information, e.g. safety instructions, etc. A printed version is delivered with the instrument.

### 2.3.2 User manuals and help

Contains the description of all instrument modes and functions. It also provides an introduction to remote control, a complete description of the remote control commands with programming examples, and information on maintenance, instrument interfaces and error messages. Includes the contents of the getting started manual.

The contents of the user manuals are available as help in the R&S SMB100B. The help offers quick, context-sensitive access to the complete information.

All user manuals are also available for download or for immediate display on the internet.

### 2.3.3 Service manual

Describes the performance test for checking compliance with rated specifications, firmware update, troubleshooting, adjustments, installing options and maintenance.

The service manual is available for registered users on the global Rohde & Schwarz information system (GLORIS):

<https://gloris.rohde-schwarz.com>

### 2.3.4 Instrument security procedures

Deals with security issues when working with the R&S SMB100B in secure areas. It is available for download on the internet.

### 2.3.5 Printed safety instructions

Provides safety information in many languages. The printed document is delivered with the product.

### 2.3.6 Specifications and product brochures

The specifications document, also known as the data sheet, contains the technical specifications of the R&S SMB100B. It also lists the firmware applications and their order numbers, and optional accessories.

The brochure provides an overview of the instrument and deals with the specific characteristics.

See [www.rohde-schwarz.com/brochure-datasheet/smb100b](http://www.rohde-schwarz.com/brochure-datasheet/smb100b)

### 2.3.7 Calibration certificate

The document is available on <https://gloris.rohde-schwarz.com/calcert>. You need the device ID of your instrument, which you can find on a label on the rear panel.

### 2.3.8 Release notes and open source acknowledgment

The release notes list new features, improvements and known issues of the current software version, and describe the software installation.

The software uses several valuable open source software packages. An open source acknowledgment document provides verbatim license texts of the used open source software.

[www.rohde-schwarz.com/firmware/smb100b](http://www.rohde-schwarz.com/firmware/smb100b)

### 2.3.9 Application notes, application cards, white papers, etc.

These documents deal with special applications or background information on particular topics.

For some application sheets, see also:

[www.rohde-schwarz.com/application/smb100b](http://www.rohde-schwarz.com/application/smb100b)

### 2.3.10 Videos

Find various videos on Rohde & Schwarz products and test and measurement topics on YouTube: <https://www.youtube.com/@RohdeundSchwarz>



On the menu bar, search for your product to find related videos.

HOME VIDEOS SHORTS PLAYLISTS COMMUNITY CHANNELS ABOUT



Figure 2-1: Product search on YouTube

## 3 Getting started

### 3.1 Preparing for use

Here, you can find basic information about setting up the product for the first time.

#### 3.1.1 Lifting and carrying

For safety information, see "[Lifting and carrying the product](#)" on page 14.

Use the handles for lifting and carrying the R&S SMB100B.

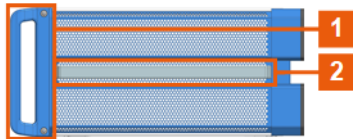


Figure 3-1: Instrument side view with front handles (1) and side handles (2)

#### 3.1.2 Unpacking and checking

1. Unpack the R&S SMB100B carefully.
2. Retain the original packing material. Use it to protect the control elements and connectors when transporting or shipping the R&S SMB100B later.  
See also [Chapter 14, "Transporting"](#), on page 608.
3. Using the delivery notes, check the equipment for completeness.
4. Check the equipment for damage.

If the delivery is incomplete or equipment is damaged, contact Rohde & Schwarz.

#### 3.1.3 Choosing the operating site

Specific operating conditions ensure proper operation and avoid damage to the product and connected devices. For information on environmental conditions such as ambient temperature and humidity, see the specifications document.

For safety information, see "[Choosing the operating site](#)" on page 14.

##### Electromagnetic compatibility classes

The electromagnetic compatibility (EMC) class indicates where you can operate the product. The EMC class of the product is given in the specifications document.

- Class B equipment is suitable for use in:

- Residential environments
- Environments that are directly connected to a low-voltage supply network that supplies residential buildings
- Class A equipment is intended for use in industrial environments. It can cause radio disturbances in residential environments due to possible conducted and radiated disturbances. It is therefore not suitable for class B environments. If class A equipment causes radio disturbances, take appropriate measures to eliminate them.

### 3.1.4 Setting up the R&S SMB100B

See also:

- ["Setting up the product"](#) on page 14
- ["Intended use"](#) on page 13


#### 3.1.4.1 Placing the R&S SMB100B on a bench top

##### To place the product on a bench top

1. Place the product on a stable, flat and level surface. Ensure that the surface can support the weight of the product. For information on the weight, see the specifications document.
2. **CAUTION!** Foldable feet can collapse. For safety information, see ["Setting up the product"](#) on page 14.  
Always fold the feet completely in or out. With folded-out feet, do not place anything on top or underneath the product.
3. **WARNING!** A stack of products can fall over and cause injury. Never stack more than three products on top of each other. Instead, mount them in a rack.

Stack as follows:

- If the products have foldable feet, fold them in completely.
- It is best if all products have the same dimensions (width and length). If the products have different dimensions, stack according to size and place the smallest product on top.
- Do not exceed the permissible total load placed on the product at the bottom of the stack:
  - 50 kg when stacking products of identical dimensions (left figure).
  - 25 kg when stacking smaller products on top (middle figure).

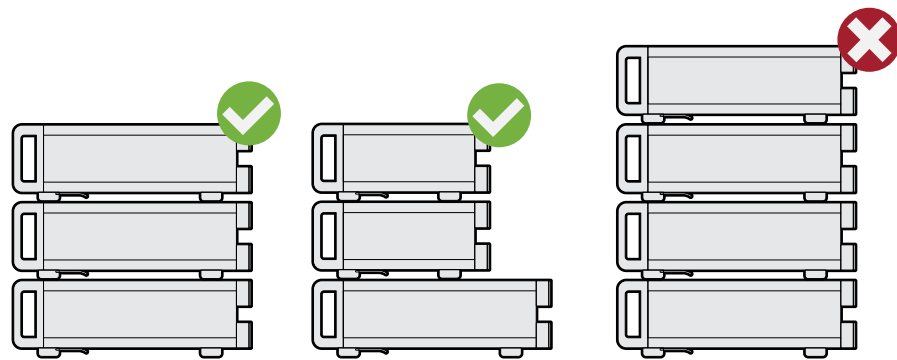

Left = Stacked correctly, same dimensions  
 Middle = Stacked correctly, different dimensions  
 Right = Stacked incorrectly, too many products

#### 4. **NOTICE!** Overheating can damage the product.

Prevent overheating as follows:

- Keep a minimum distance of 10 cm between the fan openings of the product and any object in the vicinity to provide sufficient airflow and ventilation.
- Do not place the product next to heat-generating equipment such as radiators or other products.

#### 3.1.4.2 Mounting the R&S SMB100B in a rack

##### To prepare the rack

1. Observe the requirements and instructions in "[Setting up the product](#)" on page 14.
2. **NOTICE!** Insufficient airflow can cause overheating and damage the product. Design and implement an efficient ventilation concept for the rack.

##### To mount the R&S SMB100B in a rack

1. Use an adapter kit that fits the dimensions of the R&S SMB100B to prepare the instrument for rack mounting.
  - a) Order the rack adapter kit designed for the R&S SMB100B.  
For more information, refer to the specifications document.
  - b) Mount the adapter kit. Follow the assembly instructions provided with the adapter kit.
2. Lift the R&S SMB100B to shelf height.
3. Grab the handles at the front.
4. Push the R&S SMB100B onto the shelf until the rack brackets fit closely to the rack.
5. Tighten all screws at the rack brackets with a tightening torque of 1.2 Nm to secure the R&S SMB100B in the rack.

**To unmount the R&S SMB100B from a rack**

1. Loosen the screws at the rack brackets.
2. Bring the lifting equipment to shelf height.
3. Remove the R&S SMB100B from the rack.
4. If placing the R&S SMB100B on a bench top again, unmount the adapter kit from the R&S SMB100B. Follow the instructions provided with the adapter kit.

### 3.1.5 Considerations for test setup

**Cable selection and electromagnetic interference (EMI)**

Electromagnetic interference (EMI) can affect the measurement results.

To suppress electromagnetic radiation during operation:

- Use high-quality shielded cables, for example, double-shielded RF, LAN and USB cables.
- Always terminate open cable ends.
- Ensure that connected external devices comply with EMC regulations.

**Signal input and output levels**

Keep the signal levels within the specified ranges to avoid damage to the R&S SMB100B and connected devices.

For more information, refer to the specifications document.

**Preventing electrostatic discharge (ESD)**

Electrostatic discharge is most likely to occur when you connect or disconnect a DUT.

- ▶ **NOTICE!** Electrostatic discharge can damage the electronic components of the product and the device under test (DUT).

Ground yourself to prevent electrostatic discharge damage:

- a) Use a wrist strap and cord to connect yourself to ground.
- b) Use a conductive floor mat and heel strap combination.

### 3.1.6 Connecting to power

For safety information, see "[Connecting to power](#)" on page 15.

1. Plug the AC power cable into the AC power connector on the rear panel. Only use the AC power cable delivered with the R&S SMB100B.
2. Plug the AC power cable into a power outlet with ground contact.  
The required ratings are listed next to the AC power connector.



For more information, refer to the specifications document.

### 3.1.7 Connecting to LAN

#### Network environment

Before connecting the product to a local area network (LAN), consider the following:


- Install the latest firmware to reduce security risks.
- For internet or remote access, use secured connections if applicable.
- Ensure that the network settings comply with the security policies of your company. Contact your local system administrator or IT department before connecting your product to your company LAN.
- When connected to the LAN, the product may potentially be accessed from the internet, which may be a security risk. For example, attackers might misuse or damage the product.

#### To connect to LAN

- ▶ Connect the LAN socket on the rear panel via an RJ-45 cable to the LAN.

Using DHCP (dynamic host configuration protocol), the R&S SMB100B assigns the IP address automatically.

If connected to the LAN, the R&S SMB100B displays the IP address and the host-name at the left bottom of the home screen.

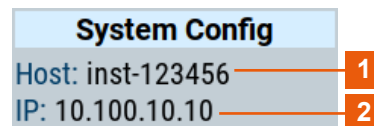

1 = Hostname  
2 = IP address

If disconnected from the LAN, the R&S SMB100B displays the IP address *0.0.0.0*.

See also [Chapter 11.7, "To configure the instrument for remote access"](#), on page 323.

### 3.1.8 Connecting USB devices

You can connect or disconnect all USB devices from the R&S SMB100B during operation.

#### To connect USB storage devices

USB storage devices, such as memory sticks, allow data transfer from or to the R&S SMB100B. You can also use them for firmware updates.

1. Connect the USB storage device to any of the USB connectors.

2. Connect the device directly, without a connecting cable.  
Connecting cables can cause electromagnetic radiation and impair a measurement result.

#### To connect USB devices with an external power supply

1. **NOTICE!** Connected devices with external power supply can feed back current into the 5 V power supply of the USB interface and thus damage the R&S SMB100B.  
Ensure that there is no connection between the positive pole of the power supply and the +5 V power pin of the USB interface (VBUS).
2. Connect the USB storage device to any of the USB connectors on the front panel or rear panel.

#### To connect a keyboard

- ▶ Connect the keyboard to any of the USB connectors on the front panel or rear panel.

When connected, the R&S SMB100B detects the keyboard automatically. A detected keyboard has the default layout English – US.

#### To connect a mouse

- ▶ Connect the mouse to any of the USB connectors.

When connected, the R&S SMB100B detects the mouse automatically.

#### To connect power sensors

Connect power sensors of the R&S NRP families to any of the USB connectors on the front panel or rear panel.

See [Chapter 7.4, "Using power sensors"](#), on page 171.

### 3.1.9 Connecting to RF coaxial connectors

Here, you find information on how to prepare and to connect to RF coaxial connectors of the R&S SMB100B. Use these RF connectors, for example, for output of the RF signal or for input of an external reference signal.

#### To prepare for connecting

1. **NOTICE!** Damaged or not clean connections can lead to RF insertion loss and mismatch, and even premature wear of the connectors.  
Before connecting to the port, inspect the RF connector visually. Check that it is clean, undamaged and mechanically compatible.
2. **NOTICE!** DC voltage at the RF connector can damage the instrument. Never apply DC voltage to the RF input connectors.

Make sure that the values are within the DC limits given in the specifications document.

3. If your test setup has a DC component at the RF input, insert a DC blocker.
4. Use a high-quality RF cable that matches the RF connector type. See also "[Cable selection and electromagnetic interference \(EMI\)](#)" on page 24.
5. You can connect to two kinds of connectors:
  - "[To connect to screwable connectors](#)" on page 27
  - "[To connect to pluggable connectors](#)" on page 27

### To connect to screwable connectors

- **NOTICE!** Excessive tightening can damage the connectors.

To connect the cable with the connector, proceed as follows:

- a) Carefully align the connector of the cable and the connector along a common axis.
- b) Mate the connectors along the common axis until the male pin of the inner connector engages with the female socket of the outer connector.
- c) Turn the nut of the outer connector until the connectors are firmly coupled.
- d) Using a calibrated torque wrench torque the nut to the limit as in the table below. Hold the opposite connector part stationary with a spanner.

The R&S SMB100B provides screwable RF connectors as in [Table 3-1](#).

**Table 3-1: Connector name, type, size, torque limit and nut opening**

Connector		Torque limit		Nut opening	
Type	Name	lb-Inch	Nm	Inch	mm
N	RF 50 Ω <sup>*)</sup>	13.3	1.5	3/4	20
SMA	Ref In 1 GHz Ref Out 1 GHz	5	0.56	5/16	8
2.92 mm	RF 50 Ω <sup>*)</sup>	8	0.9	5/16	8

<sup>\*)</sup> maximum frequency  $f_{\max}$  depends on the connector type:  $f_{\max}(\text{N}) \leq 7 \text{ GHz}$ ,  $f_{\max}(\text{2.92 mm}) \leq 40 \text{ GHz}$

### To connect to pluggable connectors

The R&S SMB100B provides pluggable Bayonet Neill-Concelman (BNC) connectors.

- To connect the RF cable with the BNC connector, proceed as follows:
- a) Carefully align the connector of the cable and the BNC connector along a common axis.
  - b) Mate the connectors along the common axis until the male pin of the connector of the cable engages with the female socket of the BNC connector.

For more information on handling and maintaining coaxial RF connectors, see the application note [1MA99](#).

For information on mounting test port adapters onto the RF connector, see the application note [1MA100](#).

### 3.1.10 Connecting to RF 50 Ω

Before connecting, disable the RF output. In the home screen, select the block "Off". For connection, the R&S SMB100B provides "RF 50 Ω" on the front panel, see "[To connect to screwable connectors](#)" on page 27.

#### To prevent RF output switch-off

- ▶ **NOTICE!** If you set a too high output level without a load connected to the instrument, the reverse power can exceed a limit forcing the R&S SMB100B to switch off the RF output.

Connect a load with sufficient return loss.

For more information, refer to the specifications document.

### 3.1.11 Connecting to Ref In/Ref Out

For connection, the R&S SMB100B provides BNC connectors or SMA connectors on the rear panel. See "[To connect to pluggable connectors](#)" on page 27 and "[To connect to screwable connectors](#)" on page 27.

### 3.1.12 Switching on or off

The following table provides an overview of power states, LEDs and positions of the power switch.

**Table 3-2: Overview of power states**

State	LED	Position of power switch
Off	● gray	[0]
Standby	● orange ● orange	[1]
Ready	● yellow	[1]

#### To switch on the R&S SMB100B

The R&S SMB100B is off but connected to power. See [Chapter 3.1.6, "Connecting to power"](#), on page 24.

1. Set the switch on the power supply to position [1] on the rear panel.

The LED of the [On/Standby] key on the front panel is orange.

2. Wait until the oven-controlled oscillator (OCXO) warms up.  
For more information, refer to the specifications document.
3. Press the [On/Standby] key on the front panel.  
The LED changes to green. The R&S SMB100B boots.  
After booting, the R&S SMB100B starts up displaying the home screen on the screen on the front panel.

### To check startup functions

When starting for the first time, the R&S SMB100B starts with the default settings. When restarting, the R&S SMB100B recalls the instrument configuration before shut-down.

See [Chapter 9.4, "Saving and recalling settings"](#), on page 211.

When switched on, the R&S SMW automatically monitors the main functions. You can query erroneous functions. In addition to automatic monitoring, you can perform maintenance tasks. See the following:

- [Chapter 13.4, "Querying notifications"](#), on page 596
- [Chapter 15.3, "Performing maintenance tasks"](#), on page 609

### To shut down the product

The product is in the ready state.

- ▶ Press the [On/Standby] key.  
The operating system shuts down. The LED changes to orange.

In the standby state, the power switch circuits and the OCXO are active. To deactivate them, disconnect the instrument from the power supply.

### To disconnect from power

The R&S SMB100B is in the standby state.

1. **NOTICE!** Risk of data loss. If you disconnect the product from power when it is in the ready state, you can lose settings and data. Shut it down first.  
Set the toggle switch on the power supply to position [0].  
The LED of the [On/Standby] key is switched off.
2. Disconnect the R&S SMB100B from the power source.

## 3.2 Instrument tour

This chapter explains the control elements and the connectors of the R&S SMB100B. The views of the front panel and the rear panel help you to get familiar with the instrument and to perform the first steps. For specifications of the interfaces, see the specifications document.

The meanings of the labels on the R&S SMB100B are described in [Chapter 1.2, "Labels on R&S SMB100B"](#), on page 16.

### 3.2.1 Front panel tour

This section provides an overview of the control elements at the front panel of the R&S SMB100B. Most of the connectors are at the rear panel and are described in [Chapter 3.2.2, "Rear panel tour"](#), on page 35.

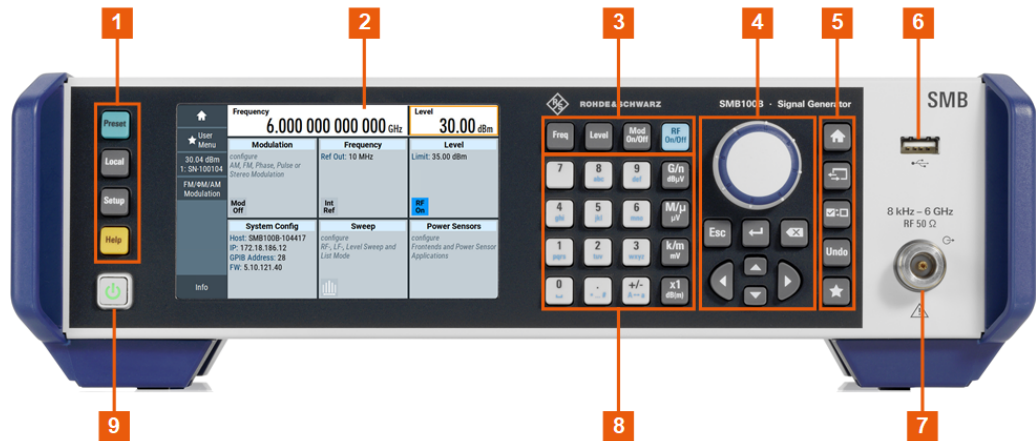


Figure 3-2: Front panel view of the R&S SMB100B RF signal generator

- 1 = Utility keys
- 2 = Touchscreen
- 3 = Function keys
- 4 = Navigation controls
- 5 = Display keys
- 6 = USB connector
- 7 = RF 50 Ω
- 8 = Keypad
- 9 = On/Standby



Figure 3-3: Front panel view of the R&S SMB100B Microwave signal generator

- 1 = Utility keys
- 2 = Touchscreen
- 3 = Function keys
- 4 = Navigation controls

- 5 = Display keys
- 6 = USB connector
- 7 = SD card slot
- 8 = RF 50 Ω
- 9 = Keypad
- 10 = On/Standby

### 3.2.1.1 Utility keys


The utility keys set the R&S SMB100B to a defined state, and provide access to basic settings and information on assistance.

**Table 3-3: Utility keys**

Utility Key	Assigned functions
[Preset]	Sets the instrument to a defined state
[Local]	Switches from remote control to local (manual) control
[Setup]	Accesses the general instrument settings
[Help]	Displays context-sensitive help text

### 3.2.1.2 Touchscreen

The screen at the front panel is the graphical user interface. It shows the settings dialogs and parameters, and the current configuration at a glance, see [Chapter 3.4.3, "Understanding the display information"](#), on page 47.

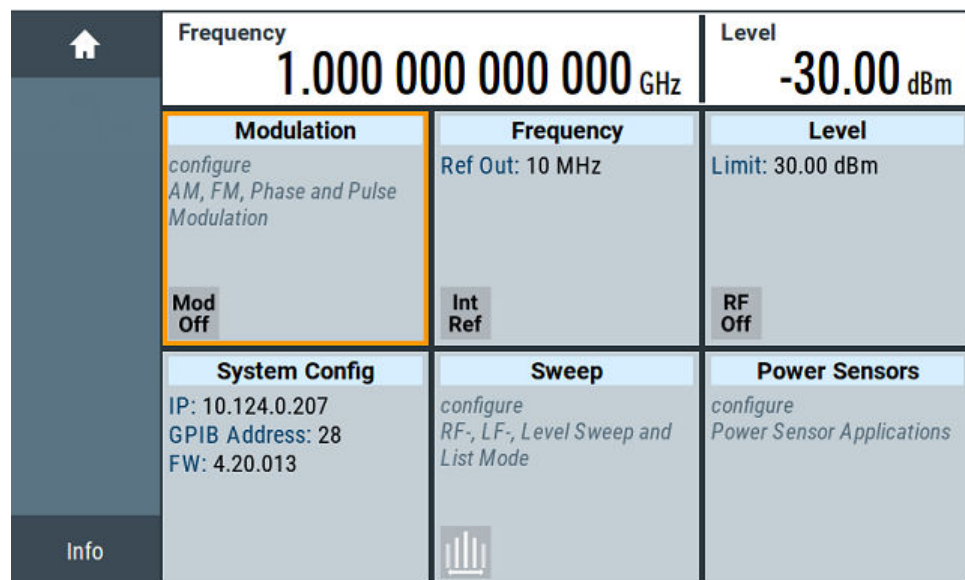

**Figure 3-4: Touchscreen**

The touch-sensitive panel provides an alternative means of user interaction for quick and easy handling of the instrument, see [Chapter 3.4.2, "Means of manual interaction"](#), on page 46.

See also:

- [Chapter 3.4, "Instrument control"](#), on page 45, for operating the touchscreen.
- [Chapter 15.1, "Cleaning"](#), on page 609, for cleaning the screen.

### 3.2.1.3 Function keys

Function keys provide access to the most common generator settings and functions. You can find a detailed description of the corresponding functions in the user manual.

**Table 3-4: Function keys**

Function key	Assigned functions
[Freq]	Activates frequency entry.
[Level]	Activates level entry.
[Mod on/off]	Switches the modulation on and off.
[RF on/off]	Switches the RF output on and off.

### 3.2.1.4 Navigation controls

The navigation controls include a rotary knob, navigation keys, and the display keys. They allow you to navigate within the display or within dialog boxes.

#### Rotary knob

The rotary knob has several functions:

- Increments (clockwise direction) or decrements (counterclockwise direction) numeric instrument parameters at a defined step width.
- Moves the selection, e.g. to a function block in the block diagram
- Shifts the selection bar within focused areas (e.g. lists).
- Acts like the [Enter] key, when it is pressed.
- Opens a context-sensitive menu, when it is pressed and held.

#### Editing keys

Editing keys enable you to confirm an entry, delete individual characters, or exit the current operation.



**Table 3-5: Editing keys**

Type of key	Description
[Esc] key	Closes all kinds of dialog boxes, if the edit mode is not active. Quits the edit mode, if the edit mode is active. Equals selecting the "Cancel" button in dialogs, if provided. For "Edit" dialog boxes, the following applies: <ul style="list-style-type: none"> <li>• If data entry has been started, it retains the original value and closes the dialog box.</li> <li>• If data entry has not been started or has been completed, it closes the dialog box.</li> </ul>
[Enter] key	Has the same effect as pressing the rotary knob <ul style="list-style-type: none"> <li>• Concludes the entry of dimensionless entries. The new value is accepted.</li> <li>• With other entries, this key can be used instead of the default unit key.</li> <li>• In a dialog box, selects the default or focused element.</li> <li>• Calls the next dialog level.</li> <li>• Confirms and closes open input windows.</li> </ul>
[Backspace] key	Deletes the character to the left of the cursor in editing mode.

### Navigation keys

As an alternative to the rotary knob or the touchscreen, you can use the navigation keys to navigate through dialog boxes, diagrams, or tables.

**Table 3-6: Navigation keys**

Type of key	Description
[Up/Down] Key	The [Up] and the [Down] key does the following: <ul style="list-style-type: none"> <li>• In a numeric edit dialog box, increase or decrease the instrument parameter.</li> <li>• In a list, scroll forward and backward through the list entries.</li> <li>• In a table, move the selection bar vertically.</li> <li>• In windows or dialog boxes with vertical scrollbar, move the scrollbar.</li> </ul>
[Left/Right] Key	The [Left] and the [Right] key does the following: <ul style="list-style-type: none"> <li>• In an alphanumeric edit dialog box, move the cursor.</li> <li>• In a list, scroll forward and backward through the list entries.</li> <li>• In a table, move the selection bar horizontally.</li> <li>• In windows or dialog boxes with horizontal scrollbar, move the scrollbar.</li> </ul>

#### 3.2.1.5 Display keys

The display keys arrange different windows on the display.

**Table 3-7: Display keys**

Display key	Assigned functions
[Home]	Returns to the initial feature screen.
[Next window]	Toggles between the entry fields in the taskbar.
[On/Off]	<ul style="list-style-type: none"> <li>• Switches highlighted elements or a function block on and off.</li> <li>• Switches between two or more settings, e.g. items of selection lists. At the end of a list, the cursor is set on the first entry again.</li> </ul>

Display key	Assigned functions
[Undo]	Reverts the last operation.
[★ (User)]	Adds a parameter to the user menu for quick access.

### 3.2.1.6 USB connector

Female USB type A connector, to connect devices like a keyboard, a mouse, a memory stick, or the R&S NRP-Z3/Z4 cable for the R&S NRP power sensors.

How to: [Chapter 3.1.8, "Connecting USB devices"](#), on page 25

### 3.2.1.7 SD card slot

Option: R&S SMBB-B85 (R&S SMB100B microwave instruments only)

Slot for removable mass storage.

To prevent from unauthorized removal, the SD card holder includes wholes that provide the opportunity of sealing the SD card. We recommend that you seal the SD card crosswise.

### 3.2.1.8 RF 50 Ω

The connector type depends on the installed frequency option.

**Table 3-8: RF connector types of the frequency options**

Installed RF frequency option	Connector type	Frequency range
R&S SMBB-B101	N female	$f_{\max} \leq 6 \text{ GHz}$
R&S SMBB-B103		
R&S SMBB-B106		
R&S SMBB-B112	PC 2.92 mm female Instrument equipped with interchangeable PC 2.92 mm test port adapter.	$f_{\max} \leq 40 \text{ GHz}$
R&S SMBB-B120		
R&S SMBB-B131		
R&S SMBB-B140(N)		

How to: [Chapter 3.1.10, "Connecting to RF 50 Ω"](#), on page 28

### 3.2.1.9 Keypad

The keypad enables you to enter alphanumeric parameters, including the corresponding units. It contains the following keys:

Table 3-9: Keys on the keypad

Type of key	Description
Alphanumeric keys	Enter numbers and (special) characters in edit dialog boxes.
Decimal point	Inserts a decimal point "." at the cursor position.
Sign key	Changes the sign of a numeric parameter. For an alphanumeric parameter, inserts a "-" at the cursor position.
Unit keys (G/n dB $\mu$ V, M/ $\mu$ $\mu$ V, k/m mV and x1 dB(m))	These keys add the selected unit to the entered numeric value and complete the entry. For level entries (e.g. in dB) or dimensionless values, all units have the value "1" as multiplying factor. Thus, they have the same function as an [Enter] key.

### 3.2.1.10 On/Standby

The [On/Standby] key switches the instrument from the standby to the ready state or vice versa.

The LED above the [On/Standby] key indicates the instrument state, see [Chapter 3.1.12, "Switching on or off"](#), on page 28.

## 3.2.2 Rear panel tour

This section provides an overview of the connectors at the rear panel of the instrument. For technical data of the connectors, refer to the data sheet.


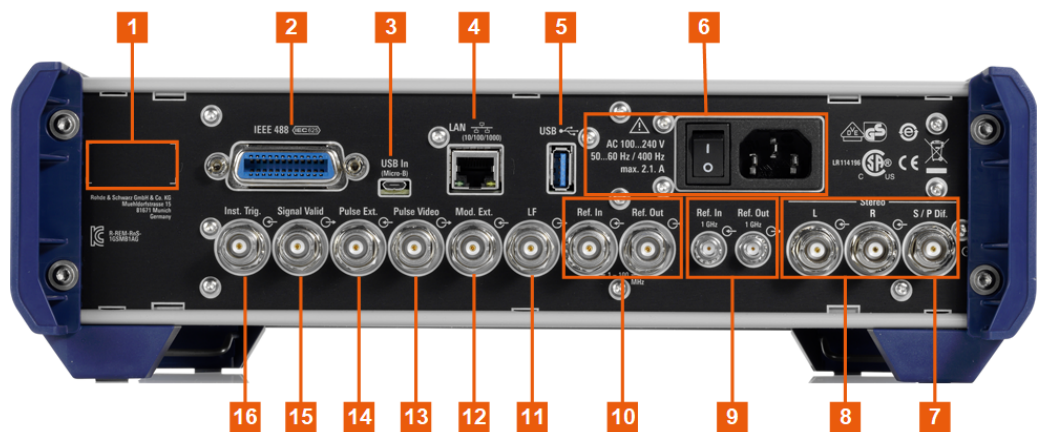


Figure 3-5: Rear panel view R&amp;S SMB100B RF signal generator

- 1 = Serial number (six digits in the string 1400.1000.02-<serial number>-<checksum>)
- 2 = IEC 625/IEEE 488
- 3, 5 = USB/USB In
- 4 = LAN
- 6 = AC power supply connector and switch
- 7 = S/P Dif
- 8 = Stereo L/R
- 9, 10 = Ref In/Ref Out
- 11 = LF

- 12 = Mod. Ext.
- 13 = Pulse Video
- 14 = Pulse Ext.
- 15 = Signal Valid
- 16 = Inst Trig

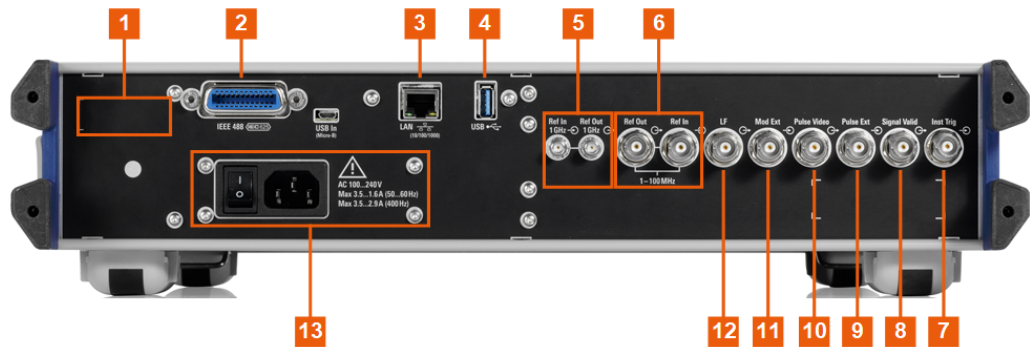

**Figure 3-6: Rear panel view R&S SMB100B Microwave signal generator**

- 1 = Serial number (six digits in the string 1400.1000.02-<serial number>-<checksum>)
- 2 = IEC 625/IEEE 488 (option R&S SMBB-K986)
- 3 = LAN
- 4 = USB/USB In (option R&S SMBB-K986)
- 5, 6 = Ref In/Ref Out
- 7 = Inst Trig
- 8 = Signal Valid
- 9 = Pulse Ext.
- 10 = Pulse Video
- 11 = Mod. Ext.
- 12 = LF
- 13 = AC power supply connector and switch

### 3.2.2.1 Connectors

#### IEC 625/IEEE 488

Option: R&S SMBB-B86/-K986

General purpose interface bus (GPIB) interface for remote control of the instrument. The interface complies with the standards IEC 625, IEEE 488 and SCPI.

Use this interface to connect a computer for remote control of the R&S SMB100B. See also the following sections:

- [Chapter 11, "Network operation and remote control"](#), on page 279
- [Chapter C, "GPIB interface"](#), on page 632

#### USB/USB In

- Female USB (universal serial bus) 2.0 connector of type A (host USB), to connect devices like a keyboard, a mouse, a memory stick, or the R&S NRP-Z3/Z4 cable for the R&S NRP power sensors
- Option: R&S SMBB-B86/-K986  
Female USB 2.0 connector of type Micro-B (USB In), for example, for remote control.

How to: [Chapter 3.1.8, "Connecting USB devices"](#), on page 25

### LAN

RJ-45 connector to connect the R&S SMB100B to a LAN for remote control, remote operation, and data transfer.

How to: [Chapter 3.1.7, "Connecting to LAN"](#), on page 25

### AC power supply connector and switch

Mains power switch for performing the following tasks:

- Connecting the internal power supply to the power source
- Disconnecting the internal power supply from the power source

How to: [Chapter 3.1.6, "Connecting to power"](#), on page 24.

### S/P Dif

Option: R&S SMBB-B5

BNC input connector for digital stereo signals.

See also [Chapter 5.4.3, "Stereo modulation"](#), on page 78.

### Stereo L/R

Option: R&S SMBB-B5

BNC input connectors for analog stereo modulation signals. External modulation sources or the internal LF generator can be used.

See also [Chapter 5.4.3, "Stereo modulation"](#), on page 78.

### Ref In/Ref Out

Input/output for external reference signal.

BNC connectors for reference signals from 1 MHz to 100 MHz.

SMA connectors for 1 GHz reference signals.

How to: [Chapter 3.1.11, "Connecting to Ref In/Ref Out"](#), on page 28

### LF

BNC connector for output of the internal LF generator signal.

For more information, refer to the specifications document.

### Mod. Ext.

BNC connector for input of external analog modulation signals.

See [Chapter 5, "Analog modulations"](#), on page 68.

### Pulse Video

BNC connector for output of the internal pulse generator signal or the looped through pulse signal from Pulse Ext. connector (video signal).

See [Chapter 5.4.1, "Pulse modulation settings"](#), on page 71.

### Pulse Ext.

BNC connector for input of an external pulse modulation signal or an external trigger/gate signal for the pulse generator.

**Signal Valid**

BNC connector for output of a signal that determines the valid signal times (valid level and frequency) for all analog modulations.

Alternatively, you can use this connector to synchronize pulse signals by activating the "Pulse Sync" in the dialog [Chapter 5.4.4, "Pulse generator"](#), on page 87.

**Inst Trig**

BNC connector for input of external trigger signals. The signals trigger sweeps and list mode.

See [Chapter 6.1, "Signal generation and triggering in the sweep and list modes"](#), on page 116.

## 3.3 Trying out the instrument

This chapter introduces the first steps with the R&S SMB100B. It shows how to operate and configure the instrument using simple examples. The complete description of the functionality and its usage is given in the R&S SMB100B user manual. Basic instrument operation is described in [Chapter 3.4, "Instrument control"](#), on page 45.

**Prerequisites**

The instrument is set up, connected to the power supply, and started up as described in [Chapter 3.1, "Preparing for use"](#), on page 21.

The first signal generation tasks explain how to generate an unmodulated signal, to configure the RF signal output, and how you can vary the RF frequency and level in sweep mode.


The instrument is manually operated via the touchscreen. Try out the following:

- [Generating an unmodulated carrier](#)..... 38
- [Generating an RF frequency sweep signal](#)..... 41
- [Saving and recalling settings](#)..... 43

### 3.3.1 Generating an unmodulated carrier


We start to generate a simple unmodulated signal. In this example, the R&S SMB100B can be in its minimal configuration.

1. On the R&S SMB100B front panel, press the [Preset] key to set a defined initial instrument state.
2. Set the frequency:
  - a) In the "Status Bar", tap the "Frequency" field.
  - b) On the on-screen keypad, enter "6" and press the "GHz" key.

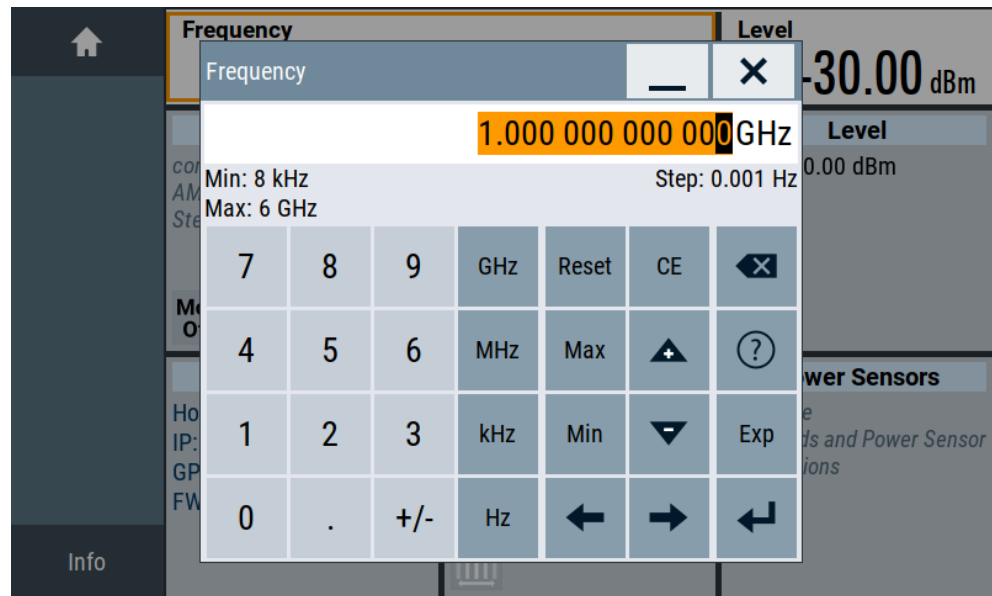

The on-screen key pad closes and the frequency value is displayed.

3. To set the signal level, tap the "Level" field and enter the level in the same way.
4. To activate RF signal output, select "Level" > "RF On" in the tile diagram.

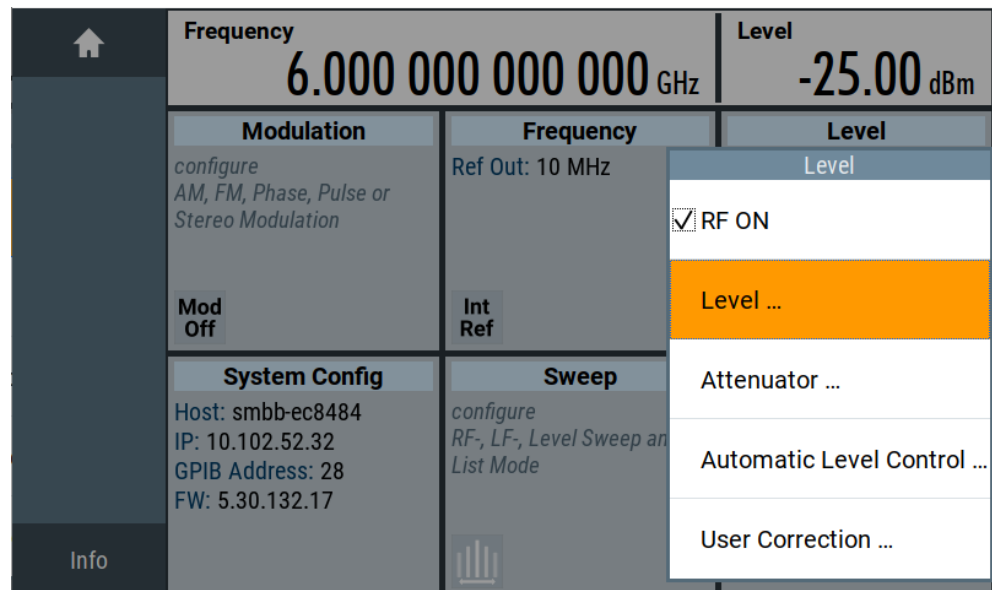

The blue colored "RF On" icon indicates that the RF output is activated.

The R&S SMB100B provides the 6 GHz signal at the RF connector at the front panel.


<b>Frequency</b> <b>6.000 000 000 000 GHz</b>		<b>Level</b> <b>-25.00 dBm</b>
<b>Modulation</b> <i>configure</i> <i>AM, FM, Phase, Pulse or</i> <i>Stereo Modulation</i>  <b>Mod</b> <b>Off</b>	<b>Frequency</b> <i>Ref Out: 10 MHz</i>  <b>Int</b> <b>Ref</b>	<b>Level</b> <i>Limit: 30.00 dBm</i>  <b>RF</b> <b>On</b>
<b>System Config</b> <i>Host: smbb-ec8484</i> <i>IP: 10.102.52.32</i> <i>GPIB Address: 28</i> <i>FW: 5.30.132.17</i>	<b>Sweep</b> <i>configure</i> <i>RF-, LF-, Level Sweep and</i> <i>List Mode</i>  	<b>Power Sensors</b> <i>configure</i> <i>Frontends and Power Sensor</i> <i>Applications</i>

Figure 3-7: Generating an unmodulated signal

### Alternative ways to access the instrument functions

To fulfill the same task, you can also use the front panel keys or the setting parameters provided in the frequency and level dialogs.

### Try out the settings dialogs

- In the "Frequency" tile, select "Frequency...".
  - In the "RF Frequency" tab, tap the "Frequency" field.
  - Set the frequency via the on-screen keypad.
- Access the "RF Level" dialog via the "Level" tile.
  - In the "RF Level" tab, select "Amplitude".
  - Set the amplitude (level) via the on-screen keypad.
- Select "RF State > On" to activate the RF signal generation.

See [Chapter 4, "RF signal configuration"](#), on page 56.

### Try out the front panel keys

- ▶ Use the [Freq], [Level], and [RF on/off] key on the front panel.





Connect RF 50  $\Omega$  of the R&S SMB100B to a signal analyzer, for example R&S®FSW, to display the generated signal.

For the required settings of the signal analyzer, refer to its user manual or its online help.


### 3.3.2 Generating an RF frequency sweep signal

The "Sweep" operating mode allows you to generate an RF signal with periodically varying frequencies or amplitudes.

This example deals with an RF signal with varying frequency and constant level. To configure the sweep, you need to determine a defined start and end frequency with constant time intervals between the frequency steps.

The sweep function does not require specific options.

1. On the front panel, press the [Preset] key to set a defined initial instrument state.
2. Set the signal output level, if required, e.g. set "Level > -25 dBm".
3. In the tile diagram, select "Sweep" > "Frequency Sweep".
4. In the "General" tab:

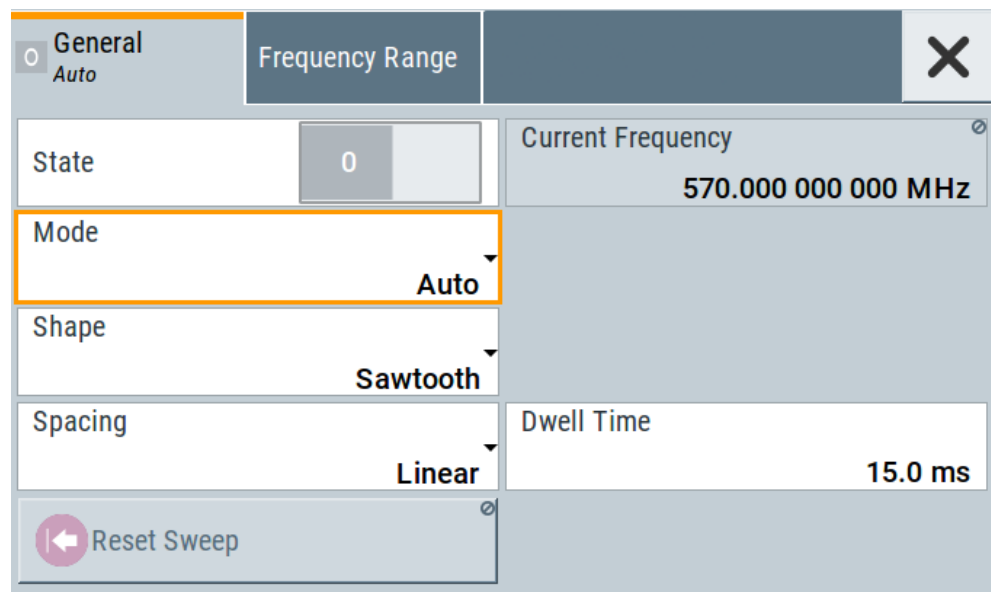

- a) Select "Mode > Auto" to run the sweep continuously.
  - b) Select "Shape > Sawtooth" to set the waveform shape of the sweep signal.
  - c) Select "Spacing > Linear", to determine the calculation method for the frequency shift of a step.
  - d) Set "Dwell Time > 15.0 ms", to determine the time interval of the sweep steps.
5. Select the "Frequency Range" tab.

General <i>Single</i>	Frequency Range	Output	Edit Marker	✕
Start Frequency	100.000 000 000 MHz	Stop Frequency	500.000 000 000 MHz	
Center Frequency	300.000 000 000 MHz	Span	400.000 000 000 MHz	
Spacing	Linear	Step Linear	1.000 000 000 MHz	

- a) Set "Start Freq > 200 MHz" and "Stop Freq > 600 MHz" to determine the frequency sweep range.
  - b) Set the step width "Step Lin > 10.0 MHz" to determine the width for a frequency step.
6. In the "General" tab, activate the frequency sweep with "State > On".
  7. Close the sweep dialog.  
(Alternatively, tap the "Home" button to minimize the dialog. The R&S SMB100B indicates the "Sweep" dialog as active dialog in the task bar.)
  8. To activate the RF signal output, select "Level" > "RF On".

Frequency	520.000 000 000 MHz		Level
Frequency Sweep	-25.00 dBm		
<b>Modulation</b> <i>configure</i> AM, FM, Phase and Pulse Modulation	<b>Frequency</b> Ref Out: 10 MHz	<b>Level</b> Limit: 30.00 dBm	
Mod Off	Int Ref	RF On	
<b>System Config</b> IP: 10.124.0.207 GPIB Address: 28 FW: 4.15.148	<b>Sweep</b> Freq Sweep: Mode - Auto Start: 200.0 MHz Stop: 600.0 MHz	<b>Power Sensors</b> <i>configure</i> Power Sensor Applications	
Info			

Figure 3-8: Generating a frequency sweep signal

The frequency field in the status bar indicates the continuously changing frequency, i.e. the running sweep.


### 3.3.3 Saving and recalling settings

To restore the results of our measurements later, we save the instrument settings in a file.

#### To save the instrument settings in a file

We assume, a test configuration as described in [Chapter 3.3.2, "Generating an RF frequency sweep signal"](#), on page 41.

1. Press the [Setup] key on the front panel.
2. In the "Setup" menu, select "Settings > Save/Recall".
3. In the "Save/Recall" dialog, select "Operation Mode > Save".

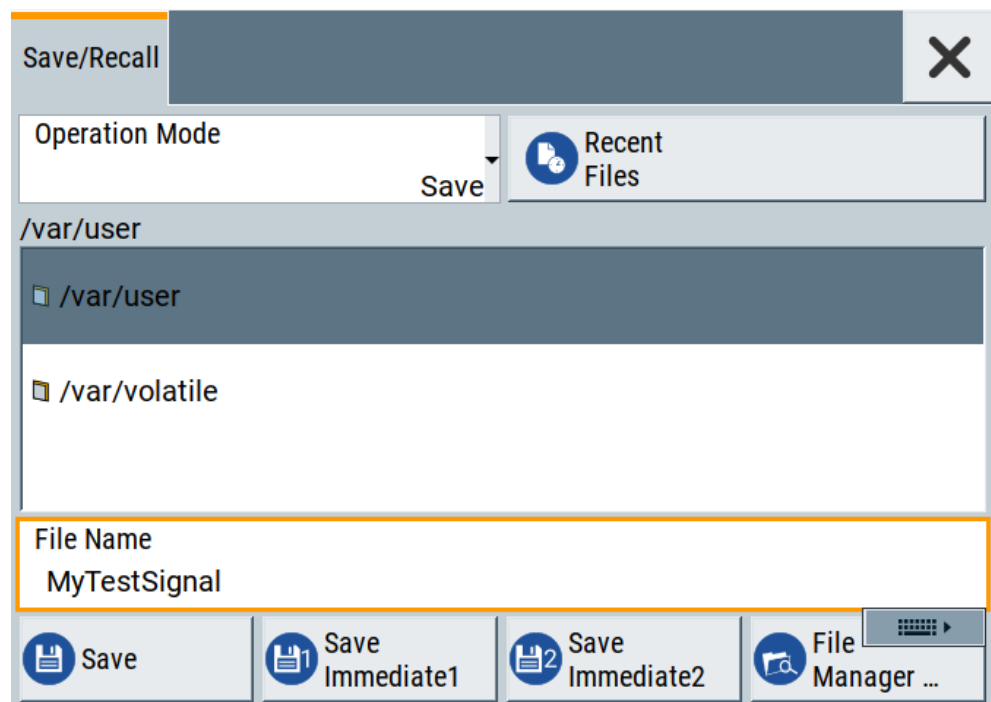

4. Tap the "Filename", use the on-screen keyboard, and enter *MyTestSignal*.
5. Tap the "Save" button.


The file `MyTestSignal.savrc1.txt` is stored in the default directory `/var/user/`.

#### To load saved instrument settings

You can restore the settings to the instrument at any time using the settings file.

1. Press the [Preset] button to restore the default instrument settings so you can check that the stored user settings are restored afterwards.
2. Press the [Setup] key on the front panel.
3. In the "Setup" menu, select "Settings > Save/Recall".

- In the "Save/Recall" dialog, select "Operation Mode > Recall".  
Navigate to the directory the file is saved in and select the `MyTestSignal` file.

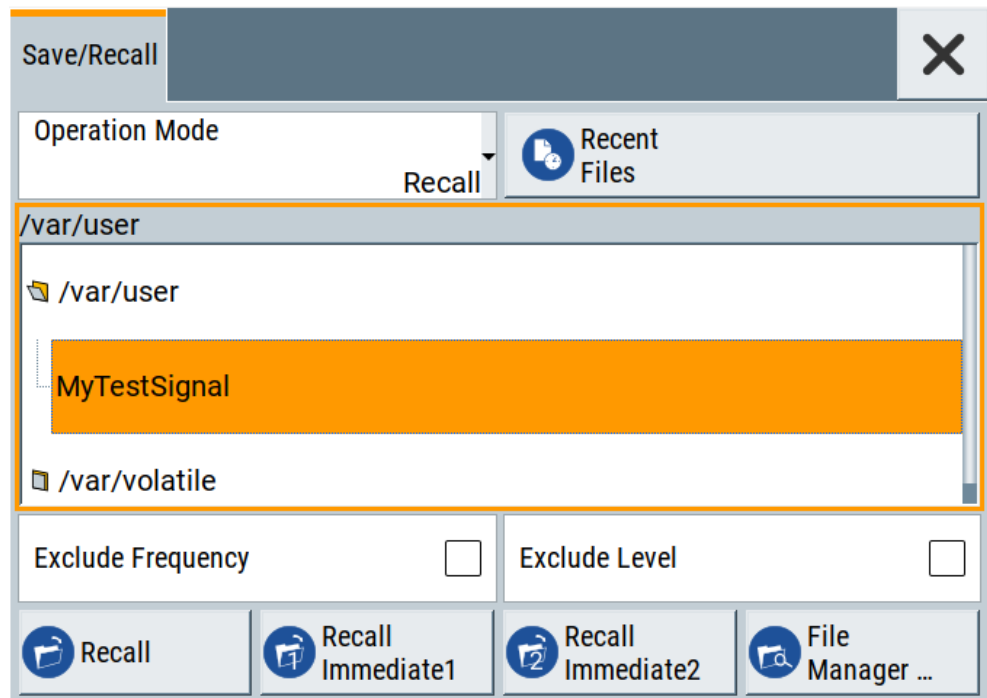

- Tap the "Recall" button.

All instrument settings are restored and the display resembles [Chapter 3.3.2, "Generating an RF frequency sweep signal"](#), on page 41, which shows the instrument display right before the settings were saved.




#### How to display all parameters with values different to their preset values

When you load a file to your instrument, you do not have enough information on the changed settings. In such case, it is useful to visualize all parameters that have been changed from their default state.

Try out the following:

- Touch and hold a spot in the tile diagram for at least 1 second to access the context-sensitive menu.
- Select "Mark All Parameters Changed from Preset".

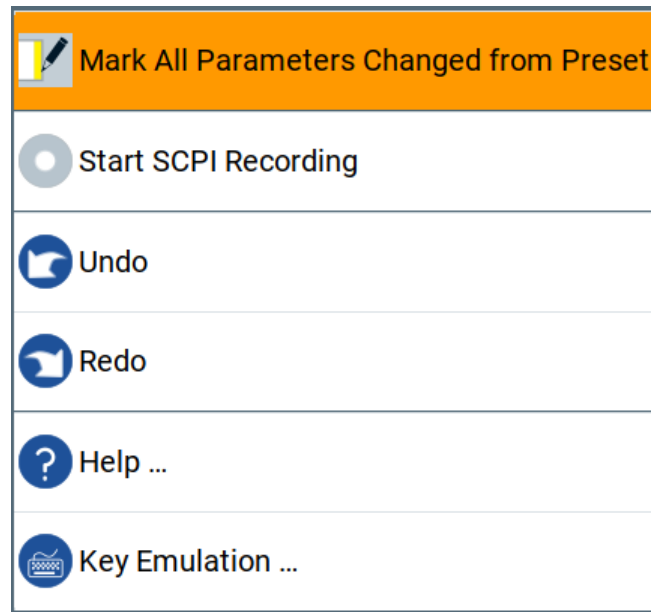

- All changed parameters are highlighted.

 Frequency Sweep	<b>Frequency</b> <span style="font-size: 2em;">580.000 000 000 MHz</span>		<b>Level</b> <span style="font-size: 2em;">-25.00 dBm</span>
	<b>Modulation</b> <i>configure</i> <i>AM, FM, Phase and Pulse Modulation</i>  <b>Mod Off</b>	<b>Frequency</b> Ref Out: 10 MHz  <b>Int Ref</b>	<b>Level</b> Limit: 30.00 dBm  <b>RF On</b>
<b>Info</b>	<b>System Config</b> IP: 10.124.0.207 GPIB Address: 28 FW: 4.15.148	<b>Sweep</b> Freq Sweep: Mode - Auto Start: 200.0 MHz Stop: 600.0 MHz  	<b>Power Sensors</b> <i>configure</i> <i>Power Sensor Applications</i>

See also [Chapter 9, "File and data management"](#), on page 202.

### 3.4 Instrument control

This chapter provides an overview on how to work with the R&S SMB100B.

It covers the following topics:

• Possible ways to operate the instrument.....	46
• Means of manual interaction.....	46
• Understanding the display information.....	47
• Accessing the functionality.....	50
• Entering data.....	51
• Getting information and help.....	53
• Remote control.....	54
• Remote operation over VNC.....	55

### 3.4.1 Possible ways to operate the instrument

There are three ways to operate the R&S SMB100B:

- Manual operation:  
Use the touchscreen, hard keys and rotary knob, or an optional mouse and/or keyboard.
- Remote control:  
Create programs to automatize repeating settings, tests and measurements. The instrument is connected to a computer running the program.  
This way of operation is described in [Chapter 11, "Network operation and remote control"](#), on page 279.
- Remote operation from a computer:  
Remote monitoring and control of the instrument from a connected computer is based on the common cross-platform technology VNC (Virtual Network Computing). On the remote computer, any standard web browser (supporting Java) or a dedicated VNC client (like Ultr@VNC) can be used. See also [Chapter 3.4.8, "Remote operation over VNC"](#), on page 55.

The following sections show how to operate the instrument manually.

### 3.4.2 Means of manual interaction

For the manual interaction with the R&S SMB100B, you have several methods that you can use as an alternative to perform a task:

- Touchscreen:  
Touchscreen operation is the most direct way to interact. Almost all control elements and actions on the screen are based on the standard operating system concept. You can tap any user interface element to set parameters in dialog boxes, enter data, scroll within a dialog etc., as if you work with a mouse pointer.  
Tapping the screen works like clicking mouse buttons:
  - Touch quickly = click: Selects a parameter or provokes an action.
  - Touch and hold = right-click: Opens a context-sensitive menu.
  - Touch and swipe = drag: Scrolls through the contents of a display element larger than the screen, e.g. a list or a table.
- Function keys and rotary knob:  
The front panel provides nearly all functions and controls to operate the instrument in the classic way, without touchscreen.

- Optional mouse and/or keyboard:  
These devices work like known from PCs. The navigation keys on the front panel correspond to the keys on the keyboard.


This manual describes the manual interaction with the instrument via the touchscreen. It mentions the alternative methods using the keys on the instrument or the on-screen keypads if it deviates from the standard operating procedures. The usage of the touchscreen and navigation keys is described in [Chapter 3.4.4, "Accessing the functionality"](#), on page 50.

Throughout the manual, the term "select" refers to any of the following methods:

- Using a finger on the touchscreen
- Using a mouse pointer in the display
- Using a key on the instrument or on a keyboard

### 3.4.3 Understanding the display information

The home screen of the R&S SMB100B displays all main settings and generator states, divided into main operation areas.

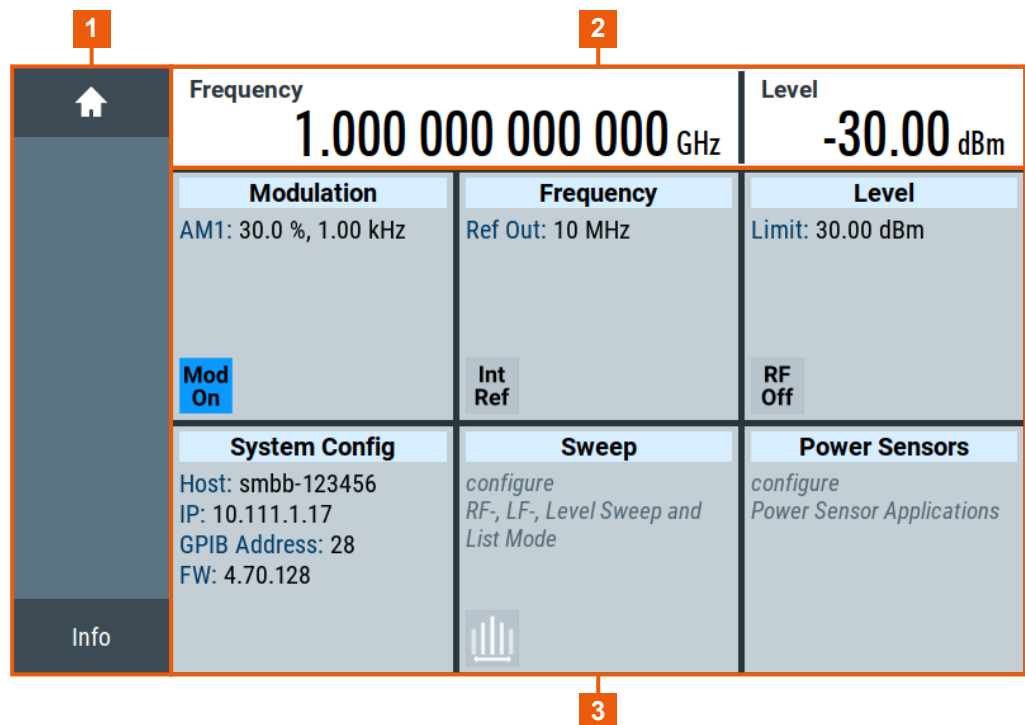

**Figure 3-9: Home screen**

- 1 = Taskbar/softkey bar with "Home" and "Info" key  
2 = Status bar  
3 = Tile diagram

• <a href="#">Status bar</a> .....	48
• <a href="#">Tile diagram</a> .....	48
• <a href="#">Taskbar</a> .....	48
• <a href="#">Additional display characteristics</a> .....	49

### 3.4.3.1 Status bar

The status bar at the top of the screen indicates the RF frequency and the level of the output signal provided to the DUT. You can set both parameters directly here.

### 3.4.3.2 Tile diagram

The tile diagram is the main entry to the settings of the R&S SMB100B.

Tile	Access to:
"Modulation"	<ul style="list-style-type: none"> <li>• Analog and stereo<sup>1)</sup>, and pulse<sup>1)</sup> modulation settings</li> <li>• Built-in LF generator</li> </ul>
"System Config"	<ul style="list-style-type: none"> <li>• "Save/Recall": settings for saving and loading instrument configurations</li> <li>• "Remote access": Network and emulation settings.</li> <li>• "Setup": general system configuration</li> </ul>
"Sweep"	<ul style="list-style-type: none"> <li>• Frequency and level sweeps</li> <li>• List mode</li> </ul>
"Frequency"	<ul style="list-style-type: none"> <li>• RF frequency and phase</li> <li>• Reference frequency</li> </ul>
"Level"	<ul style="list-style-type: none"> <li>• RF level</li> <li>• Attenuator</li> <li>• Automatic level control</li> <li>• User correction</li> </ul>
"Power sensors"	<ul style="list-style-type: none"> <li>• Power sensors</li> </ul>
<sup>1)</sup> requires additional options	

### 3.4.3.3 Taskbar

The "Taskbar" shows a home and an info button, and assigns a labeled button whenever you open a dialog. If more dialogs are open than the taskbar can display, touch and swipe the taskbar to scroll up and down.

The buttons shown in the following example represent the variants.

**Table 3-10: Example of buttons in the taskbar**


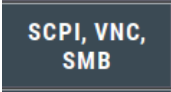
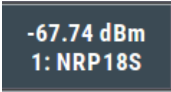
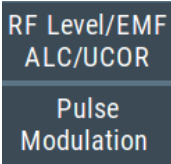



"Home" button  
Returns to the home screen.



"Busy" indicator  
Indicates a running process.




	"User Menu" Lists parameters that can be defined for quick access.
	Shows the current remote access connections when the instrument is remotely controlled. <b>Tip:</b> An indicator in the "System Config" tile shows the current remote control status.
	R&S NRP power sensors Shows a connected external power sensor. The button displays the current readings when the sensor is active.
	Active dialogs Indicates the dialog name of each active dialog in a separate button.
	"Info" key Provides access to status and error messages. <b>Note:</b> The warning symbol signifies a permanent error message.

### 3.4.3.4 Additional display characteristics


The following section provides a short insight on the indication of the screen in general, and significant elements that you see under specific operating modes, in dialogs or settings.

- **Appearance of active elements**
  - *Active* elements like On/Off switches, state buttons have a **blue** background.
  - *Selected* elements are framed or highlighted **orange**.
  - *Inactive* elements are **gray**.
- **On-Screen keypads**  
As additional means of interacting with the instrument without having to connect an external keyboard, either a numerical or alphanumerical on-screen keypad appears when you activate an entry field (see [Chapter 3.4.5, "Entering data"](#), on page 51).
- **Info line**  
The "Info line" shows brief status information and error messages. It appears when an event generates a message. If selected, the R&S SMB100B shows information on static errors and the error history.

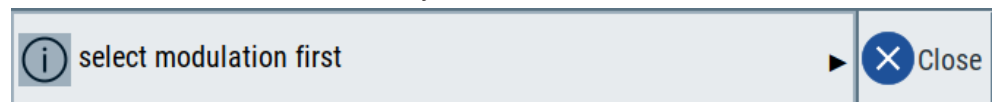

- **Key parameters indicated in tab labels**
- **Scrollbar handle**  
An arrow icon that appears when you touch a scrollbar helps you to scroll in a dialog or list.  
If no scrollbar handle appears, you can touch and swipe an element to scroll up and down.

- **Progress indicators**  
A busy icon indicates a currently running process. If a process takes some time, a progress bar shows the current state.
- **Context-sensitive menus**  
Within the entire screen display, including single parameters, you can access context-sensitive menus that provide some additional functions.

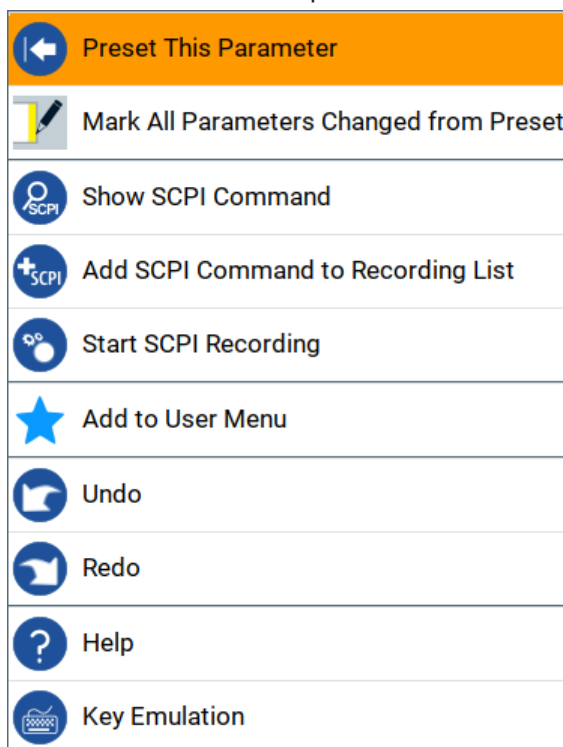

### 3.4.4 Accessing the functionality

All functionalities are provided in dialog boxes as known from computer programs. You can control the instrument intuitively with the touchscreen. This section provides an overview of the accessing methods.

The instrument's functions and settings can be accessed by selecting one of the following elements:

- System and function keys on the front panel of the instrument
- Taskbar/softkeys on the touchscreen
- Context-sensitive menus for specific elements on the touchscreen, or with the rotary knob (press and hold).
- Elements on the status bar in the touchscreen
- Displayed setting on the touchscreen that means block diagram and all settings available in dialogs.

#### To open a dialog box

- ▶ Perform one of the following actions:

- Tap the required tile, and then the menu entry.
- Tap the minimized view (button) on the taskbar.

Some of the utility keys access a dedicated dialog, too.

#### To minimize a dialog box

1. To return to the home screen, tap the "Home" button.
2. To switch to another dialog, press the [Next Window] button.

#### To close a dialog box

To close a dialog box, you have the same controls as you know from computers or devices with touchscreen.

- ▶ Perform one of the following actions:
  - Tap the "Close" icon in the upper right corner.
  - Press the [Esc] key on the front panel.
  - Drag and drop a minimized dialog from the taskbar to the tile diagram.

#### To select an option in a dialog box

- ▶ Tap the required option.

### 3.4.5 Entering data

Some parameters have their own key on the front panel.

For data input in dialog boxes, the instrument provides on-screen keypads for entering numeric and alphanumeric values. Thus, you can always set the parameters via the touchscreen, the front panel, or an external keyboard.

#### To correct an entry

1. Using the arrow keys, move the cursor to the right of the entry you want to delete.
2. Press the [Backspace] key.
3. Deletes the entry to the left of the cursor.
4. Enter your correction.

#### To complete the entry

- ▶ Press the [Enter] key or the rotary knob.

#### To abort the entry

- ▶ Press the [Esc] key.  
The dialog box closes without changing the settings.

### 3.4.5.1 Entering numeric parameters

#### To enter values with the on-screen keypad

For numeric settings, the instrument displays the numeric keypad. The units specified correspond to the units of the parameter.

1. Enter the numeric value.

**Tip:** For quick entry, you can enter a value in exponential representation, e.g.  $1e7$  for  $10000000$ .

2. Tap the unit button to complete the entry.

The unit is added to the entry.

**Tip:** For quick unit change, you can enter shortcuts, e.g. for a frequency value  $1e8h$  for  $100\text{ MHz}$ .

For an overview of shortcuts supported by the R&S SMB100B, see [Chapter B, "Unit shortcuts"](#), on page 630.

3. If the parameter does not require a unit, confirm the entered value by pressing "Enter".

#### To enter values by using the front panel controls

1. Change the currently used parameter value by using the rotary knob or the [Up/Down] keys.

2. If the parameter does not require a unit, confirm the entered value by pressing the [Enter] key or any of the unit keys.

The instrument highlights the editing line to confirm the entry.


If you edit numeric data in tables, the entry field must be in edit mode: Press [Enter], or the rotary knob to activate the edit mode.

### 3.4.5.2 Entering alphanumeric parameters

If a field requires alphanumeric input, you can use the on-screen keyboard to enter letters and (special) characters.

### 3.4.5.3 Undo and redo actions

Accessed via the context-sensitive menus, "Undo" allows you to restore one or more actions on the instrument. Depending on the available memory, the "Undo" steps can restore all actions.

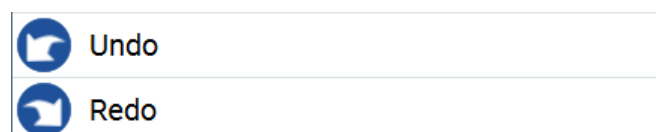

"Redo" restores a previously undone action.

### 3.4.6 Getting information and help

In some dialog boxes, graphics are included to explain the way a setting works.


For further information, you can use the following sources:

- Tooltips give the value range of the parameter.
- The context help provides functional description on a setting.
- The general help explains a dialog box, provides instructions, and general information.

#### To display context help

- ▶ To access a help topic, perform one of the following:
  - a) Tap and hold the parameter for which you need information and tap "Help" in the context menu.
  - b) Tap the parameter and press the [Help] key.

The "Help" dialog opens. You can browse the help for further information.

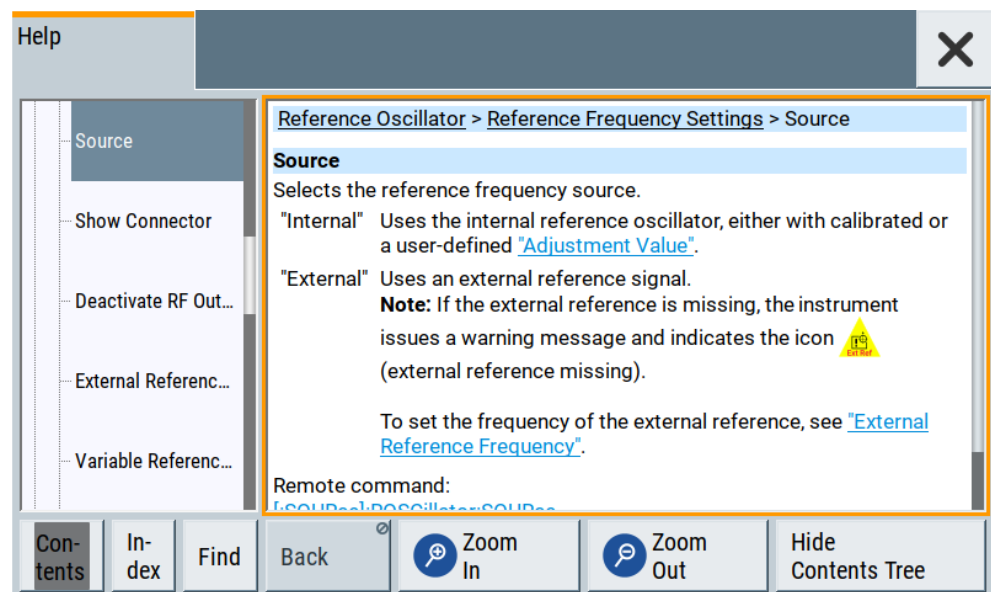

#### Contents of the help dialog box

The help dialog box covers two main areas:

- "Contents" - contains a table of help contents
- "Topic" - contains a specific help topic

The help system also provides an "Index" and a "Find" area, and "Zoom" functions that are accessed via the corresponding buttons.

### To open general help

- ▶ Press the yellow [Help] key on the front panel.

If a dialog box is opened, the help topic for the current tab is shown. Otherwise the "Contents" page appears.

### Navigating in the table of contents and in the help topics

1. To move through the displayed contents entries, tap on an entry and scroll or use a connected mouse or the [Up/Down] keys.  
Entries with a plus sign contain further entries.
2. To display a help topic, tap on the topic name or double-click the topic name or press the [Enter] key.
3. To follow a cross-reference, tap on the link text.
4. To return to the previous page, select "Back".  
This function scrolls back all steps you have performed before.
5. Use the "scroll bars" to shift the visible section of content shown.
6. To maximize the "Topics" area, tap the "Hide Contents Tree" button to hide the contents tree.

### Using the index

1. Select the "Index" button.
2. Enter the first characters of the topic you are interested in.  
The entries starting with these characters are displayed.
3. Tap on the index entry.  
The corresponding help topic is displayed.

## 3.4.7 Remote control

In addition to working with the R&S SMB100B interactively, located directly at the instrument, it is also possible to operate and control it from a remote PC.

The R&S SMB100B supports various methods for remote control:

- Connecting the instrument to a LAN
- Using the LXI browser interface in a LAN
- Connecting a PC via the IEC-bus (IEEE 488) interface
- Remote control via the USB interface



For remote control over LAN or USB, you can use the R&S VISA (Virtual Instrument Software Architecture) library provided for download at the Rohde & Schwarz website [www.rohde-schwarz.com/rsvisa](http://www.rohde-schwarz.com/rsvisa).

How to configure the remote control interfaces is described in [Chapter 11, "Network operation and remote control"](#), on page 279.

### 3.4.8 Remote operation over VNC

The VNC is an application which can be used to access and control the instrument from a remote computer through a LAN connection. While the instrument is in operation, the instrument screen contents are displayed on the remote computer, and VNC provides access to all applications, files, and network resources of the instrument. Thus, remote operation of the instrument is possible.



#### Instrument control from a remote computer

To access the basic utility functions of the R&S SMB100B, perform a right mouse click the block diagram and select "Key Emulation".

A key panel to the right of the block diagram gives access to the utility functions provided by the front panel keys.

The VNC is an add-on program, included in operating system Linux/Unix, and available as a free-of-charge download on the internet.

See also [Chapter 11.14, "To operate the instrument using VNC"](#), on page 349.

## 4 RF signal configuration

The R&S SMB100B signal generator generates RF signals with outstanding spectral purity within the frequency range from 8 kHz up to 40 GHz and with adjustable signal level over a wide range.

In addition to these real-time CW signals, you can generate RF signals from predefined lists and sweep signals that vary according to the frequency or amplitude curves.

You can also apply versatile analog modulation types with definable characteristics.

The variably adjustable output level due to the built-in attenuator, allows you to vary the RF signal level over the full level range. Several methods enable you to improve the signal performance and to optimize the signal quality for the particular application, or to increase the accuracy and reliability of the generated RF signal.

The R&S SMB100B supports R&S NRP power sensors, e.g. to monitor the output level of the generator or to determine the level correction values for user correction lists.

### Signal modes and characteristics

The R&S SMB100B generates unmodulated or analog modulated RF signals. You can output the signal in fixed mode or as a signal with periodically varying frequencies or amplitudes.

**Signal modes** for RF signal generation:

- Unmodulated signal  
Generates an unmodulated continuous wave (CW) of constant frequency and amplitude.  
For information on the signal frequency and level settings and an example on how to configure a simple CW signal, see:
  - [Chapter 4.3, "RF frequency settings"](#), on page 59
  - [Chapter 4.4, "RF level settings"](#), on page 61
  - [Chapter 3.3.1, "Generating an unmodulated carrier"](#), on page 38
- Analog modulated signal  
Modulates the signal with an analog signal and generates amplitude, phase, frequency and pulse modulation.  
See [Chapter 5, "Analog modulations"](#), on page 68.

The R&S SMB100B allows you to provide the RF signal with constant or varying frequencies and/or amplitudes at the output:

- Constant frequency and level (CW/Fixed mode)  
The RF output signal has the set frequency and level.
- Varying frequency and/or level
  - Sweep mode  
An RF or LF frequency and RF level sweep signal, processed continuously, step-by-step or individually and with selectable trigger modes. You can only run one sweep at a time.
  - List mode



The RF signal is based on a list of predefined frequency and level values pairs and step widths.

See [Chapter 6, "List and sweep mode"](#), on page 114.

## 4.1 Activating RF signal output

By default, the RF output signal is deactivated.

### To activate the RF output signal

1. Configure the RF signal as required.  
Set, for example, the frequency and level values.
2. Activate the RF output in one of the following ways:
  - a) Select "Level" > "RF ON" > "On"
  - b) Press the [RF on/off] key at the front panel.

When activated, the "RF On" icon in the "Level" tile turns blue.

<a href="#">RF State/RF ON</a> .....	57
<a href="#">RF output impedance</a> .....	57

### RF State/RF ON

Activates or deactivates the RF output.

Acts as the [RF on/off] key.

Remote command:

`:OUTPut<hw>[:STATe]` on page 405

### RF output impedance

You can query the impedance of the RF output.

Remote command:

`:OUTPut<hw>:IMPedance?` on page 406

## 4.2 How to set the frequency and level

The simplest form of the RF signal is a continuous wave (CW) of constant frequency and amplitude. The RF signal is defined by its frequency, level and phase.

### To configure the RF signal.

1. Use one of the following:

- a) In the home screen select:
    - "Frequency" and "Level" in the status bar
    - "Frequency" in the "Frequency" tile
    - "Level" in the "Level" tile
    - "Phase" in the "Frequency" tile
  - b) On the front panel:
    - Press the [Freq] key
    - Press the [Level] key
2. Enter the values as required.

The R&S SMB100B indicates the frequency and level settings in the status bar of the home screen, and shows active functions and parameters of the RF signal in the "Frequency" and "Level" tiles.

See ["RF frequency and level display with a downstream instrument"](#) on page 58.

### RF frequency and level display with a downstream instrument


If your test setup includes a downstream instrument, you can enter the parameter of the downstream instrument in the frequency or level settings dialog of the R&S SMB100B. Examples of downstream instruments are mixers, frequency multipliers, amplifiers or attenuators and of their corresponding major parameters offset, multiplier, amplitude. The R&S SMB100B generates the signal without the downstream parameters, but considers all additional parameters concerning the frequency and level.

Example parameters that affect the frequency and level:

- Frequency offset
- Multiplication factor
- User correction

Any of these cases are indicated by a dedicated icon, displayed in the "Frequency" or "Level" tile, depending on the affected parameter.

[Figure 4-1](#) illustrates the calculation of the "Frequency" and "Level" values, displayed in the status bar.

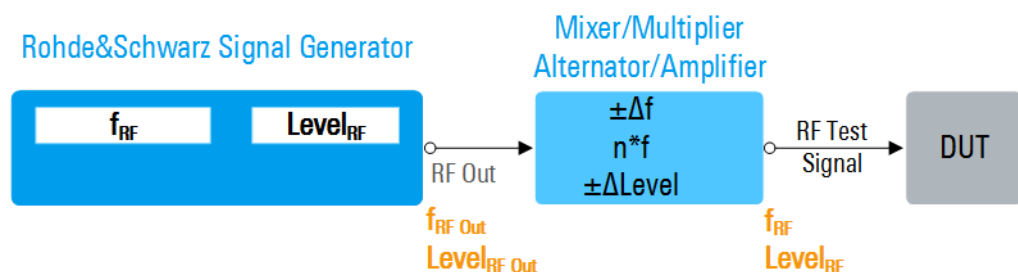

**Figure 4-1: Frequency and Level display vs frequency and level at the RF output**

- $f_{RF}$ ,  $Level_{RF}$  = Frequency and level ("Status bar > Frequency and Level") at the output of the downstream instrument, see also [Calculation of  \$f\_{RF}\$  and  \$Level\_{RF}\$](#) )  
 $f_{RF\ Out}$ ,  $Level_{RF\ Out}$  = Frequency and level at the output connector [RF 50  $\Omega$ ] ("RF > RF Frequency > Frequency" and "RF > RF Level > Amplitude")  
 $n*f$  = Multiplication factor ("RF > RF Frequency > Multiplier")  
 $\Delta f$  = Frequency offset ("RF > RF Frequency > Offset")  
 $\Delta Level$  = Power offset ("RF > RF Level > Offset")

#### Calculation of $f_{RF}$ and $Level_{RF}$

- $f_{RF} = n * f_{RF\ Out} + \Delta f$
- $Level_{RF} = Level_{RF\ Out} + \Delta Level$

## 4.3 RF frequency settings

Access:

1. Select "Frequency" > "RF Frequency".

RF Frequency	Phase	
Frequency 3.000 000 000 000 GHz		
Offset 10.000 000 000 MHz	Multiplier 2.000	
User Variation		
Variation Active <input type="checkbox"/>	Variation Step 1.000 000 000 MHz	

2. Observe the information on the home screen, "Frequency" tile.

Frequency
Offset: 10.000 MHz
Multiplier: 2.000
Ref Out: 10 MHz
$\Delta$ Phase: 180.00 deg
Int Ref <b>Freq</b>
<b>Offs</b>

The "Frequency" tile indicates the reference frequency, current frequency offset and multiplier values, and phase offset value.

In the "RF Frequency" dialog, you can configure:

- RF frequency, incl. an offset or multiplication factor of a downstream instrument
- The step size for varying the frequency with the rotary knob.

The remote commands required to define the settings are described in [Chapter 12.15.3, "SOURce:FREQUENCY subsystem"](#), on page 465.

## Settings

Frequency.....	60
Offset.....	60
Multiplier.....	61
User Variation.....	61
L Variation Active.....	61
L Variation Step.....	61

## Frequency

Sets the RF frequency.

This frequency is output at the RF 50 Ω connector.

It does not consider any parameter that affect the frequency, as e.g., a frequency offset.

See ["RF frequency and level display with a downstream instrument"](#) on page 58.

### Note: Suppressed values in the status bar


For security concerns or certain operating modes, you can hide the frequency and level display in the status bar.

- **\*\*\*\*\***

The display has been disabled for security reasons.

See:

- [Annotation Frequency](#)
- [Annotation Amplitude](#)

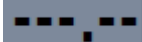- 

The display is disabled when list mode is running, see [Chapter 6, "List and sweep mode"](#), on page 114.

Remote command:

[\[:SOURce<hw>\]:FREQUENCY\[:CW|FIXed\]](#) on page 467

## Offset

Sets the frequency offset.

This value represents the frequency shift of a downstream instrument, like for example a mixer.

The "Frequency" value displayed in the status bar is the resulting frequency, as it is at the output of the downstream instrument. The frequency at the R&S SMB100B RF output is not changed.

See "RF frequency and level display with a downstream instrument" on page 58.

Remote command:

`[ :SOURce<hw> ] :FREQuency:OFFSet` on page 468

### Multiplier

Sets the multiplication factor for the RF frequency.

This value represents the multiplication factor of a downstream instrument, as for example a multiplier. You can also assign a negative multiplication factor, for example -1.0 to support frequency converters working in the reverse frequency position.

The "Frequency" value displayed in the status bar is the resulting frequency, as it is at the output of the downstream instrument. The frequency at the R&S SMB100B RF output is not changed.

See "RF frequency and level display with a downstream instrument" on page 58.

Remote command:

`[ :SOURce<hw> ] :FREQuency:MULTIplier` on page 468

### User Variation

Defines and activates a user-defined step width for varying the RF frequency or RF level with the rotary knob.

If disabled, the step width varies in steps of one unit at the cursor position.

### Variation Active ← User Variation

Activates the set user-defined step width.

Remote command:

`[ :SOURce<hw> ] :FREQuency:STEP:MODE` on page 470

`[ :SOURce<hw> ] :POWer:STEP:MODE` on page 511

### Variation Step ← User Variation

Sets the user-defined step width.

Remote command:


`[ :SOURce<hw> ] :FREQuency:STEP [ :INCRement ]` on page 470

`[ :SOURce<hw> ] :POWer:STEP [ :INCRement ]` on page 512

## 4.4 RF level settings


Access:

1. Select "Level" > "RF Level".

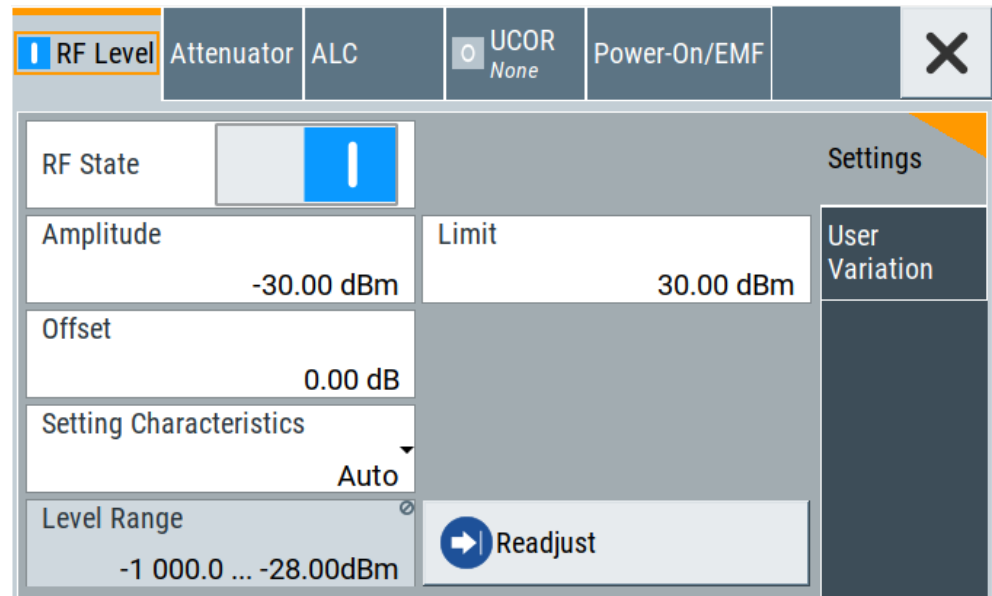

In the "RF Level" dialog, you can configure the offset-free level, the level limit, and the step width for varying the level with the rotary knob.

2. Select "User Variation" to set the step width to be used when setting the RF level using the rotary knob.

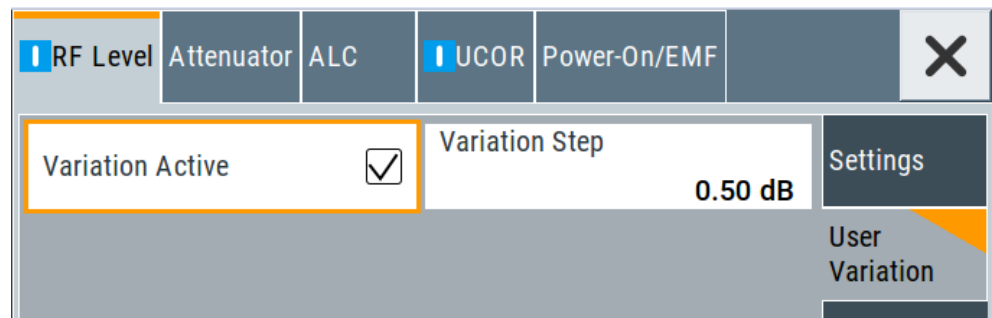

3. Observe the information on the home screen, "Level" tile.



The "Level" tile indicates the level limit, the user correction status and current correction value, current setting characteristics incl. mode.

The remote commands required to define the settings are described in [Chapter 12.15.10, "SOURCE:POWER subsystem"](#), on page 502.

## Settings

RF State/RF ON.....	63
Amplitude.....	63
Limit.....	63
Offset.....	64
Setting Characteristics.....	64
Level Range.....	65
Readjust.....	65
User Variation.....	65
L Variation Active.....	65
L Variation Step.....	65

### RF State/RF ON

Activates or deactivates the RF output.

Acts as the [RF on/off] key.

Remote command:

`:OUTPut<hw>[:STATe]` on page 405

### Amplitude

Sets the level of the RF signal.

The value is offset-free and corresponds to the level at the RF 50  $\Omega$  connector.

See "[RF frequency and level display with a downstream instrument](#)" on page 58.

#### Note: Suppressed values in the status bar

For security concerns or certain operating modes, you can hide the frequency and level display in the status bar.

- **\*\*\*\*\***

The display has been disabled for security reasons.

See:

- [Annotation Frequency](#)
- [Annotation Amplitude](#)

- 

The display is disabled when list mode is running, see [Chapter 6, "List and sweep mode"](#), on page 114.

Remote command:

`[:SOURce<hw>]:POWER:POWER` on page 507

**Note:** The SCPI command `[:SOURce<hw>]:POWER[:LEVel][:IMMediate][:AMPLitude]` sets the level of the "Level" display.

This means, the level containing offset.

### Limit

Sets an upper limit for the output power.

**Note:** The parameter "RF level" > "**Limit**" and "NRP power control" > "**RF Amplitude Limit**" are identical.

You can use this value to protect your DUT from damage due to high input power. If you enter an RF level above this value, the instrument limits the output power to this specified value, and generates the warning message:

"Pep value greater than the defined limit." However, the level indication in the status bar is not affected.

The setting is not affected by an instrument preset ([Preset] key or \*RST) and the "Save/Recall" function. It is reset only by factory preset.

Remote command:

`[ :SOURce<hw> ] :POWER:LIMit [ :AMPLitude ]` on page 506

### Offset

Sets a level offset.

This value represents the level shift of a downstream instrument, like, for example, an attenuator or an amplifier.

The "Level" value displayed in the status bar is the resulting level, as it is at the output of the downstream instrument. The level at the R&S SMB100B RF output is not changed.

See "[RF frequency and level display with a downstream instrument](#)" on page 58.

Remote command:

`[ :SOURce<hw> ] :POWER [ :LEVel ] [ :IMMediate ] :OFFSet` on page 512

### Setting Characteristics

Selects additional quality characteristics to optimize the behavior of the RF signal level for the specific application.

- |                     |   |
|---------------------|---|
| "Auto"              | <p>Sets the RF output level automatically according to the selected mode.</p> <p>In this mode, the instrument provides the highest dynamic range and fastest setting times.</p> <p>The RF signal is shortly blanked when the step attenuator is switching.</p> <p>For more information, refer to the specifications document.</p>   |
| "Uninterrupted"     | <p>Suppresses blanking at level transitions. Frequency transitions can lead to an RF level blanking due to hardware-specific switching points.</p> <p>This mode reduces the dynamic range of the instrument. The step attenuator is fixed.</p>  |
| "Strictly Monotone" | <p>Executes signal level changes monotonically increasing or decreasing.</p> <p>The setting makes sure that increasing the level value exclusively results in an increased output level, and vice versa.</p> <p>All electronic switches, which can affect the monotonicity are fixed.</p> <p>The operation mode is useful for applications using level searching algorithms which rely on a strictly monotonous behavior.</p> |



**"Constant-VSWR"**

Suppresses output impedance variations at the RF 50 Ω output connector, due to changed level settings.

**"User"**

Selects this entry automatically when you change one of the following parameters from the default setting:

- "Attenuator" > [Mode](#)
- "ALC" > [State](#) or [Detector Sensitivity](#)

**Note:** If you select another setting characteristic, the R&S SMB100B presets the modified attenuator and ALC parameters.

Remote command:

[\[:SOURce<hw>\]:POWER:LBEHaviour](#) on page 506

**Level Range**

Shows the interruption-free range of the level that you can use in the currently selected mode.

Remote command:

[\[:SOURce<hw>\]:POWER:RANGE:LOWer?](#) on page 514

[\[:SOURce<hw>\]:POWER:RANGE:UPPer?](#) on page 514

**Readjust**

Recalculates and adjusts the internal switch positions of the RF chain according to the current level.

The R&S SMB100B provides the "Readjust" function when you change one of the following parameters from the default setting:

- "RF Level" > [Setting Characteristics](#)
- "Attenuator" > [Mode > FixedSetting Characteristics](#)

Remote command:

[\[:SOURce<hw>\]:POWER:ALC:SONCe](#) on page 505

**User Variation**

Defines and activates a user-defined step width for varying the RF frequency or RF level with the rotary knob.

If disabled, the step width varies in steps of one unit at the cursor position.

**Variation Active ← User Variation**

Activates the set user-defined step width.

Remote command:

[\[:SOURce<hw>\]:FREQuency:STEP:MODE](#) on page 470

[\[:SOURce<hw>\]:POWER:STEP:MODE](#) on page 511

**Variation Step ← User Variation**

Sets the user-defined step width.

Remote command:

[\[:SOURce<hw>\]:FREQuency:STEP\[:INCRement\]](#) on page 470


[\[:SOURce<hw>\]:POWER:STEP\[:INCRement\]](#) on page 512

## 4.5 RF phase settings

The phase in sinusoidal signals defines the initial angle at its origin.

Access:


1. Select "Frequency" > "Phase".

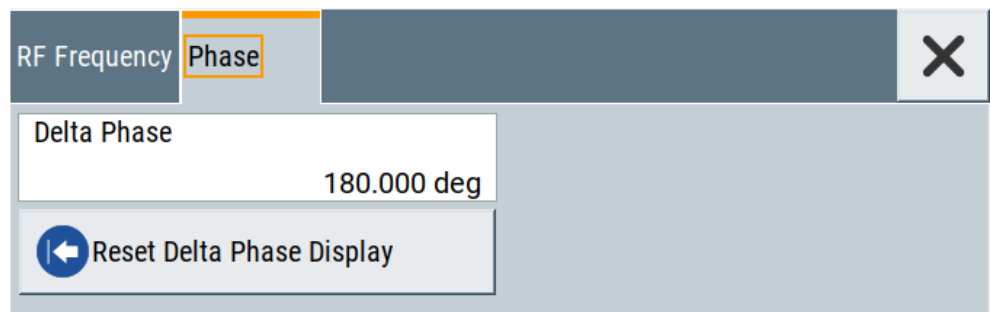

In the "Phase" tab, you can determine the delta phase value and reset the phase to this reference.

2. Switch to the home screen, "Frequency" tile.

The R&S SMB100B indicates the configured settings.

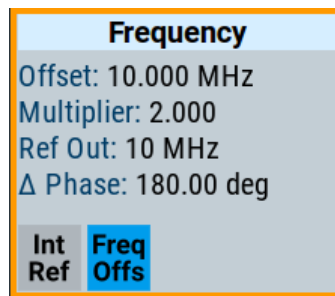

The remote commands required to define the settings are described in [Chapter 12.15.9, "SOURCE:PHASe subsystem"](#), on page 501.

### Settings

<a href="#">Delta Phase</a> .....	66
<a href="#">Reset Delta Phase Display</a> .....	66

#### Delta Phase

Sets the phase of the RF signal.

The current phase of the signal is used as the reference.

Remote command:

[ :SOURCE<hw> ] : PHASe on page 502

#### Reset Delta Phase Display

Adopts the selected "Delta Phase" value as the current value, and resets delta phase to 0 degrees.

Remote command:

[ :SOURce<hw> ] : PHASe: REFeRence on page 502

## 5 Analog modulations

The R&S SMB100B supports AM (amplitude modulation), FM (frequency modulation),  $\Phi$ M (phase modulation (PhiM)), and also PULM (pulse modulation). It generates low frequency signals (LF) as sine, triangle, trapezoidal or square (pulse) waveform, that can be output and further processed by a downstream instrument.

Option: R&S SMBB-K22, enables generation of pulse modulated RF signals.

Option: R&S SMBB-B5, Stereo/RDS-Coder enables generation of stereo-modulated RF signals (R&S SMB100B RF instruments only).

### 5.1 Required options

R&S SMB100B base unit equipped with the following options:

- Option frequency (R&S SMBB-B10x)
- Option Stereo/RDS-Coder (R&S SMBB-B5, R&S SMB100B analog RF instruments only)
- Option pulse modulator (R&S SMBB-K22)
- Option pulse generator (R&S SMBB-K23)  
(supports generation of single and double pulse signals)
- Option multi-function generator (R&S SMBB-K24)
- Option pulse train generator (R&S SMBB-K27)  
(requires R&S SMBB-K23)
- Option AM/FM/PhiM (R&S SMBB-K720)

For more information, refer to the specifications document.

### 5.2 Modulation types and signal sources

Radio transmitters do not transmit an audio signal directly. Instead, they modulate the audio signal onto a continuous wave (CW) carrier with much higher frequency.

A CW carrier has a sinusoidal waveform with constant amplitude and constant frequency. Modulating a signal onto the carrier means varying a property of the carrier according to the modulating signal. The three basic modulation types FM, AM and PhiM for example, vary one property of the carrier proportional to the instantaneous amplitude of the modulating signal.

#### Signal sources

If fully equipped, the R&S SMB100B modulates signals from the following sources:

- **Internal modulation source**
  - *Two LF generators*

Each of the LF generators provides a modulation signal with sine, pulse, triangle or trapezoid shape.

- *Noise generator*  
The noise generator supplies white noise with selectable bandwidth and distribution.
- *High-performance pulse generator*  
Generates single and double pulse, or pulse train signals.
- **External modulation source**
  - Amplitude, frequency or phase modulation signals are input at the Mod. Ext. connector.
  - Pulse modulation signals, at the Pulse Ext. connector.
  - Stereo modulation signals, at the Stereo L/R and S/P Dif connector.

### Signal output

You can perform AM, FM and PhiM with the signal of any of the provided sources. Moreover, you can combine two modulation signals and generate a two-tone signal. Regardless of the signal source, the generated signal can be output for further processing in a downstream instrument.

Current configuration is indicated in the "Analog Modulations > Overview" dialog; the output signal routing can be changed, too.

### Input and output connectors

Direction	Modulation	Connector	Required option
Output	Pulse modulation from internal signal Loop through of pulse signal from Pulse Ext.	Pulse Video	R&S SMBB-K22/-K23
	All analog modulations Marks the valid level and frequency	Signal Valid	
	LF generator	LF	
Input	AM, FM, PhiM	Mod. Ext. **)	R&S SMBB-K720
	Stereo modulation from external source	Stereo L/R	R&S SMBB-B5
	Pulse modulation from external source*) Or External trigger or gate signal*)	Pulse Ext.**) )	R&S SMBB-K22

- \*) External trigger signal and external signal for the pulse modulation cannot be used simultaneously, because these signals are expected at the same connector Pulse Ext.. Signal polarity and impedance are the same for both signals.
- \*\*) The external modulation signal must have a voltage of  $U_S = 1\text{ V}$  ( $U_{EFF} = 0.707\text{ V}$ ) to achieve the displayed modulation depth and range.  
Note that the input voltage does not exceed 1 V, otherwise modulation distortions can occur.

For more information, refer to the specifications document.

### Interactions and characteristics

- FM and PhiM modulations exclude each other and cannot be performed simultaneously.
- In sweep mode, LF frequency sweep is possible.
- The settings of the modulation signal affect all analog modulations that use an internal modulation source.
- You can feed an external LF signal in each of the two paths.
- Considerations to AM when using an external modulation signal:  
If external modulation is enabled, the RFoutput amplitude follows the external modulation signal with a scaling factor defined by the modulation sensitivity setting.  
With **Coupling (AC/DC) > DC**, the RF output signal behaves according to:
  - input signal = 0 V: the RF output amplitude corresponds to the level value set in the R&S SMB100B
  - input signal = +1 V: the output level increases up to the maximum value given by the set modulation sensitivity
  - input signal = -1 V: the output level decreases down to the minimum value given by the set modulation sensitivityWith **Coupling (AC/DC) > AC**, the modulation input signal is internally highpass filtered. Therefore, the DC content of the input signal is removed before it reaches the amplitude modulator.

For more information, refer to the specifications document.

## 5.3 Activating analog modulations

- ▶ Use one of the following:
  - Select "Modulation > Amplitude Modulation/Frequency Modulation/Phase Modulation > State > ON".
  - Select "Modulation > MOD ON".
  - Press the [Mod on/off] key.

### [Mod on/off]

Activate one or more analog modulations and press the [Mod on/off] key to toggle the state of them all.

Pressing the key again restores the status that was active before the last switch-off.

Remote command:

`[ :SOURce<hw> ] :MODulation [ :ALL ] [ :STATe ]` on page 423

## 5.4 Modulation settings

Access:

- ▶ Select "Modulation" > "Modulation Sources".


The "Modulation" dialog contains all functions and settings to configure the analog modulations, the LF signal sources for performing a modulation, and the LF signal output.

### 5.4.1 Pulse modulation settings

Option: see [Chapter 5.1, "Required options"](#), on page 68.

Access:

- ▶ Select "Modulation" > "Pulse Modulation".

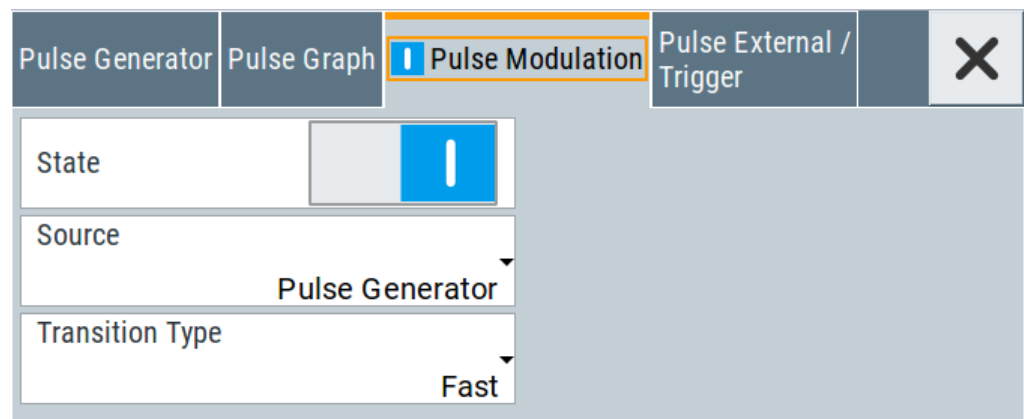

The "Pulse Modulation" dialog contains all parameters required to configure the pulse modulator and the pulse generator. It also displays the pulse signal graphically.

For an overview of the supported signals sources and related connectors, see [Chapter 5.2, "Modulation types and signal sources"](#), on page 68.

The remote commands required to define these settings are described in [Chapter 12.15.1.5, "SOURce:PULM subsystem"](#), on page 438.

#### Settings

State.....	71
Source.....	72
Transition Type.....	72

#### State

Activates pulse modulation and triggers the following automatic settings:

- Pulse generator is activated.

The signal is output at the Pulse Video connector.

To deactivate the signal output, set "Pulse Generator" > [Pulse Output State](#) > "Off".

Remote command:

[\[:SOURce<hw>\]:PULM:STATe](#) on page 442

### Source

Selects between the internal "Pulse Generator" or an "External" pulse signal for the modulation.

"Pulse Generator"

Selects the internal generator.

See [Pulse generator](#).

"External"

Modulation source is fed to the input connector.

See ["Signal sources"](#) on page 68.

Remote command:

[\[:SOURce<hw>\]:PULM:SOURce](#) on page 442

### Transition Type

Selects between "Fast" or "Smoothed" slew rate (slope).

"Fast"

Enables fast transitions with shortest rise and fall times.

"Smoothed"

Flattens the slew rate, resulting in longer rise / fall times. Use this mode if you are working with devices that are sensitive to steep slopes.

For more information, refer to the specifications document.

For more information, refer to the specifications document.

For more information, refer to the specifications document.

Remote command:

[\[:SOURce<hw>\]:PULM:TTYPe](#) on page 442


## 5.4.2 FM, PhiM and AM modulation settings

Option: R&S SMBB-K720



Access:

- ▶ Select "Modulation" > "Amplitude Modulation/Frequency Modulation/Phase Modulation".

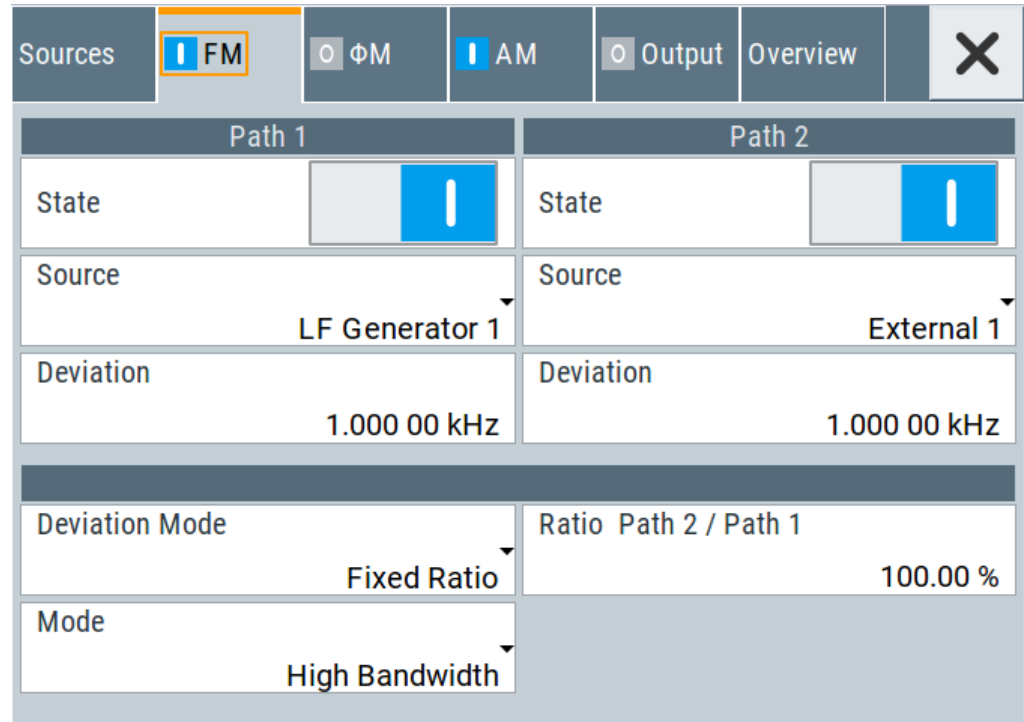

The "FM", "ΦM" and "AM" tabs contain the parameters per modulation type.

The remote commands required to define these settings are described in:

- [Chapter 12.15.1.2, "SOURCE:AM subsystem"](#), on page 424
- [Chapter 12.15.1.3, "SOURCE:FM subsystem"](#), on page 429
- [Chapter 12.15.1.4, "SOURCE:PM subsystem"](#), on page 433

## Settings

State.....	74
Source.....	74
FM settings.....	74
L Deviation.....	74
L Deviation Mode.....	75
L Total Deviation.....	75
L Ratio Path2/Path1.....	75
L Mode.....	75
PhiM settings.....	76
L Deviation.....	76
L Deviation Mode.....	76
L Total Deviation.....	76
L Ratio Path2/Path1.....	76
L Mode.....	77

AM settings.....	77
L Depth.....	77
L Sensitivity.....	77
L Deviation Mode.....	77
L Total Depth.....	78
L Ratio Path2/Path1.....	78

### State

Activates a modulation.

**Note:** Some modulations exclude each other and cannot be performed simultaneously. For more information, refer to the specifications document.

Remote command:

[ :SOURce<hw> ] :AM<ch> :STATe on page 426

[ :SOURce<hw> ] :FM<ch> :STATe on page 430

[ :SOURce<hw> ] :PM<ch> :STATe on page 435

### Source

Selects the LF signal source.

You can vary the signal sources for each of the modulations.

"LF Generator 1/2"

Selects one or both of the internally generated LF signals.

See [Chapter 5.4.7.1, "Source > LF generator settings"](#), on page 100.

"External"

Selects an externally supplied LF signal.

"Noise Generator"

Selects the internally generated noise signal.

See [Chapter 5.4.7.3, "Source > noise generator settings"](#), on page 105.

Remote command:

[ :SOURce<hw> ] :AM<ch> :SOURce on page 426

[ :SOURce<hw> ] :FM<ch> :SOURce on page 431

[ :SOURce<hw> ] :PM<ch> :SOURce on page 435

### FM settings

The following settings are dedicated to FM.

#### Deviation ← FM settings

Sets the frequency modulation deviation in Hz.

The maximal deviation depends on the RF frequency and the selected modulation mode.

Maximal possible deviation is selected automatically, if one of the following applies:

- The selected deviation is too high for the particular frequency
- The selected frequency is outside of the range where deviation is possible.

A warning message indicates this situation, too.

For more information, refer to the specifications document.

Remote command:

`[ :SOURce<hw> ] :FM<ch> [ :DEViation ]` on page 431

#### Deviation Mode ← FM settings

Enables you to couple the LF signal of both paths and determines the mode for fixing the total deviation.

The total deviation is the sum of both paths. When the sum is exceeded, the R&S SMB100B reports a settings conflict, but does not change the settings.

- |               |  |
|---------------|--|
| "Uncoupled"   | Enables you to adjust the deviation for each path independently.   |
| "Fixed Total" | Couples the deviation of both paths in per Hz. If you change the deviation of any path, the R&S SMB100B automatically adjusts the value of the other path. The sum always results in the set <a href="#">Total Deviation</a> . |
| "Fixed Ratio" | Couples the deviation ratio of both paths. If you change the deviation of any path, the R&S SMB100B adjusts the value of the other path.   |

Remote command:

`[ :SOURce<hw> ] :FM:DEViation:MODE` on page 432

#### Total Deviation ← FM settings

Sets the sum of the signal deviation for path 1 and path 2 in Hz when using combined sources in [Deviation Mode > Fixed Total](#).

[Deviation](#) of both paths always sum up to the value of the total deviation.

Behavior when changing any depth settings:

- Changing the total deviation adjusts the deviation of both paths proportionally.
- Changing the deviation of one path adjusts the deviation of the other path. The sum always results in the set total deviation.

Remote command:

`[ :SOURce<hw> ] :FM:DEViation:SUM` on page 432

#### Ratio Path2/Path1 ← FM settings

Sets the deviation ratio (path2 to path1) in percent.

#### Example:

If the deviation in path1 is 10 kHz and the ratio is 50%, the deviation in path 2 is automatically set to 5 kHz.

Remote command:

`[ :SOURce<hw> ] :FM:RATio` on page 432

#### Mode ← FM settings

Selects the mode of the frequency modulation.

- |                  |  |
|------------------|--|
| "High Bandwidth" | The maximum range for modulation bandwidth is available.   |
| "Low Noise"      | Phase modulation with phase noise and spurious characteristics close to CW mode. The range for modulation bandwidth and FM deviation is reduced. |
|                  | For more information, refer to the specifications document.  |

Remote command:

[ :SOURce<hw> ] :FM:MODE on page 433

### PhiM settings

The following settings are dedicated to PhiM.

#### Deviation ← PhiM settings

Sets the phase modulation deviation in radians or degrees.

The maximal deviation depends on the RF frequency and the selected modulation mode.

For more information, refer to the specifications document.

Maximal possible deviation is selected automatically, if one of the following applies:

- The selected deviation is too high for the particular frequency
- The selected frequency is outside of the range where deviation is possible.

A warning message indicates this situation, too.

Remote command:

[ :SOURce ] :PM<ch> [ :DEViation ] on page 437

#### Deviation Mode ← PhiM settings

Enables you to couple the LF signal of both paths and determines the mode for fixing the total deviation.

The deviation sum 2 rad at a maximum. When the sum is exceeded, the R&S SMB100B adjusts the settings automatically.

- |               |  |
|---------------|--|
| "Uncoupled"   | Enables you to adjust the deviation for each path independently.   |
| "Fixed Total" | Couples the deviation of both paths. If you change the deviation of any path, the R&S SMB100B automatically adjusts the value of the other path. The sum always results in the set <a href="#">Total Deviation</a> . |
| "Fixed Ratio" | Couples the deviation ratio of both paths. If you change the deviation of any path, the R&S SMB100B adjusts the value of the other path.   |

Remote command:

[ :SOURce<hw> ] :PM:DEViation:MODE on page 436

#### Total Deviation ← PhiM settings

In [Deviation Mode = Fixed Total](#), sets the sum of the signal deviation for path 1 and path 2.

[Deviation](#) of both paths always sum up to the value of the total deviation.

Behavior when changing any depth settings:

- Changing the total deviation adjusts the deviations of both paths proportionally.
- Changing the deviation of one path adjusts the deviation of the other path. The sum always results in the set total deviation.

Remote command:

[ :SOURce<hw> ] :PM:DEViation:SUM on page 437

#### Ratio Path2/Path1 ← PhiM settings

Sets the deviation ratio (path2 to path1) in per cent.

**Example:**

If the deviation in path1 is 10 rad and the ratio is 50%, the deviation in path 2 is automatically set to 5 rad.

Remote command:

`[ :SOURce<hw> ] :PM:RATio` on page 437

**Mode ← PhiM settings**

Selects the mode of the phase modulation.

"High Bandwidth"

The maximum range for modulation bandwidth and PhiM deviation is available.

However, phase noise increases at low frequencies, and the range of PhiM deviation is limited. This mode is suitable if you process high frequencies.

"High Deviation"

The maximum range for PhiM deviation is available.

Phase noise is improved for low frequencies compared to the default mode. The range for modulation frequency is limited.

This mode is suitable for low modulation frequencies and/or high PhiM deviation.

"Low Noise"

Frequency modulation with phase noise and spurious characteristics close to CW mode. The range for modulation bandwidth and FM deviation is reduced.

For more information, refer to the specifications document.

Remote command:

`[ :SOURce<hw> ] :PM:MODE` on page 436

**AM settings**

The following settings are dedicated to AM.

**Depth ← AM settings**

Determines the depth of the modulation signal in percent.

The depth is limited by the maximum peak envelope power (PEP).

Remote command:

`[ :SOURce<hw> ] :AM<ch> [ :DEPTth ]` on page 427

**Sensitivity ← AM settings**

Sets the input sensitivity of the external modulation signal.

Remote command:

`[ :SOURce<hw> ] :AM<ch>:SENSitivity` on page 428

**Deviation Mode ← AM settings**

Enables you to couple the LF signal of both paths and determines the mode for fixing the total deviation.

The deviation sum of both paths is 100% in total. When the sum is exceeded, the R&S SMB100B reports a settings conflict, but does not change the settings.

- "Uncoupled" Enables you to adjust the deviation depth for each path independently.
- "Fixed Total" Couples the deviation depth of both paths in per cent. If you change the depth of any path, the R&S SMB100B automatically adjusts the value of the other path. The sum always results in the set **Total Depth**.
- "Fixed Ratio" Couples the deviation ratio of both paths. If you change the depth of any path, the R&S SMB100B adjusts the value of the other path.

Remote command:

`[ :SOURce<hw> ] :AM:DEVIation:MODE` on page 428

#### **Total Depth ← AM settings**

Sets the sum of the signal **Depth** for path 1 and path 2 in per cent when using combined sources and **Deviation Mode > Fixed Total**.

Using external LF signals, the R&S SMB100B indicates the **Sensitivity** per Volts for the input signal.

Provided both signal paths are turned on, the depth of both paths always sum up to the value of the total depth.

Behavior when changing any depth settings:

- Changing the total depth adjusts the depths of both paths proportionally.
- Changing the depth of one path adjusts the depth of the other path. The sum always results in the set total depth.

Remote command:

`[ :SOURce<hw> ] :AM:DEPTTh:SUM` on page 427

#### **Ratio Path2/Path1 ← AM settings**

Sets the deviaton ratio of the signal depth for path 2 to path 1 in per cent when using combined sources.

Using external LF signals, the R&S SMB100B indicates the **Sensitivity** per Volts for the input signal.

Remote command:

`[ :SOURce<hw> ] :AM:RATIo` on page 428

### **5.4.3 Stereo modulation**

R&S SMB100B RF instruments only

Option: see **Chapter 5.1, "Required options"**, on page 68.

Access:

- ▶ Select "Modulation" > "Stereo Modulation".

Option R&S SMBB-B5, Stereo/RDS Coder enables generation of stereo-modulated RF signals according to the standard. Beside the MPX (FM stereo multiplex) signal, also the radio traffic service ARI (Automotive Radio Information) and Radio Data System (RDS) are supported by the option.

Select an internal or external signal source. The analog [Stereo L/R] connections and the digital [S/P Dif] connection supply the signal of an external source. The LF generator acts as internal signal source.

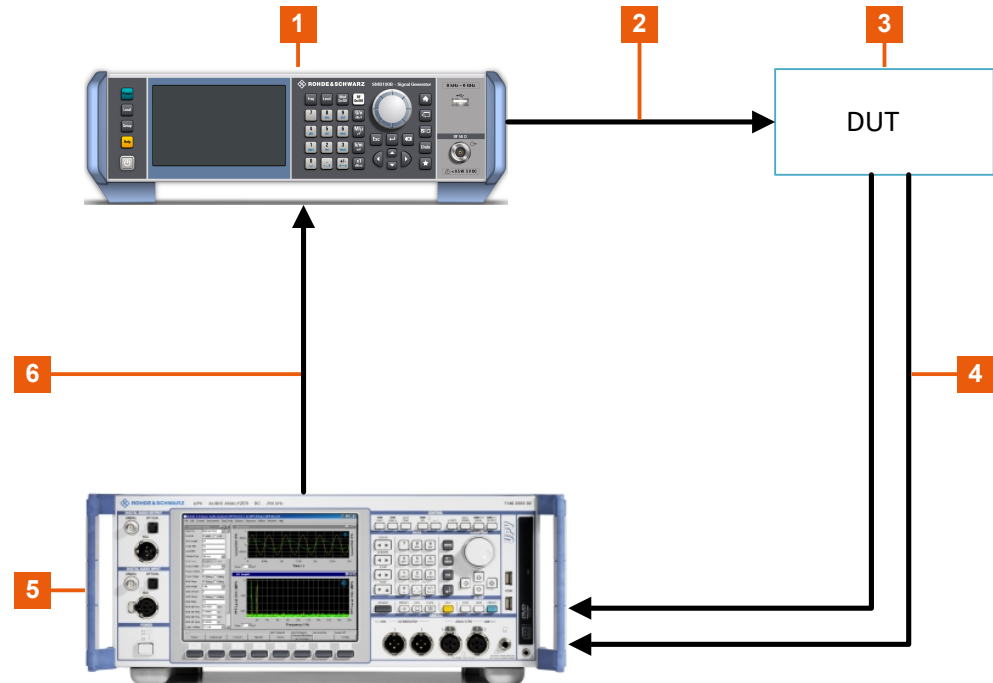


Figure 5-1: Example setup

- 1 = R&S SMB100B with Stereo/RDS Coder R&S SMBB-B5
- 2 = RF modulated test signal including ARI and RDS
- 3 = FM stereo tuner
- 4 = Analog audio signals
- 5 = Signal generation and analysis, for example with R&S®UPV Audio Analyzer
- 6 = Analog or digital audio signals

• <a href="#">General settings</a> .....	79
• <a href="#">Pilot tone</a> .....	82
• <a href="#">ARI</a> .....	83
• <a href="#">RDS</a> .....	85

### 5.4.3.1 General settings

Access:

- ▶ Select "Modulation" > "Stereo Modulation".

The "General" tab contains the settings for creating a stereo modulation signal.

General	Pilot Tone	ARI	RDS	
State <input checked="" type="checkbox"/>				
FM Deviation		Mode		
40.000 kHz		Mono Left		
Audio Source		LF Gen		
LF Gen Frequency		LFGen Shape		
1.000 00 kHz		Pulse		
Preemphasis		50 µs		

The remote commands required to define these settings are described in [Chapter 12.15.1.6, "SOURCE:STEReo subsystem"](#), on page 449.

### Settings

State.....	80
FM Deviation.....	80
Mode.....	80
Audio Source.....	81
LF Gen Frequency.....	81
LF Gen Shape.....	81
External R/L Impedance.....	81
Preemphasis.....	81
Max Modulation Frequency.....	82

#### State

Activates stereo modulation.

Remote command:

[ :SOURCE ] :STEReo:STATe on page 451

#### FM Deviation

Sets the MPX (FM stereo multiplex) deviation.

Remote command:

[ :SOURCE ] :STEReo[:DEViation] on page 451

#### Mode

Selects the mode for the audio signal.

"Mono Left" A mono signal containing the left channel is generated/fed in.

"Mono Right" A mono signal containing the right channel is generated/fed in.



- "Stereo R = L" A stereo signal with right and left channel is generated/fed in. The channels have the same frequency and phase.
- "Stereo R = -L" The signal on the left external audio input is used for both channels. The right channel is inverted.
- "Stereo R != L" (External source only)  
A stereo signal containing different, independent right and left channels is fed in.

Remote command:

[\[:SOURCE\]:STEREO:AUDIO:MODE](#) on page 451

### Audio Source

Selects the source for the audio signal.

- "Off" No audio signal is provided, ARI and RDS signal can be generated separately.
- "Ext L,R" The external audio stereo signal is fed in via the analog [L] and [R] inputs.
- "Ext S/P Diff" The external audio signal is fed in via the digital [S/P Dif] input.
- "LF Gen" The audio stereo signal is generated by the internal LF1 generator.

Remote command:

[\[:SOURCE\]:STEREO:SOURCE](#) on page 452

### LF Gen Frequency

If "Audio Source = LF Gen", sets the frequency of the LF generator signal.

This setting affects all analog modulations which use the LF1 generator as the internal modulation source.

Remote command:

[\[:SOURCE\]:LFOutput<ch>:FREQUENCY](#) on page 475

### LF Gen Shape

If "Audio Source = LF Gen", selects the shape of the LF generator signal.

This setting affects all analog modulations which use the LF1 generator as the internal modulation source.

Remote command:

[\[:SOURCE<hw>\]:LFOutput<ch>:SHAPE](#) on page 479

### External R/L Impedance

(External analog audio signal input only)

Selects the input impedance for the external analog audio signal inputs [L] and [R].

Remote command:

[\[:SOURCE\]:STEREO:EXTERNAL:IMPEDANCE](#) on page 452

### Preemphasis

Activates and sets the preemphasis used for signal generation.

Preemphasis increases the high-frequency portions of the signal in the level before the FM modulator is reached.

Remote command:

[ :SOURce ] :STEReo:AUDio:PREemphasis:STATe on page 453

[ :SOURce ] :STEReo:AUDio:PREemphasis on page 453

### Max Modulation Frequency

Sets the maximum modulation frequency.

This parameter is valid/required only when preemphasis has been activated and an external modulation source is used.

For sinewave signals with full modulation, preemphasis can lead to an internal overload of the modulator. The MMF parameter reduces the internal full modulation, so that sinewave signals with nominal voltage can be transmitted with low distortion, even with active preemphasis up to the set frequency. This procedure reduces the S/N ratio at the set MMF, based on the level increase of the preemphasis.

The default value of this parameter works for normal modulation signals, such as voice or music, because the amplitude of the high-frequency portions of these signals normally decreases substantially.


Remote command:

[ :SOURce ] :STEReo:MMF on page 452

### 5.4.3.2 Pilot tone

Access:

- ▶ Select "Modulation" > "Stereo Modulation > Pilot Tone".

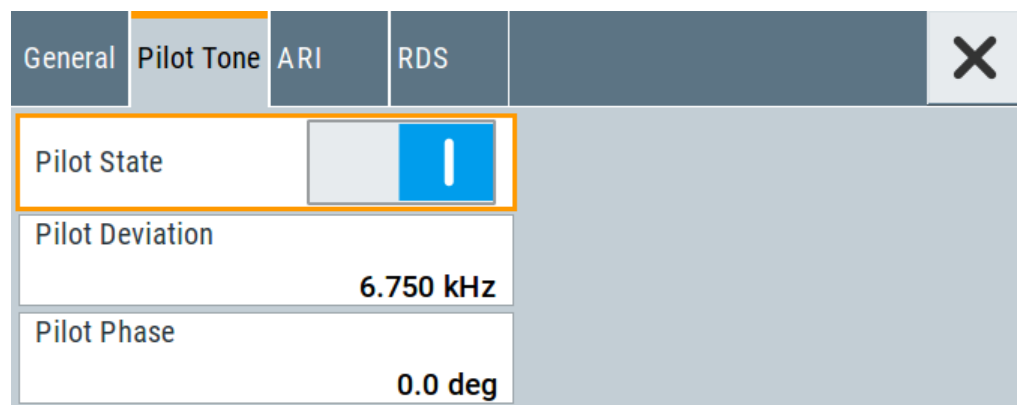

The pilot tone supports the transmission of a signal to the receiver through adding a constant single-frequency signal. The signal receiver accepts the incoming signal only after the pilot tone is confirmed.

The remote commands required to define these settings are described in [Chapter 12.15.1.6, "SOURce:STEReo subsystem"](#), on page 449.

**Settings**

Pilot State.....	83
Pilot Deviation.....	83
Pilot Phase.....	83

**Pilot State**

Activates the pilot tone generation.

Remote command:

`[ :SOURce ] :STEReo:PILot:STATe` on page 453

**Pilot Deviation**

Sets the deviation of the pilot tone.

Remote command:

`[ :SOURce ] :STEReo:PILot[:DEVIation]` on page 453

**Pilot Phase**

Sets the phase of the pilot tone in relation to the 38 kHz carrier signal of the receiver. For a correct demodulation, the pilot tone must be in phase with the 38 kHz carrier.


Remote command:

`[ :SOURce ] :STEReo:PILot:PHASe` on page 454

**5.4.3.3 ARI**

Access:

- ▶ Select "Modulation" > "Stereo Modulation > ARI".

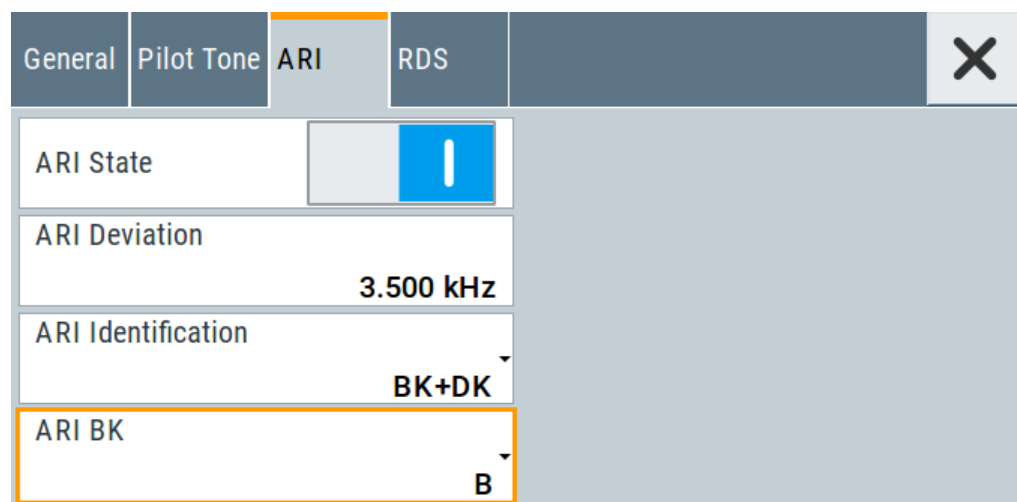

ARI (Automotive Radio Information) indicates the presence of traffic information in FM radio broadcasts.

The remote commands required to define these settings are described in [Chapter 12.15.1.6, "SOURce:STEReo subsystem"](#), on page 449.

**Settings**

ARI State.....	84
ARI Deviation.....	84
ARI Identification.....	84
ARI BK.....	84

**ARI State**

Activates the ARI signal generation. ARI signals can be generated simultaneously with MPX (FM stereo multiplex) and RDS signals.

Remote command:

[ :SOURce ] :STEReo:ARI:STATe on page 454

**ARI Deviation**

Sets the frequency deviation of the ARI subcarrier signal.

Remote command:

[ :SOURce ] :STEReo:ARI[:DEViation] on page 454

**ARI Identification**

Selects the generated identifiers of the ARI signal.

DK and BK are abbreviations of the German words Durchsagekennung and Bereichskennung.

"Off"	Only the 57 kHz subcarrier is generated. It marks the stations which broadcast traffic programs and enables the receiver to recognize the frequency as being ARI-capable.
"DK"	The message identification is generated in addition (low-frequency 30% AM). It signalizes that a traffic message is broadcasted.
"BK"	The area identification is generated in addition (60% AM). This code is used to identify the geographical region covered by the radio station. The specific code is selected below.
"DK+BK"	The area and message identification are generated in addition to the subcarrier.

Remote command:

[ :SOURce ] :STEReo:ARI:TYPE:STATe on page 455

[ :SOURce ] :STEReo:ARI:TYPE on page 455

**ARI BK**

Selects the specific area identification (BK) code of the ARI signal. The six letters (six different frequencies) identify a specific region in each country.

Remote command:

[ :SOURce ] :STEReo:ARI:BK[:CODE] on page 455

### 5.4.3.4 RDS

Access:

- ▶ Select "Modulation" > "Stereo Modulation > RDS".

General	Pilot Tone	ARI	RDS
RDS State <input checked="" type="checkbox"/>			
RDS Deviation: 2.000 kHz			
RDS Data Set: DS2			
Program Service Name		Program Identification	
Traffic Program <input checked="" type="checkbox"/>		Traffic Announcement <input checked="" type="checkbox"/>	

The RDS (Radio Data System) is configured in the RDS settings section. RDS is a communication protocol standard from the European Broadcasting Union for sending digital information embedded in conventional FM radio broadcasts. The RDS system standardizes several types of transmitted information, including time, track/artist info and station identification.

The remote commands required to define these settings are described in [Chapter 12.15.1.6, "SOURCE:STEREO subsystem"](#), on page 449.

#### Settings

<a href="#">RDS State</a> .....	85
<a href="#">RDS Deviation</a> .....	86
<a href="#">RDS Data Set</a> .....	86
<a href="#">Program Service Name</a> .....	86
<a href="#">Program Identification</a> .....	86
<a href="#">Traffic Program</a> .....	86
<a href="#">Traffic Announcement</a> .....	87

#### RDS State

Activates the RDS signal generation. RDS signals can be generated simultaneously with MPX (FM stereo multiplex) and ARI signals.

Remote command:

[ :SOURCE ] :STEREO:RDS:STATE on page 456

**RDS Deviation**

Sets the deviation of the RDS subcarrier.

Remote command:

[\[:SOURCE\]:STEReo:RDS\[:DEVIation\]](#) on page 456

**RDS Data Set**

Selects the data set used in the RDS signal. Five data sets are provided on the instrument. The values of the data sets can be defined via remote control (command `SOURce:STEReo:DIRect`).

Each of these data sets contains predefined values for:

- PI (program identification, identifies the broadcast station )
- PS or scrolling PS (program service name, represents the station identity name)
- TP (traffic program, mark stations with regular traffic programs )
- TA (traffic announcement, marks the start of a traffic program)
- PTY (program type, predefined genres of broadcasting programs, e.g. news)
- PTYN (program type name)
- DI (decoder information)
- MS (music/speech)
- CT (clock time, used for synchronization)

The following values are empty:

- RT (radio text, two text blocks with 64 symbols each)
- AF (alternative frequencies, maximum of five lists with 25 frequencies each, enables the receiver to retune to a different frequency providing the same station when the first signal becomes too weak)
- TMC (traffic message channel)
- EON (enhanced other networks, eight PS with five EON AF lists each, enables the receiver to tune into these stations automatically if traffic programs are broadcasted)

The program identification and the program service name of the selected data set are indicated in the menu.

Remote command:

[\[:SOURCE\]:STEReo:RDS:DATaset](#) on page 456

**Program Service Name**

Indicates the RDS program service name.

Remote command:

[\[:SOURCE\]:STEReo:DIRect](#) on page 450

**Program Identification**

Indicates the RDS program identification.

Remote command:

[\[:SOURCE\]:STEReo:DIRect](#) on page 450

**Traffic Program**

Activates the RDS traffic program (TP function). The receiver can recognize a frequency as being capable of traffic information only if the TP function is active.

Remote command:

[ :SOURce ] :STEReo:RDS:TRAFfic:PROGram[ :STATe ] on page 456

### Traffic Announcement

Activates the RDS traffic announcement (TA function). If activated, the receiver switches from the current status, e.g. playing a CD, to the receive mode and enables the broadcast of a traffic announcement. The TP state has to be on.

Remote command:


[ :SOURce ] :STEReo:RDS:TRAFfic:ANNouncement [ :STATe ] on page 457

## 5.4.4 Pulse generator

Option: see [Chapter 5.1, "Required options"](#), on page 68.

Access:

- ▶ Select "Modulation" > "Pulse Modulation > Pulse Generator".

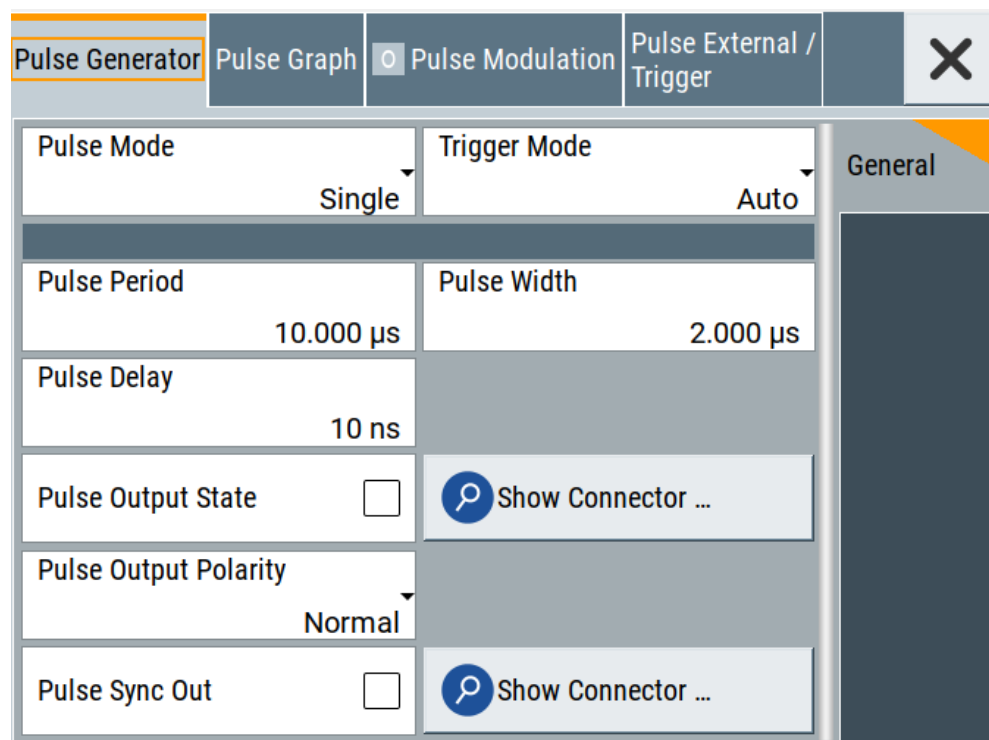

The "Pulse Generator" tab contains the settings for creating the pulse modulation signal internally.

The remote commands required to define these settings are described in [Chapter 12.15.1.5, "SOURce:PULM subsystem"](#), on page 438.

- [Pulse generator > general settings](#)..... 88
- [Pulse generator > pulse train settings](#)..... 91
- [Import/export list files](#)..... 95

### 5.4.4.1 Pulse generator > general settings

Access:

- ▶ Select "Modulation" > "Pulse Modulation > Pulse Generator".


#### Settings

Pulse Mode.....	88
Trigger Mode.....	89
Pulse Period.....	90
Pulse Width.....	90
Double Pulse Width.....	90
Pulse Delay.....	90
Double Pulse Delay.....	90
Pulse Output State.....	90
Show Connector.....	91
Pulse Output Polarity.....	91
Execute Single Trigger.....	91
Pulse Sync Out.....	91

#### Pulse Mode

Sets the operating mode of the pulse generator. Depending on the selection, the instrument displays the associated parameters.


"Single" Generates a single pulse in one pulse period.

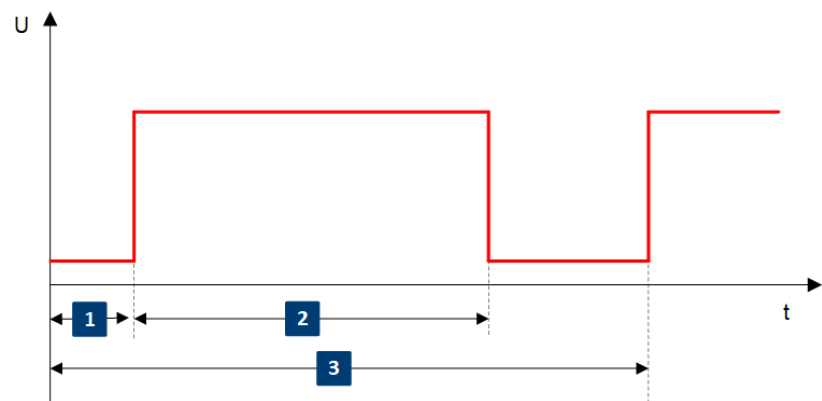

1 = Pulse delay  
2 = Pulse width  
3 = Pulse period




"Double" Generates two pulses in one pulse period.

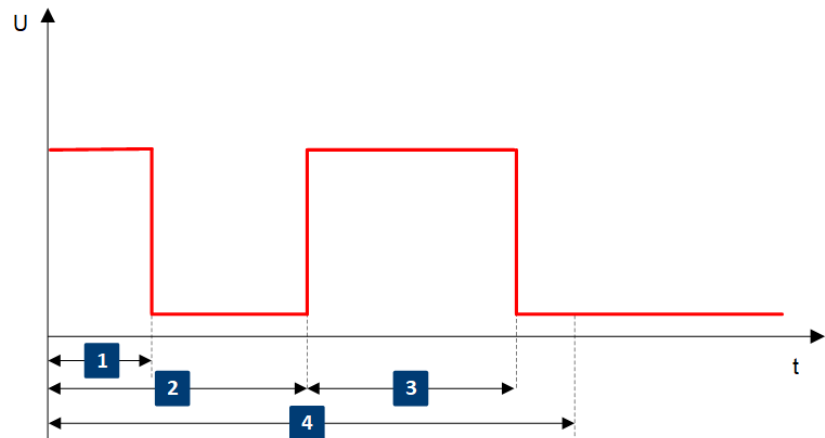

- 1 = Pulse width
- 2 = Double pulse delay
- 3 = Double pulse width
- 4 = Pulse period

"Train" Option: R&S SMBB-K27  
Generates a user-defined pulse train.

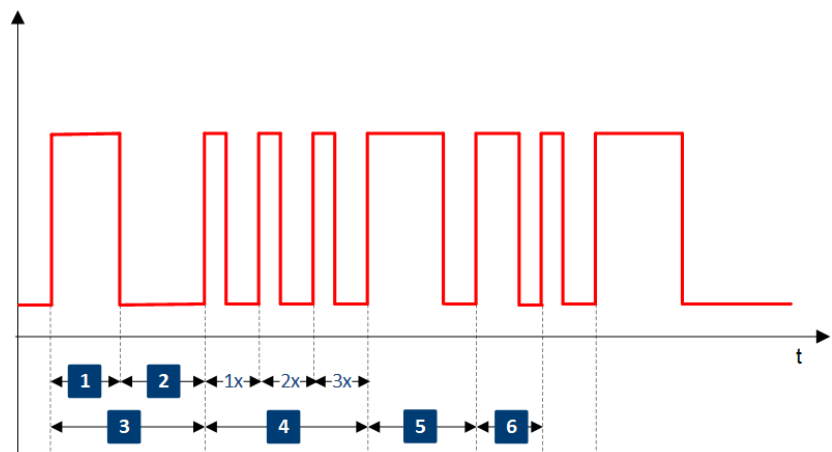

- 1 = 1st pulse: On-time
- 2 = 1st pulse: Off-time
- 3 = 1st pulse: pulse period
- 4 = 2nd pulse: repeated 3 times
- 5 = 3rd pulse
- 6 = 4th pulse

See [Chapter 5.4.4.2, "Pulse generator > pulse train settings"](#), on page 91.

Remote command:

[ :SOURce<hw> ] :PULM:MODE on page 439

### Trigger Mode

Selects between continuous triggering or triggering initiated by a trigger event from an external signal.

See also ["Input and output connectors"](#) on page 69.

"Auto"	Generates the internal modulation signal continuously.
"Single"	The pulse generator is triggered by an internal trigger event, initiated with <a href="#">Execute Single Trigger</a> . The pulse signal is generated once.
"Ext Single"	Generates a single pulse signal, triggered by an external signal.
"Ext Triggered"	Generates the pulse signal each time an external trigger event occurs.
"Ext Gated"	Generates the signal triggered by an external gate signal. For more information, refer to the specifications document.

Remote command:

[\[:SOURce<hw>\]:PULM:TRIGger:MODE](#) on page 440

### Pulse Period

Sets the repetition rate of the generated pulse signal.

Remote command:

[\[:SOURce<hw>\]:PULM:PERiod](#) on page 440

### Pulse Width

Sets the pulse duration of the generated pulse signal.

**Note:** The pulse width must be at least 20 ns less than the set pulse period.

Remote command:

[\[:SOURce<hw>\]:PULM:WIDTh](#) on page 441

### Double Pulse Width

Sets the width of the second pulse.

Remote command:

[\[:SOURce<hw>\]:PULM:DOUBle:WIDTh](#) on page 441

### Pulse Delay

Sets the pulse delay. The pulse delay determines the time that elapses after a trigger event before pulse modulation starts. The pulse delay is not effective for double pulse generation.

Remote command:

[\[:SOURce<hw>\]:PULM:DELay](#) on page 441

### Double Pulse Delay

Sets the delay from the start of the first pulse to the start of the second pulse.

Remote command:

[\[:SOURce<hw>\]:PULM:DOUBle:DELay](#) on page 441

### Pulse Output State

Activates the output of the pulse modulation signal.

Remote command:

[\[:SOURce<hw>\]:PGENerator:OUTPut\[:STATe\]](#) on page 501

**Show Connector**

Accesses a dialog that displays the physical location of the selected connector on the front/rear panel of the instrument.

**Pulse Output Polarity**

Sets the polarity of the pulse output signal.

Remote command:

`[ :SOURce<hw> ] :PGENerator:OUTPut:POLarity` on page 500

**Execute Single Trigger**

If "Trigger Mode = Single", initiates a single pulse sequence manually.

Remote command:

`[ :SOURce ] :PULM [ :INTernal ] [ :TRAIIn ] :TRIGger:IMMediate` on page 440

**Pulse Sync Out**

Assigns the pulse synchronization signal to the [Signal Valid] connector at the rear panel.

"checked" Sets the validity of the RF signal at the output:

- **high:** while the signal settles.
- **low:** when it is stable (valid).

"cleared" Generates a single pulse at the beginning of a pulse sequence, e.g. to synchronize pulse modulation.

Remote command:


`[ :SOURce<hw> ] :PULM:OUTPut:SYNC [ :STATe ]` on page 443

**5.4.4.2 Pulse generator > pulse train settings**

Option: see [Chapter 5.1, "Required options"](#), on page 68.

Access:

1. Select "Modulation" > "Pulse Modulation > Pulse Generator" > "**Pulse Mode = Train**".

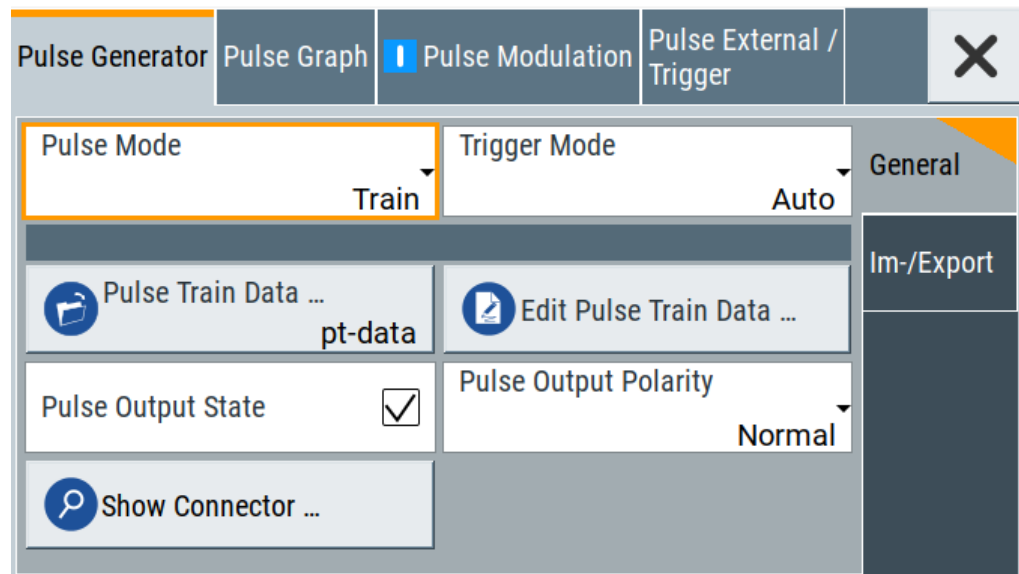

2. Select "Pulse Train Data".
3. Select an existing file or select "New" to create one.
4. Define the filename.  
Select "Edit Pulse Train Data", if the file is empty or to control and change the values.
5. In the "Edit Pulse Train Data" dialog, enter the pulse on/off times and pulse repetition values.
6. Select "Save".

A pulse train is a sequence of pulses with user-defined repetition, and pulse on and off times. Once defined, pulse train settings can be saved in a file. The filename is user-definable; the file extension (\*.pulstrn) is assigned automatically. When a file is selected, the filename is indicated.

### Possible ways to configure a pulse train

You can configure a pulse train in the following ways:

- **Internally**
  - Use the built-in editor table editor, see in the "Pulse Generator > Pulse Train" dialog.  
Once defined, pulse train settings can be saved in a file. For example, to exchange configuration between instruments or to modify the file content with an external program and reload them again.  
The filename is user-definable; the file extension is \*.pulstrn.
  - Using the corresponding remote-control commands.  
Note that you have to create a pulse train file first.
- **Externally**

Create a pulse train sequence as a CSV file with Microsoft Excel, with a Notepad or a similar tool, save it with the predefined extension. Transfer the file to and load it into the instrument.

### Pulse train ASCII file format

Files describing pulse trains are simple files in text or comma-separated value (CSV) file format. The filename is user-definable; the file extension is \*.csv or \*.txt.

The file contains a list of pulse definition values, one row per pulse; a new line indicator separates the pulses. Pulses are defined with their pulse on time, pulse off time given in us and number of repetitions.

#### Example: Pulse train file content (\*.txt file)

```
0.0001,0.0005,2
0.00025,0.0005,1
0.0001,0.0003,3
```

For file handling, use the standard functions in the "File Manager", see [Chapter 9.8, "Using the file manager"](#), on page 218.

The remote commands required to define these settings are described in [Chapter 12.15.1.5, "SOURCE:PULM subsystem"](#), on page 438.

### Settings

Pulse Train Data.....	93
Edit Pulse Train Data.....	94
Data handling keys.....	94
L Go To.....	94
L Edit.....	94
L Save As/Save.....	94
Fill.....	94

### Pulse Train Data

Accesses the standard "File Select" function of the instrument. The provided navigation possibilities in the dialog are self-explanatory.

Pulse train files are files with predefined file extension \*.pulstrn. When a file is selected, the dialog indicates the filename.

You can create the file internally in the table editor or externally.

- To select an existing file, select "Select List > navigate to the file \*.pulstrn > Select"
- Use the general editor function to create internally new file or to edit an existing one.
- Use the standard file manager function to load externally created files to the instrument.

Remote command:

[\[:SOURCE<hw>\]:PULM:TRAI:n:CATalog?](#) on page 445

[\[:SOURCE<hw>\]:PULM:TRAI:n:SElect](#) on page 446

[\[:SOURCE<hw>\]:PULM:TRAI:n:DElete](#) on page 445

**Edit Pulse Train Data**

Accesses the build-in table editor to define a new pulse train file or edit an existing one.

"On-Time,  $\mu$ s/Off-Time, $\mu$ s"

Sets the pulse on and pulse off time.

"Count"

Sets the number of repetitions of an "On-/ Off-Time" value pair.

Pulses with "Count = 0" are ignored.

Use this method to skip value pairs temporarily, without deleting them from the table.

Remote command:

[\[:SOURce<hw>\]:PULM:TRAI:n:ONTime](#) on page 445

[\[:SOURce<hw>\]:PULM:TRAI:n:OFFTime](#) on page 445

[\[:SOURce<hw>\]:PULM:TRAI:n:REPetition](#) on page 446

[\[:SOURce<hw>\]:PULM:TRAI:n:DELeTe](#) on page 445

**Data handling keys**

Standard functions for file and data handling.



**Note:** Save a list only after filling both columns (frequency and level), otherwise the entries are lost.

**Go To ← Data handling keys**

Selects a row for editing.

**Edit ← Data handling keys**

Enables you to insert, or delete a row or ranges within a list, and provides access to a dialog for automatic filling.

See "[Fill...](#)" on page 94.

**Save As/Save ← Data handling keys**

Saves the list in a file with user-defined name and predefined file extension. To save a copy or create a file, use the "Save as" function.

**Fill...**

Provides parameters for filling a table automatically with user-defined values.

From 0	Range 4
Column To Fill Frequency /Hz	
Start Value 2.000 000 000 000 GHz	End Value 2.600 000 000 000 GHz
Increment Value 200.000 000 000 MHz	
<input checked="" type="checkbox"/> Fill	

To fill the table, select "Fill".

**Note:** Once you enter a value or fill a column, the editor automatically adds preset values in the other columns. This functionality protects against data loss, otherwise incomplete rows will be lost when saving. You can simply override these values.

"From / Range"

Defines the start line and number of lines to be filled.

"Column To Fill"

Selects, if the column is filled up with frequencies in Hz, levels in dBm or dwell times in s.

"Start Value / End Value"

Sets the start value for frequency, level or dwell time. The end value is read only and depends on the increment value and the range.

"Increment Value"

Determines the step size.

"Fill"

Fills the column specified in "Column To fill".

#### 5.4.4.3 Import/export list files

Access:

1. Select one of the following:

- "Sweep" > "List mode".
- "Level" > "User Correction".
- "Modulation > Pulse Modulation > Pulse Generator > Pulse Mode = Train".

2. Select "Import/Export".

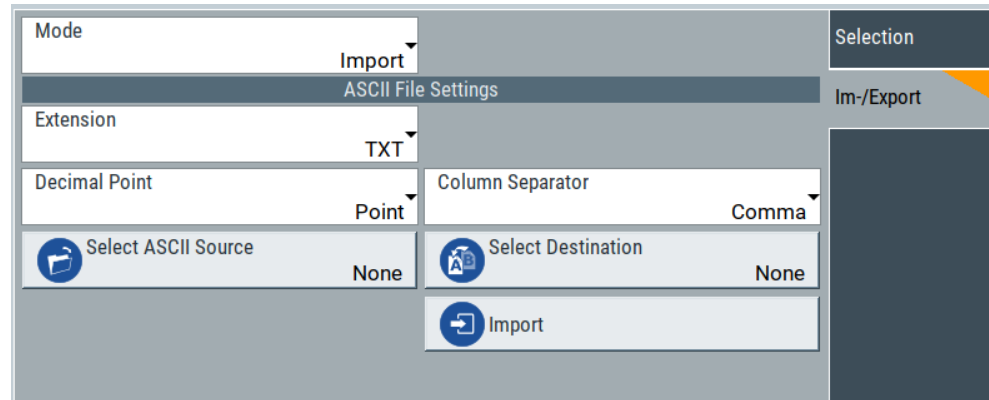


Figure 5-2: Im-/Export dialog (example with UCOR settings)

The "Import/Export" dialog contains all functions and settings to import externally created list data or to export it accordingly. You can process and store a list in the formats \*.txt (ASCII), or \*.csv (plain text with identical sequence of fields). The table separators and the decimal floating point numbers are customizable.

## Settings

Mode.....	96
ASCII File Settings.....	96
Select (ASCII) Source/Select (ASCII) Destination.....	97
Select Source/Select ASCII Destination.....	97
Import / Export.....	97

### Mode

Selects import or export of a data list file. The provided parameters vary according to the selected mode.

Remote command:

[ :SOURce<hw> ] :LIST:DEXChange:MODE on page 498

[ :SOURce<hw> ] :CORRection:DEXChange:MODE on page 464

[ :SOURce<hw> ] :PULM:TRain:DEXChange:MODE on page 447

### ASCII File Settings

Defines the format and the separators of the associated data file.

"Extension"      Selects \*.csv or \*.txt format.

"Decimal Point"      Sets "Point" (dot) or "Comma" as the decimal separator used in the ASCII data with floating-point numerals.

"Column Separator"      Sets the separator between the columns in an ASCII table.  
Available are: "Tab", "Semicolon", "Comma" or "Space".

Remote command:

[ :SOURce<hw> ] :LIST:DEXChange:AFILe:EXTension on page 497

[ :SOURce<hw> ] :LIST:DEXChange:AFILe:SEParator:DECimal on page 497



[\[:SOURCE<hw>\]:LIST:DEXChange:AFIle:SEParator:COLumn](#) on page 497

[\[:SOURCE<hw>\]:CORRection:DEXChange:AFIle:EXTension](#) on page 463

[\[:SOURCE<hw>\]:CORRection:DEXChange:AFIle:SEParator:DECimal](#)  
on page 464

[\[:SOURCE<hw>\]:CORRection:DEXChange:AFIle:SEParator:COLumn](#)  
on page 464

[\[:SOURCE<hw>\]:PULM:TRAIIn:DEXChange:AFIle:EXTension](#) on page 447

[\[:SOURCE<hw>\]:PULM:TRAIIn:DEXChange:AFIle:SEParator:DECimal](#)  
on page 448

[\[:SOURCE<hw>\]:PULM:TRAIIn:DEXChange:AFIle:SEParator:COLumn](#)  
on page 448

### Select (ASCII) Source/Select (ASCII) Destination

In "Mode > Import", access the file select dialog that provides standard file handling functions.

Where:

- "Select ASCII Source": defines the file to be loaded (imported)
- "Select ASCII Destination": selects the filename under that the loaded file is saved

Remote command:

[\[:SOURCE<hw>\]:LIST:DEXChange:AFIle:CATalog?](#) on page 496

[\[:SOURCE<hw>\]:LIST:DEXChange:AFIle:SElect](#) on page 497

[\[:SOURCE<hw>\]:CORRection:DEXChange:AFIle:CATalog?](#) on page 463

[\[:SOURCE<hw>\]:CORRection:DEXChange:AFIle:SElect](#) on page 463

[\[:SOURCE<hw>\]:PULM:TRAIIn:DEXChange:AFIle:CATalog?](#) on page 448

[\[:SOURCE<hw>\]:PULM:TRAIIn:DEXChange:AFIle:SElect](#) on page 448

### Select Source/Select ASCII Destination

In "Mode > Export", access the file select dialog that provides standard file handling functions.

Where:

- "Select Source": selects the file to be exported
- "Select ASCII Destination": defines the filename and the file path for the exported file

Remote command:

[\[:SOURCE<hw>\]:LIST:DEXChange:SElect](#) on page 498

[\[:SOURCE<hw>\]:CORRection:DEXChange:SElect](#) on page 465

[\[:SOURCE<hw>\]:PULM:TRAIIn:DEXChange:SElect](#) on page 449

### Import / Export

Imports or exports the selected data list file, depending on the current mode.

Remote command:

[\[:SOURCE<hw>\]:LIST:DEXChange:EXECute](#) on page 496

[\[:SOURCE<hw>\]:CORRection:DEXChange:EXECute](#) on page 464

[\[:SOURCE<hw>\]:PULM:TRAIIn:DEXChange:EXECute](#) on page 449


### 5.4.5 Pulse graph

Option: see [Chapter 5.1, "Required options"](#), on page 68.

Access:

- ▶ Select "Modulation" > "Pulse Modulation > Pulse Graph".

The pulse graph is the graphical representation of the current pulse signal.

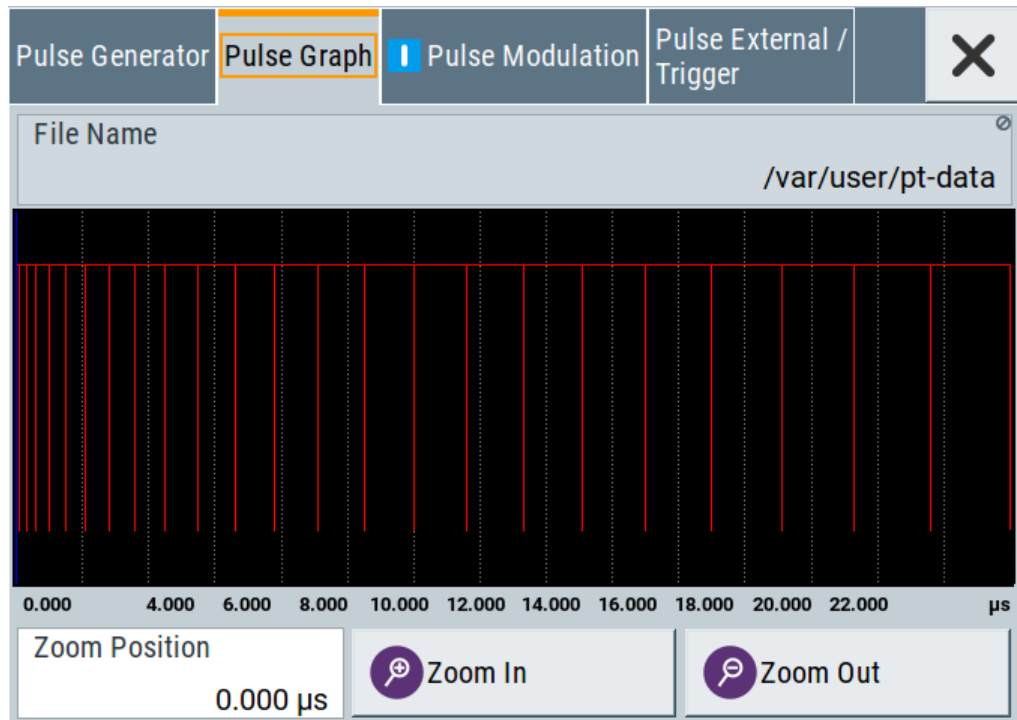

The height of the bars corresponds to the selected amplitude of the pulse signal.

The remote commands required to define these settings are described in [Chapter 12.15.1.5, "SOURCE:PULM subsystem"](#), on page 438.

#### File Name

Indicates the name of the pulse train data file.

To create or select a file, see ["Pulse Train Data"](#) on page 93.

Remote command:

`[ :SOURCE<hw> ] :PULM:TRAI:n:SElect` on page 446

#### Zooming


You can zoom into the diagram to visualize the graph in more detail:

- "Zoom Position": Sets the focus on the time axis where to enlarge the graph.
- "Zoom In": Enlarges the graph at the selected position.
- "Zoom Out" for the reverse operation.

## 5.4.6 Pulse external / trigger settings

Access:

- ▶ Select "Modulation" > "Pulse Modulation > Pulse External / Trigger".

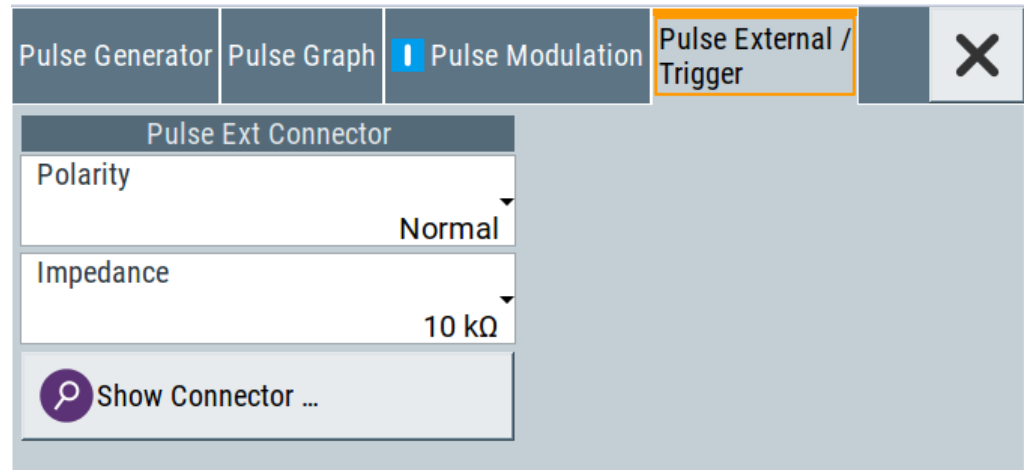

The dialog specifies some characteristics of the Pulse Ext. connector. This connector is common for the pulse generator and the pulse modulator. For an overview, see ["Input and output connectors"](#) on page 69.

The remote commands required to define these settings are described in [Chapter 12.15.1.5, "SOURce:PULM subsystem"](#), on page 438.

### Settings

<a href="#">Polarity</a> .....	99
<a href="#">Impedance</a> .....	99
<a href="#">Show Connector</a> .....	99

#### Polarity

Sets the polarity of the active slope of a pulse input signal, that is the external pulse modulation signal.

Remote command:

[\[:SOURce<hw>\]:PULM:POLarity](#) on page 443

#### Impedance

Sets the input impedance.

Remote command:

[\[:SOURce<hw>\]:PULM:IMPedance](#) on page 443



#### Show Connector

Accesses a dialog that displays the physical location of the selected connector on the front/rear panel of the instrument.

## 5.4.7 FM, PhiM and AM modulation sources

Access:

- ▶ Select "Modulation > Modulation Sources".


In the "Sources" tab, you can configure an LF modulation signal for performing analog modulations. It includes the setting parameters of the internal LF-and multi-function generators, the noise generator, and an external signal source.

- [Source > LF generator settings](#)..... 100
- [Source > external settings](#)..... 104
- [Source > noise generator settings](#)..... 105

### 5.4.7.1 Source > LF generator settings

Access:

- ▶ Select "Modulation" > "Modulation Sources > LF Generator".

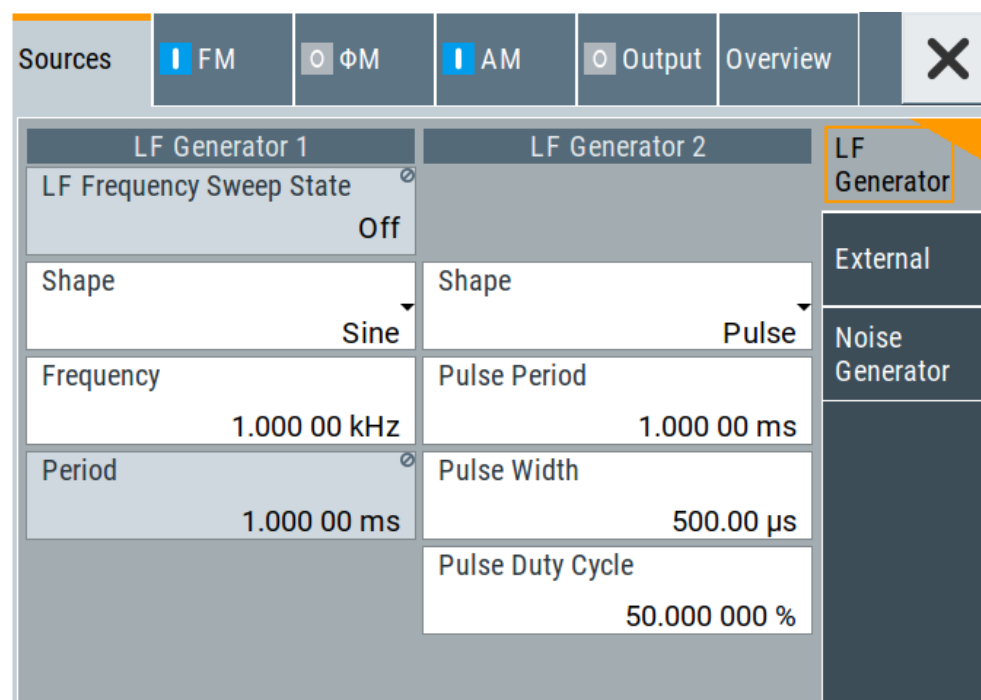

The internal LF signal can be the modulation signal source for any of the analog modulations. The LF signal applies to all modulations which use the internal modulation signal. Therefore, any modification of the LF signal immediately affects all currently active modulations.

The remote commands required to define these settings are described in [Chapter 12.15.5, "SOURCE:LFOutput subsystem"](#), on page 472.

## Settings

State (LF frequency sweep).....	101
Shape.....	101
Frequency.....	103
Period.....	103
Pulse Width.....	103
Pulse Duty Cycle.....	103
Triangle Rise.....	104
Trapezoid Rise / Fall.....	104
Trapezoid High.....	104

### State (LF frequency sweep)

Status of the LF frequency sweep signal.

You find this parameter in two dialogs:

- "LF Frequency Sweep" turns on/off the signal generation.  
See [Sweep mode settings](#) for access.
- "Analog Modulation Sources" displays the current state (read-only). If it is turned on, this dialog provides the varying sweep frequency, see [Current Frequency](#).

**Note:** Active RF frequency, RF level or RF combined sweep modes deactivate the LF sweep or List mode and vice versa.

Remote command:


`[ :SOURce<hw> ] :LFOutput :FREQuency :MODE` on page 476

### Shape

Option: R&S SMBB-K24.


Selects the waveform shape of the LF generator signal.

"Sine"

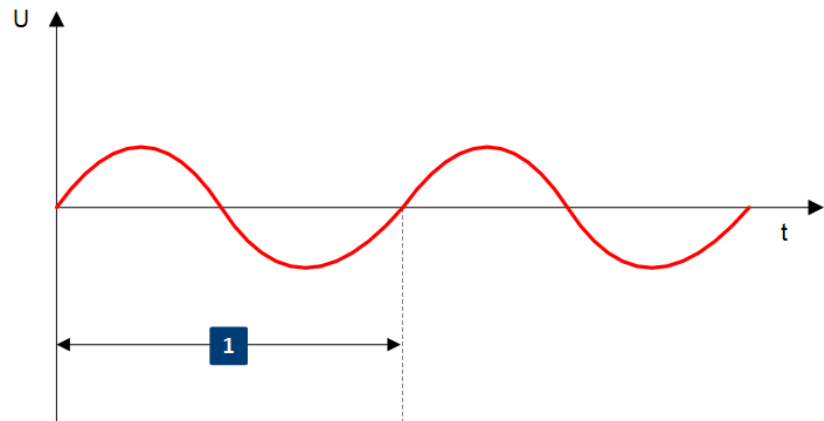


1 = Period

"Square"

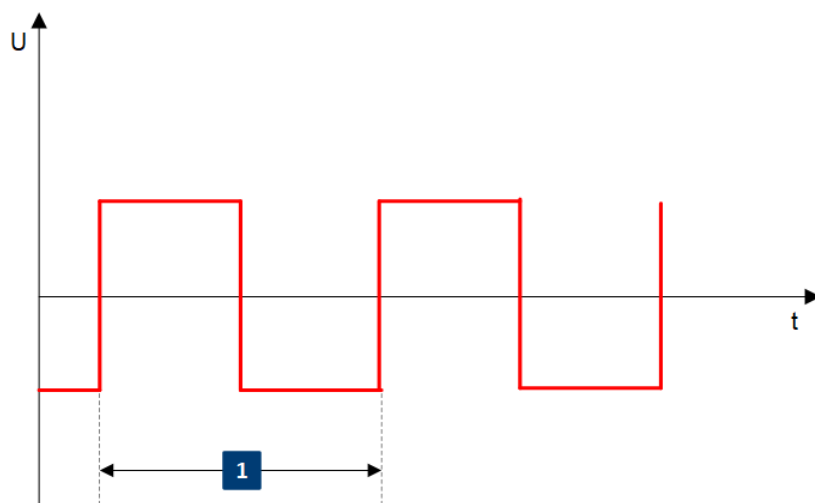


1 = Period

"Pulse"

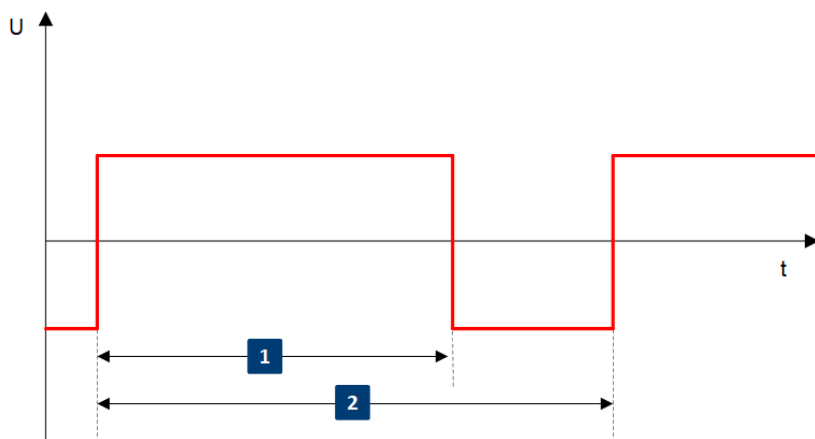


1 = Pulse width  
2 = Pulse period

"Triangle"

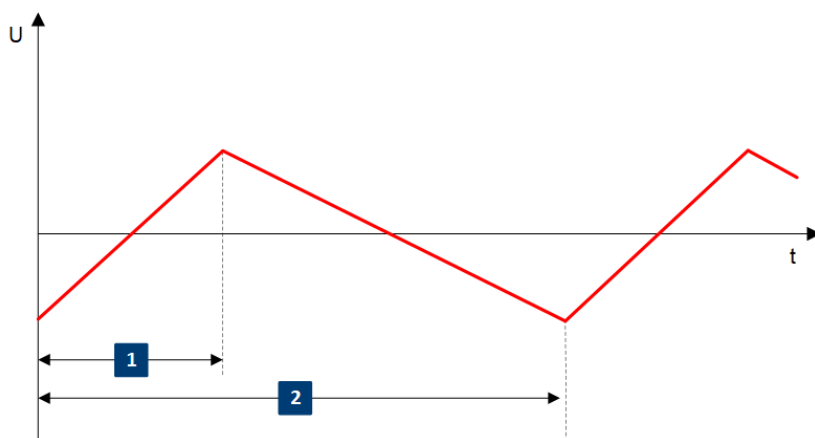

1 = Triangle rise  
2 = Triangle period

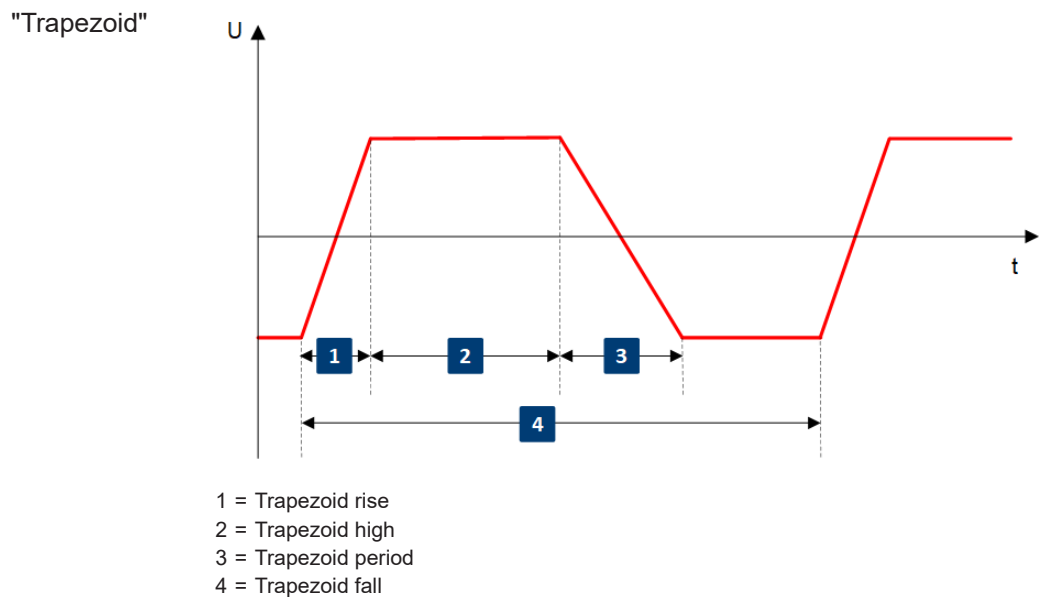

Remote command:

`[ :SOURce<hw> ] :LFOutput<ch> :SHAPE` on page 479

### Frequency

Sets the frequency of the LF generator for sine signals.

Set the signal shape with the parameter [Shape](#).

Remote command:

`[ :SOURce ] :LFOutput<ch> :FREQUENCY` on page 475

### Period

Sets the repetition rate of the generated LF signal for triangle, trapezoid or pulse shapes, see [Shape](#).

The period of sine signals is calculated from the selected [Frequency](#)

Remote command:

`[ :SOURce<hw> ] :LFOutput<ch> :SHAPE:TRAPeZe:PERiod` on page 481

`[ :SOURce<hw> ] :LFOutput<ch> :SHAPE:TRIangle:PERiod` on page 481

`[ :SOURce<hw> ] :LFOutput<ch> :SHAPE:PULSe:PERiod` on page 480

### Pulse Width

Sets the pulse duration of the generated pulse signal.

Remote command:

`[ :SOURce<hw> ] :LFOutput<ch> :SHAPE:PULSe:WIDTh` on page 480

### Pulse Duty Cycle

Sets the ratio between the pulse duration and the pulse period in percent.

Remote command:

`[ :SOURce<hw> ] :LFOutput<ch> :SHAPE:PULSe:DCYCLe` on page 479

**Triangle Rise**

Sets the time required for the triangle signal to change from low level to high level.

Remote command:

[\[:SOURce<hw>\]:LFOutput<ch>:SHAPE:TRIangle:RISE](#) on page 481

**Trapezoid Rise / Fall**

Sets the time required for the trapezoid signal to change from low level to high level, and vice versa.

Remote command:

[\[:SOURce<hw>\]:LFOutput<ch>:SHAPE:TRAPeze:RISE](#) on page 481

[\[:SOURce<hw>\]:LFOutput<ch>:SHAPE:TRAPeze:FALL](#) on page 480

**Trapezoid High**

Sets how long the trapezoid signal is at high level.


Remote command:

[\[:SOURce<hw>\]:LFOutput<ch>:SHAPE:TRAPeze:HIGh](#) on page 480

**5.4.7.2 Source > external settings**

Access:

- ▶ Select "Modulation" > "Modulation Sources > External".

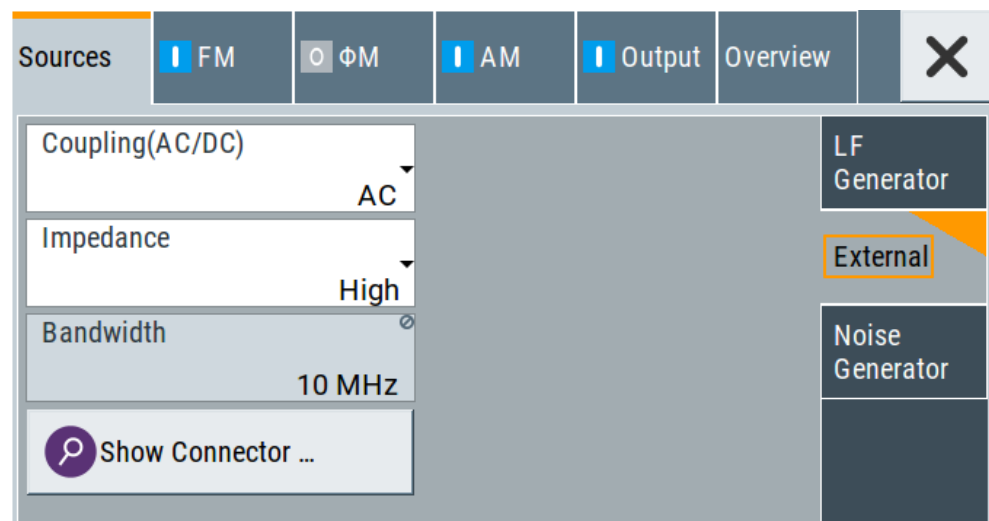

The "External" settings section contains all parameters required to configure the signal of an externally supplied LF signal.

The remote commands required to define these settings are described in [Chapter 12.15.4, "SOURce:INPut subsystem"](#), on page 471.



**Settings**

Coupling (AC/DC).....	105
Impedance.....	105
Bandwidth.....	105
Show Connector.....	105

**Coupling (AC/DC)**

Selects the coupling mode (AC or DC) for the external signal.

"AC" Disconnects the DC voltage component and uses only the AC component of the modulation signal.

"DC" Uses the modulation signal with both components, AC and DC.

Remote command:

[ :SOURce<hw> ] : INPut : MODext : COUPling on page 471

**Impedance**

Sets the impedance for the externally supplied signal.

Remote command:

[ :SOURce<hw> ] : INPut : MODext : IMPedance<ch> on page 471

**Bandwidth**

Displays the maximum bandwidth of the external LF signal.

Remote command:

[ :SOURce ] : LFOutput<ch> : BANDwidth? on page 475


**Show Connector**

Accesses a dialog that displays the physical location of the selected connector on the front/rear panel of the instrument.

**5.4.7.3 Source > noise generator settings**

Access:

- ▶ Select "Modulation" > "Modulation Sources > Noise Generator".

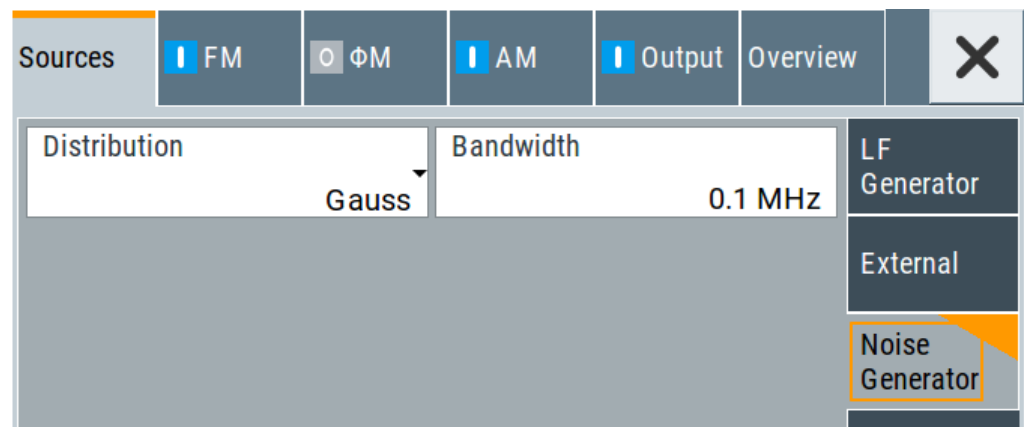

The "Noise Generator" settings contain all parameters to configure the signal of the internal noise generator.

The remote commands required to define these settings are described in [Chapter 12.15.7, "SOURce:NOISe subsystem"](#), on page 498.

### Settings

<a href="#">Distribution</a> .....	106
<a href="#">Bandwidth</a> .....	106

### Distribution

Selects the distribution of the noise power density.

"Gauss"           Generates the noise power according to a Gaussian distribution.

"Equal"           Generates an evenly distributed noise.

Remote command:

[\[:SOURce<hw>\]:NOISe:DISTRibution](#) on page 499

### Bandwidth

Sets the noise bandwidth as distinct value.

You can set the bandwidth between 100 kHz and 10 MHz in 100 KHz steps.


Remote command:

[\[:SOURce<hw>\]:NOISe:BANDwidth|BWIDth](#) on page 499

## 5.4.8 LF signal output settings

Access:

- ▶ Select "Modulation" > "LF Output".

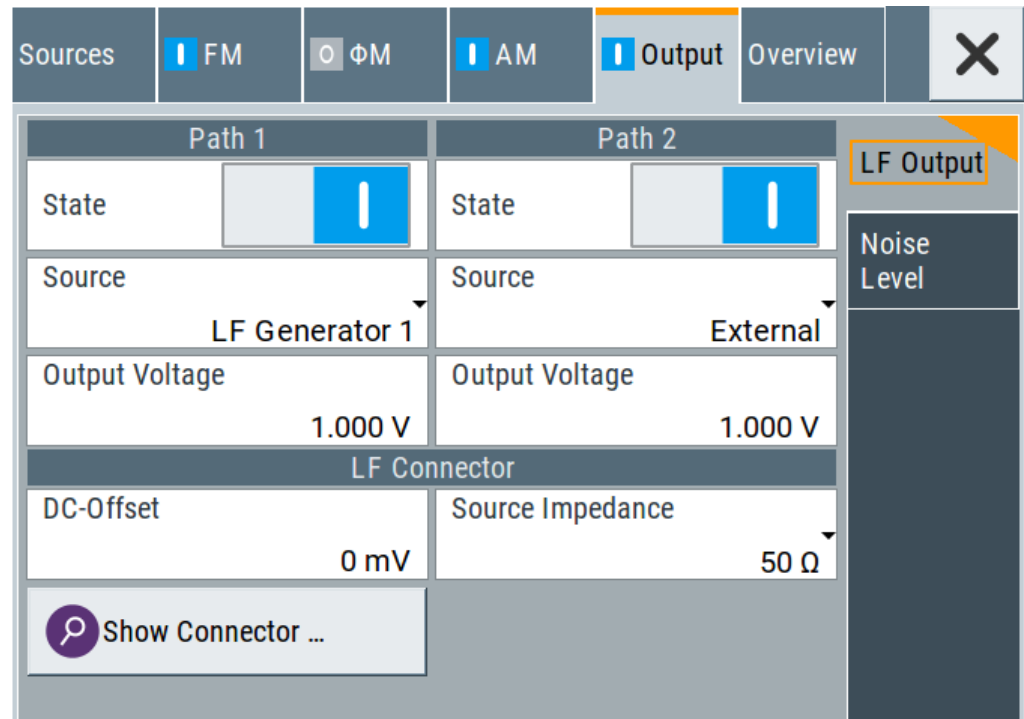

In the "LF Output" tab, you can configure the signal at the LF outputs, determine the output voltage or add a DC offset. Activate both paths to output the sum signal of the two sources.

### Settings

State.....	107
Source.....	108
Show Connector.....	108
Output Voltage.....	108
DC-Offset.....	108
Source Impedance.....	108
Load Impedance.....	108
Noise Level.....	109
└ Noise Density.....	109
└ Noise Level.....	109

### State

Activates the output of the LF signal.

Remote command:

[ :SOURce ] :LFOutput<ch> [ :STATe ] on page 477

**Source**

Select the sources for the signal output at the LF connector. If you activate path 1 *and* 2, those sources are added.

Use the "Show Connector" function to find out where this connector is located.

"LF Generator 1/2"

Selects one of internally generated LF signals.

"AM"

Option: R&S SMBB-K720

Selects the AM signal.

"FM/PhiM"

Option: R&S SMBB-K720

Selects the signal also used by the frequency or phase modulations.

"Noise Generator"

Selects the internally generated noise signal.

"External"

Selects an externally supplied LF signal.

Remote command:

[\[:SOURce\]:LFOutput<ch>:SOURce](#) on page 478

**Show Connector**

Accesses a dialog that displays the physical location of the selected connector on the front/rear panel of the instrument.

**Output Voltage**

Sets the peak to peak voltage of the selected LF output source.

This value, e.g. +1 V to -1 V refers to 50 Ohm at the RF output with high termination impedance at the LF output.

Remote command:

[\[:SOURce\]:LFOutput<ch>:INTernal:VOLTage](#) on page 477

**DC-Offset**

Adds a DC offset to the LF output signal.

Remote command:

[\[:SOURce\]:LFOutput:OFFSet](#) on page 477

**Source Impedance**

Selects the output impedance of the LF generator.

"50 Ω"

Selects an output impedance of 50 Ω.

"600 Ω"

Selects an output impedance of 600 Ω.

Remote command:

[\[:SOURce\]:LFOutput:SIMPedance](#) on page 478

**Load Impedance**

Sets the specification of the load impedance interconnected to the LF generator output.

This parameter is available in case of activated R&S SMB100A or R&S SML0x emulations only, see "Remote Access Settings" > "Instrument Emulations" > "[Language](#)" on page 301.

These signal generators come with an LF generator source impedance of 10 Ohm which is not available with the R&S SMB100B.

The set LF generator load impedance enables the R&S SMB100B to emulate the 10 Ohm LF generator source impedance of these generators by a corresponding increase of the open circuit LF generator output voltage.

The load impedance setting is not affected by an instrument preset ([Preset] key or \*RST), restart or the "Save/Recall" function. It is reset to the default value of 1 MOhm by a factory preset only.


Remote command:

n.a.

### Noise Level

Access:

- Select "Modulation" > "Output > Noise Level".

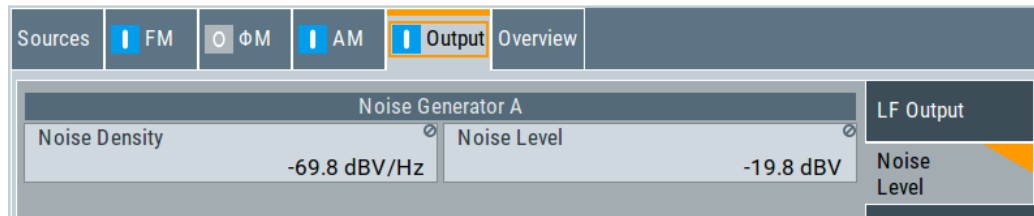

### Noise Density ← Noise Level

Indicates the level of the noise signal for a bandwidth of 1 Hz (relative).

Remote command:

[\[:SOURCE<hw>\]:NOISE:LEVEL:RELATIVE?](#) on page 499

### Noise Level ← Noise Level

Indicates the level of the noise signal per Hz within the total bandwidth (absolute).

Remote command:


[\[:SOURCE<hw>\]:NOISE:LEVEL\[:ABSOLUTE\]?](#) on page 499

## 5.4.9 Overview

Option: AM and FM/PM require R&S SMBB-K720

Access:

- ▶ Select "Modulation" > "Modulation Sources > Overview".

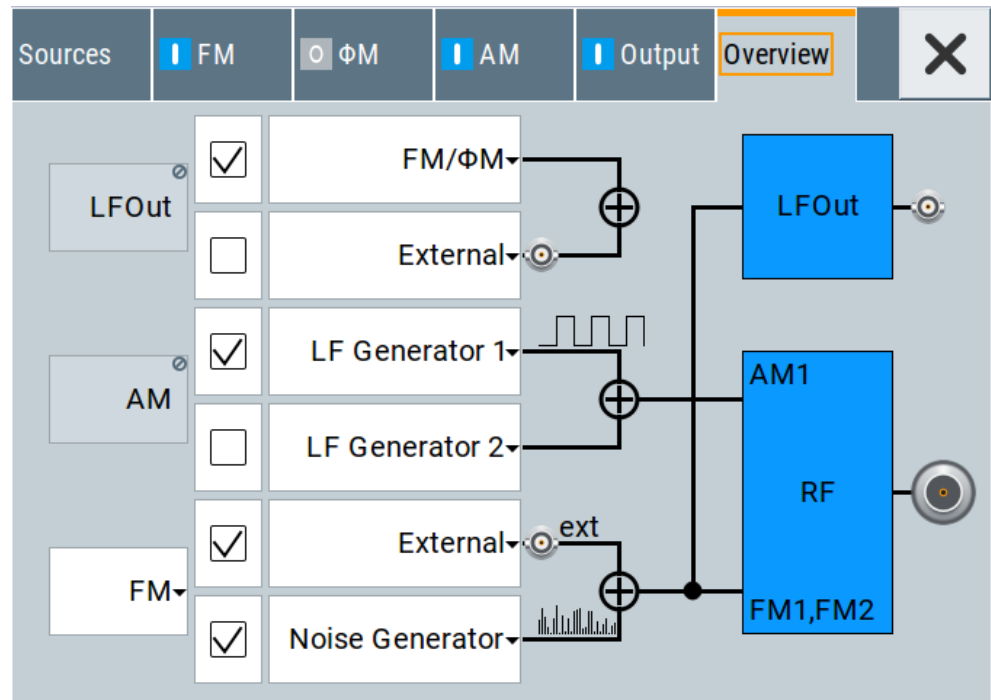

Blue color = Active output signal (AM and FM)  
 Gray color = Inactive output signal (LF Out)  
 Miniature graph = Indicates an active source  
 Connectors = Indicate a connector (e.g. external signal) is involved in the path of the signal

The "Overview" tab is an interactive diagram that indicates the active modulations and the signal being output.

Here you can:

- Select the output signal ("LF Out") in one or two paths; the setting acts as the parameter "LF Output Source"
- Select the source for each modulation and modulation path; the setting acts as the parameter "Source"
- Activate modulation in one or two paths; the setting acts as the parameter "State"  
 To generate a two-tone signal composed from the two paths of the same modulation type, activate both paths.
- The "FM" box allows switching to "PhiM", but those modulations are mutually exclusive.

### LFOut

Label for the LF output settings in the overview.

Remote command:

n.a.

**AM**

Label for the amplitude modulation settings in the overview.

Remote command:

n.a.

**FM/PhiM**

Selects the modulation signal to be assigned to the output. You can assign the frequency or phase modulated signal.

Remote command:

n.a.

## 5.5 How to generate an amplitude modulated signal

The following examples use the internal LF generator.

**To set the frequency and level of the RF signal**

1. Press [Preset] to start from a defined state.
2. In the status bar, set "Frequency = 2 GHz".
3. Set "Level = -20 dBm".

**To configure the modulation signal (LF generator)**

1. Select "Modulation" > "Modulation Source".
2. In the "Sources" tab, select "Shape > Sine".
3. Set "Frequency = 20 kHz".

The period is calculated automatically and indicates "Period = 50.00 µs".

**To configure the amplitude modulation settings**

1. In "Modulation" dialog, select the "AM" tab.
2. Set "Source = LF Generator1"
3. Set "Depth = 30%"
4. Select "State = I" to activate the modulation.
5. Set "Level > RF ON" to enable signal output.

## 5.6 How to generate a pulse modulated signal

The following example uses the internal pulse generator.

**To set the frequency and level of the RF signal**

1. Press [Preset].
2. In the status bar, set "Frequency = 4 GHz".
3. Set "Level = -25 dBm".

**To configure the pulse generator**

1. Select "Modulation" > "Pulse Generator".
2. Select "Pulse Mode = Double".
3. Set "Pulse Period = 10 us".
4. Set "Pulse Width = 2 us".
5. Set "Double Pulse Width = 1.2 us".
6. Set "Double Pulse Delay = 4.5 us".
7. Activate "Pulse Output State".
8. Set "Trigger Mode = Auto".

In the "Pulse Graph" tab, you can view the generated pulse signal graphically.

**To enable pulse modulation**

1. Select the "Pulse Modulation" tab.
2. Set "State = I" to activate pulse modulation.
3. Set "Level > RF ON" to enable signal output.

## 5.7 How to generate a pulse train modulated signal

The following example uses the internal pulse generator.

**To set the frequency and level of the RF signal**

1. Press [Preset].
2. In the status bar, set "Frequency = 6 GHz".
3. Set "Level = -25 dBm".

**To configure the pulse generator**

1. Select "Modulation" > "Pulse Generator".
2. Select "Pulse Mode = Train".
3. Select "Pulse Train Data".  
Accesses the standard function for file handling.



4. Select an existing file or select "New" to create one.
5. Define the filename.  
Select "Edit Pulse Train Data", if the file is empty or to control and change the values.
6. In the "Edit Pulse Train Data" dialog, enter the pulse on/off times and pulse repetition values.  
For example:
  - "On-Time = 500 us", "OFF-Time = 2 ms", "Count = 2"
  - "On-Time = 100 us", "OFF-Time = 2.5 ms", "Count = 1"
  - "On-Time = 10 us", "OFF-Time = 50 us", "Count = 10"
7. "Save" the file and close the dialog.  
The instrument returns to the /var/user/ where it has saved the file.
8. Select the file in the directory.
9. Confirm with "Select".
10. In the "Pulse Generator" dialog, select "Pulse Output State = On".
11. Set "Trigger Mode = Auto".

In the "Pulse Graph" tab, you can view the generated pulse signal graphically.

#### To enable pulse train modulation

1. Select the "Pulse Modulation" tab.
2. Set "State = I".
3. Set "Level > RF ON" to enable signal output.

## 6 List and sweep mode


The operating modes "List" and "Sweep" allow you to generate an RF signal having periodically varying frequencies or amplitudes.

A signal generated with varying parameters scans a certain range of varying values of a parameter, with defined start and end points, and can be repeated cyclically.

The R&S SMB100B supports two basic methods:

- **Sweep** mode

The instrument generates an RF signal which varies its frequency or level values in discrete steps between the start and end values. The values change according to a specific shape like sawtooth or triangle. The spacing is linear or logarithmic.

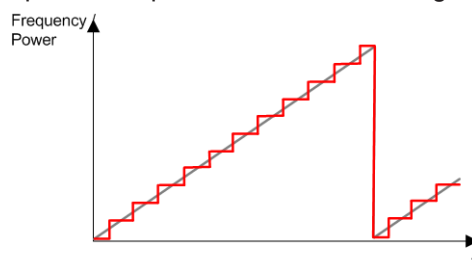

*Figure 6-1: Schematic representation of a signal generated in sweep mode*

The main application field of the "Sweep" mode is to determine the frequency response a DUT.

- **List** mode

The instrument generates a varying output signal, based on a previously saved list with frequency, amplitude and step width values. While in sweep mode the frequency **or** the level values change, in list mode you can vary **both parameters simultaneously**. The frequency and level values do not need to have ascending or descending order, they can vary arbitrarily.

You can use a global dwell time, which means that the time interval is constant for all steps of the list, or different dwell times for each value pair.

[Figure 6-2](#) represents the frequency and power value pairs, in this case with the dwell time set the same for all steps (global dwell time).

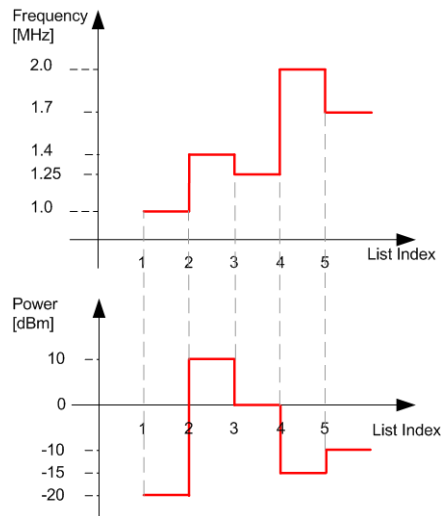


Figure 6-2: Schematic representation of a signal generated in list mode (global dwell time)


The list mode is especially useful in high-speed measurements with fast changing frequency and level settings.



Note that the shown diagrams represent the behaviour in theory. In real signal generation, the instruments usually have a blank time when the frequency or level changes.

#### Interactions and characteristics of list and sweep mode

- Activating the list mode automatically deactivates all RF and LF sweeps and vice versa.
- In list processing mode, the frequency and level display in the status bar is disabled.

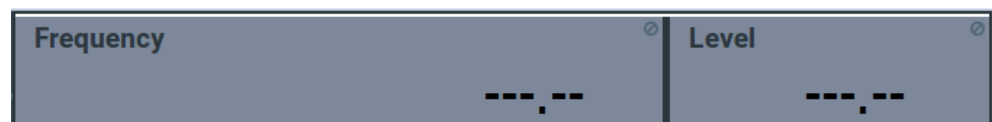

- The sweep modes only work with a *global* dwell time, that means the time intervals are constant during signal generation.
- If you want to hold a running sweep at a specific frequency or level value, enter the value in the status bar. The sweep stops immediately.
- We recommend that you switch off the display update for optimum sweep performance, especially with short dwell times  
See [Chapter 10.1.2, "Display update settings"](#), on page 239.

## 6.1 Signal generation and triggering in the sweep and list modes

In both operating modes "List" and "Sweep", triggering and signal generation follow the same principle. The instrument generates the signal continuously (that means triggered automatically) or in individual steps (controlled manually by an internal or external trigger signal).

The instrument expects the trigger signal at the Inst Trig connector.



If the dwell time in sweep or list mode is too short or external trigger signals come too fast, the signal generation delays. As the delay increases, the R&S SMB100B signals an overrun, or even stops sweep or list mode signal generation, if the delay gets too long.

The instrument displays corresponding error messages.

The figures in this section give an overview on the signal generation in the sweep and list modes and the appropriate triggering. The figures show the signal state after activating the mode and the generation of the signal when a trigger event occurs. For each mode, the relevant parameters and settings are briefly explained.

Each "Sweep" and "List" mode dialog provides also a "Reset" function that sets the signal to the initial value or the beginning of the list. Depending on the selected trigger mode, the signal generation proceeds accordingly.



The naming of the selection parameters in manual control (GUI) sometimes deviates from the naming in the remote-control commands. In addition, the value names of the selection parameters used in the signal generator partly differ from the SCPI syntax. The instrument accepts all value names.

The correlation between the manual control and the corresponding remote control commands, including the SCPI conform syntax are explained for each mode (see the cross-reference tables).

See also the following programming examples on the sweep and list modes in remote control:

- [Example "Setup an RF frequency or power sweep"](#) on page 520
- [Example "Setup an LF sweep"](#) on page 472
- [Example "Create an RF list and activate the list mode"](#) on page 485

## Signal generation and triggering in the sweep and list modes

## Auto mode (Sweep/List)

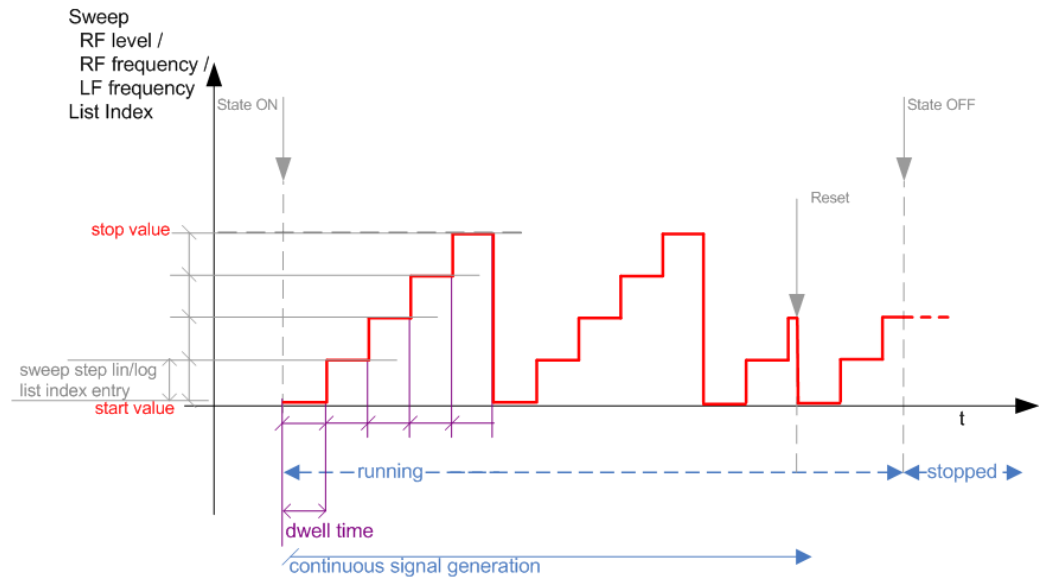


Figure 6-3: Auto mode (Sweep/List)

- The instrument generates the signal continuously.
- Trigger mode "Auto" is prerequisite (default). It causes the continuous generation of the sweep signal.
- Starts signal generation immediately with "State = On".
- Switches automatically to the next step when the **Dwell time** has elapsed.
- Stops signal generation with "State = Off".

Table 6-1: Cross-reference between manual and remote control in Auto mode (Sweep/List)

Manual control mode: "Auto"	Remote commands Rohde & Schwarz proprietary and [SCPI conform] value name
RF frequency sweep	:TRIGger<hw>:FSweep:SOURce AUTO [IMMediate] :SOURce<hw>:SWEep:FREQuency:MODE AUTO
RF level sweep	:TRIGger<hw>:PSweep:SOURce AUTO [IMMediate] :SOURce<hw>:SWEep:POWer:MODE AUTO
LF frequency sweep	:TRIGger<hw>:LFFSweep:SOURce AUTO [IMMediate] :SOURce<hw>:LFOutput<ch>:SWEep:FREQuency:MODE AUTO
List	:SOURce<hw>:LIST:MODE AUTO :SOURce<hw>:LIST:TRIGger:SOURce AUTO

### Single / Extern Single mode (Sweep/List)

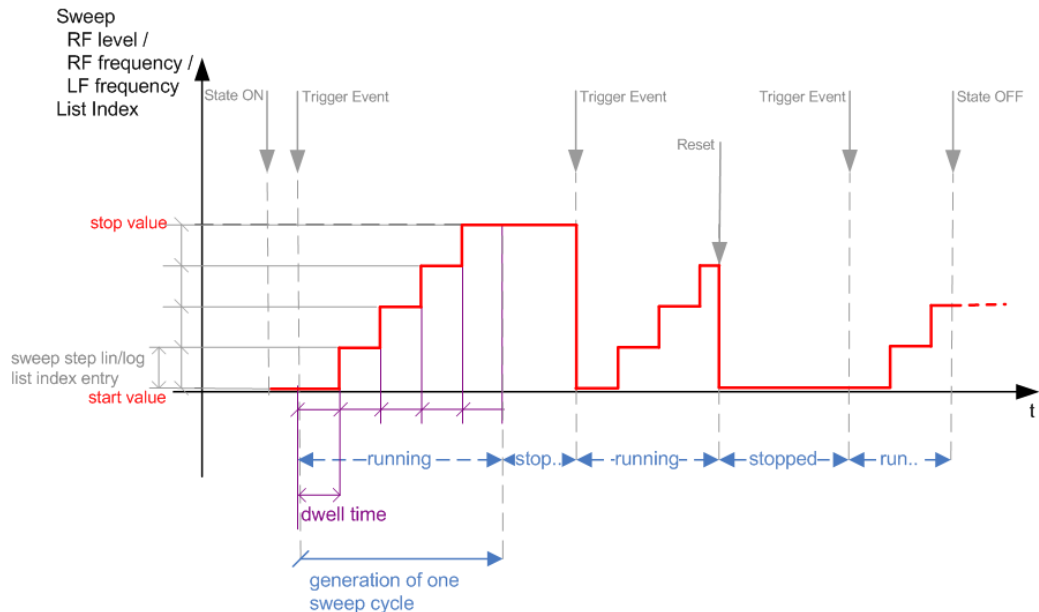


Figure 6-4: Single / Extern Single mode (sweep / list)



In single mode, you can specify, that the signal returns to the start value when a sweep cycle has been completed.

See ["The Retrace function"](#) on page 123 for details.


- The instrument generates a single sweep cycle.
- Trigger mode "Manual". A trigger event initiates one sweep from the start value to the end value.
- "State = On" sets the signal to the start value: the sweep start frequency, the sweep start power or the frequency-power value pair of the selected index in the list.
- Starts signal generation with a trigger event.
- Switches automatically to the next step when the **Dwell time** has elapsed.
- Stops signal generation at the set end value and waits for the subsequent trigger event.
- Trigger sources:
  - The "Execute Single Sweep" function.
  - The corresponding remote control command.
  - An externally applied trigger signal.
- "State = Off" stops the signal generation in sweep or list mode.

## Signal generation and triggering in the sweep and list modes

**Table 6-2: Cross-reference between manual and remote control in Single / Extern Single modes (Sweep/List)**

Manual control mode: "Single / Extern Single"	Remote commands Rohde & Schwarz proprietary and [SCPI conform] value name
RF frequency sweep	:TRIGger<hw>:FSweep:SOURce SINGLE [BUS] "Single" or :TRIGger<hw>:FSweep:SOURce EXTERNAL [EXTERNAL] "Extern Single" :SOURce<hw>:SWEep:FREQuency:MODE AUTO
RF level sweep	:TRIGger<hw>:PSweep:SOURce SINGLE [BUS] for "Single" or :TRIGger<hw>:PSweep:SOURce EXTERNAL [EXTERNAL] for "Extern Single" :SOURce<hw>:SWEep:POWer:MODE AUTO
LF frequency sweep	:TRIGger<hw>:LFFSweep:SOURce SINGLE [BUS] "Single" or :TRIGger<hw>:LFFSweep:SOURce EXTERNAL [EXTERNAL] "Extern Single" :SOURce<hw>:LFOuTput<ch>:SWEep:FREQuency:MODE AUTO
List	:SOURce<hw>:LIST:TRIGger:SOURce SINGLE "Single" or :SOURce<hw>:LIST:TRIGger:SOURce EXTERNAL "Extern Single" :SOURce<hw>:LIST:MODE AUTO

### Step / Extern Step mode (Sweep/List)

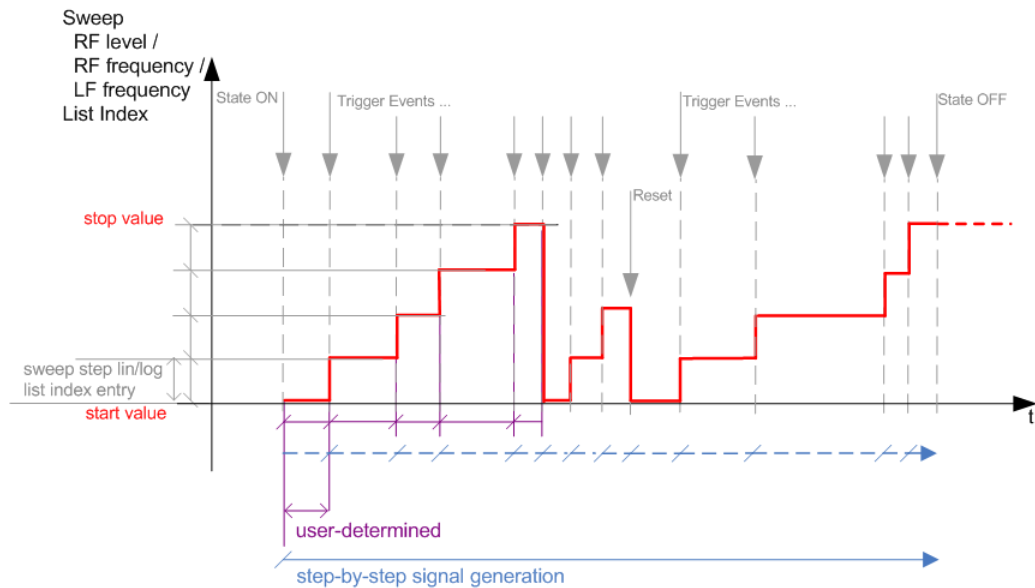

**Figure 6-5: Step / Extern Step mode (sweep / list)**

- The instrument generates the signal step-by-step.
- Starts signal generation with "State = On".
- Switches to the next step with a manual action.  
If the end value is reached, signal generation starts again from the beginning.
- Stops signal generation with "State = Off".

## Signal generation and triggering in the sweep and list modes

- Trigger sources:
  - The rotary knob at the front panel.
  - The [Arrow] keys at the front panel.
  - The corresponding remote control commands.
  - An externally applied trigger signal.

To step through the sweep frequencies or levels:

- In manual mode:
  - Set the [Current Frequency](#) or [Current Level](#) values
  - Use the [Up] and [Down] keys or the rotary knob
- In remote control mode:
  - Use the commands `[ :SOURce<hw> ] :FREQuency:MANual` or `[ :SOURce<hw> ] :POWer:MANual` with the UP or DOWN parameter



Steps that would exceed the sweep range are ignored.

**Table 6-3: Cross-reference between manual and remote control in Step / Extern Step modes (Sweep/List)**

Manual control mode: "Step / Extern Step"	Remote commands Rohde & Schwarz proprietary and [SCPI conform] value name
RF frequency sweep	:TRIGger<hw>:FSweep:SOURce SINGLE [BUS] "Step" or :TRIGger<hw>:FSweep:SOURce EXTernal [EXTenal] for "Extern Step" :SOURce<hw>:SWEep:FREQuency:MODE STEP
RF level sweep	:TRIGger<hw>:PSweep:SOURce SINGLE [BUS] "Step" or :TRIGger<hw>:PSweep:SOURce EXTernal [EXTenal] "Extern Step" :SOURce<hw>:SWEep:POWer:MODE STEP
LF frequency sweep	:TRIGger<hw>:LFFSweep:SOURce SINGLE [BUS] "Step" or :TRIGger<hw>:LFFSweep:SOURce EXTernal [EXTenal] "Extern Step" :SOURce<hw>:LFOutput<ch>:SWEep:FREQuency:MODE STEP
List	:SOURce<hw>:LIST:TRIGger:SOURce SINGLE "Step" or :SOURce<hw>:LIST:TRIGger:SOURce EXTernal "Extern Step" :SOURce<hw>:LIST:MODE STEP



### Extern Start/Stop mode (sweep)

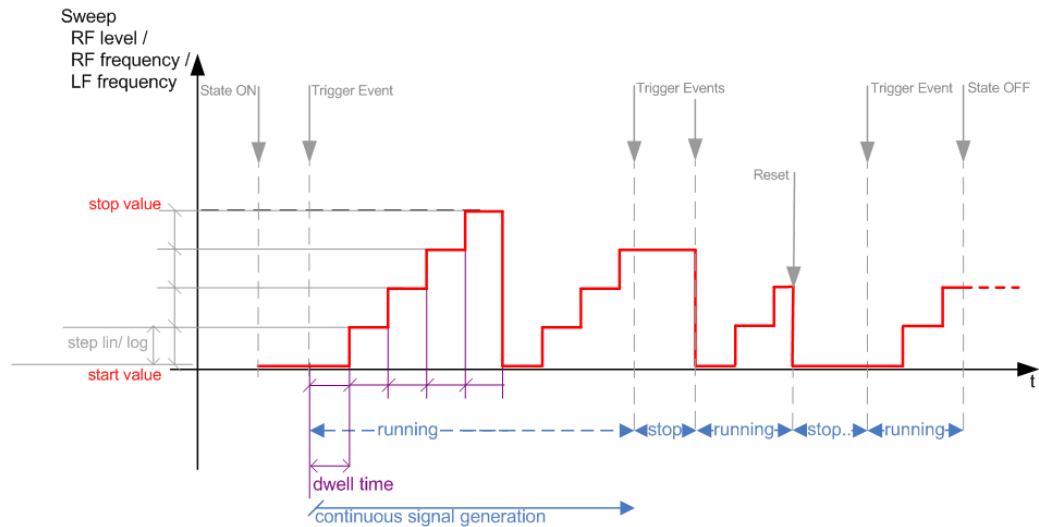


Figure 6-6: Extern Start/Stop mode (sweep)

- The instrument generates the signal continuously.
- Trigger mode "Auto" and "Sweep > State = On" are prerequisite.
- State "On" sets the signal to the start value, that is one of the following:
  - Sweep start frequency
  - Sweep start power
  - Frequency-power value pair of the selected index in the list
- Starts signal generation with a trigger event.
- Switches automatically to the next sweep step when the **Dwell time** has elapsed. If the end value is reached, signal generation continues with the next sweep cycle.
- Stops signal generation with the next external trigger event.
- Starts the signal generation again with the next trigger event, beginning at the start value.
- "State = Off" stops the signal generation in sweep or list mode.
- Trigger source: An externally applied trigger signal.


Table 6-4: Cross-reference between manual and remote control in Extern Start/Stop modes (sweep)

Manual control mode: "Extern Start/Stop"	Remote commands Rohde & Schwarz proprietary and [SCPI conform] value name
RF frequency sweep	:TRIGger<hw>:FSweep:SOURce EAUTO [-] :SOURce<hw>:SWEep:FREQuency:MODE AUTO
RF level sweep	:TRIGger<hw>:PSweep:SOURce EAUTO [-] :SOURce<hw>:SWEep:POWer:MODE AUTO
LF frequency sweep	:TRIGger<hw>:LFFSweep:SOURce EAUTO [-] :SOURce<hw>:LFOutput<ch>:SWEep:FREQuency:MODE AUTO

### Manual mode (Sweep/List)



The **manual** mode only applies to remote control. It is not visible in the graphical user interface of the instrument and is described here for completeness.

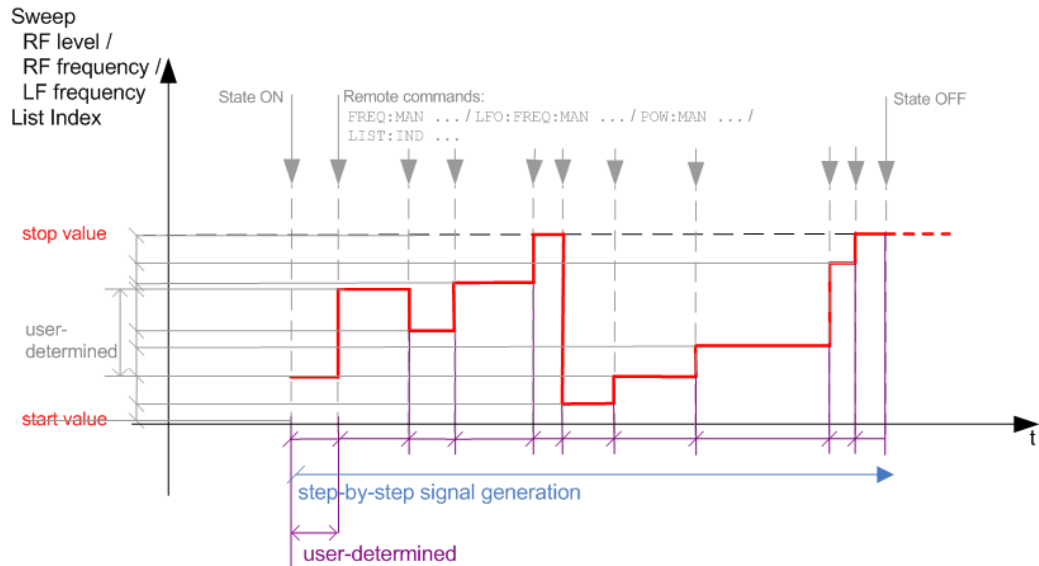


**Figure 6-7: Manual mode in remote control (sweep / list)**

- The instrument generates the signal in steps.
- Starts signal generation with "State = On".
- Switches to the next step with a user defined setting via remote control. You can arbitrarily select a value within the range of the start and stop values by setting the frequency, power or index using the corresponding remote control command. There is no ascending or descending order.
- Stops signal generation with "State = Off".

**Table 6-5: Remote control commands in manual mode (Sweep/List)**

Remote control mode:	Remote commands
Manual	Rohde & Schwarz proprietary and [SCPI conform] value name
RF frequency sweep	:SOURce<hw>:FREQuency:MANUal <Manual>
RF level sweep	:SOURce<hw>:POWER:MANUal <Manual>
LF frequency sweep	:SOURce<hw>:LFOUtpuT:FREQuency:MANUal <Manual>
List	:SOURce<hw>:LIST:INDex <Index>

### The Retrace function

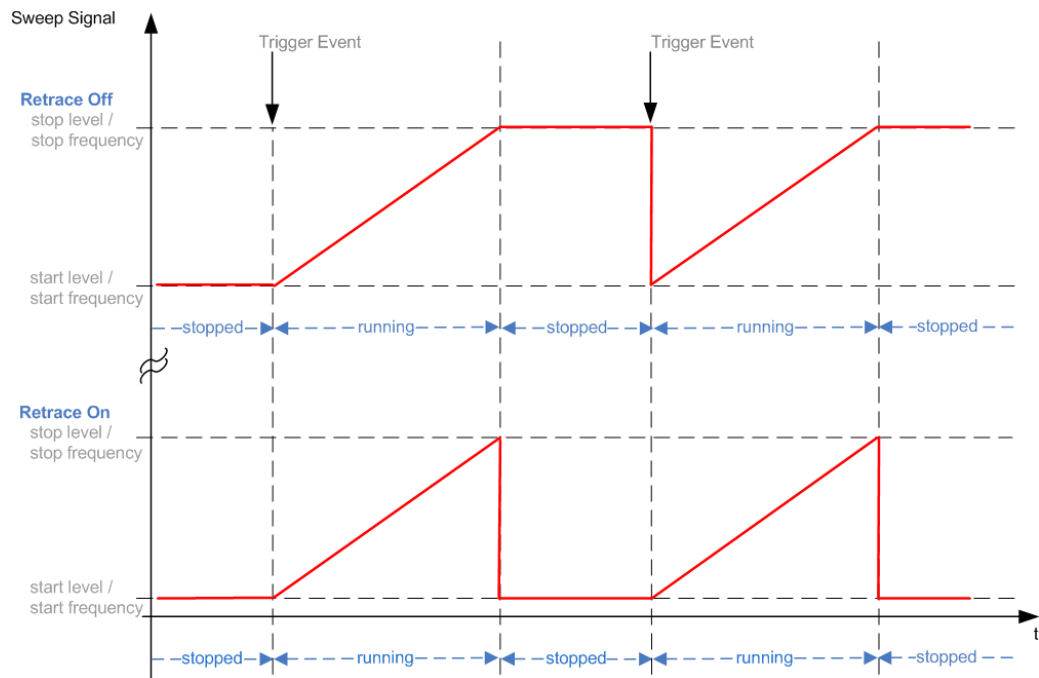

Retrace is a function especially designed for "Single" sweep modes, when the sweep signal follows a sawtooth shape. Working in this mode, the instrument performs a single sweep cycle when a trigger event occurs. The signal generation stops at the set end point (stop frequency or stop level), and waits for the next trigger event.

In this state, the upper value of the signal remains at the output until the next cycle starts. In particular, if you generate a level sweep signal, the high amplitude of the signal is output for a certain time. To protect the DUT from overload, the retrace function immediately resets the signal value to the start value at the end of a sweep cycle. It returns to the start level or start frequency until the next trigger is applied.

You can use the "Retrace" function if "Sweep > Mode = Single/External Single" and "Shape = Sawtooth", see:

- "Shape" on page 133
- "Mode" on page 132

## 6.2 About sweep mode

In sweep mode, the signal generator scans the sweep range gradually from one point to another, using a defined step size and following a triangle or sawtooth shape. This mode also enables you to change direction, that means, it is possible to step backwards.

See [Chapter 6.2.2, "Sweep signal shapes"](#), on page 126.

### Configuration and operation of sweep mode signals

- The R&S SMB100B generates a sweep signal by varying the following parameters: either the *RF frequency*, the *RF level* or both, the *RF frequency* and the *RF level* in combined RF sweep mode, or the *LF frequency*.
- In all sweep modes, you can perform a complete sweep cycle once, repeat the cycle continuously or step through it gradually.
- The instrument generates the sweep signal according to the sweep settings.
- The "Reset Sweep" function, provided in the sweep settings dialogs enables you to reset the sweep to its initial value and restart it.



### Impact of changing the sweep mode during performance

If you change the sweep mode during the execution, the signal generator stops the sweep and starts with the next trigger event at the initial value.

### Combined RF frequency / level sweep processing mode

The combined RF sweep functionality processes the signal similar to the Live list mode. The R&S SMB100B sets the frequency and level values simultaneously in the hardware. The difference to the list mode is that the values are not taken from a previously created list, but are calculated using the selected frequency and level ranges, the dwell time and the number of steps.

## 6.2.1 Correlating parameters in sweep mode

A sweep signal is a periodic signal that changes its frequency or level, or both, from a starting value to an ending value in a defined time.

The R&S SMB100B provides various possibilities to configure a sweep signal. For example, you can determine the sweep range by the start and end values, or based on the start value and span. In any case, related parameters are adjusted accordingly.

The formulas below show how the sweep parameters correlate and the corresponding calculation basis, by the frequency and offset settings. Apart from "Center Frequency", "Span" and "Step\_lin", the values apply accordingly to the level settings.

**Table 6-6: Variables that are used in the following formulas**

Variable	Description
Sweep range	Defined frequency or level value range
$f_{\text{CENTer}}$	Defined center frequency
$f_{\text{SPAN}}$	Defined extend of the sweep range
$f_{\text{OFFSet}}$	Frequency offset
$f_{\text{START}}$	Start frequency of the sweep range
$f_{\text{STOP}}$	End frequency of the sweep range
$f_1$	Current sweep frequency

Variable	Description
$f_2$	Next, subsequent sweep frequency
step_lin	Step size in linear scaling
step_log	Step size in logarithmic scaling
POINts	Number of steps within the sweep range

### Sweep range

The sweep range is defined by a start and an end value. How the remaining parameters correlate is shown below.

#### Offset = 0

Sweep Range =  $f_{\text{START}}$  to  $f_{\text{STOP}}$

$$f_{\text{CENTer}} = (f_{\text{START}} + f_{\text{STOP}})/2$$

$$f_{\text{SPAN}} = (f_{\text{STOP}} - f_{\text{START}})$$

Where:

$$f_{\text{START}} = f_{\text{CENTer}} - (f_{\text{SPAN}}/2)$$

$$f_{\text{STOP}} = f_{\text{CENTer}} + (f_{\text{SPAN}}/2)$$

#### Offset≠0

A defined offset also affects the sweep range and the center frequency. Therefore, the set frequencies are only absolute values, if the Offset = 0. Offset ≠ 0 shifts the frequencies with the offset value:

Sweep Range =  $f_{\text{START}} + f_{\text{OFFSet}}$  to  $f_{\text{STOP}} + f_{\text{OFFSet}}$

$$f_{\text{CENTer}} = f_{\text{CENTer}} + f_{\text{OFFSet}}$$

$$f_{\text{SPAN}} = f_{\text{SPAN}} + f_{\text{OFFSet}}$$

The value range of the instrument is calculated as follows:

$$RF_{\text{min}} + f_{\text{OFFSet}} \text{ to } RF_{\text{max}} + f_{\text{OFFSet}}$$



It is possible to set  $f_{\text{START}} > f_{\text{STOP}}$  and  $f_{\text{START}} < f_{\text{STOP}}$ , so that even a negative value is permitted for the "Span".

If you change the start and/or stop frequency, the span and center frequency change accordingly, and vice versa.

### Sweep steps

In the following, you see how the sweep steps are calculated depending on the defined spacing mode. The formulas show a frequency sweep, but apply to the level settings in the same way.

The step size is added to the current value, to get the subsequent sweep step.

With **linear** scaling, the next frequency is calculated according to:

$$f_2 = f_1 + \text{step\_lin}$$

In the **logarithmic** scaling, the step size is determined in per cent, as a constant fraction of the current frequency.

Successive frequencies are calculated as follows:

- For  $f_{\text{START}} < f_{\text{STOP}}$   
 $f_2 = f_1 * (1 + \text{step\_log}/100)$   
 If  $f_2 > f_{\text{STOP}}$ , then  $f_2 = f_{\text{STOP}}$
- For  $f_{\text{START}} > f_{\text{STOP}}$   
 $f_2 = f_1 / (1 + \text{step\_log}/100)$   
 If  $f_2 < f_{\text{STOP}}$ , then  $f_2 = f_{\text{STOP}}$

With "Shape = Triangle", the frequency values on the slope from  $f_{\text{STOP}}$  to  $f_{\text{START}}$  are the same as on the slope from  $f_{\text{START}}$  to  $f_{\text{STOP}}$ .

If you specify the number of steps within the sweep range, the step size is adjusted according to the following correlation:

- For **linear** sweeps and  $f_{\text{START}} < f_{\text{STOP}}$   
 $\text{POINTS}_{\text{frequency}} = ((f_{\text{START}} - f_{\text{STOP}})/\text{step\_lin}) + 1 = (f_{\text{SPAN}}/\text{step\_lin}) + 1$
- For **logarithmic** sweeps and  $f_{\text{START}} < f_{\text{STOP}}$   
 $\text{POINTS}_{\text{frequency}} = ((\log f_{\text{STOP}} - \log f_{\text{START}})/\log \text{step\_log}) + 1$

If  $\text{step\_log}$  changes, the value of POINTs is adjusted. The  $f_{\text{START}}$  and  $f_{\text{STOP}}$  values are retained.

## 6.2.2 Sweep signal shapes

The R&S SMB100B supports the following sweep shapes:

- Sawtooth  
 The sweep sequence resembles a sawtooth. One sweep runs from start to stop frequency, or level value respectively. Each subsequent sweep starts again at the start value.

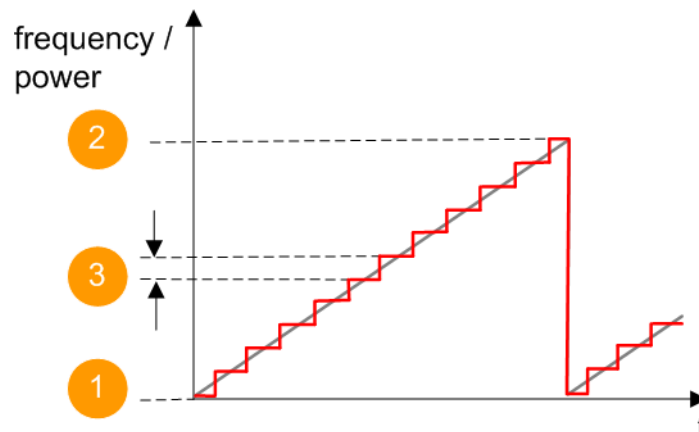


Figure 6-8: Sweep signal sawtooth shape

1 = Start value  
2 = Stop value  
3 = Step size

- Triangle  
The sweep sequence resembles a triangle. One sweep runs from start to stop value frequency and back. Each subsequent sweep starts at the start value.

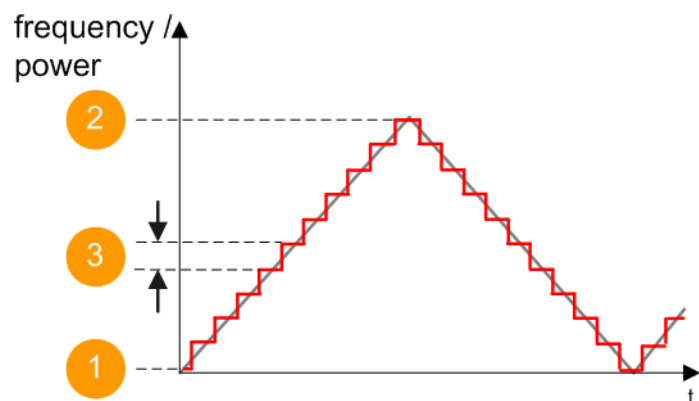


Figure 6-9: Sweep signal triangle shape

1 = Start value  
2 = Stop value  
3 = Step size

The current frequency or level of an RF frequency, level or LF frequency sweep is determined by the shape (e.g. sawtooth or triangle) and the spacing (linear or logarithmic), and the step size.

## 6.3 About list mode

The list mode is used to generate the RF signal based on a set of predefined frequency and amplitude value pairs, with individual step times. You can define the values

arbitrarily, in any order and varying step sizes, within the entire configurable value range of the instrument.

### Configuration and operation of list mode signals

The parameters configuring the RF signal are defined in a list (table) and stored in a file.

### Creating and handling lists

List files can be created in the following ways:

- **Internally**  
Use the build-in table editor with columns for the frequency-level values pairs and the dwell time.  
Define the values manually (row by row) or automatically, based on value range and step size.  
See [Chapter 6.7, "List editor"](#), on page 147.  
Lists are saved as files with user-definable filename and the predefined file extension \*.lsw. To load a saved file, use the "File Manager".  
See [Chapter 9.8, "Using the file manager"](#), on page 218.
- Lists can be exported, too. For example, to exchange configuration between instruments or to modify the file content with an external program and reload them again.
- **Externally**  
Create a list file as a CSV file with Microsoft Excel, with a Notepad or a similar tool and save it with the predefined extension. Transfer the file to and load it into the instrument.

### Dwell time mode

You can choose whether you want to use different dwell times or a fixed value for all steps in the list mode:

- "From List"  
This mode uses the values from the data table.  
See [Edit List Mode Data](#)
- "Global"  
This mode processes the list with a fixed time interval you can set with [Global Dwell Time](#).

### List processing mode

See:

- ["Live list processing mode"](#) on page 130

## 6.4 Significant parameters and functions

This section provides some basic parameters, settings and functions that affect the operating modes CW, list and sweep, that means at all frequency and level transitions of the RF signal.



### Dwell time

Dwell time is the length of time that elapses from the beginning until the end of a step in list or sweep mode.

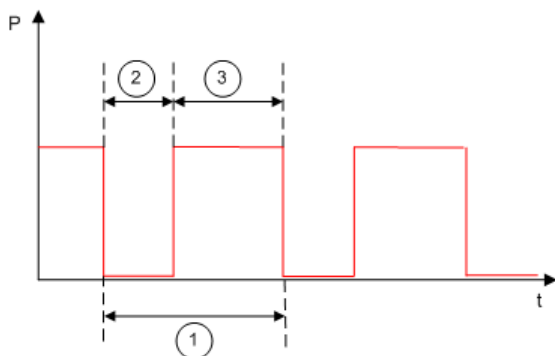


Figure 6-10: Dwell Time vs. settling time

- 1 = "Dwell Time" (as set with the parameter)
- 2 = Settling time
- 3 = Dwell time (effective)

However, the time the instrument requires for the signal to settle reduces the set dwell time:

$$t_{\text{dwell(effective)}} = t_{\text{dwell}} - t_{\text{settling}}$$



If the dwell time in sweep or list mode is too short or external trigger signals come too fast, the signal generation delays. As the delay increases, the R&S SMB100B signals an overrun, or even stops sweep or list mode signal generation, if the delay gets too long.

The instrument displays corresponding error messages.

### Hardware adjustments

The first time a list (new or modified) is processed, the instrument automatically calculates the necessary hardware settings. It can be performed during list processing, but delays the first cycle, especially with short dwell times.

With long dwell times, you can perform this calculation while the list is being processed; the entered dwell times are observed. With short dwell times, calculation of the hardware settings increases the dwell time for the initial processing cycle; the entered value is only observed from the second processing cycle onwards. In this case, a message indicates that there is a deviation between the current and set dwell times. After the first cycle, you do not need to perform additional calculations. The current dwell times do not deviate from the set dwell times.

### Blanking

The instrument applies *blanking*, which temporarily turns off the RF signal when the frequency or level changes, until the signal has settled to a stable state.

Temporary blanking applies to all operating modes.

### Live list processing mode

The R&S SMB100B generates the signal directly from the value pairs in the database, and adjusts the hardware settings accordingly. The current instrument state and thus any change during the signal generation directly affects the RF signal. The temporary memory is not used.

You can conveniently modify parameters like modulation settings during run-time. Learning list mode data is not required. Impacts like temperature drift are also considered immediately.

This mode is optimized for **maximum signal quality**, and is useful if dwell times higher than 2 ms are sufficient.

## 6.5 Sweep mode settings

This section lists the settings of **all** available sweep modes.

Access:

1. Select "Sweep" > "RF Frequency Sweep"
2. Select "Sweep" > "RF Level Sweep"
3. Select "Sweep" > "RF Combined Sweep"
4. Select "Sweep" > "LF Frequency Sweep"

The remote commands required to define these settings are described in:

- [Chapter 12.15.12, "SOURce:SWEep subsystem"](#), on page 520
- [Chapter 12.15.3, "SOURce:FREQuency subsystem"](#), on page 465
- [Chapter 12.15.10, "SOURce:POWEr subsystem"](#), on page 502
- [Chapter 12.15.5, "SOURce:LFOuTput subsystem"](#), on page 472

### Settings

- [General sweep settings](#).....130
- [Frequency range settings](#).....136
- [Level range settings](#).....138

### 6.5.1 General sweep settings

Access:

- ▶ Select for example "Sweep" > "RF Frequency Sweep".

Table 6-7: General settings dialog: Examples of RF Frequency and RF Combined Sweep dialogs

> "RF Frequency Sweep"	> "RF Combined Sweep"

## Settings

State (RF frequency sweep).....	131
State (RF level sweep).....	131
State (RF frequency / level sweep).....	132
State (LF frequency sweep).....	132
Current Frequency.....	132
Current Level.....	132
Mode.....	132
Retrace.....	133
Shape.....	133
Spacing.....	135
Dwell Time.....	135
Trigger Slope.....	135
Show Connector.....	136
Reset Sweep.....	136
Execute Single Sweep.....	136

### State (RF frequency sweep)

Activates RF frequency sweep signal generation.

**Note:** Active RF frequency, RF level or RF combined sweep modes deactivate the LF sweep or List mode and vice versa.

Remote command:

[ :SOURce<hw> ] :FREQuency:MODE on page 466

### State (RF level sweep)

Activates RF level sweep signal generation.

**Note:** Active RF frequency, RF level or RF combined sweep modes deactivate the LF sweep or List mode and vice versa.

Remote command:

[ :SOURce<hw> ] :POWer:MODE on page 507

**State (RF frequency / level sweep)**

Activates the RF frequency / level sweep signal generation.

**Note:** Active RF frequency, RF level or RF combined sweep modes deactivate the LF sweep or List mode and vice versa.

Remote command:

[ :SOURce<hw> ] :FREQuency:MODE on page 466

[ :SOURce<hw> ] :POWer:MODE on page 507

**State (LF frequency sweep)**

Status of the LF frequency sweep signal.

You find this parameter in two dialogs:

- "LF Frequency Sweep" turns on/off the signal generation.  
See [Sweep mode settings](#) for access.
- "Analog Modulation Sources" displays the current state (read-only). If it is turned on, this dialog provides the varying sweep frequency, see [Current Frequency](#).

**Note:** Active RF frequency, RF level or RF combined sweep modes deactivate the LF sweep or List mode and vice versa.

Remote command:

[ :SOURce<hw> ] :LFOutput:FREQuency:MODE on page 476

**Current Frequency**

Displays the current frequency sweep value for all sweep [Modes](#), except of [Mode > Step](#). In this mode, you can enter the next frequency setting manually.

Remote command:

[ :SOURce<hw> ] :FREQuency:MANual on page 468

[ :SOURce<hw> ] :LFOutput:FREQuency:MANual on page 476

**Current Level**

Displays the current level sweep value for all sweep [Modes](#), except of [Mode > Step](#). In this mode, you can enter the next level setting manually.

Remote command:

[ :SOURce<hw> ] :POWer:MANual on page 506

**Mode**

Selects the sweep mode.

See [Chapter 6.1, "Signal generation and triggering in the sweep and list modes"](#), on page 116.

"Auto" Generates a continuously repeating sweep signal directly after activating the sweep mode.  
The sweep steps are performed automatically, controlled by the dwell time.

"Single / Extern Single" Generates a single sweep cycle after a trigger event.  
The sweep steps within the cycle are performed automatically, controlled by the dwell time. If one cycle is completed, the instrument waits for the next trigger event.

**"Step / Extern Step"**

Generates the sweep signal step-by-step, manually triggered.

**"Extern Start/Stop"**

Generates a continuously repeating sweep signal that is started, stopped, and restarted by subsequent external trigger events.

The sweep steps are performed automatically, controlled by the dwell time.

Remote command:

RF frequency sweep:

[ :SOURce<hw> ] :SWEep [ :FREQuency ] :MODE on page 524

:TRIGger<hw>:FSWEEP:SOURce on page 569

RF level sweep:

[ :SOURce<hw> ] :SWEep:POWer:MODE on page 523

:TRIGger<hw>:PSWEEP:SOURce on page 569

RF combined sweep:

[ :SOURce<hw> ] :SWEep:COMBined:MODE on page 530

:TRIGger<hw>:FPSWEEP:SOURce on page 570

LF frequency sweep:

[ :SOURce<hw> ] :LFOutput:SWEep [ :FREQuency ] :MODE on page 483

:TRIGger<hw>:LFFSWEEP:SOURce on page 569

**Retrace**

For "Shape = Sawtooth" and "Mode = Single/External Single", enables changing the signal to the start value while it is waiting for the next trigger event. It returns to the start level or start frequency until the next trigger is applied.

Remote command:

RF frequency sweep:

[ :SOURce<hw> ] :SWEep [ :FREQuency ] :RETRace on page 526

RF level sweep:

[ :SOURce<hw> ] :SWEep:POWer:RETRace on page 526

RF combined sweep:

[ :SOURce<hw> ] :SWEep:COMBined:RETRace on page 530

LF frequency sweep:

[ :SOURce<hw> ] :LFOutput:SWEep [ :FREQuency ] :RETRace on page 483

**Shape**

Selects the waveform shape of the sweep signal.

"Sawtooth" The sweep runs from start to stop frequency. The subsequent sweep starts at the start value, i.e. the shape of the sweep sequence resembles a sawtooth.

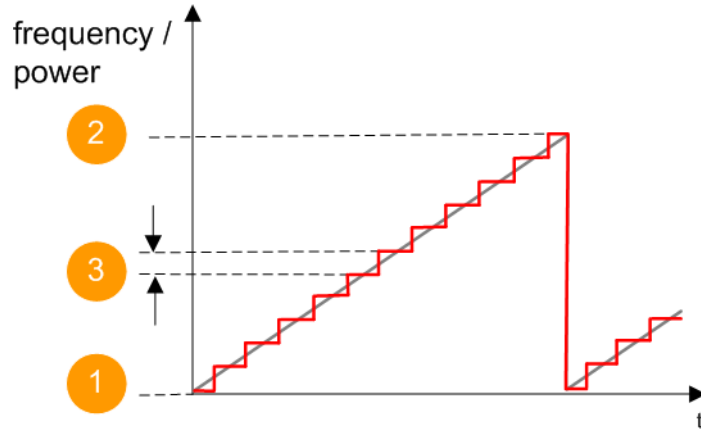


Figure 6-11: Sweep signal sawtooth shape

1 = Start value  
2 = Stop value  
3 = Step width

"Triangle" The sweep runs from start to stop value and back, i.e. the shape of the sweep resembles a triangle. Each subsequent sweep starts at the start frequency.

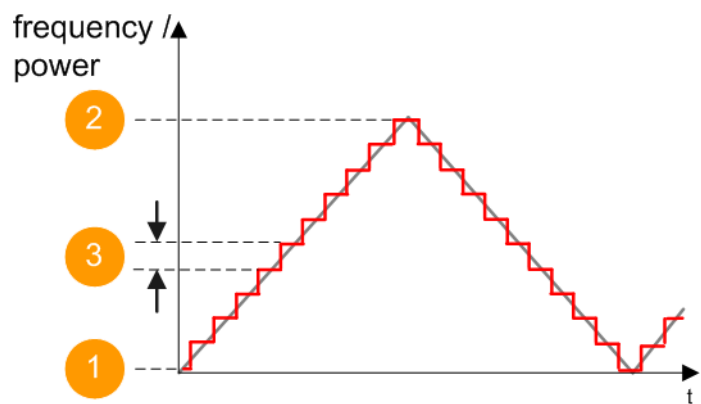


Figure 6-12: Sweep signal triangle shape

1 = Start value  
2 = Stop value  
3 = Step width

Remote command:

RF frequency sweep:

[\[:SOURCE<hw>\]:SWEep\[:FREQuency\]:SHAPE](#) on page 526

RF level sweep:

[\[:SOURCE<hw>\]:SWEep:POWEr:SHAPE](#) on page 526

RF combined sweep:

[\[:SOURCE<hw>\]:SWEep:COMBined:SHAPE](#) on page 531

LF frequency sweep:

[\[:SOURce<hw>\]:LFOutput:SWEep\[:FREQuency\]:SHAPE](#) on page 484

### Spacing

In "RF and LF Frequency Sweep" mode, "Spacing" selects the mode for calculating the frequency interval, which increases or decreases the current frequency at each step.

To determine the step size, select the parameter [Step Linear/Step Logarithmic](#).

In "RF Combined Sweep" mode, the parameter indicates that the step intervals are linearly (straight proportional) distributed, i.e. the intervals have the same size. The frequency / level range and the [Dwell Time](#) time determine the calculated step size.

"Linear" Takes the frequency value entered as absolute value in Hz.

"Logarithmic" Takes the value entered as a logarithmic value, i.e. as a constant fraction of the current frequency in %.

Remote command:

RF frequency sweep:

[\[:SOURce<hw>\]:SWEep\[:FREQuency\]:SPACing](#) on page 525

RF combined sweep: n.a.

LF frequency sweep:

[\[:SOURce<hw>\]:LFOutput:SWEep\[:FREQuency\]:SPACing](#) on page 484

### Dwell Time

Defines the duration of the individual sweep steps.

**Note:** In case of considerable overrun conditions, the R&S SMB100B turns off the sweep mode.

See also [Chapter 6.4, "Significant parameters and functions"](#), on page 128.

Remote command:

RF frequency sweep:

[\[:SOURce<hw>\]:SWEep\[:FREQuency\]:DWELl](#) on page 524

RF level sweep:

[\[:SOURce<hw>\]:SWEep:POWer:DWELl](#) on page 522

RF combined sweep:

[\[:SOURce<hw>\]:SWEep:COMBined:DWELl](#) on page 529

LF frequency sweep:

[\[:SOURce<hw>\]:LFOutput:SWEep\[:FREQuency\]:DWELl](#) on page 482

### Trigger Slope

For "Mode = Extern Step/Single", selects the polarity of the active slope of an applied instrument trigger.

Trigger signal is expected at the Inst Trig connector.

"Positive" The rising edge of the trigger signal triggers the instrument.

"Negative" The falling edge of the trigger signal triggers the instrument.

Remote command:

[\[:SOURce\]:INPut:TRIGger:SLOPe](#) on page 472



### Show Connector

Accesses a dialog that displays the physical location of the selected connector on the front/rear panel of the instrument.

### Reset Sweep

Resets a sweep.

With the next trigger event, the sweep starts at the initial value.

Remote command:

`[ :SOURce<hw> ] :SWEep:RESet [ :ALL ]` on page 531

### Execute Single Sweep

In "Mode = Single", starts a sweep manually.

Remote command:

RF frequency sweep:

`[ :SOURce<hw> ] :SWEep [ :FREQuency ] :EXECute` on page 526

`:TRIGger<hw>:FSWep [ :IMMediate ]` on page 571

RF level sweep:

`[ :SOURce<hw> ] :SWEep:POWer:EXECute` on page 526

`:TRIGger<hw>:PSWep [ :IMMediate ]` on page 571

RF combined sweep:

`[ :SOURce<hw> ] :SWEep:COMBined:EXECute` on page 529

LF frequency sweep:

`[ :SOURce<hw> ] :LFOutput:SWEep [ :FREQuency ] :EXECute` on page 482

`:TRIGger<hw>:LFFSweep:IMMediate` on page 571

General:

`:TRIGger<hw> [ :SWEep ] [ :IMMediate ]` on page 571

## 6.5.2 Frequency range settings

Access:

1. Select for example "Sweep" > "RF Frequency Sweep"
2. Select for example "Frequency Range".

> "Frequency Range"	> "Frequency / Level Range"



## Settings

Start Frequency/Stop Frequency.....	137
Center Frequency.....	137
Span.....	137
Spacing.....	137
Step Linear/Step Logarithmic.....	138

### Start Frequency/Stop Frequency

Defines the frequency sweep range by setting the start and end values.

See [Chapter 6.2.1, "Correlating parameters in sweep mode"](#), on page 124.

Remote command:

RF frequency sweep:

[ :SOURce<hw> ] :FREQuency :STARt on page 469

[ :SOURce<hw> ] :FREQuency :STOP on page 470

RF combined sweep:

[ :SOURce<hw> ] :COMBined :FREQuency :STARt on page 528

[ :SOURce<hw> ] :COMBined :FREQuency :STOP on page 528

LF frequency sweep:

[ :SOURce<hw> ] :LFOutput :FREQuency :STARt on page 477

[ :SOURce<hw> ] :LFOutput :FREQuency :STOP on page 477

### Center Frequency

In "RF Frequency Sweep" mode, sets the RF center frequency.

See [Chapter 6.2.1, "Correlating parameters in sweep mode"](#), on page 124.

Remote command:

[ :SOURce<hw> ] :FREQuency :CENTer on page 469

### Span

In "RF Frequency Sweep" mode, sets the span of the frequency sweep range.

See [Chapter 6.2.1, "Correlating parameters in sweep mode"](#), on page 124.

Remote command:

[ :SOURce<hw> ] :FREQuency :SPAN on page 469

### Spacing

In "RF and LF Frequency Sweep" mode, "Spacing" selects the mode for calculating the frequency interval, which increases or decreases the current frequency at each step.

To determine the step size, select the parameter [Step Linear/Step Logarithmic](#).

In "RF Combined Sweep" mode, the parameter indicates that the step intervals are linearly (straight proportional) distributed, i.e. the intervals have the same size. The frequency / level range and the [Dwell Time](#) time determine the calculated step size.

"Linear" Takes the frequency value entered as absolute value in Hz.

"Logarithmic" Takes the value entered as a logarithmic value, i.e. as a constant fraction of the current frequency in %.

Remote command:

RF frequency sweep:

`[ :SOURce<hw> ] :SWEep [ :FREQuency ] :SPACing` on page 525

RF combined sweep: n.a.

LF frequency sweep:

`[ :SOURce<hw> ] :LFOutput :SWEep [ :FREQuency ] :SPACing` on page 484

### Step Linear/Step Logarithmic

In "RF/LF Frequency Sweep" mode, sets the step width for the individual frequency sweep steps. The value is added at each sweep step to the current frequency.

Depending on the current **Spacing**, you can enter either an absolute or logarithmic step width.

See [Chapter 6.2.1, "Correlating parameters in sweep mode"](#), on page 124.

"Step Linear" The step width is a constant value in Hz.

"Step Logarithmic"

The step width is determined logarithmically in %, i.e. as a constant fraction of the current frequency.

Remote command:

`[ :SOURce<hw> ] :SWEep [ :FREQuency ] :STEP [ :LINear ]`  
on page 527

`[ :SOURce<hw> ] :SWEep [ :FREQuency ] :STEP :LOGarithmic`  
on page 527

`[ :SOURce<hw> ] :LFOutput :SWEep [ :FREQuency ] :STEP [ :LINear ]` on page 485

`[ :SOURce<hw> ] :LFOutput :SWEep [ :FREQuency ] :STEP :LOGarithmic` on page 484

## 6.5.3 Level range settings

Access:

1. Select "Sweep" > "RF Level Sweep"
2. Select for example "Level Range".

**Table 6-8: Range settings dialog: Examples of RF Level and RF Combined Sweep dialogs**

> "Level Range"	> "Frequency / Level Range"

## Settings

Start Level / Stop Level.....	139
Step Count.....	139
Spacing.....	139
Step.....	139
Setting Characteristics.....	139
Level Range.....	140

### Start Level / Stop Level

Defines the RF level sweep range by setting the start and end values.

See [Chapter 6.2.1, "Correlating parameters in sweep mode"](#), on page 124.

Remote command:

RF level sweep:

`[ :SOURce<hw> ] :POWer:START` on page 508

`[ :SOURce<hw> ] :POWer:STOP` on page 508

RF combined sweep:

`[ :SOURce<hw> ] :COMBined:POWer:START` on page 528

`[ :SOURce<hw> ] :COMBined:POWer:STOP` on page 529

### Step Count

In "RF Combined Mode", defines the number of sweeps to be executed in [Mode > Single](#).

To start the sweep cycles, select [Execute Single](#).

Remote command:

`[ :SOURce<hw> ] :SWEep:COMBined:COUNT` on page 529

### Spacing

Indicates that the instrument distributes the level steps linearly (straight proportional), i.e. the level steps have the same size.

To determine the step size, use the parameter [Step](#).

Remote command:

n.a.

### Step

Sets the step width for the RF level sweep in dB.

The "RF level sweep" mode increases or decreases the level value linearly by the set value.

Remote command:

`[ :SOURce<hw> ] :SWEep:POWer:STEP[:LOGarithmic]` on page 524

### Setting Characteristics

Selects additional quality characteristics to optimize the behavior of the RF signal level for the specific application.

"Auto"	<p>Sets the RF output level automatically according to the selected mode.</p> <p>In this mode, the instrument provides the highest dynamic range and fastest setting times.</p> <p>The RF signal is shortly blanked when the step attenuator is switching.</p> <p>For more information, refer to the specifications document.</p>
"Uninterrupted"	<p>Suppresses blanking at level transitions. Frequency transitions can lead to an RF level blanking due to hardware-specific switching points.</p> <p>This mode reduces the dynamic range of the instrument. The step attenuator is fixed.</p>
"Strictly Monotone"	<p>Executes signal level changes monotonically increasing or decreasing.</p> <p>The setting makes sure that increasing the level value exclusively results in an increased output level, and vice versa.</p> <p>All electronic switches, which can affect the monotonicity are fixed.</p> <p>The operation mode is useful for applications using level searching algorithms which rely on a strictly monotonous behavior.</p>
"Constant-VSWR"	<p>Suppresses output impedance variations at the RF 50 Ω output connector, due to changed level settings.</p>
"User"	<p>Selects this entry automatically when you change one of the following parameters from the default setting:</p> <ul style="list-style-type: none"> <li>• "Attenuator" &gt; <a href="#">Mode</a></li> <li>• "ALC" &gt; <a href="#">State</a> or <a href="#">Detector Sensitivity</a></li> </ul> <p><b>Note:</b> If you select another setting characteristic, the R&amp;S SMB100B presets the modified attenuator and ALC parameters.</p>

Remote command:

[\[:SOURce<hw>\]:POWer:LBEHaviour](#) on page 506

### Level Range

Shows the interruption-free range of the level that you can use in the currently selected mode.

Remote command:

[\[:SOURce<hw>\]:POWer:RANGe:LOWer?](#) on page 514

[\[:SOURce<hw>\]:POWer:RANGe:UPPer?](#) on page 514

## 6.6 List mode settings

The "List Mode" dialog contains all the functions and settings for creating and handling lists with RF frequency/level pairs including the corresponding dwell times for generating the RF signal based on these values.

Access:

- ▶ Select "Sweep" > "List mode".

The dialog contains parameters for configuring the list mode processing, entering list mode data and transferring data files from or to the instrument.


The remote commands required to define these settings are described in [Chapter 12.15.6, "SOURce:LIST subsystem"](#), on page 485.

- [General settings](#)..... 141
- [List mode data settings](#)..... 143
- [Import/export settings](#)..... 144

### 6.6.1 General settings

Access:

- ▶ Select "Sweep" > "List mode".

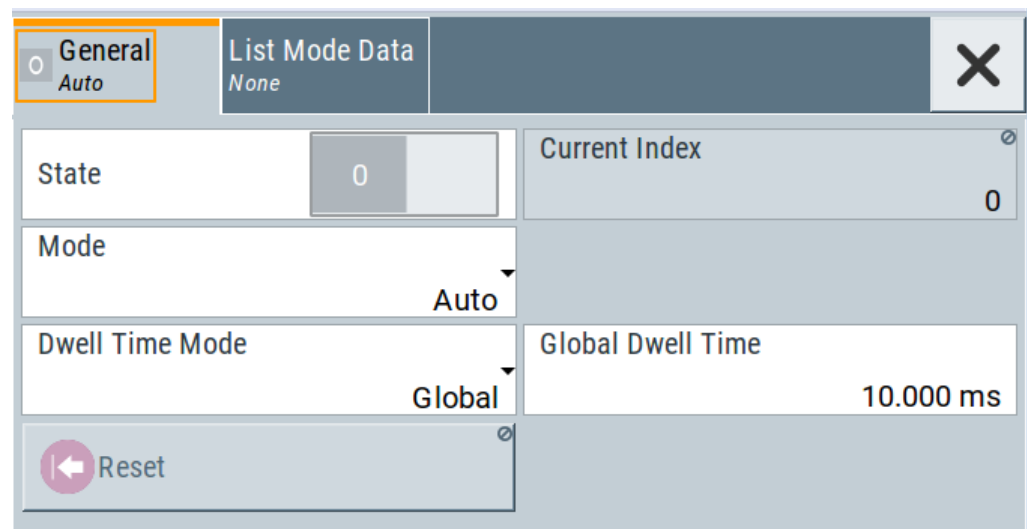

In the "General" tab, you can configure the trigger and dwell time modes for list processing and activate signal generation.

#### Settings

- [State](#)..... 142
- [Current Index](#)..... 142
- [Mode](#)..... 142
- [Dwell Time Mode](#)..... 142
- [Global Dwell Time](#)..... 143
- [Trigger Slope](#)..... 143
- [Reset](#)..... 143
- [Execute Single](#)..... 143

**State**

Activates the list mode and processes the currently selected list.

**Note:** Active RF frequency, RF level or RF combined sweep modes deactivate the LF sweep or List mode and vice versa.

Remote command:

`[ :SOURce<hw> ] :FREQuency:MODE` on page 466

**Current Index**

Sets the list index for list processing in "Step" mode. In the other modes, the index indicates the current step.

Remote command:

`[ :SOURce<hw> ] :LIST:INDEX` on page 490

**Mode**

Selects the mode for list processing.

See [Chapter 6.1, "Signal generation and triggering in the sweep and list modes"](#), on page 116.

"Auto" Generates the signal by processing the frequency/level value pairs of the list from the beginning to the end. The list steps are performed automatically, controlled by the dwell time. If you switch from any mode to "Auto", signal generation always starts at the top of the list.

"Single / Extern Single" Generates the signal by processing the frequency/level value pairs of the list once from the beginning to the end after a trigger event. The list steps are performed automatically, controlled by the dwell time. If one cycle is completed, the instrument waits for the next trigger event.

"Step / Extern Step" Generates the signal by processing the frequency/level value pairs of the list step-by-step, manually triggered.

Remote command:

`[ :SOURce<hw> ] :LIST:TRIGger:SOURce` on page 492

`[ :SOURce<hw> ] :LIST:MODE` on page 491

**Dwell Time Mode**

Selects either variable dwell times or a fixed dwell time to perform signal generation in list mode.

"Global" Uses the same dwell time for all lists steps, set with [Global Dwell Time](#).

"From List" Uses the dwell times from the list. You can define the dwell time for each frequency/level value pair individually, see [Chapter 6.7, "List editor"](#), on page 147.

Remote command:

`[ :SOURce<hw> ] :LIST:DWELL:MODE` on page 489

**Global Dwell Time**

Sets the dwell time for [Dwell Time Mode](#) > "Global".

**Note:** In case of considerable overrun conditions, the R&S SMB100B turns off the list mode.

See also "[Dwell time](#)" on page 129.

Remote command:

[\[:SOURCE<hw>\]:LIST:DWELL](#) on page 488

**Trigger Slope**

For "Mode = Extern Step/Single", selects the polarity of the active slope of an applied instrument trigger.

Trigger signal is expected at the Inst Trig connector.

"Positive"           The rising edge of the trigger signal triggers the instrument.

"Negative"           The falling edge of the trigger signal triggers the instrument.

Remote command:

[\[:SOURCE\]:INPut:TRIGger:SLOPe](#) on page 472

**Reset**

Resets the list to the starting point.

Remote command:

[\[:SOURCE<hw>\]:LIST:RESet](#) on page 495

**Execute Single**

Manually starts list processing in "Single" mode.


Remote command:

[\[:SOURCE<hw>\]:LIST:TRIGger:EXECute](#) on page 492

## 6.6.2 List mode data settings

Access:

1. Select "Sweep" > "List mode".
2. Select "List Mode Data".

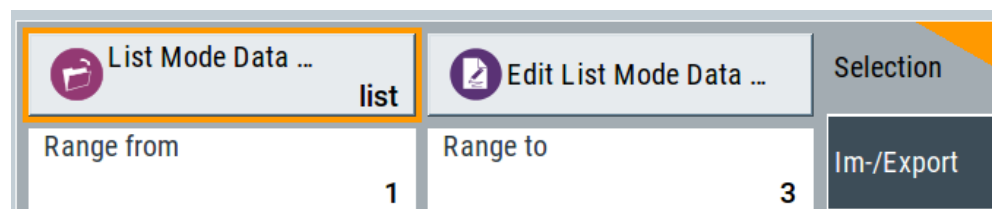

This dialog contains the parameters required for creating and editing lists, activating the learning function and selecting the list processing mode.

**Settings**

List Mode Data.....	144
Edit List Mode Data.....	144
List Range from/to.....	144

**List Mode Data**

Accesses the standard "Select List" dialog for selecting, creating and editing a list file. The currently loaded file is indicated.

You can create data lists with the internal editor or import externally created files, see ["Creating and handling lists"](#) on page 128.

Remote command:

[ :SOURce<hw> ] :LIST:CATalog? on page 494

[ :SOURce<hw> ] :LIST:SElect on page 495

[ :SOURce<hw> ] :LIST:DElete on page 494

[ :SOURce<hw> ] :LIST:DElete:ALL on page 494

**Edit List Mode Data**

Opens the editor to insert and save data lists with RF frequency, power and dwell time values, see [Chapter 6.7, "List editor"](#), on page 147.

You find this function also in standard file select dialog, accessed via [List Mode Data](#).

**List Range from/to**

Defines an index range in the current list by setting the start and stop index.

The instrument generates the signal with the values of the selected index range and ignores all other list entries.

Remote command:

[ :SOURce<hw> ] :LIST:INDEX:START on page 491

[ :SOURce<hw> ] :LIST:INDEX:STOP on page 491


**6.6.3 Import/export settings**

Access:

1. Select "Sweep" > "List Mode".



2. Select "List Mode Data" > "Im-/Export".

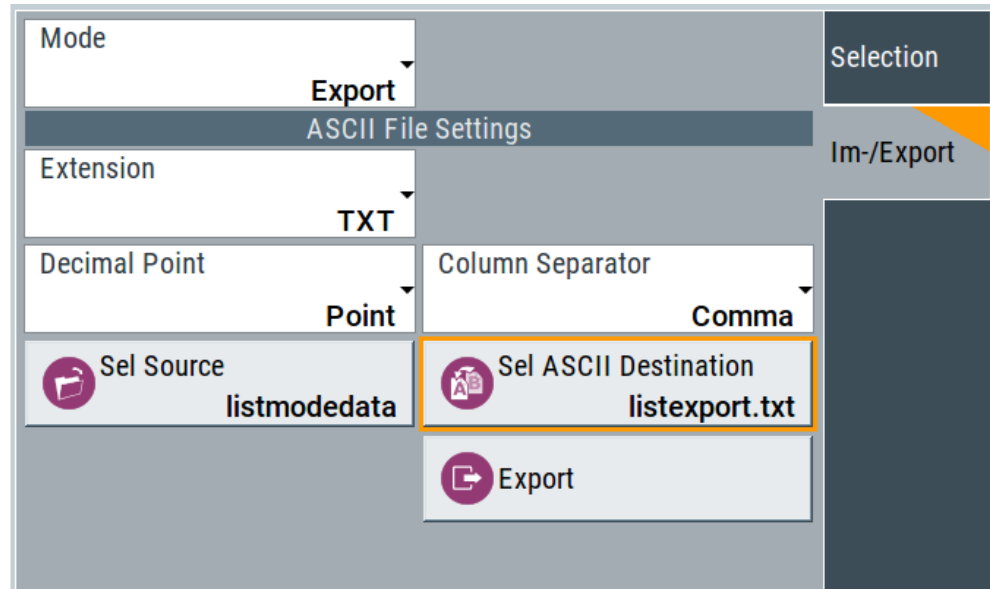

The "Im-/Export" dialog provides the parameters for importing or exporting files with user data in standard ASCII \*.txt or \*.csv file format.

The table separators and the decimal floating point numbers are customizable.

## Settings

Mode.....	145
ASCII File Settings.....	145
Select (ASCII) Source/Select (ASCII) Destination.....	146
Select Source/Select ASCII Destination.....	146
Import / Export.....	146

## Mode

Selects import or export of a data list file. The provided parameters vary according to the selected mode.

Remote command:

[ :SOURCE<hw> ] :LIST:DEXChange:MODE on page 498

[ :SOURCE<hw> ] :CORRection:DEXChange:MODE on page 464

[ :SOURCE<hw> ] :PULM:TRain:DEXChange:MODE on page 447

## ASCII File Settings

Defines the format and the separators of the associated data file.

"Extension"       Selects \*.csv or \*.txt format.

"Decimal Point"   Sets "Point" (dot) or "Comma" as the decimal separator used in the ASCII data with floating-point numerals.

"Column Separator"       Sets the separator between the columns in an ASCII table.  
Available are: "Tab", "Semicolon", "Comma" or "Space".

Remote command:

[ :SOURce<hw> ] :LIST:DEXChange:AFILe:EXTension on page 497  
 [ :SOURce<hw> ] :LIST:DEXChange:AFILe:SEParator:DECimal on page 497  
 [ :SOURce<hw> ] :LIST:DEXChange:AFILe:SEParator:COLumn on page 497  
 [ :SOURce<hw> ] :CORRection:DEXChange:AFILe:EXTension on page 463  
 [ :SOURce<hw> ] :CORRection:DEXChange:AFILe:SEParator:DECimal  
 on page 464  
 [ :SOURce<hw> ] :CORRection:DEXChange:AFILe:SEParator:COLumn  
 on page 464  
 [ :SOURce<hw> ] :PULM:TRAIIn:DEXChange:AFILe:EXTension on page 447  
 [ :SOURce<hw> ] :PULM:TRAIIn:DEXChange:AFILe:SEParator:DECimal  
 on page 448  
 [ :SOURce<hw> ] :PULM:TRAIIn:DEXChange:AFILe:SEParator:COLumn  
 on page 448

### Select (ASCII) Source/Select (ASCII) Destination

In "Mode > Import", access the file select dialog that provides standard file handling functions.

Where:

- "Select ASCII Source": defines the file to be loaded (imported)
- "Select ASCII Destination": selects the filename under that the loaded file is saved

Remote command:

[ :SOURce<hw> ] :LIST:DEXChange:AFILe:CATalog? on page 496  
 [ :SOURce<hw> ] :LIST:DEXChange:AFILe:SElect on page 497  
 [ :SOURce<hw> ] :CORRection:DEXChange:AFILe:CATalog? on page 463  
 [ :SOURce<hw> ] :CORRection:DEXChange:AFILe:SElect on page 463  
 [ :SOURce<hw> ] :PULM:TRAIIn:DEXChange:AFILe:CATalog? on page 448  
 [ :SOURce<hw> ] :PULM:TRAIIn:DEXChange:AFILe:SElect on page 448

### Select Source/Select ASCII Destination

In "Mode > Export", access the file select dialog that provides standard file handling functions.

Where:

- "Select Source": selects the file to be exported
- "Select ASCII Destination": defines the filename and the file path for the exported file

Remote command:

[ :SOURce<hw> ] :LIST:DEXChange:SElect on page 498  
 [ :SOURce<hw> ] :CORRection:DEXChange:SElect on page 465  
 [ :SOURce<hw> ] :PULM:TRAIIn:DEXChange:SElect on page 449

### Import / Export

Imports or exports the selected data list file, depending on the current mode.

Remote command:

[ :SOURce<hw> ] :LIST:DEXChange:EXECute on page 496  
 [ :SOURce<hw> ] :CORRection:DEXChange:EXECute on page 464  
 [ :SOURce<hw> ] :PULM:TRAIIn:DEXChange:EXECute on page 449

## 6.7 List editor


The "User Correction" and "List Mode" dialogs provide a build-in list editor for defining the corresponding value pairs.

The table and navigation functions of the UCOR and list mode editors have the same structure and are therefore summarized below. The access is specified for both modes, the fields and functions are explained using the example of the list mode.

Access to "Edit List Mode Data":

- ▶ "Sweep" > "List Mode" > "List Mode Data" > "Edit List Mode Data"

The editor for list mode provides a table with RF frequency and power values, an extra column for defining variable dwell times, and standard navigation functions.

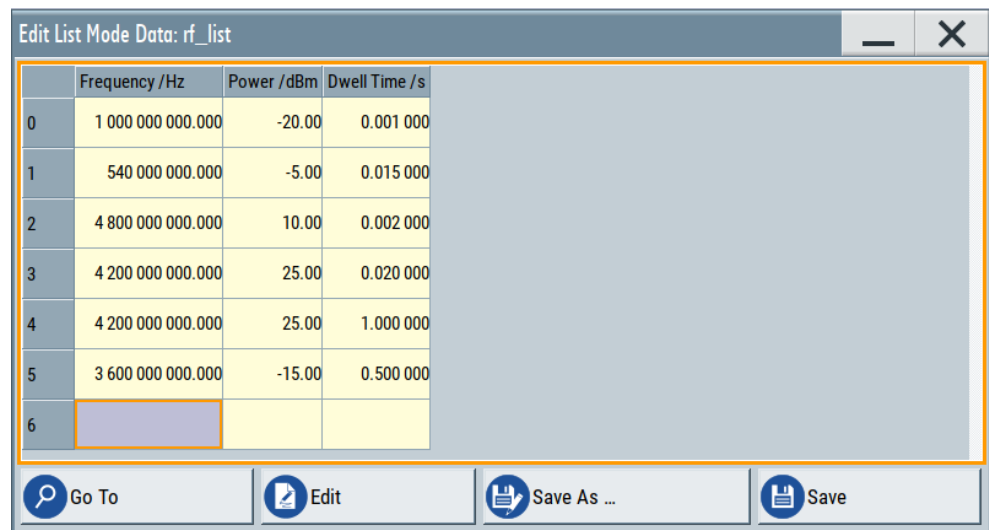

	Frequency /Hz	Power /dBm	Dwell Time /s
0	1 000 000 000.000	-20.00	0.001 000
1	540 000 000.000	-5.00	0.015 000
2	4 800 000 000.000	10.00	0.002 000
3	4 200 000 000.000	25.00	0.020 000
4	4 200 000 000.000	25.00	1.000 000
5	3 600 000 000.000	-15.00	0.500 000
6			

The remote commands required to define the list mode data are described in [Chapter 12.15.6, "SOURce:LIST subsystem"](#), on page 485.

Access to "Edit User Correction Data":

- ▶ "Level" > "User Correction" > "Edit User Cor. Data"

	Frequency /Hz	Correction Value /dB
0	1 560 000 000.00	11.51
1	1 561 000 000.00	11.03
2	1 562 000 000.00	10.55
3	1 563 000 000.00	10.07
4	1 564 000 000.00	9.59
5	1 565 000 000.00	9.11
6		

The editor for user correction data provides a table with RF frequency and power values and standard navigation functions.

The remote commands required to define the user correction data are described in [Chapter 12.15.2, "SOURCE:CORRection subsystem"](#), on page 457.



All columns in a row must contain values. Cells with missing values are therefore filled automatically, using the value of the previous row.

If you use **global dwell time in list mode**, consider also that the instrument uses the value set with [Global Dwell Time](#) for all list steps and not the values from the list.

Since the table and navigation functions can be assumed to be known, the following description contains a brief overview, shown by the example of the "Edit List Mode Data" dialog. If a function relates to a particular dialog, it is explicitly stated.

### Settings

<a href="#">Edit List Mode Data</a> .....	148
<a href="#">Data handling keys</a> .....	149
L <a href="#">Go To</a> .....	149
L <a href="#">Edit</a> .....	149
L <a href="#">Fill with Sensor</a> .....	149
L <a href="#">Save As/Save</a> .....	149
<a href="#">Fill</a> .....	149

### Edit List Mode Data

Table with values for list or user correction processing.

**Note:** Once you enter a value, the editor automatically adds preset values in the other columns. This functionality protects against data loss, otherwise incomplete rows are lost when saving. You can simply override these values.

**"Frequency (Hz)"**

Sets the frequency values.

Remote command:

[\[:SOURce<hw>\]:LIST:FREQuency](#) on page 490

[\[:SOURce<hw>\]:CORRection:CSET:DATA:FREQuency](#)  
on page 460

**"Power (dBm)" (list mode data table)**

Sets the level values.

Remote command:

[\[:SOURce<hw>\]:LIST:POWer](#) on page 491

**"Correction Value (dBm)" (user correction data table)**

Sets the level values.

Remote command:

[\[:SOURce<hw>\]:CORRection:CSET:DATA:POWer](#) on page 460

**"Dwell /s"**

In list mode, sets the dwell time values.

Remote command:

[\[:SOURce<hw>\]:LIST:DWELL:LIST](#) on page 489

**Data handling keys**

Standard functions for file and data handling.

**Go To ← Data handling keys**

Selects a row for editing.

**Edit ← Data handling keys**

Enables you to insert, or delete a row or ranges within the table, and provides access to a dialog for automatic filling, see **"Fill..."** on page 94.

**Fill with Sensor ← Data handling keys**

Opens a dialog to configure the automatic filling of user correction data with an R&S NRP power sensor.

Available in UCOR mode only.

See [Chapter 7.3.3, "Fill with sensor"](#), on page 167

**Save As/Save ← Data handling keys**

Saves the table in a file with user-defined name and predefined file extension. To save a copy or create a file, use the "Save as" function.

**Fill...**

Provides parameters for filling a table automatically with user-defined values.

From 0	Range 4
Column To Fill Frequency /Hz	
Start Value 2.000 000 000 000 GHz	End Value 2.600 000 000 000 GHz
Increment Value 200.000 000 000 MHz	
<input checked="" type="checkbox"/> Fill	

To fill the table, select "Fill".

**Note:** Once you enter a value or fill a column, the editor automatically adds preset values in the other columns. This functionality protects against data loss, otherwise incomplete rows will be lost when saving. You can simply override these values.

"From / Range"

Defines the start line and number of lines to be filled.

"Column To Fill"

Selects, if the column is filled up with frequencies in Hz, levels in dBm or dwell times in s.

"Start Value / End Value"

Sets the start value for frequency, level or dwell time. The end value is read only and depends on the increment value and the range.

"Increment Value"

Determines the step size.

"Fill"

Fills the column specified in "Column To fill".

## 6.8 How to generate a signal in list or sweep mode

This section shows you how to configure a varying RF output signal for both, the list and sweep modes.

### To configure the frequency sweep signal

- For a step-by-step description, see [Chapter 3.3.2, "Generating an RF frequency sweep signal"](#), on page 41.

### Example: Fast changing frequency and level settings in list mode

The following example shows you how to generate an amplitude modulated RF signal based on list mode data.

### General workflow

Since any change of the hardware settings or list entries can affect the RF signal characteristics directly, we recommend that you proceed as follows:

1. Configure the modulation settings.  
Activate the RF signal.
2. Wait until the hardware settings have settled.
3. Create a list file.
4. Configure the list mode.
5. Activate list mode.

### To configure amplitude modulation and switch RF on

1. Press [Preset] to start from an initial state.
2. Select "Modulation" > "Amplitude Modulation > On".
3. Select "Level" > "RF ON" to activate RF signal generation.

### To create list mode data

1. Select "Sweep" > "List Mode".
2. In the "List Mode Data" tab, select "List Mode Data > New".
3. Enter the filename `ListMode_Test` for the data list and confirm with "Ok".  
The instrument creates a file and stores it in the `/var/user/` directory.
4. Select "Edit List Mode Data".
5. Enter the first values "Frequency > 2", "Power > 0" and "Dwell > 2".
6. Enter further frequency, power and dwell time values in the same way.
7. Select "Save" and close the dialog.

### To configure the list mode and start signal generation

1. In the "General" tab, select "List Mode > Auto".
2. Select "Dwell Time Mode > From List".
3. Switch state to "On".
4. Select "General > State > On".

The instrument continuously generates an amplitude-modulated RF signal whose frequency and level values change according to the dwell times, as defined in the list.

With active list mode, the generator displays no frequency and level values in the status bar, but you can check the following parameters.

- In the list mode dialog, the current index indicates the steps of the signal generation.

## How to generate a signal in list or sweep mode

- In remote control mode, you can query:
  - The current state with `[ :SOURce<hw> ] :LIST:RUNNING?`
  - Current parameters with the commands `FREQ?`, `POW?` and `LIST:DWEL?`.



## 7 Improving level performance

To adjust the RF output signal to specific needs in your application, the R&S SMB100B offers different functions:

- **Attenuator**

The R&S SMB100B is equipped with a step attenuator that enables you to vary the amplitude of the RF signal in a wide range. It is characterized by low VSWR (voltage standing wave ratio) over the full level and frequency range, and provides highest level accuracy and noise suppression.

See ["About the attenuator"](#) on page 153.

- **Automatic Level Control (ALC)**

The automatic level control system provides stable RF signals with highest absolute level accuracy over temperature and time.

See ["About ALC"](#) on page 156.

- **User correction (UCOR)**

The user correction function allows you to compensate frequency responses of external setups (e.g. losses of cables) and achieve a stable input signal over frequency directly at the DUT.

See ["About UCOR"](#) on page 159.

- **Power sensors**

The R&S SMB100B has excellent absolute level accuracy. Since a DUT is rarely connected directly to the generator, but with cables or other components, the reference level shifts from the RF output to the DUT. To calibrate this level with high accuracy, i.e. in the tenth dB range, you can connect an R&S NRP power sensor to the generator. The power sensor transmits its readings to the generator, which indicates these measurement results in the display. Thus you can adjust the RF output power of the generator until you reach the target level at the DUT.

See [Chapter 7.4, "Using power sensors"](#), on page 171

### 7.1 Attenuator

#### About the attenuator

The step attenuator is an electronic device without mechanical components, providing fast and wear free level settings.

According to the requirements of your application, you can select different attenuator characteristics.

The following are examples of test requirements and the corresponding configuration:

- **Automatic configuration**

Select standard operation mode ("Auto"), in which the generator adjusts the attenuation of the RF output signal automatically.

- **DUT tests under low signal to noise conditions**


Low output power is suitable to test the behavior of a DUT under low signal to noise conditions.

- Uninterrupted level settings with constant VSWR  
A fix attenuation value is required for obtaining uninterrupted level settings with constant VSWR.  
The configuration "RF Off Mode > Unchanged" ensures that constant VSWR is maintained if you turn the signal off and on again.
- Noise sensitive applications  
The parameter "RF OFF Mode > Full Attenuation" sets maximum attenuation and thus suppresses noise when you turn off the RF signal.

### 7.1.1 Attenuator settings

Access:

- ▶ Select "Level" > "Level > Attenuator".

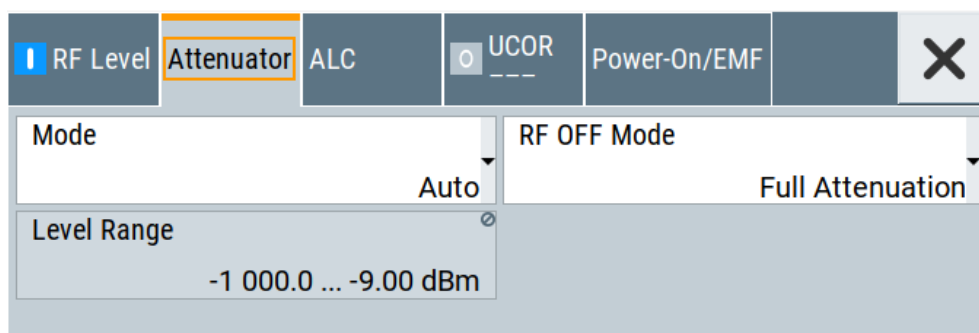

In the "Attenuator" dialog, you can select the operating mode of the electronic step attenuator.

The remote commands required to define these settings are described in [Chapter 12.13, "OUTPut subsystem"](#), on page 404 and [Chapter 12.15.10, "SOURce:POWer subsystem"](#), on page 502.

#### Settings

Mode.....	154
Level Range.....	155
RF OFF Mode.....	155
Readjust.....	155

#### Mode

Determines the operating mode of the step attenuator.

"Auto"	Adjusts the attenuator settings automatically.
"Fixed"	Fixes the attenuator and amplifier paths for the current RF level and provides signal output with constant output VSWR. The resulting level range is indicated under " <a href="#">Level Range</a> " on page 155.

Remote command:

:OUTPut<hw>:AMODE on page 406

**Level Range**

Shows the interruption-free range of the level that you can use in the selected mode.

Remote command:

`:OUTPut<hw>:AFIXed:RANGe:LOWer?` on page 406

`:OUTPut<hw>:AFIXed:RANGe:UPPer?` on page 406

**RF OFF Mode**

Determines the state of the step attenuator, when the RF signal is switched off.

The setting is not affected by an instrument preset ([Preset] key or \*RST) and the "Save/Recall" function. It is reset only by factory preset.

"Unchanged" Freezes the setting of the step attenuator.  
Use this mode if a constant VSWR (Voltage Standing Wave Ratio) is required.

"Full Attenuation" Switches to the maximum attenuation.  
Use this mode for applications that require a high level of noise suppression.

Remote command:

`[ :SOURce<hw> ] :POWER:ATTenuation:RFOff:MODE` on page 505

**Readjust**

Recalculates and adjusts the internal switch positions of the RF chain according to the current level.

The R&S SMB100B provides the "Readjust" function when you change one of the following parameters from the default setting:

- "RF Level" > [Setting Characteristics](#)
- "Attenuator" > [Mode > FixedSetting Characteristics](#)

Remote command:

`[ :SOURce<hw> ] :POWER:ALC:SONCe` on page 505

## 7.1.2 Reverse power protection

R&S SMB100B RF instruments only

The instrument is equipped with a reverse power protection circuit.

The reverse power protection is tripped when the power of signals reflected from the load or external signals applied to the RF output get too high. A relay opens and interrupts the internal connection to the RF output. This condition is indicated in the status bar by the "Overload" status message.

**Overload**

If an "Overload" status message is indicated in the status bar, perform the following:

- Remove the cause for the overload
- Press the [RF on/off] key to reset the overload protection

The RF input is activated when the overload protection is reset.

Remote command:

`:OUTPut<hw>:PROTection:TRIPped?` on page 407

`:OUTPut<hw>:PROTection:CLEar` on page 407

## 7.2 Automatic level control (ALC)

The R&S SMB100B is equipped with an automatic level control (ALC) unit to obtain best RF level accuracy.

### About ALC

ALC is an adaptive control system to stabilize the RF output level. It continuously monitors the current level and adjusts it to keep a steady state over temperature and time.

ALC is active in almost all applications by default. However, when **pulse modulation** with short pulses is used, the ALC uses table-based level settings with table values depending on the pulse width.

Also note that ALC can detect incorrect values in **multi-transmitter** test setups. If multiple generators are coupled, reverse power can affect the ALC readings, which leads to an incorrect RF output power.

### ALC states and their effects

The following description basically explains the ALC states and their principle of operation:

- "Auto"  
Adjusts the output level to the operating conditions automatically. ALC is active in almost all operating modes.
- "On"  
Activates the internal level control permanently, regardless of the operating conditions.  
**Note:** This mode is not useful for pulse modulation with narrow pulses and low repetition rates, since the automatic level control cannot settle in time. Set ALC "Auto" or "Table & On" instead.
- "Off (Sample & Hold)"  
R&S SMB100B RF instruments only  
Deactivates ALC, but still allows you to maintain a constant output level. The R&S SMB100B switches briefly in the CW mode and enables ALC to adjust the level to the set target value. The instrument freezes this setting, turns off ALC again, and switches back to the operating mode.
- "Off (Table)"  
Deactivates internal level control loop. The instrument calculates every level setting using the attenuation values from the internal (ALC) table. Level attenuation between two table values is done with linear interpolation. This mode enables you to perform a fast and strictly monotonic, but not quite as precise level adjustment.
- "Table & On"

Starts with the associated value of the internal level table and then activates the automatic level control. This mode achieves maximum level accuracy and fast setting times.


If pulse modulation is applied, this mode ensures fast level settings even with narrow pulses at low repetition rate.

The R&S SMB100B displays the level control setting as a status message in the info line.

## 7.2.1 ALC settings

Access:

- ▶ Select "Level" > "Automatic Level Control".

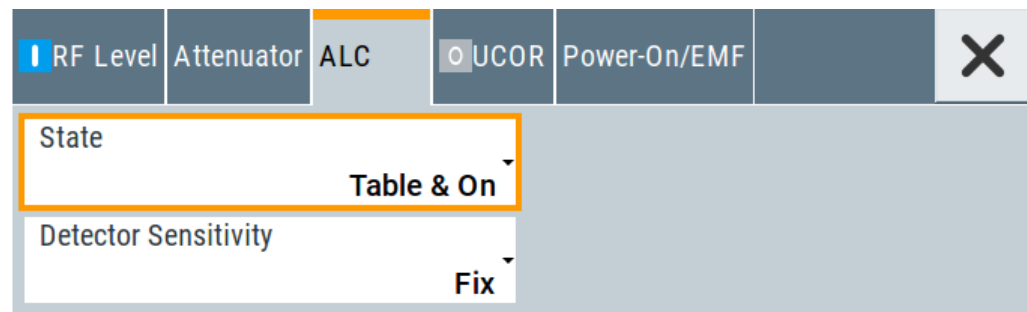

In the "ALC" dialog, you can configure the settings for the automatic level control of the RF signal to achieve optimal accuracy.

The remote commands required to define these settings are described in [Chapter 12.15.10, "SOURCE:POWER subsystem"](#), on page 502.

### Settings

<a href="#">State</a> .....	157
<a href="#">Detector Sensitivity</a> .....	158

#### State

Selects the internal level control mode.

"Auto"	Selects the most appropriate ALC mode automatically.
"On"	Activates ALC permanently.
"Off (Sample & Hold)"	R&S SMB100B RF instruments only Deactivates the ALC, but allows you to recalibrate the level at each frequency and level change. The value remains up to the next change.
"Off (Table)"	Controls the level using the attenuation values of the internal ALC table.

**"Table & On"**

Starts with the attenuation setting from the internal ALC table and continues with automatic level control.

For further details on the individual settings, an overview of the functionality and details on what is to be considered, see ["ALC states and their effects"](#) on page 156.

Remote command:

[\[:SOURCE<hw>\]:POWER:ALC\[:STATE\]](#) on page 504

**Detector Sensitivity**

Determines the path of the internal level detector.

The level detector of the ALC has multiple paths distinguished by their sensitivity.

- |        |   |
|--------|---|
| "Auto" | Selects the detector path automatically, according to the given level. This mode is the recommended operation mode.                                   |
| "Low"  | Selects the detector path with low sensitivity. This setting is intended for signals with high internal electronic levels.                            |
| "Med"  | Selects the path with medium sensitivity. This setting corresponds to normal mode. It is intended for signals with medium internal electronic levels. |
| "High" | Selects the detector path with high sensitivity, intended for signals with low internal electronic levels.  |
| "Fix"  | Fixes the last set sensitivity setting.   |


Remote command:

[\[:SOURCE<hw>\]:POWER:ALC:DSENSitivity](#) on page 505

## 7.3 User correction

The R&S SMB100B supports a correction function to compensate external losses, caused, for example, by the RF cable, to achieve a precise target input level at the DUT.

The signal at the RF outputs of the R&S SMB100B is flat. However, the DUT is usually not connected directly to the outputs of the instrument but rather via connecting cables. Components like cables, power combiners, switches or mixers can affect the signal flatness at the DUT input.

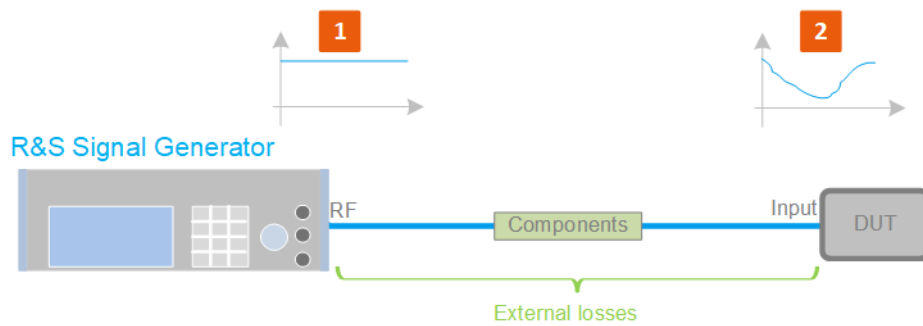

**Figure 7-1: Effect of external losses on the signal flatness at the DUT input**


- DUT = Device under test  
 Components = Designation of all components between the measurement equipment and the DUT, e.g. cables  
 1 = Flat signal at the outputs of the R&S SMB100B  
 2 = Signal received at the DUT, incl. the external losses

### About UCOR

User correction (UCOR) is a method that determines the external level loss of the RF output signal over a frequency range in advance, see [Figure 7-2](#).

The difference between the generator output level and the level at the DUT determines the correction value at the respective frequency. Alternatively, the attenuation characteristics over a certain frequency range of, for example, RF cables are also specified in the associated specifications document.

For more information, refer to the specifications document.

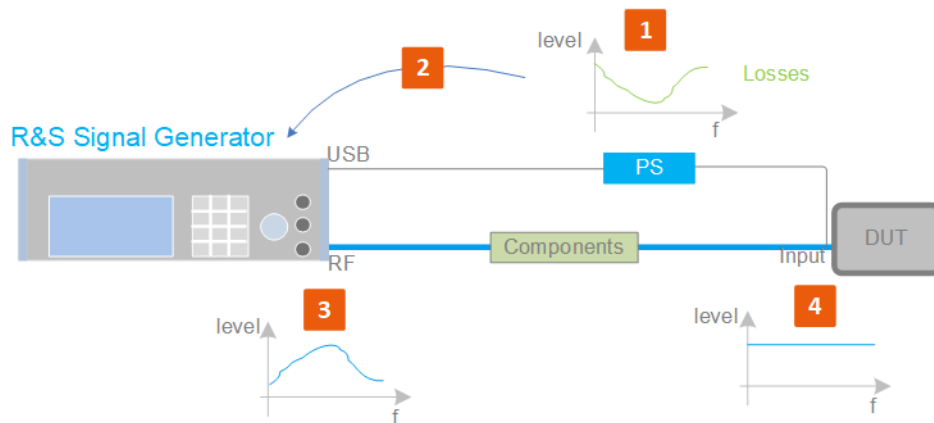

**Figure 7-2: Understanding the principle of user correction**

- DUT = Device under test  
 Components = Designation of all components between the measurement equipment and the DUT, e.g. cables  
 PS = Power sensor, e.g. R&S NRP, connected at the DUT's input and the USB connector of the R&S SMB100B  
 1 = Power sensor measures the level over a frequency range, where the collected values correspond to the losses caused by the components between the R&S SMB100B and the DUT

- 2 = Obtain the correction data by inverting the collected data; load the correction parameters in the R&S SMB100B
- 3 = In the R&S SMB100B, the RF signal is pre-processed with the correction values so that the signal at the outputs is the inverted version of the external losses
- 4 = Received at the DUT input, the pre-processed signal if flat

With active **UCOR**, the generator adds the correction value internally and thus increases the output level by exactly the amount of the loss between its output and the DUT. For frequencies which are not contained in the list, the level correction is calculated by interpolation of the closest correction values.

### Possible ways for configuring the user correction values

You can configure correction values in the following ways:

- **Internally**

- Use the built-in table editor in the "UCOR > Edit User Correction Data" dialog. Once defined, user correction values can be saved in a file. Files with correction data can be exported, for example, to exchange configuration between instruments or to modify the file content with an external program and reload them again.
- Using the corresponding remote-control commands. Note that you have to create a user correction file first.

- **Externally**

Create a file with correction values as a CSV file with Microsoft Excel, with a Notepad or a similar tool and save it with the predefined extension. Transfer the file to and load it into the instrument.

### UCOR file format

Files containing correction data are simple files in text or comma-separated value (CSV) file format. The filename is user-definable; the file extension is \*.ucor.

The file contains a list of correction values, one row per frequency and correction value pair; a new line indicator separates the correction values.

For file handling, use the standard functions in the "File Manager", see [Chapter 9.8, "Using the file manager"](#), on page 218.

### Collecting correction data

To fill the frequency and power values in the correction table, use one of the following options:

- **Manually**, row by row.
- Fill the table **automatically** with linearly interpolated values, calculated from value range and step size.
- Acquire the real frequency response characteristics of the used component with the **R&S NRP power sensor**, see [Understanding the principle of user correction](#).



### Using a power sensor for frequency response measurements

Consider the following when using R&S NRP power sensors to measure the correction values:

- Measure the level directly at the input of the DUT.
- Use the internal correction functions of an R&S NRP power sensor to increase the measurement accuracy.
- Use S-parameter to consider the impact of any two-port device like an adapter between the signal generator and the sensor input.

For information on the various possibilities of interoperability between Rohde & Schwarz power sensors and Rohde & Schwarz signal generators, see the application note 1GP141.



### Interactions and characteristics

You can enable user correction in all operating modes.

The RF output level ( $Level_{RF}$ ) is the sum of the level value and the correction for the particular frequency:

$$Level_{RF} = \text{"Status bar > Level"} + \text{"UCOR"}$$


If enabled, the R&S SMB100B indicates user correction by the "Lev Ucor" icon in the "Level" tile.

## 7.3.1 User correction settings

Access:

1. Select "Level" > "User Correction".
2. If you already have created a file with user correction data:
  - a) Select "UCOR Data" > navigate to the file "\*.uco" > "Select".
  - b) Proceed with [step 4](#).
3. If you need to create a file:
  - a) Select "UCOR Data" > "New".
  - b) Enter the filename `UCOR_Data` and confirm with "Ok".
  - c) Choose the file and confirm with "Select".
  - d) Select "Edit UCOR Data".
  - e) To fill the user correction data table, proceed as described in [Chapter 6.7, "List editor"](#), on page 147.
4. Select "UCOR" > "State" > "On".

5. Select "Level" > "RF State" > "On".

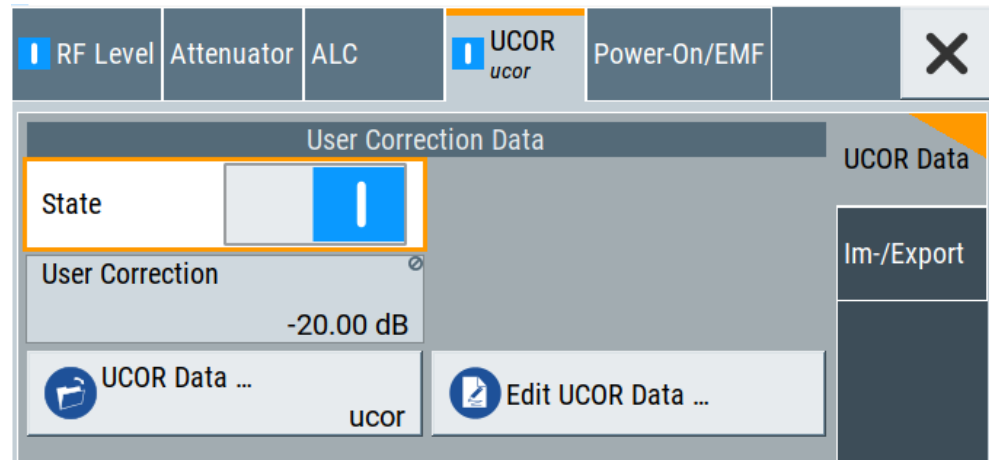

The "UCOR" dialog contains all settings for creating and handling files with user-defined level correction values.

The remote commands required to define these settings are described in [Chapter 12.15.2, "SOURce:CORRection subsystem"](#), on page 457.

### Settings

State.....	162
User Correction.....	162
UCOR Data.....	162
Edit UCOR Data.....	163
UCOR Info .....	163

### State

Activates user correction.

The R&S SMB100B displays the status icon "Lev Ucor" in the "Level" panel.

Remote command:

`[ :SOURce<hw> ] :CORRection [ :STATe ]` on page 462

### User Correction

Indicates the corrected level value for a specific frequency point.

Remote command:

`[ :SOURce<hw> ] :CORRection:VALue?` on page 461

### UCOR Data

Accesses the standard "File Select" function of the instrument. The provided navigation possibilities in the dialog are self-explanatory.

Files with user correction values are files with predefined file extension \*.uco. When a file is selected, the dialog indicates the filename.

You can create the file internally in the table editor or externally.

- To select an existing file, select "Select List > navigate to the file \*.uco > Select"
- Use the general editor function to create a file or to edit an existing one.

- Use the standard file manager function to load externally created files to the instrument.

Remote command:

[\[:SOURCE\]:CORREction:CSET:CATalog?](#) on page 462

[\[:SOURCE<hw>\]:CORREction:CSET\[:SElect\]](#) on page 461

[\[:SOURCE\]:CORREction:CSET:DElete](#) on page 462

### Edit UCOR Data

Opens the build-in table editor to define a new correction table or edit an existing one.

See also:

- [Chapter 6.7, "List editor"](#), on page 147
- ["Fill..."](#) on page 94
- [Chapter 7.3.3, "Fill with sensor"](#), on page 167

### UCOR Info ...

Opens a window with information on the user correction file.

The window shows the metadata of the file and the output level parameters that are relevant for user correction.

Remote command:

n.a.

## 7.3.2 List editor

The "User Correction" and "List Mode" dialogs provide a build-in list editor for defining the corresponding value pairs.

The table and navigation functions of the UCOR and list mode editors have the same structure and are therefore summarized below. The access is specified for both modes, the fields and functions are explained using the example of the list mode.

Access to "Edit List Mode Data":

- ▶ "Sweep" > "List Mode" > "List Mode Data" > "Edit List Mode Data"

The editor for list mode provides a table with RF frequency and power values, an extra column for defining variable dwell times, and standard navigation functions.

	Frequency /Hz	Power /dBm	Dwell Time /s
0	1 000 000 000.000	-20.00	0.001 000
1	540 000 000.000	-5.00	0.015 000
2	4 800 000 000.000	10.00	0.002 000
3	4 200 000 000.000	25.00	0.020 000
4	4 200 000 000.000	25.00	1.000 000
5	3 600 000 000.000	-15.00	0.500 000
6			

The remote commands required to define the list mode data are described in [Chapter 12.15.6, "SOURCE:LIST subsystem"](#), on page 485.

Access to "Edit User Correction Data":

- ▶ "Level" > "User Correction" > "Edit User Cor. Data"

	Frequency /Hz	Correction Value /dB
0	1 560 000 000.00	11.51
1	1 561 000 000.00	11.03
2	1 562 000 000.00	10.55
3	1 563 000 000.00	10.07
4	1 564 000 000.00	9.59
5	1 565 000 000.00	9.11
6		

The editor for user correction data provides a table with RF frequency and power values and standard navigation functions.

The remote commands required to define the user correction data are described in [Chapter 12.15.2, "SOURCE:CORRection subsystem"](#), on page 457.



All columns in a row must contain values. Cells with missing values are therefore filled automatically, using the value of the previous row.

If you use **global dwell time in list mode**, consider also that the instrument uses the value set with [Global Dwell Time](#) for all list steps and not the values from the list.

Since the table and navigation functions can be assumed to be known, the following description contains a brief overview, shown by the example of the "Edit List Mode Data" dialog. If a function relates to a particular dialog, it is explicitly stated.

### Settings

Edit List Mode Data.....	165
Data handling keys.....	165
L Go To.....	165
L Edit.....	166
L Fill with Sensor.....	166
L Save As/Save.....	166
Fill.....	166

### Edit List Mode Data

Table with values for list or user correction processing.

**Note:** Once you enter a value, the editor automatically adds preset values in the other columns. This functionality protects against data loss, otherwise incomplete rows are lost when saving. You can simply override these values.

"Frequency (Hz)"

Sets the frequency values.

Remote command:

[\[:SOURCE<hw>\]:LIST:FREQUENCY](#) on page 490

[\[:SOURCE<hw>\]:CORRECTION:CSET:DATA:FREQUENCY](#)  
on page 460

"Power (dBm)" (list mode data table)

Sets the level values.

Remote command:

[\[:SOURCE<hw>\]:LIST:POWER](#) on page 491

"Correction Value (dBm)" (user correction data table)

Sets the level values.

Remote command:

[\[:SOURCE<hw>\]:CORRECTION:CSET:DATA:POWER](#) on page 460

"Dwell /s"

In list mode, sets the dwell time values.

Remote command:

[\[:SOURCE<hw>\]:LIST:DWELL:LIST](#) on page 489

### Data handling keys

Standard functions for file and data handling.



### Go To ← Data handling keys

Selects a row for editing.

**Edit ← Data handling keys**

Enables you to insert, or delete a row or ranges within the table, and provides access to a dialog for automatic filling, see "Fill..." on page 94.

**Fill with Sensor ← Data handling keys**

Opens a dialog to configure the automatic filling of user correction data with an R&S NRP power sensor.

Available in UCOR mode only.

See [Chapter 7.3.3, "Fill with sensor"](#), on page 167

**Save As/Save ← Data handling keys**

Saves the table in a file with user-defined name and predefined file extension. To save a copy or create a file, use the "Save as" function.

**Fill...**

Provides parameters for filling a table automatically with user-defined values.

From 0	Range 4
Column To Fill Frequency /Hz	
Start Value 2.000 000 000 000 GHz	End Value 2.600 000 000 000 GHz
Increment Value 200.000 000 000 MHz	
<input checked="" type="checkbox"/> Fill	

To fill the table, select "Fill".

**Note:** Once you enter a value or fill a column, the editor automatically adds preset values in the other columns. This functionality protects against data loss, otherwise incomplete rows will be lost when saving. You can simply override these values.

"From / Range"

Defines the start line and number of lines to be filled.

"Column To Fill"

Selects, if the column is filled up with frequencies in Hz, levels in dBm or dwell times in s.

"Start Value / End Value"

Sets the start value for frequency, level or dwell time. The end value is read only and depends on the increment value and the range.

"Increment Value"

Determines the step size.

"Fill"

Fills the column specified in "Column To fill".

### 7.3.3 Fill with sensor

The fill with sensor function requires that you have connected a power sensor and also selected a file for user correction data before.

See:

- [Chapter 7.4, "Using power sensors"](#), on page 171
- ["To create user correction data with an R&S NRP and the R&S SMB100B"](#) on page 189

Access:

1. Select "Level" > "User Correction".
2. Select "UCOR Data > navigate to the file \*.ucor > Select".
3. Select "Edit UCOR Data > Fill With Sensor...".

Generator Settings used for Measurement	
Modulation	Off (CW)
Amplitude	-30.00 dBm
Offset	0.00 dB
UCOR Reference Level	-30.00 dBm

This dialog contains parameters for filling a table automatically with sensor readings.



To fill the table, select "Execute".

For information on power sensors and how to use them, see [Chapter 7.5, "Improving the RF signal performance"](#), on page 188.

#### Settings:

<a href="#">Fill User Correction Data with Sensor</a> .....	168
<a href="#">Generator Settings used for Measurement</a> .....	168

**Fill User Correction Data with Sensor**

The "Execute" button is only enabled if a sensor is detected and the user correction list contains at least one frequency value.

"Sensor"	Displays connected sensors for selection.
"List To Fill"	Indicates the used list.
"Config"	Opens the sensor configuration dialog to set the parameters for the selected power sensor.
"Include Zeroing"	<p>Performs a zeroing procedure before acquiring the user correction data to improve precision.</p> <p>No signal is applied to the sensor during zeroing. RF output is temporarily switched off during that time.</p> <p>When unchecked, the zeroing procedure is skipped. However, the RF signal level can be blanked shortly. This setting is useful if blanking of RF is undesirable or the absence of power at the sensor cannot be guaranteed.</p> <p>Remote command:  <a href="#">[:SOURce&lt;hw&gt;]:CORRection:ZERoing:STATe</a> on page 461</p>
"Execute"	<p>Triggers the sensor to measure and to return the data for user correction.</p> <p>The "Execute" button is only enabled if a sensor is detected and the user correction list contains at least one frequency value.</p> <p>Remote command:  <a href="#">[:SOURce&lt;hw&gt;]:CORRection:CSET:DATA[:SENSor&lt;ch&gt;][:POWER]:SONCe</a> on page 460</p>

**Generator Settings used for Measurement**

Displays the settings relevant for the measurement.

"Modulation"	<p>Indicates that modulation is off.</p> <p>The R&amp;S SMB100B disables modulation for the "Fill with sensor" process, even if you have enabled a modulation and if you have started "Fill with sensor".</p>
"Amplitude"	<p>Displays the currently set level.</p> <p>Remote command:  <a href="#">[:SOURce&lt;hw&gt;]:POWER:POWER</a> on page 507</p>
"Offset"	<p>Displays the level offset, set with "Offset" on page 64.</p> <p>Remote command:  <a href="#">[:SOURce&lt;hw&gt;]:POWER[:LEVel][:IMMediate]:OFFSet</a> on page 512</p>



**"UCOR Reference Level"**

Displays the reference value for user correction.

The user correction reference level is the set [Amplitude](#) plus the set [Offset](#).

Remote command:

```
[ :SOURce<hw> ] :POWer[:LEVel] [:IMMediate] :REFLevel
```

on page 514

### 7.3.4 Import/export list files

Access:

- Select one of the following:
  - "Sweep" > "List mode".
  - "Level" > "User Correction".
  - "Modulation > Pulse Modulation > Pulse Generator > Pulse Mode = Train".
- Select "Import/Export".

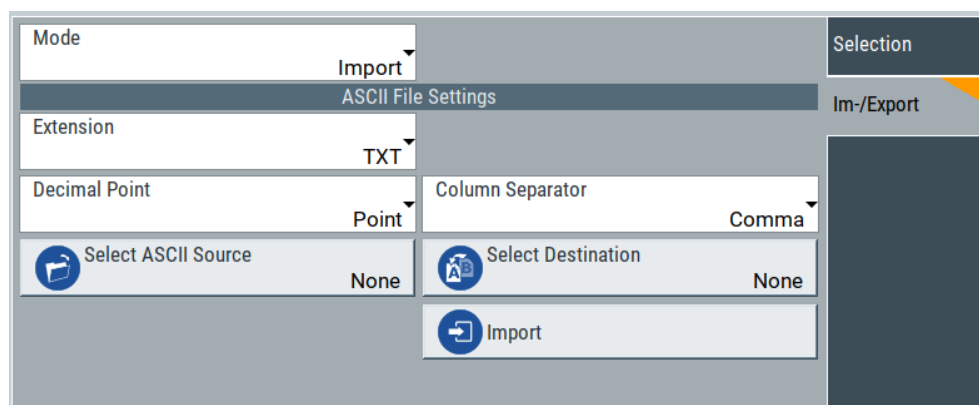


Figure 7-3: Im-/Export dialog (example with UCOR settings)

The "Import/Export" dialog contains all functions and settings to import externally created list data or to export it accordingly. You can process and store a list in the formats \*.txt (ASCII), or \*.csv (plain text with identical sequence of fields). The table separators and the decimal floating point numbers are customizable.

#### Settings

<a href="#">Mode</a> .....	170
<a href="#">ASCII File Settings</a> .....	170
<a href="#">Select (ASCII) Source/Select (ASCII) Destination</a> .....	170
<a href="#">Select Source/Select ASCII Destination</a> .....	171
<a href="#">Import / Export</a> .....	171

**Mode**

Selects import or export of a data list file. The provided parameters vary according to the selected mode.

Remote command:

[\[:SOURCE<hw>\]:LIST:DEXChange:MODE](#) on page 498

[\[:SOURCE<hw>\]:CORrection:DEXChange:MODE](#) on page 464

[\[:SOURCE<hw>\]:PULM:TRain:DEXChange:MODE](#) on page 447

**ASCII File Settings**

Defines the format and the separators of the associated data file.

"Extension"        Selects \*.csv or \*.txt format.

"Decimal  
Point"            Sets "Point" (dot) or "Comma" as the decimal separator used in the ASCII data with floating-point numerals.

"Column Separator"  
                  Sets the separator between the columns in an ASCII table.  
Available are: "Tab", "Semicolon", "Comma" or "Space".

Remote command:

[\[:SOURCE<hw>\]:LIST:DEXChange:AFIle:EXTension](#) on page 497

[\[:SOURCE<hw>\]:LIST:DEXChange:AFIle:SEParator:DECimal](#) on page 497

[\[:SOURCE<hw>\]:LIST:DEXChange:AFIle:SEParator:COLumn](#) on page 497

[\[:SOURCE<hw>\]:CORrection:DEXChange:AFIle:EXTension](#) on page 463

[\[:SOURCE<hw>\]:CORrection:DEXChange:AFIle:SEParator:DECimal](#)  
on page 464

[\[:SOURCE<hw>\]:CORrection:DEXChange:AFIle:SEParator:COLumn](#)  
on page 464

[\[:SOURCE<hw>\]:PULM:TRain:DEXChange:AFIle:EXTension](#) on page 447

[\[:SOURCE<hw>\]:PULM:TRain:DEXChange:AFIle:SEParator:DECimal](#)  
on page 448

[\[:SOURCE<hw>\]:PULM:TRain:DEXChange:AFIle:SEParator:COLumn](#)  
on page 448

**Select (ASCII) Source/Select (ASCII) Destination**

In "Mode > Import", access the file select dialog that provides standard file handling functions.

Where:

- "Select ASCII Source": defines the file to be loaded (imported)
- "Select ASCII Destination": selects the filename under that the loaded file is saved

Remote command:

[\[:SOURCE<hw>\]:LIST:DEXChange:AFIle:CATalog?](#) on page 496

[\[:SOURCE<hw>\]:LIST:DEXChange:AFIle:SElect](#) on page 497

[\[:SOURCE<hw>\]:CORrection:DEXChange:AFIle:CATalog?](#) on page 463

[\[:SOURCE<hw>\]:CORrection:DEXChange:AFIle:SElect](#) on page 463

[\[:SOURCE<hw>\]:PULM:TRain:DEXChange:AFIle:CATalog?](#) on page 448

[\[:SOURCE<hw>\]:PULM:TRain:DEXChange:AFIle:SElect](#) on page 448

### Select Source/Select ASCII Destination

In "Mode > Export", access the file select dialog that provides standard file handling functions.

Where:

- "Select Source": selects the file to be exported
- "Select ASCII Destination": defines the filename and the file path for the exported file

Remote command:

[ :SOURce<hw> ] :LIST:DEXChange:SElect on page 498

[ :SOURce<hw> ] :CORRection:DEXChange:SElect on page 465

[ :SOURce<hw> ] :PULM:TRain:DEXChange:SElect on page 449

### Import / Export

Imports or exports the selected data list file, depending on the current mode.

Remote command:

[ :SOURce<hw> ] :LIST:DEXChange:EXECute on page 496

[ :SOURce<hw> ] :CORRection:DEXChange:EXECute on page 464

[ :SOURce<hw> ] :PULM:TRain:DEXChange:EXECute on page 449

## 7.4 Using power sensors

The R&S SMB100B works with any of the R&S NRP power sensors and thus supports various application tasks. Using power sensors, you can for example determine attenuation characteristics of downstream equipment or cables. You can use the measured values to compensate the losses with internal control functions or with an external control circuit in real time.

For information on the various possibilities of interoperability between Rohde & Schwarz power sensors and Rohde & Schwarz signal generators, see the application note 1GP141.

R&S NRP power sensors are highly accurate standalone measuring devices, suitable for a wide range of applications. The power sensors communicate directly with the signal generator, calculate the average or peak power internally, include S-parameter correction and return the measurement results to the generator.

The R&S SMB100B supports up to four power sensors, allowing up to four power measurements simultaneously.



Check the firmware version of the R&S NRP sensors regularly. Update the firmware, if necessary.

For updates, see the Rohde & Schwarz website [www.rohde-schwarz.com](http://www.rohde-schwarz.com) in section "Power Meters & Voltmeters".

For information on working with power sensors, see the following topics:

- [Chapter 7.4.2, "Connecting R&S NRP power sensors to the R&S SMB100B"](#), on page 174

Overview on the supported connectors, connection options and the required accessories.

- [Chapter 7.4.3, "NRP power viewer"](#), on page 175  
A function for measuring and monitoring the RF output power or a user-defined signal source.
- [Chapter 7.4.4, "NRP power control"](#), on page 176  
Controls a downstream closed loop power control circuit, to compensate frequency response characteristics.
- [Chapter 7.4.5, "NRP sensor configuration"](#), on page 181  
Parameter settings of the specific R&S NRP power sensor.
- [Chapter 7.4.6, "NRP sensor mapping"](#), on page 185  
Shows all R&S NRP sensors connected to the instrument, or in the LAN.

### 7.4.1 About

The R&S SMB100B can perform up to four power measurements simultaneously.

Depending on the signal characteristic (CW, AM, pulsed, etc.) or the parameter to be measured (average, peak, etc.) a suitable R&S power sensor must be used.

#### About the measuring principle, averaging filter, filter length, and achieving stable results

A sensor measures the average or peak RF power of the source continuously. The measurement results are displayed in the "NRP Power Viewer" dialog.

The power viewer function uses **averaging filters** for getting a stable readout.

Measurement results could be interfered, for instance, by too much noise in your setup, by a bad suppression of harmonics or non-harmonics or when you reach the sensitivity level of your power sensor.

Measurements are continuously repeated in a predefined time window. The measurement result is obtained by averaging the measured values for the last 2N time windows. This approach is referred as a **two-step averaging process**.

The factor of 2 in the formula arises because the output signals from the microwave detector are chopped at the same rate as the time windows to suppress low-frequency noise. An independent measured value can only be obtained from two consecutive values.

The variable N in the formula indicates the **filter length**. The filter length then directly influences the measurement time. The filter length can be selected automatically or it can be manually set to a fixed value.

Follow the following general recommendation to find out the **optimum filter length**:

- Always start a measurement in auto mode ("Filter > Auto").  
Check if the measurement results are sufficient.
- If the power is not constant, select the filter length manually ("Filter > User").  
Trigger the "Auto Once" function to search for the optimum filter length for the current measurement conditions.

The estimated value is indicated as filter length.

- If the target measurement accuracy value is known, select "Filter > Fixed Noise". The averaging factor is selected automatically and so that the sensor's intrinsic noise (two standard deviations) does not exceed the specified noise content.
- Depending on the R&S NRP power sensor type, the manual setting of the filter length varies in resolution.
- Different sensor types achieve the same filtering result with different filter and time window lengths.  
For most sensors, the time window length is fixed to 20 ms, whereas, e.g., for the R&S NRP-Z81 sensor, the time window length is 10 µs.

For more information, refer to the specifications document.

### About zeroing

Activates the auto zero function.

Zeroing calibrates the external power sensor by adjusting its reading at zero signal power. For this purpose, the RF power source must be switched off or disconnected from the sensor. If a Rohde & Schwarz power sensor receives an input power during the zeroing process, it aborts zeroing and generates an error message. Zeroing takes a few seconds, depending on the sensor model. Refer to the documentation of your power sensor for more information.

### Tips for zeroing

When to perform zeroing:

- During warm up after switching on or connecting the instrument
- After a substantial change of the ambient temperature
- After fastening the power sensor module to an RF connector at high temperature
- After several hours of operation
- When low-power signals are to be measured, e.g. less than 10 dB above the lower measurement limit.
- Switch off the RF power source for zeroing, but do not disconnect it from the power sensor. This proceeding keeps the thermal equilibrium, and the zeroing process also compensates the noise that superimposes the measured signal (e.g. from a broadband amplifier).

### Related settings and functions

- Measurements-related settings, like results, filter, filter length:  
[Chapter 7.4.5, "NRP sensor configuration"](#), on page 181
- Software version of the connected power sensor:  
`:SENSe<ch>[:POWER]:TYPE?` on page 422
- Acquisition of level correction data:  
[Chapter 7.3, "User correction"](#), on page 158

### Additional information

See the Rohde & Schwarz website [www.rohde-schwarz.com](http://www.rohde-schwarz.com), section "Power Meters & Voltmeters" for:

- R&S NRP power sensor manual.
- Information on the R&S NRP-Z5 sensor hub and the available accessories.
- Sensor software updates.

## 7.4.2 Connecting R&S NRP power sensors to the R&S SMB100B

R&S NRP sensors are connected to the R&S SMB100B in the following ways:

- Connection to the USB connector  
Requires the following cables, depending on the used sensor type:
  - R&S NRP-ZKU (USB interface cable) for R&S NRPxx power sensors
  - R&S NRP-Z3 or R&S NRP-Z4 (USB adapter cables) for sensors of the R&S NRP-Zxx family
- Connection via R&S NRP-Z5 sensor hub  
The R&S NRP-Z5 USB sensor hub (high-speed USB 2.0) can host up to 4 R&S NRP sensors.  
Requires additional standard USB cable (USB type A to USB type B) to any USB type A connector of the R&S SMB100B. This connection supports internal triggering.
- Connection via USB hub with external power supply unit  
Requires the following cables, depending on the used sensor type:
  - R&S NRP-ZKU (USB interface cable) for R&S NRPxx power sensors
  - R&S NRP-Z3 or R&S NRP-Z4 (USB adapter cables) for sensors of the R&S NRP-Zxx family
- Connection via LAN for R&S NRPxxxSN/xxxTN/xxxAN power sensors  
Using the Ethernet interface requires PoE (Power over Ethernet) to provide the electrical power.  
To establish the connection, you can use:
  - A PoE Ethernet switch, e.g. R&S NRP-ZAP1 and an RJ-45 Ethernet cable.
  - A PoE injector and an RJ-45 Ethernet cable.

For details, see the description R&S®NRP Power Sensors getting started.

### Detection and mapping

The R&S SMB100B either detects a R&S NRP power sensor automatically or you can scan for available power sensors manually. The "NRP Sensor Mapping" dialog lists all detected R&S NRP power sensors, see [Chapter 7.4.6, "NRP sensor mapping"](#), on page 185. The dialog enables you to add, remove and map the sensors manually.

Depending on the connection interface, the R&S SMB100B detects and maps connected R&S NRP power sensors differently:

- USB interface

Detects a sensor automatically and maps it with index "1" to index "4" according to the sequence of connection.

- LAN interface  
To detect sensors that are connected in the LAN, the instrument provides a scan function. When you start the function, scan searches in the LAN for available R&S NRP power sensors and adds all detected sensors to list. Assigning a mapping index activates the sensor for the measurement.



On connection, the R&S SMB100B immediately starts the measurement of the R&S NRP power sensor. If you preset the instrument ([Preset] key or \*RST), the R&S SMB100B stops the measurement. The connection and the mapping of the power sensors remain.

### 7.4.3 NRP power viewer

The R&S SMB100B features the power viewer function for measuring or monitoring signals with R&S NRP power sensors.

#### 7.4.3.1 NRP power viewer settings

Access:

- ▶ Select "Power Sens" > "NRP Power Viewer".

Power Viewer	Power Control	Sensor Configuration	Sensor Mapping		✕
1: NRP-Z81 900008	Average	-52.42	dBm	Config ...	
2: NRP18SN 101748	Average	-1.03	dBm	Config ...	
3: NRP67TN 101015	Average	-38.20	dBm	Config ...	

The "Power Viewer" tab lists the mapped R&S NRP power sensors with the measured parameter mode and the current readings. The "Config" button leads you to the configuration dialog to set the parameters for each sensor.

The remote commands required to define these settings are described in [Chapter 12.14, "SENSe, READ, INITiate and SLISt subsystems"](#), on page 407, including the triggering of the measurement and the retrieval of measurement results. See also [Chapter 7.5, "Improving the RF signal performance"](#), on page 188.

**Settings**

[Config](#)..... 176


**Config**

Opens the "Sensor Configuration" dialog.

See also [Chapter 7.4.5, "NRP sensor configuration"](#), on page 181.

**7.4.4 NRP power control**

The NRP power control function enables you to apply stable and accurate RF power to the DUT. For example, you can set up a downstream closed loop power control circuit to compensate spurious effects or losses caused by power amplifiers or cables.

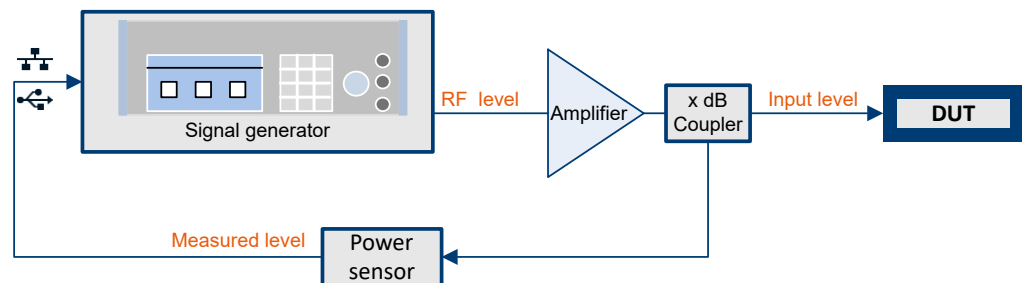**Example: How to set up a closed loop power control**

*Figure 7-4: Example of a test setup with NRP power control*

The signal generator applies the RF output signal to an amplifier and to the DUT. An intermediately connected coupler derivates the output power from the output signal and forwards it to the power sensor. Thus, the power sensor measures a proportional power in defined time intervals, and returns the results to the signal generator. If supported, the power sensor also includes given S-parameters. The signal generator compares the measured power with the set level value and adjusts the level of the output signal accordingly.

This closed loop power control enables you to control the external signal level continuously and reliably achieve a constant input power at the DUT in real time.





### Impact of NRP power control and operating modes

Since the frequency and level of the RF output signal are continuously adjusted during "NRP Power Control", this operating mode interferes signal generation modes with varying frequency and level values. In addition, the setting time increases. The reason is the interaction between the signal generator and the R&S NRP power sensor in the control loop.

The operating modes impact each other as follows:

- Enabling the RF frequency sweep, RF level sweep or the list mode disables a running "NRP Power Control".
- A running list or RF sweep mode blocks "NRP Power Control".
- Modulated signals can deviate from the CW signal in mean power and peak power, and thus affect the "NRP Power Control".

#### 7.4.4.1 NRP power control settings

Access:

- ▶ Select "Power Sens" > "NRP Power Control".

Power Viewer	Power Control	Sensor Configuration	Sensor Mapping	✕
State	<input checked="" type="checkbox"/>			
Sensor	2: NRP18SN 101748	Average	-1.31 dBm	Config ...
Target Level	-10.00 dBm	Take Measurement as Target Level		
Mode	Single	Execute Single		
Catch Range +/-	30.00 dB	Delay Time	20 ms	
RF Amplitude Limit	30.00 dBm	RF Setting Characteristics	Auto	

In this dialog you can configure the parameters of the power control setup for the selected power sensor.

The remote commands required to define these settings are described in [Chapter 12.15.10, "SOURce:POWer subsystem"](#), on page 502.

**Settings**

State.....	178
Sensor.....	178
Measured Level.....	178
Target Level.....	178
Take Measurement as Target Level.....	178
Mode.....	179
Execute Single.....	179
Catch Range +/-.....	179
Delay Time.....	179
Limit.....	179
Setting Characteristics.....	180

**State**

Enables power control with the selected sensor.

The control loop periodically adjusts the generator output. After switching off, the running loop is completed.

**Note:** If you want to use another sensor, you must disable power control before. It is not possible to switch between sensors when power control is active.

Remote command:

`[ :SOURce<hw> ] :POWer:SPC:STATe` on page 510

**Sensor**

Indicates the R&S NRP power sensor that is selected for power control.

To configure the power sensor parameters, see [Chapter 7.4.5, "NRP sensor configuration"](#), on page 181.

Remote command:

`[ :SOURce<hw> ] :POWer:SPC:SELeCt` on page 510

**Measured Level**

Indicates the current reading of the selected power sensor.

Remote command:

`:READ<ch> [ :POWer ] ?` on page 414

`:SENSe<ch>:UNIT [ :POWer ]` on page 415

**Target Level**

Specifies the nominal level expected at the input of the sensor. The signal generator adjusts the output power accordingly, to meet the target value at the sensor input, and thus the power required at the DUT.

Remote command:

`[ :SOURce<hw> ] :POWer:SPC:TARGet` on page 511

**Take Measurement as Target Level**

Uses the currently measured level as reference and applies the value as target level, see ["Target Level"](#) on page 178.

This feature simplifies setting up the control loop after manual adjustment of the measurement configuration. To assign the measured level as reference level, you must switch off "NRP Power Control". It is not possible when the control loop is running.

Remote command:

[\[:SOURce<hw>\]:POWer:SPC:MEASure](#) on page 509

### Mode

Selects the measurement mode for acquiring the power values measured by the sensor.

"Auto"	Immediately starts and measures the power continuously.
"Single"	Starts when you manually select <a href="#">Execute Single</a> , and executes one power measurement cycle. Note, that you can achieve the expected target power level at the DUT only with linear test setups. Non-linear test setups, for example, setups including an amplifier do not work.

Remote command:

[\[:SOURce<hw>\]:POWer:SPC:MODE](#) on page 509

### Execute Single

In mode "Single", starts one measurement cycle manually.

Remote command:

[\[:SOURce<hw>\]:POWer:SPC:SINGLE](#) on page 510

### Catch Range +/-

Sets the capture range of the control system.

Within the range:

*Target Level +/- Catch Range*

the power control locks and tries to achieve the target level. Readings outside the range are not considered.

Remote command:

[\[:SOURce<hw>\]:POWer:SPC:CRANge](#) on page 508

### Delay Time

Sets a waiting period between the level adjustment of the generator and the next measurement of the power sensor.

With this parameter, you can bypass idle times in the controlled system.

Remote command:

[\[:SOURce<hw>\]:POWer:SPC:DELay](#) on page 509

### Limit

Sets an upper limit for the output power.

**Note:** The parameter "RF level" > "**Limit**" and "NRP power control" > "**RF Amplitude Limit**" are identical.

You can use this value to protect your DUT from damage due to high input power. If you enter an RF level above this value, the instrument limits the output power to this specified value, and generates the warning message:

"Pep value greater than the defined limit." However, the level indication in the status bar is not affected.

The setting is not affected by an instrument preset ([Preset] key or \*RST) and the "Save/Recall" function. It is reset only by factory preset.

Remote command:

`[ :SOURce<hw> ] :POWer:LIMit [ :AMPLitude ]` on page 506

### Setting Characteristics

Selects additional quality characteristics to optimize the behavior of the RF signal level for the specific application.

- |                     |  |
|---------------------|--|
| "Auto"              | <p>Sets the RF output level automatically according to the selected mode.</p> <p>In this mode, the instrument provides the highest dynamic range and fastest setting times.</p> <p>The RF signal is shortly blanked when the step attenuator is switching.</p> <p>For more information, refer to the specifications document.</p>  |
| "Uninterrupted"     | <p>Suppresses blanking at level transitions. Frequency transitions can lead to an RF level blanking due to hardware-specific switching points.</p> <p>This mode reduces the dynamic range of the instrument. The step attenuator is fixed.</p>   |
| "Strictly Monotone" | <p>Executes signal level changes monotonically increasing or decreasing.</p> <p>The setting makes sure that increasing the level value exclusively results in an increased output level, and vice versa.</p> <p>All electronic switches, which can affect the monotonicity are fixed.</p> <p>The operation mode is useful for applications using level searching algorithms which rely on a strictly monotonous behavior.</p>              |
| "Constant-VSWR"     | <p>Suppresses output impedance variations at the RF 50 Ω output connector, due to changed level settings.</p>  |
| "User"              | <p>Selects this entry automatically when you change one of the following parameters from the default setting:</p> <ul style="list-style-type: none"> <li>• "Attenuator" &gt; <a href="#">Mode</a></li> <li>• "ALC" &gt; <a href="#">State</a> or <a href="#">Detector Sensitivity</a></li> </ul> <p><b>Note:</b> If you select another setting characteristic, the R&amp;S SMB100B presets the modified attenuator and ALC parameters.</p> |

Remote command:

`[ :SOURce<hw> ] :POWer:LBEHaviour` on page 506

## 7.4.5 NRP sensor configuration

Access:

- ▶ Select "Power Sens" > "NRP Sensor Configuration".

Power Viewer	Power Control	Sensor Configuration	Sensor Mapping
Average		-19.98	dBm
State	<input checked="" type="checkbox"/>	Zero	
Display Permanent	<input checked="" type="checkbox"/>	Display	Average
Use Frequency Of	User	Frequency	1.000 000 000 GHz
Level Offset State	Off	Level Offset	0.000 dB
Filter	Auto	Filter Length	----
		Timeout	4.00 s
Default Aperture Time	<input checked="" type="checkbox"/>	Aperture Time	20.0 ms
S-Parameter	Unused	Enable Logging	<input type="checkbox"/>

In this dialog you can configure the parameters for each mapped R&S NRP power sensor in separate tabs.

The remote commands required to define these settings are described in [Chapter 12.14, "SENSe, READ, INITiate and SLISt subsystems"](#), on page 407, including the triggering of the measurement and the retrieval of measurement results.

### Settings:

Sensor type and serial number.....	182
Level (Peak) / Level (Average).....	182
State.....	182
Zero.....	182
Display.....	182
Display Permanent.....	182
Use Frequency Of.....	183
Frequency.....	183
Level Offset State,Level Offset.....	183

Filter.....	183
Filter Length.....	184
Auto Once.....	184
Noise/Signal Ratio.....	184
Timeout.....	184
Default Aperture Time.....	184
Aperture Time.....	185
S-Parameter.....	185
Enable Logging.....	185

### Sensor type and serial number

The side tab label indicates type and serial number of an R&S NRP power sensor and its mapping index.

The **Level (Peak) / Level (Average)** values display the current readings of the sensor.

Remote command:

`:SENSe<ch>[:POWER]:TYPE?` on page 422

`:SENSe<ch>[:POWER]:SNUMber?` on page 421

### Level (Peak) / Level (Average)

Indicates the measured peak or average level value.

You can also change the unit for the results display: Watt, dBm or dBμV.

**Note:** Peak level measurements are provided if the power sensor supports this feature.

Remote command:

`:READ<ch>[:POWER]?` on page 414

`:SENSe<ch>:UNIT[:POWER]` on page 415

### State

Enables level measurement of the R&S NRP power sensor.

Remote command:

`:INITiate<hw>[:POWER]:CONTinuous` on page 413

To query the availability of a sensor at a given connector, use the command :

`SENSe<ch>[:POWER]:STATus[:DEVICE]?` on page 421.

### Zero

Activates the auto zeroing.

For details, see "About zeroing" on page 173.

Remote command:

`:SENSe<ch>[:POWER]:ZERO` on page 422

### Display

Sets the display of results on mean or peak power.

Remote command:

`:SENSe<ch>[:POWER]:DISPlay:PERManent:PRIority` on page 416

### Display Permanent

Enables the display of the power sensor with the currently measured value in the status bar of the home screen.

You can activate the permanent display for several sensors.

Remote command:

`:SENSe<ch>[:POWer]:DISPlay:PERManent:STATe` on page 417

### Use Frequency Of

Selects the source for measurement.

- |        |   |
|--------|---|
| "RF"   | The R&S SMB100B transfers the RF frequency and level settings to the R&S power sensor automatically. Thus you achieve power readings of high accuracy, irrespective from the connected sensor type. |
| "User" | Sets a user defined frequency.  |

#### Example:

If you have a frequency converting device between the generator and the DUT. If the frequency converter doubles the frequency, you can set twice the frequency in the R&S SMB100B. The R&S power sensor considers this RF frequency setting.

Set the parameter [Frequency](#) to the measurement's frequency.

Remote command:

`:SENSe<ch>[:POWer]:SOURce` on page 421

### Frequency

Defines the frequency value if "Source > User" is used.

Remote command:

`:SENSe<ch>[:POWer]:FREQuency` on page 419

### Level Offset State,Level Offset

Activates and defines a level offset which is considered in the power measurement result. The level offset value is always expressed in dB, irrespective of the display of the measurement result.

This function allows you to consider, for example, an attenuator in the signal path.

Remote command:

`:SENSe<ch>[:POWer]:OFFSet` on page 420

`:SENSe<ch>[:POWer]:OFFSet:STATe` on page 420

### Filter

Selects the way the length of the used filter is defined.

See also "[About the measuring principle, averaging filter, filter length, and achieving stable results](#)" on page 172.

- |        |   |
|--------|---|
| "Auto" | <p>Selects the filter length automatically and adjusts it to the measured value. The value is indicated with the parameter <a href="#">Filter Length</a>.</p> <p>When high output power is applied, the filter length and therefore the measurement time can be short.</p> <p>When low output power is applied, the filter length and therefore the measurement time is increased which reduces the considered noise content in your measurement.</p> |
|--------|---|

- "User" The filter length is defined manually, with the parameter [Filter Length](#). As the filter length works as a multiplier for the time window, constant filter length results in a constant measurement time. Values 1 and 2N are allowed.
- "Fixed Noise" The averaging factor is taken automatically in accordance to the value [Noise/Signal Ratio](#). Thus, the sensor's intrinsic noise (2 standard deviations) does not exceed the specified noise content. To avoid long measurement times when the power is too low, set a [Timeout](#).  
Timeout is the maximum acceptable measurement time which limits the averaging factor and therefore leads to a more unstable readout.

Remote command:

`:SENSe<ch>[:POWer]:FILTer:TYPE` on page 419

### Filter Length

Sets or indicates the filter length, depending on the selected filter mode.

- "Filter > Auto" indicates the automatically adjusted filter length.
- "Filter > User" enables you to set the filter length manually.
- "Filter > Fixed Noise" hides the setting parameter.

Remote command:

`:SENSe<ch>[:POWer]:FILTer:LENGth:AUTO?` on page 417

`:SENSe<ch>[:POWer]:FILTer:LENGth[:USER]` on page 417

### Auto Once

Searches the optimum filter length for the current measurement conditions. The result is indicated with the parameter [Filter Length](#).

See also "[About the measuring principle, averaging filter, filter length, and achieving stable results](#)" on page 172.

Remote command:

`:SENSe<ch>[:POWer]:FILTer:SONCe` on page 418

### Noise/Signal Ratio

For [Filter > Fixed Noise](#), sets the noise content.

Remote command:

`:SENSe<ch>[:POWer]:FILTer:NSRatio` on page 418

### Timeout

Sets a time limit for the averaging process.

The setting is bound to the timeout of the connected sensor.

Remote command:

`:SENSe<ch>[:POWer]:FILTer:NSRatio:MTIME` on page 418

### Default Aperture Time

The sensor default setting is sufficient. Disable this parameter to specify a user-defined aperture time per sensor, if, for example, the readings vary.

To obtain stable readings, set the [Aperture Time](#) exactly to one modulation period.



Remote command:

`:SENSe<ch>[:POWer]:APERTure:DEFault:STATe` on page 415

### Aperture Time

If "Use Default Aperture Time > Off", defines the acquisition time per sensor.

For example, to obtain a sufficient low average value, set the aperture time exactly to one modulation period.

Remote command:

`:SENSe<ch>[:POWer]:APERTure:TIME` on page 415

### S-Parameter

Lists the S-Parameter correction data files retrieved for the connected power sensor. To activate the correction data, select the corresponding file.

S-Parameter correction is used to mathematically shift the reference plane to the DUT by considering the S-parameters for any components connected upstream of the sensor.

The S-Parameter table can be changed with the S-Parameters tool, provided as part of the free R&S NRP Toolkit software. For more information, refer to the manual of the connected R&S NRP power sensor.

Remote command:

`:SENSe<ch>[:POWer]:CORRection:SPDevice:STATe` on page 416

`:SENSe<ch>[:POWer]:CORRection:SPDevice:LIST?` on page 416

`:SENSe<ch>[:POWer]:CORRection:SPDevice:SELEct` on page 416

### Enable Logging

Activates recording of R&S NRP power sensor readings in a log file.

There is 1 log file per sensor. The log files are created automatically and filled in continuously. They are text files with predefined filename `SensLog<n>.txt`, where `<n>` indicates the connected sensor. Log files are stored on the internal memory, in the directory `/var/user/SensorLogging`.

Each log file contains the measured value (2 readings when you work with peak sensors), the sensor type, and the measurement time (timestamp). Logged data is not overwritten. When a new measurement is started, the collected logging data is appended in the log file.

Check the used disc space regularly and remove log files to maintain storage capacity.

**Note:** The logging function is intended for measurements with long time intervals. It is suitable source for data reconstructions if the connection to the sensor was interrupted.

Remote command:

`:SENSe<ch>[:POWer]:LOGGing:STATe` on page 420

## 7.4.6 NRP sensor mapping




 




The "NRP Sensor Mapping" lists the sensors detected by the instrument.

Any R&S NRP sensor that supports the USB legacy protocol and is connected to one of the USB interfaces, is detected automatically and added to the list. When you disconnect a power sensor, the R&S SMB100B removes it from the list accordingly.

R&S NRP power sensors that are connected in the LAN or use the USBTMC protocol are only detected by the scan search function.

Access:

- Select "Power Sens" > "NRP Sensor Mapping".

Power Viewer	Power Control	Sensor Configuration	Sensor Mapping					
Sensor				Peak	Revision	Protocol	Connector	Mapping
1	NRP-Z11	900003	<input type="checkbox"/>	04.16	Legacy		1	
2	NRP18SN	101699	<input checked="" type="checkbox"/>	02.40.22081101	Visa		3	
3	NRP18SN	101748	<input checked="" type="checkbox"/>	02.40.22081101	Legacy		2	
4	NRP18SN	101748	<input checked="" type="checkbox"/>	02.40.22081101	Visa			
5	NRP18TN	100952	<input type="checkbox"/>	03.00.23050801 .beta	Visa			
6	NRP67TN	101015	<input type="checkbox"/>	02.30.21062301	Visa			
7	NRP67TN	101016	<input type="checkbox"/>	02.30.21062301	Visa			
8	NRP6AN	101118	<input checked="" type="checkbox"/>	17.11.27.03	Visa			

Scan   Add Sensor ...

The dialog lists all detected R&S NRP sensors for selection and mapping. You can also browse the network for sensors.

The list informs on the sensor type with serial number, specific features and the revision of the sensor firmware.

For each sensor, you find the used protocol and the connector icon of the interface. In the "Mapping" column, you can assign a mapping index to enable the sensor for use. The list can contain several entries but the R&S SMB100B can only use up to four sensors simultaneously.

The remote commands required to define these settings are described in [Chapter 12.14, "SENSe, READ, INITiate and SLISt subsystems"](#), on page 407.

## Settings

<a href="#">Sensor Mapping List</a> .....	186
<a href="#">Scan</a> .....	187
<a href="#">Clear</a> .....	187
<a href="#">Add Sensor</a> .....	187
<a href="#">Add LAN Sensor</a> .....	187
<a href="#">Add USBTMC Sensor</a> .....	188

## Sensor Mapping List

Shows the sensors that are connected to the R&S SMB100B.

The table informs on the sensor type, specific features and the installed sensor firmware. It also shows the interface the sensor is connected to, including the communication protocol and the mapping index.

Remote command:

:SLIST[:LIST]? on page 411

:SLIST:ELEMENT<ch>:MAPPING on page 413

:SLIST:SENSOR:MAP on page 413

### Scan

Scans the network and the USB connections for sensors connected using the VISA communication protocol, i.e. sensors that are addressed over LAN or USBTMC.

The instrument detects sensors communicating over the USB legacy protocol automatically.

Remote command:

:SLIST:SCAN[:STATE] on page 411

### Clear

Removes the selected sensor from the sensor mapping list.

Remote command:

:SLIST:CLEAR:LAN on page 412

:SLIST:CLEAR:USB on page 412

:SLIST:CLEAR[:ALL] on page 413

### Add Sensor

Shows or hides the "Add Sensor" dialog to configure power sensors connected to the R&S SMB100B over USB or LAN.

### Add LAN Sensor

Configures settings to add sensors connected to the R&S SMB100B over LAN.

"IP Address or Host Name"

Displays the host name or the IP address of a R&S NRP power sensor.

If the R&S SMB100B does not detect a connected R&S NRP sensor, you can assign the address information manually.

**"Add LAN Sensor"**

Adds a detected R&S NRP sensor connected in the LAN to the list of sensors, including its device ID or name and its serial number.

Remote command:

`:SLIST:SCAN:LENSor` on page 411

**Add USBTMC Sensor**

Configures settings to add sensors connected to the R&S SMB100B over USB.

If the R&S SMB100B does not detect a connected R&S NRP sensor, you can assign the device ID manually.

**"Sensor"**

Selects the name of the R&S NRP power sensor.  
If the R&S SMB100B does not contain the R&S NRP power sensor you use, select "<from Device ID". The "Device ID" entry field switches in edit mode where you can enter the ID of your product manually.

**"Device ID"**

Displays the device identifier of a selected R&S NRP power sensor.  
If you want to assign the device ID manually, get the information in the user documentation of your power sensor.

**"Serial Number"**

Displays the serial number of the R&S NRP power sensor.  
If the R&S SMB100B does not detect a connected R&S NRP sensor, you can assign the serial number manually.

**"Add USBTMC Sensor"**

Adds a detected R&S NRP sensor connected at the USB interface to the list of sensors, including its device ID or name and its serial number.

Remote command:

`:SLIST:SCAN:USENSor` on page 412

## 7.5 Improving the RF signal performance

To achieve an accurate input level at the DUT, you can compensate losses, e.g. caused by cables between the RF output and the DUT over a frequency range.

Using the user correction function and e.g., a R&S NRP power sensor, the R&S SMB100B utilizes the readings of the power sensor and creates a correction value table for controlling the output level during operation.

**To connect the R&S NRP to the R&S SMB100B**

1. Connect the power sensor.  
See [Chapter 7.4.2, "Connecting R&S NRP power sensors to the R&S SMB100B"](#), on page 174.
2. Select "Power Sens" > "NRP Sensor Mapping".

3. If the sensor is not detected automatically, select "Scan > Start".  
The instrument scans the network and the USB connections for connected sensors and lists all detected R&S NRP sensors in the mapping table.
4. In the "Mapping" column, assign the sensor to a sensor channel, see [Chapter 7.4.6, "NRP sensor mapping"](#), on page 185.
5. Close the dialog.

#### To configure and calibrate the R&S NRP in the R&S SMB100B

Provided the power sensor is connected to the R&S SMB100B and is assigned to a sensor channel, we recommend that you calibrate and configure the power sensor.

1. Select "Level" > "RF ON > Off"
2. Select "Power Sens" > "NRP Power Viewer".


Power Viewer	Power Control	Sensor Configuration	Sensor Mapping		✕
1: NRP-Z81 900008	Average	-52.42	dBm	Config ...	
2: NRP18SN 101748	Average	-1.03	dBm	Config ...	
3: NRP67TN 101015	Average	-38.20	dBm	Config ...	

3. To configure a sensor, select "Config".
4. Select "Zero" to start zeroing of the sensor.  
**Note:** Always turn the RF power off or disconnect the sensor from RF before zeroing, since the function calibrates the power sensor at zero signal power.  
The zeroing process takes a few seconds, depending on the power sensor type.
5. Configure additional parameters for the selected sensor as required.
6. Select "State > On".
7. Close the dialog.

#### To create user correction data with an R&S NRP and the R&S SMB100B

We assume, that the power sensor is connected, assigned and ready for operation.


1. Select "Level" > "User Correction".

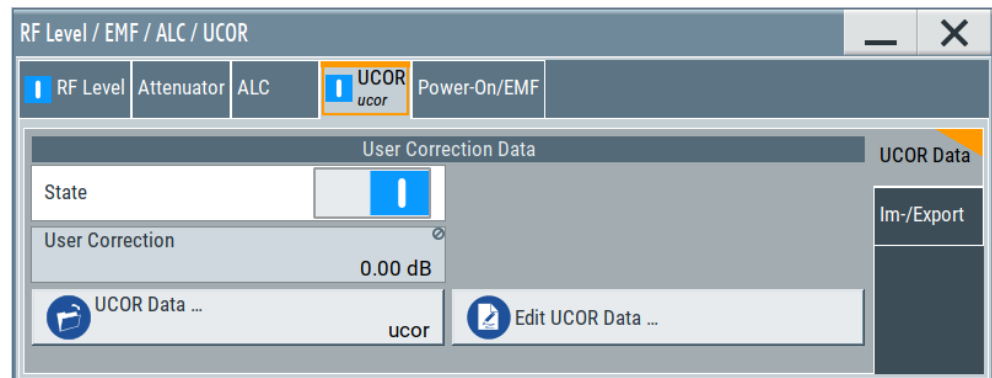

2. Select "UCOR Data" > "UCOR Data...."
3. Create a file: "New" > Filename and confirm with "OK".
4. Select the new file with "Select".
5. Select "Edit UCOR Data...".
6. Select "Edit" > "Fill".

The "Fill Table" dialog enables you to fill in the values of the columns automatically.

7. To fill in the frequency column:

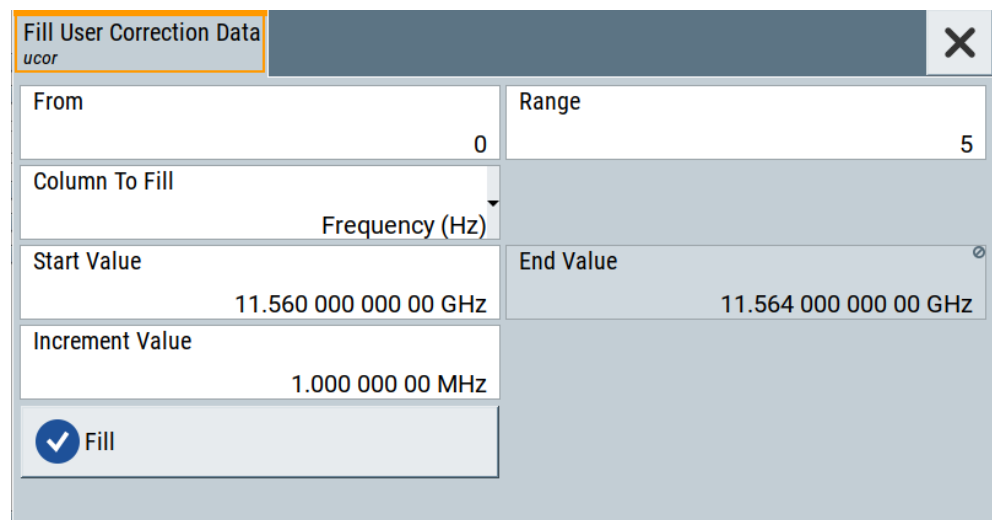

- a) Select "Select Column To Fill > Frequency / Hz".
- b) Select "Range > e.g. 15" to determine the number of values.
- c) Select "Start Value > e.g. 1.56 GHz".
- d) Select "Increment Value > e.g. 1 MHz", to determine the frequency steps.
- e) Select "Fill", to insert the frequency values.


The "Fill" function also fills the column of the "Correction Value / dB" values with a predefined value, since empty cells lead to the data loss of the entire line. If you need different values, you can change them manually, or you can use the automatic function "Fill with Sensor" as described in the next steps.

8. Select "Fill with Sensor".

The "Fill User Correction Data With Sensor" dialog provides an overview of the sensor configuration.

9. Select "Execute".

The R&S SMB100B successively sets each frequency point, reads the measured power of the sensor and fills in the value in the correction table.

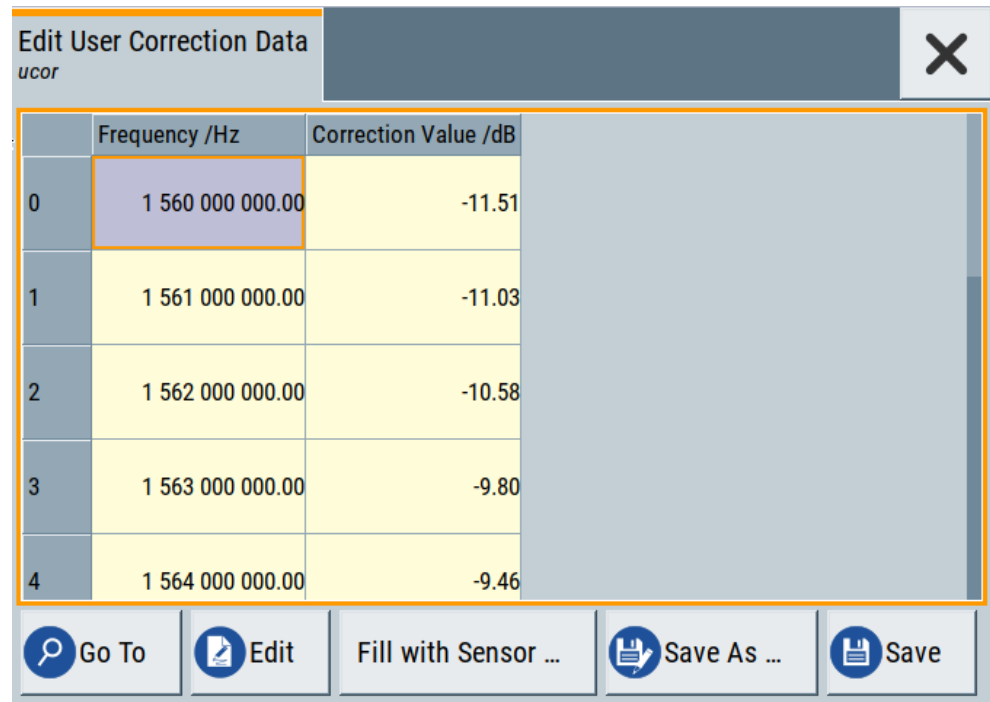

10. Select "Save" to save the data in the file.

11. Close the dialog.

#### To perform power leveling calibration with user correction data

We assume that a user correction file is available in the user directory of the R&S SMB100B or on a memory stick or in a shared directory.

If you have created and saved the file immediately before this step, the file is loaded in the "User Correction" dialog automatically. Otherwise you can load a previously saved file.

1. Select "Level" > "User Correction".
2. Select "UCOR Data" > "UCOR Data...", if there is no file loaded already.
3. Select the directory and file you want to use.
4. Load the file with "Select".
5. To view the file content, select "Edit UCOR Data...".

6. Select "UCOR Data" > "State" > "On" to apply the user correction values.

When you activate the RF output, the R&S SMB100B considers the user correction data and adjusts the signal level accordingly to compensate external frequency responses.



## 8 Reference oscillator

The R&S SMB100B is equipped with an internal reference oscillator that generates a reference frequency of 10 MHz. It is used as internal reference source for the synthesizer.

Alternatively, you can apply an external reference signal. If equipped with the required options, the R&S SMB100B can process external reference frequency in the range 1 MHz to 100 MHz and the 1 GHz reference frequency.

Regardless of the used reference source (internal or external), the R&S SMB100B always provides the configured reference frequency at the output. You can use it, for example to synchronize several interconnected instruments, see [Chapter 8.5, "Using the reference frequency for instruments synchronization"](#), on page 198, for an overview of typical test situations.



The reference oscillator settings are not affected by an instrument preset ([Preset] key or \*RST) and the "Save/Recall" function. They are reset only by factory preset.

### 8.1 Required options

R&S SMB100B base unit equipped with the following options:


- Reference oscillator (R&S SMBB-B1/-B1H)
- 1 GHz reference (R&S SMBB-B3)
- 1 MHz to 100 MHz flexible reference input (R&S SMBB-K704)

For more information, refer to the specifications document.

### 8.2 Reference frequency settings

Access:


1. Select "Frequency" > "Reference Frequency".

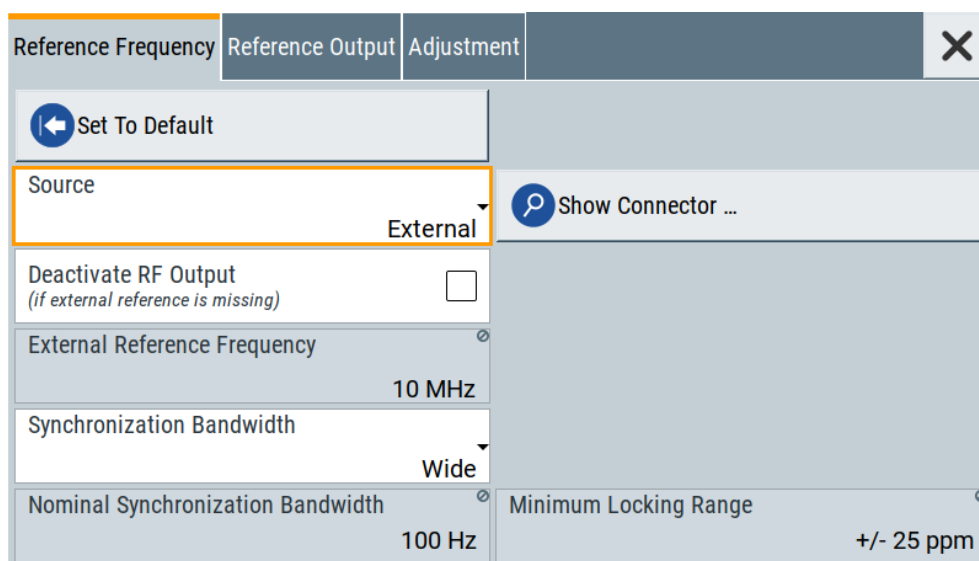

In the "Reference Frequency" tab, you can select the reference frequency signal source and the frequency and synchronization bandwidth mode of an external reference signal.

2. Observe the information on the home screen, "Frequency" tile.

The "Frequency" tile indicates the current reference oscillator configuration, including the reference oscillator source, external reference frequency (rounded value) and output connector. A warning symbol in the "Frequency" tile indicates a missing external source.

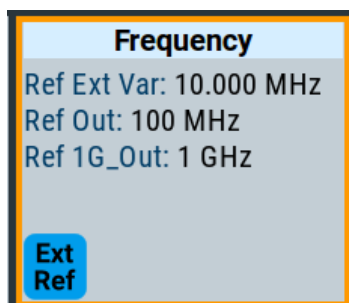

The remote commands required to define these settings are described in [Chapter 12.15.11, "SOURCE:ROSCillator subsystem"](#), on page 515.

#### Settings:

<a href="#">Set to Default</a> .....	195
<a href="#">Source</a> .....	195
<a href="#">Show Connector</a> .....	195
<a href="#">Deactivate RF Output (if external reference is missing)</a> .....	195
<a href="#">External Reference Frequency</a> .....	195
<a href="#">Variable Reference Frequency</a> .....	196
<a href="#">Synchronization Bandwidth</a> .....	196
<a href="#">Nominal Synchronization Bandwidth</a> .....	196
<a href="#">Minimum Locking Range</a> .....	196

**Set to Default**

Resets the reference oscillator settings to default.

Remote command:

`[ :SOURce ] :ROSCillator :PRESet` on page 516


**Source**

Selects the reference frequency source.

"Internal" Uses the internal reference oscillator, either with calibrated or a user-defined [Adjustment Value](#).

**Note:** The internal reference frequency automatically uses [Synchronization Bandwidth > Narrow](#). Thus, if you preset this parameter, or set the reference source from "External" to "Internal" manually, the R&S SMB100B sets the bandwidth to "Narrow".

"External" Uses an external reference signal.

**Note:** If the external reference is missing, the R&S SMB100B issues a warning message and indicates the icon  (external reference missing).

To set the frequency of the external reference, see "External Reference Frequency".

Remote command:

`[ :SOURce ] :ROSCillator :SOURce` on page 516

**Show Connector**

Accesses a dialog that displays the physical location of the selected connector on the front/rear panel of the instrument.

**Deactivate RF Output (if external reference is missing)**

Turns off the RF output when the external reference signal is selected, but no signal is supplied.

This function prevents that no improper RF signal due to the missing external reference signal is used for measurements. A message indicates that the RF output is deactivated.

Remote command:

`[ :SOURce ] :ROSCillator :EXTernal :RFOFf [ :STATe ]` on page 516

**External Reference Frequency**

Selects the frequency of the external reference input signal.

"10 MHz" 10 MHz external reference frequency

"100 MHz"/"1 GHz"

Option: R&S SMBB-B3

The R&S SMB100B locks its internal 500 MHz reference oscillator on the 100 MHz or 1 GHz reference.

Selects the external reference frequency.

"Variable" Requires R&S SMBB-K704.

The external reference signal has an arbitrary frequency, within the permissible range from 1 MHz to 100 MHz.

Remote command:

[\[:SOURCE\]:ROSCillator:EXTernal:FREQuency](#) on page 516

### Variable Reference Frequency

Option: R&S SMBB-K704

Sets the variably settable external reference frequency.

Remote command:

[\[:SOURCE\]:ROSCillator:EXTernal:FREQuency:VARiable](#) on page 517

### Synchronization Bandwidth

Selects the synchronization bandwidth for an external reference signal, set with "Source > External".

The resulting bandwidth is indicated by the parameter [Nominal Synchronization Bandwidth](#).

**Note:** If you preset or set the reference source from "External" to "Internal", the R&S SMB100B resets the synchronization bandwidth to "Narrow".

"Narrow"            The internal reference oscillator is synchronized to the external signal with narrow bandwidth.

This setting is recommended if the phase noise of the external signal is worse than the phase noise of the internal OCXO.

"Wide"             Synchronizes the internal oscillator to the external signal with the maximum possible bandwidth.

This mode is the recommended standard mode and for precise reference sources of high spectral purity.

**Note:** If the frequency of the external reference signal is outside the locking range of the internal reference oscillator, spurs due to the difference of the internal and external reference frequency are generated in the reference PLL.

The R&S SMB100B issues an error message.

For more information, refer to the specifications document.

Remote command:

[\[:SOURCE\]:ROSCillator:EXTernal:SBANdwidth](#) on page 517

### Nominal Synchronization Bandwidth

Indicates the nominal synchronization bandwidth for the selected external reference frequency and the synchronization bandwidth.

Remote command:

[\[:SOURCE\]:ROSCillator:EXTernal:NSBandwidth?](#) on page 518

### Minimum Locking Range

Indicates the minimum locking range for the selected external reference frequency and the synchronization bandwidth.


Remote command:

[\[:SOURCE\]:ROSCillator:EXTernal:MLRange?](#) on page 517

## 8.3 Reference output settings

Access:

1. Select "Frequency" > "Reference Frequency".
2. Select "Reference Output".

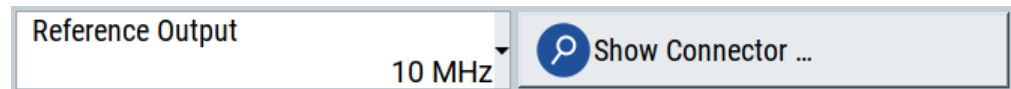

In the "Reference Output" tab, you can set the reference frequency value at the output connectors.

As a result of parameter dependencies, "Preset This Parameter" sometimes does not affect output dialogs.

The remote commands required to define these settings are described in [Chapter 12.15.11, "SOURce:ROSCillator subsystem"](#), on page 515.

### Settings:

<a href="#">Reference Output/1 GHz Reference Output</a> .....	197
<a href="#">Show Connector</a> .....	197

### Reference Output/1 GHz Reference Output

Selects frequency reference output signal for downstream instruments.

"Off"	Deactivates the reference signal output.
"10 MHz"	Derives a signal with 10 MHz frequency from the internal reference oscillator and provides this signal at the output.
"100 MHz"	Option: R&S SMBB-B3 Provides the 100 MHz reference frequency signal at the output.
"1 GHz"	Option: R&S SMBB-B3 Provides the 1 GHz reference frequency signal at the output.
"Input Signal (loop through)"	Passes the external reference frequency to the output directly.

Remote command:

[\[:SOURce\]:ROSCillator:OUTPut:FREQuency:MODE](#) on page 518

[\[:SOURce\]:ROSCillator:OUTPut:ALternate:FREQuency:MODE](#) on page 518



### Show Connector

Accesses a dialog that displays the physical location of the selected connector on the front/rear panel of the instrument.

## 8.4 Adjustment settings

Access:

1. Select "Frequency" > "Reference Frequency".
2. Select "Adjustment".

Adjustment Active <input checked="" type="checkbox"/>	Adjustment Value	0
---	------------------	---

Settings:

Adjustment Active.....	198
Adjustment Value.....	198

### Adjustment Active

Selects the adjustment mode.

"Off"	Uses the calibrated internal reference frequency.
"On"	Allows you to apply a deviation to the internal reference frequency, according to your requirements. Enter the value in the <a href="#">Adjustment Value</a> field.

Remote command:

`[ :SOURce ] :ROSCillator [ :INTernal ] :ADJust [ :STATe ]` on page 519

### Adjustment Value

Sets a user-defined adjustment value for the internal reference frequency. This value takes effect when it is activated with [Adjustment Active](#).

- "0" represents the calibrated state.
- The setting range depends on the reference oscillator type and its factory calibration value.

#### Note:

The setting is not affected by an instrument preset ([Preset] key or \*RST) and the "Save/Recall" function. It is reset only by factory preset.

Remote command:

`[ :SOURce ] :ROSCillator [ :INTernal ] :ADJust:VALue` on page 519

## 8.5 Using the reference frequency for instruments synchronization

Test setups with two or more instruments often require that the instruments use a common reference frequency. Depending on the availability of external reference frequency source and its quality, the instruments are connected and configured in different ways.

This section gives an overview of the possible test setups and the related settings. The following situations are considered:

- External reference source is not available or the **built-in reference oscillator** is of better quality than the external source  
(see "[Distributing the internal 10 MHz reference signal to further instruments](#)" on page 199)
- **Clean external reference source** with quality exceeding the quality of the built-in reference oscillator  
(see "[Using external reference source](#)" on page 200)
- **Interfered or noisy external reference signal**  
(see "[Deriving 10 MHz from the external reference frequency](#)" on page 201)
- **1 GHz reference coupling** for phase coherence of the RF signals with enhanced long-term phase stability  
(see "[Sharing the 1 GHz reference frequency to obtain phase-coherent signals](#)" on page 199)

### Connectors overview


Use the "Show Connector" function to indicate the connector on the front/real panel:

- "[Ref In/Ref Out](#)" on page 37
- 1GHz "[Ref In/Ref Out](#)" on page 37

### Distributing the internal 10 MHz reference signal to further instruments

The internal reference oscillator provides the reference frequency:

- Internal  $f_{\text{ref}} = 10 \text{ MHz}$  (10 MHz at connector Ref Out)
- [Source](#) = "Internal"
- [Reference Output/1 GHz Reference Output](#) = "10 MHz"

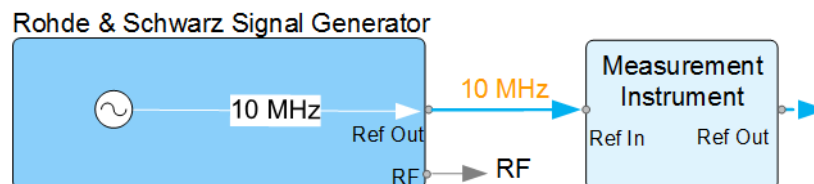

**Figure 8-1: Synchronizing instruments using the internal 10 MHz reference signal of the R&S SMB100B**

Ref In, Ref Out = Connectors

For more information, refer to the specifications document.

### Sharing the 1 GHz reference frequency to obtain phase-coherent signals

Compared to 10 MHz, a 1 GHz reference signal significantly improves the achievable phase stability between two signal sources. Because the synchronization frequency increases by a factor of 100, the relative phase fluctuations between the sources can be reduced.

### 1 GHz at connector Ref In 1GHz and 1 GHz at Ref Out 1GHz


- External  $f_{\text{Ref}} = 1 \text{ GHz}$
- **Source** = "External"
- **External Reference Frequency** = "1 GHz"
- **1GHz Reference Output** = "1 GHz"

### Using external reference source

If you have a clean external reference signal with 10 MHz or 100 MHz frequency, for example, you can **directly pass it to the output**. The signal quality remains the same.

### 10 MHz, 100 MHz at connector Ref Out and Ref In

- External  $f_{\text{Ref}} = 10 \text{ MHz}$  or  $100 \text{ MHz}$   
(*earlier RF hardware versions: 5 MHz, 10 MHz, 13 MHz*)
- **Source** = "External"
- **Reference Output** = "10 MHz, 100 MHz" or "Input Signal (loop through)"  
(*earlier RF hardware versions: 5 MHz, 10 MHz, 13 MHz*)
- Set the synchronization bandwidth according to the requirements of the application.

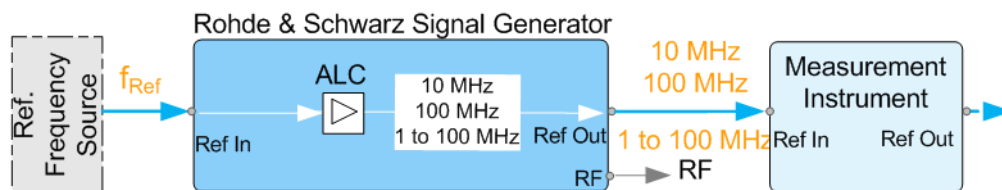

**Figure 8-2: Synchronizing instruments with a 10 MHz external reference signal**

Ref. Frequency Source = e.g., Rohde & Schwarz signal analyzer  
 $f_{\text{Ref}}$  = 10 MHz, 100 MHz, 1 MHz to 100 MHz external reference frequency  
 Ref In, Ref Out = Connectors

You can forward reference frequency between 1 MHz and 100 MHz directly to the output in the same way.

**Note:** R&S SMB100B can forward only a defined range of external reference frequencies.

For more information, refer to the specifications document.


- External  $f_{\text{Ref}} = 1 \text{ MHz to } 100 \text{ MHz}$   
(**1 MHz to 100 MHz at connector Ref In and Ref Out**)
- **Source** = "External"
- **Variable Reference Frequency** = "Variable"
- **External Reference Frequency** = current external frequency
- **Reference Output** = "Input Signal (loop through)" or specify the reference frequency the synchronized instrument supports
- Set the synchronization bandwidth according to the requirements of the application.



### Deriving 10 MHz from the external reference frequency

10 MHz reference frequency can be derived from the following external reference signals:

- 10 MHz from internal oscillator locked to external input
- 100 MHz and 1 GHz external reference signals
- External reference signal between 1 MHz and 100 MHz
- If the external reference signal is interfered (noisy)

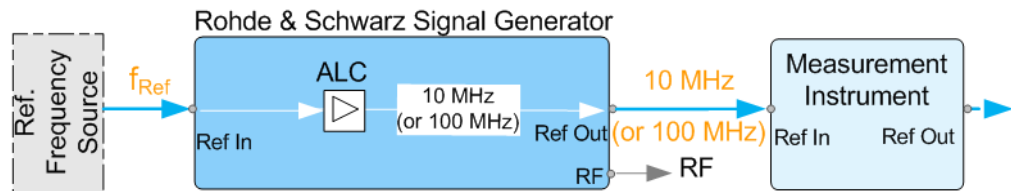

**Figure 8-3: Synchronizing instruments with 10 MHz (derived from an external reference frequency)**

Ref. Frequency Source = e.g., Rohde & Schwarz signal analyzer

$f_{\text{Ref}}$  = 10 MHz, 100 MHz, 1 MHz to 100 MHz, 1 GHz\*\* external reference frequency

\*\* = 1 GHz uses Ref In 1 GHz connector

Ref In, Ref Out = Connectors

### 1 GHz, 1 MHz to 100 MHz at connector Ref In 1 GHz/Ref In and 10 MHz at Ref Out

- E.g., external Ref.  $f_{\text{ref}} = 100 \text{ MHz}$
- **Source** = "External"
- **External Reference Frequency** = "100 MHz"
- **Reference Output/1 GHz Reference Output** = "10 MHz"
- **Synchronization Bandwidth** = "Narrow"

## 9 File and data management

The R&S SMB100B uses files to save all instrument data. The instrument allows you to save and to load instrument settings, and to import and to export user data for processing in another instrument or later. Finally, you can create a screenshot of the current settings displayed on the screen and save it as a file.

This section focuses on the functions provided for managing of user data files and covers the topics listed below.

For information on the related remote control commands, see [Chapter 12.5, "Memory subsystem"](#), on page 368.

For information on how to save the displayed setting in a file, see [Chapter 9.10, "Creating screenshots of current settings"](#), on page 230.

- [About the file system](#).....202
- [Restoring an instrument configuration](#)..... 205
- [Protecting data](#).....210
- [Saving and recalling settings](#).....211
- [Accessing files with user data](#).....215
- [Exporting and importing remote command lists](#).....217
- [Loading, importing and exporting lists](#).....218
- [Using the file manager](#)..... 218
- [Transferring files from and to the instrument](#)..... 224
- [Creating screenshots of current settings](#).....230

### 9.1 About the file system

Depending on their content, this description distinguishes between system files and user files. System files and the system directory are protected and not accessible. User files contain user-defined configurations or data.

This section focuses on user files. It provides an overview of the R&S SMB100B file system and covers the following topics:

- ["Types of user data"](#) on page 202
- ["File storage location"](#) on page 203
- ["File handling"](#) on page 203
- ["File naming conventions"](#) on page 204
- ["File extensions"](#) on page 204
- ["File contents"](#) on page 204

#### Types of user data

The following data types contain user data:

- Settings or configuration files, for example, you save the current instrument settings and load these settings on another instrument.  
See [Chapter 9.4, "Saving and recalling settings"](#), on page 211.

- SCPI scripts that contain a series of commands. You can run the script to perform a task.  
See [Chapter 9.6, "Exporting and importing remote command lists"](#), on page 217.
- Externally or internally generated lists, for example, user correction lists. You can load these list files on the instrument.  
See [Chapter 9.7, "Loading, importing and exporting lists"](#), on page 218 and [Chapter 9.5, "Accessing files with user data"](#), on page 215.

Depending on the **data storage method**, user data can be:

- *Persistent*, i.e. user files that are recorded on the data storage.  
Data is preserved when instrument is powered off and can be accessed and modified subsequently.
- *Temporary*, i.e. volatile data that the instrument retains while it is powered on.  
Volatile data is immediately lost when the R&S SMB100B is switched off.

### File storage location

Without any additional measures, the R&S SMB100B stores user files on the internal memory or if connected, on a memory stick.

Both, the user directory `/var/user/` on the internal memory or the `/usb/` directory on the memory stick, can be used to **preserve** user-defined data. Any directory structure can be created.

The `/var/volatile` directory serves as a RAM drive and can be used to protect sensitive information. The data is available **temporarily**.

### Default storage location

The R&S SMB100B stores user data in the user directory.

In the file system, user directory is always indicated as `/var/user/`.

In manual control, you access this directory via the "File Manager", see [Chapter 9.8, "Using the file manager"](#), on page 218. In remote control, you can query it with the command `:SYSTEM:MMEMORY:PATH:USER?`.

To query and change the default directory used for mass storage, use the command `:MMEMORY:CDIRECTORY`.

### File handling

To *access files* and the file system of the instrument or to use the general file management functions such as copying and moving data, use the standard "File Manager" dialog.

See [Chapter 9.8, "Using the file manager"](#), on page 218.

To *transfer files* from and to the instruments or to exchange files, use one of the following alternatives:

- Connect a memory stick to one of the USB interfaces.  
The instrument automatically recognizes a connected memory stick and assigns the `/usb/` drive to it.

- Connect the instrument to a LAN.  
An instrument connected to a LAN supports two standard file transfer methods from a remote client:
  - FTP (file transfer protocol)
  - File sharing according to the SAMBA/SMB (server message block) protocol.Both file transfer methods open the folder `/user` that is the `/var/user/` folder on the instrument.  
For a step-by-step description, see [Chapter 9.9, "Transferring files from and to the instrument"](#), on page 224.
- Map a network folder or a computer to an instrument connected to a LAN.  
A mapped network folder is indicated as `/shares/<"Local Folder">`.  
For a step-by-step description, see [Chapter 9.8.4, "Mapping a network folder"](#), on page 222.

### File naming conventions

To enable files to be used in different file systems, consider the following file naming conventions:

- The *filename* can be of any length and *is case-sensitive*, i.e it is distinguished between uppercase and lowercase letters.
- All letters and numbers are permitted (numbers are, however, not permitted at the beginning of the filename).
- Avoid using special characters.
- Do not use slashes "\" and "/". These symbols are used in file paths.
- Avoid using the following filenames: `CLOCK$, CON, COM1 to COM4, LPT1 to LPT3, NUL or PRN`  
They are reserved by the operating system.

### File extensions

The R&S SMB100B distinguishes the files according to their extensions; each type of file is assigned a specific file content and also a specific file extension. The extension is usually of no consequence to you since access to the files occurs in the individual dialogs where only the relevant type of file is available. For example, files with user correction data can only be saved and loaded in the "UCOR" dialog.

See [Chapter A.2, "Extensions for user files"](#), on page 629 for an overview of the supported file extensions.

### File contents

To maintain the file size and to accelerate processing times, the instrument saves settings that deviate from their default values. Considered is also configuration data for the operating elements and lists with user data, e.g. dialog positions and a list of user correction data. However, if a list data is part of the instrument settings, a reference to this list is saved, not the list itself.

This approach ensures that the created files contain only relevant information and allows you to transfer instrument settings even between different equipped signal gen-

erators. During the recall process, the instrument interprets only the relevant settings; all non-referenced parameters are set to their preset values. Error messages indicate the settings which cannot be implemented, like referencing non-existing lists or the attempt to activate settings which are not supported by the instrument.

## 9.2 Restoring an instrument configuration

The R&S SMB100B has various options to set default settings. You can preset the R&S SMB100B to an initial state at any time as a known starting point for configurations. It is often useful as a first step during troubleshooting when unusual results arise.

The figure [Figure 9-1](#) shows the impact of the particular reset functions.

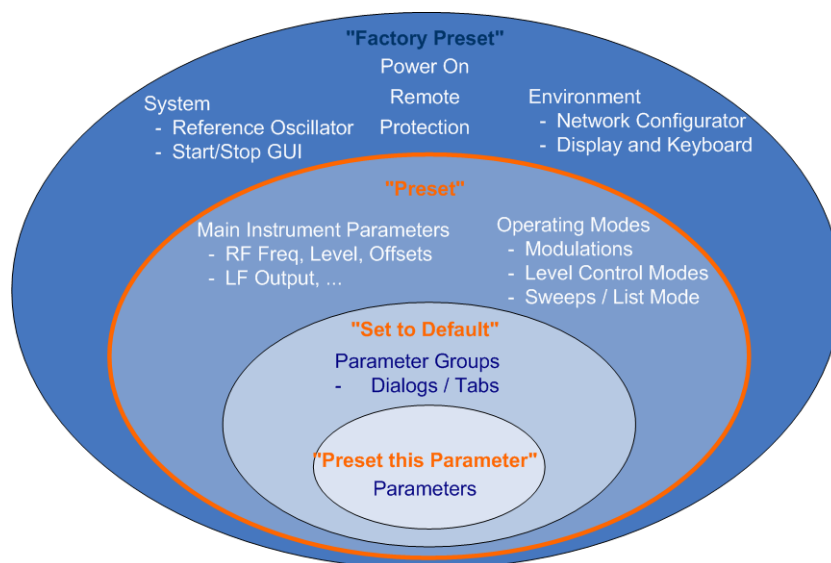


Figure 9-1: Preset functions for parameters and operating modes


### Overview of the characteristics of the preset functions

Select the preset option that most fits to your particular application:




- [Preset]  
It is the most frequent function. A preset executes a defined instrument setup to provide an initial instrument state as a basis for a new configuration. It resets all parameters and switching states including the states of inactive operating modes. Also, it resets external instruments connected to the R&S SMB100B. A preset does not change network settings, remote access settings or system settings.


- ▶ To execute a preset, press the [Preset] key at the front panel.

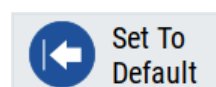

- "Set to Default"  
This function relates to individual dialogs or tabs and resets the associated settings of the corresponding dialog. All other settings are retained.
- ▶ To reset the settings, click "Set To Default".

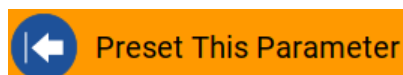

- "Preset this parameter"  
Sets a single parameter to its default value.
1. To reset an individual parameter, open its context-sensitive menu.
  2. Select "Preset This Parameter".

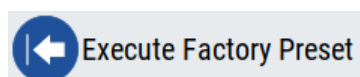

- "Factory Preset"  
A factory preset is the most profound preset function that resets almost all instrument settings, including reference oscillator, network and remote access settings.  
A factory preset does not change the following settings:
    - Security, password, and settings protected by these passwords
    - User-defined data, like setups or data lists
    - Settings that relate to an integration of the instrument in a measurement setup.
- ▶ **NOTICE!** Execute a "Factory Preset" only if it is necessary. After a "Factory Preset", the network connection to the instrument no longer exists.  
To restore the factory defaults, select "System Config" > "Setup" > "Settings" > "Factory Preset".  
See ["Execute Factory Preset"](#) on page 207.

### Presetting the instrument to a user-defined state

The reset functions set the parameters and operating modes to default values predefined by the factory. Alternatively to these default settings, you can:

Alternatively to recalling the instrument default settings, you can preset the instrument to a user-defined state as follows:

- Restore user-specific settings after a preset, see [Chapter 9.2.3, "Presetting the instrument to a user-defined state"](#), on page 208.
- Save and reload user-defined instrument states, see [Chapter 9.4.2, "Saving and recalling instrument settings"](#), on page 214.

### Marking parameters with non-default values

To check the current state of the settings concerning default values, the R&S SMB100B offers a feature that visually identifies deviations from the default values.

For more information, see [Chapter 9.2.2, "Identifying parameters with non-default values"](#), on page 208.

## 9.2.1 Preset, set to default and factory preset settings

<a href="#">Preset</a> .....	207
<a href="#">Set To Default</a> .....	207
<a href="#">Preset this Parameter</a> .....	207
<a href="#">Execute Factory Preset</a> .....	207

### Preset

Resets all parameters and switching states, and closes all opened dialogs.

#### Note:

In contrast to the [Preset] key, the SCPI commands `*RST` and `:SYSTem:PRESet` do not close open dialogs in the GUI.

Consider also the following possibilities:

- You can define the settings that are restored when you preset the instrument (see [Chapter 9.2.3, "Presetting the instrument to a user-defined state"](#), on page 208)
- You can reset the instrument to the factory state (see ["Execute Factory Preset"](#) on page 207)

See also [Table 9-1](#) that contains the key parameters that are reset by the corresponding preset functions.

Remote command:

`*RST` on page 364

### Set To Default

Resets the associated settings of the corresponding dialog or tab.

### Preset this Parameter

Restores the default value of a single parameter.

### Execute Factory Preset

Resets the instrument to its factory settings.

**Note:** "Factory Preset" retains all security settings and does not delete any user files like setups or user data.

See also [Table 9-1](#) that contains the key parameters that are reset by the corresponding preset functions.

Remote command:


`:SYSTem:FPReset` on page 367

## 9.2.2 Identifying parameters with non-default values

To recognize the current state of the settings related to their default values at the first glance, enable a function that visually identifies parameters in states different than preset.

To enable this display:

1. To open the context-sensitive menu, touch and hold the screen anywhere in the GUI of the R&S SMB100B.
2. Select "Mark All Parameters Changed from Preset".

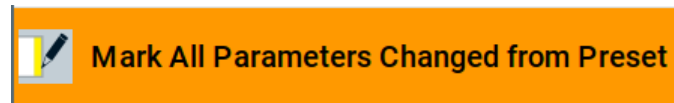

If enabled, marks the parameters that deviate from their default values.

**Example:**

Frequency	4.000 000 000 000 GHz		
Offset	10.000 000 kHz	Multiplier	1.000
User Variation			
Variation Active	<input checked="" type="checkbox"/>	Variation Step	1.000 000 000 MHz

**Figure 9-2: Marked parameters show that the value deviates from its default**

Frequency = changed (default = 1 GHz)  
 Offset = changed (default = 0 kHz)  
 Multiplier = unchanged  
 Variation active = changed (default = disabled)  
 Variation step = unchanged

## 9.2.3 Presetting the instrument to a user-defined state

You can define the settings that are restored when you preset the instrument.

1. Configure the settings as required.
2. Save them as described in [Chapter 9.4.2, "Saving and recalling instrument settings"](#), on page 214:
  - a) Save the settings as a file with the predefined filename `UserPreset.savrcltxt`.
  - b) Save this file in the directory `/var/user/`.

The filename `UserPreset.savrcltxt` and the directory `/var/user/` are mandatory.



3. Press the [Preset] key.

When operating the instrument remotely, send the \*RST command.

The instrument restores these user-defined settings. An "Info" message appears and confirms loading of a file with user-defined preset settings.

## 9.2.4 Reference

See [Table 9-1](#) for an overview of the main generator settings that are affected by the corresponding preset functions. While the regular [Preset] key primarily resets the signal relevant parameters of the instrument, the "Factory Preset" affects almost all instrument settings.

For information on the default values of further parameters, see the description of the corresponding remote commands.

**Table 9-1: Key parameters affected by preset and factory preset**

Parameter	Preset value	Preset	Factory Preset
RF frequency	1 GHz	x	x
RF level (RF output)	off	x	x
Offsets	0	x	x
Modulation state	off	x	x
LF output state	off	x	x
Sweep state	off	x	x
List mode state	off	x	x
Reference frequency settings	-	-	x
Network settings	-	-	x
Hostname	-	-	x
GPIB address	-	-	x
Start or stop display update	-	-	x
Display and keyboard settings	-	-	x
Password and password-protected settings	-	-	-
Security settings	-	-	-
User files (setups, user correction, etc.)	-	-	-
HUMS	off	-	x

## 9.3 Protecting data

During operation, the R&S SMB100B saves user data permanently in the user directory, see ["File storage location"](#) on page 203.

**To protect any classified data and to avoid saving any sensitive data on the R&S SMB100B permanently, you have the following options:**

- Activate the **volatile mode**. This mode redirects user data to the volatile memory, see ["Volatile Mode"](#) on page 263.  
The internal memory is write-protected.  
Once you power off the instrument for at least five minutes, all volatile memory modules lose their contents.  
To avoid losing this data, connect an **external memory device**, for example, a USB flash drive.  
See also:
  - ["Default storage location"](#) on page 203
  - ["Volatile Mode"](#) on page 263
  - [Chapter 9.9.4, "Using a USB storage device for file transfer"](#), on page 229
- If the R&S SMB100B is equipped with the **removable memory** R&S SMBB-B85 and an SD card is inserted:
  - If the volatile mode is disabled (default setting) the R&S SMB100B **saves user data permanently and only on this storage medium**.  
You can access data saved on the removable memory just as data saved in the `/var/user/`.
  - If the volatile mode is enabled, the R&S SMB100B redirects user data to the **volatile memory** (SDRAM).  
The volatile memory loses its contents when you power off the instrument.
- Save user files **temporarily in the `/var/volatile` directory**, which remains available only until the instrument is turned off.  
You can access data in the volatile memory just as data that is saved permanently in the `/var/user/`.  
See also [Chapter 9.8.3, "Displaying all saved files"](#), on page 222.

### To remove the $\mu$ SD card

This step-by-step instruction holds for R&S SMB100B microwave instruments only.

1. **NOTICE!** You can damage the instrument and lose data when removing the  $\mu$ SD card during operation.  
Switch off the R&S SMB100B.  
See ["To shut down the product"](#) on page 29.
2. Remove the  $\mu$ SD card from the instrument.

For detailed information on how to protect the instrument and to protect sensitive data from unauthorized access, refer to the document Instrument Security Procedures.

## 9.4 Saving and recalling settings

You can save and recall instrument settings, user settings and other related data for the following use cases:

- Reload or repeat a specific signal generation task on the instrument.
- Transfer a specific configuration of your instrument to another instrument, for example in multi-instrument setups.
- Save or load complete instrument settings to or from a file.

### Save or recall the complete instrument settings

Two different methods are available for managing *complete instrument settings*:

- Immediate (quick) Save/Recall  
A defined set of instrument settings are saved or recalled quickly in just one step, without defining a filename or storage location. This function enables a fast switching between different instrument settings.
- Save/Recall in files with user-defined names  
The defined set of instrument settings are saved to a definable storage location. The file extension is `*.savrc1.txt`.  
Settings files created in this way are visible in the file system and accessible with the supported methods for file handling.


In the general case, a recall process replaces the instruments settings with the saved values. An exception is the frequency and level settings. During recall of the instrument settings, it is possible to retain the current settings or to overwrite them with the saved values.

### 9.4.1 Save/Recall settings

Access:

1. Select "System Config > Save/Recall".

2. Select "Operation Mode" > "Save" or "Recall" to open the corresponding settings.

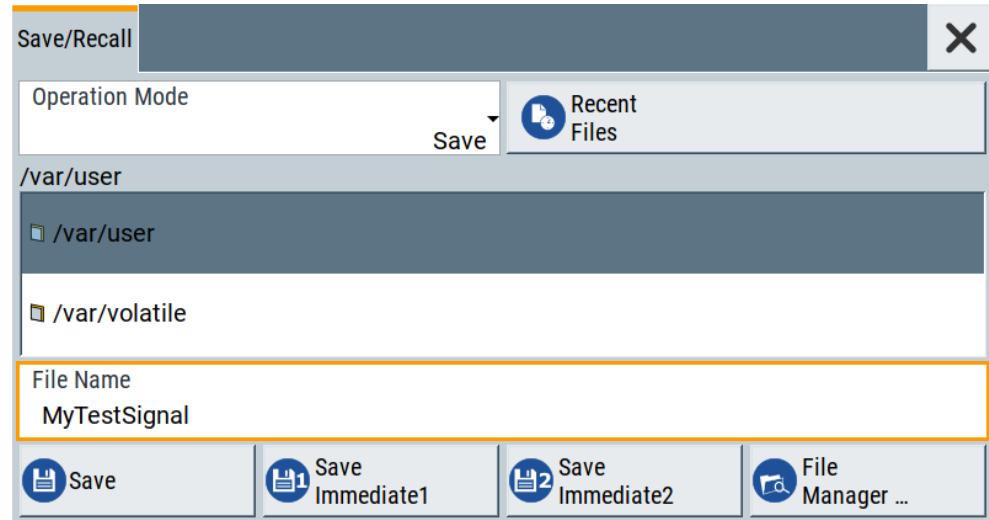

The settings for both operation modes are similar and related.

#### Settings:

Operation Mode.....	212
Directory, File List and Filename.....	212
Recent files.....	213
Show SCPI List.....	213
SCPI List.....	213
Save.....	213
Save Immediate x.....	213
Exclude Frequency.....	213
Exclude Level.....	213
Recall.....	214
Recall Immediate x.....	214
File Manager.....	214

#### Operation Mode

Accesses the settings for storing ("Save") and loading ("Recall") of the instrument settings. Also, you can import SCPI-Files ("SCPI-Import") or export SCPI files ("SCPI-Export").

See [Chapter 9.6, "Exporting and importing remote command lists"](#), on page 217.

#### Directory, File List and Filename

##### Note:

You access this generic standard function each time you perform one of the following:

- Save or load (settings) files
- Define a folder in that these files are saved
- Navigate through the file system.

The dialog name changes depending on the context. The provided functions are self-explanatory and similar.

Use the settings for example as follows:

- To navigate through the file system, use the directory tree.
- To create a file, load and save files, use the dedicated functions "New", "Select", [Save](#), and [Recent files](#).
- To access the general data list editor, use the "Edit" button (see also [Chapter 6.7, "List editor"](#), on page 147).
- To perform standard file management functions, like create directories, move, copy, delete files and/or directories, use the standard "File Manager" function (see [Chapter 9.8, "Using the file manager"](#), on page 218).

Remote command:

To list all files in a directory:

[:MMEMory:CDIRectory](#) on page 373

[:MMEMory:CATalog?](#) on page 372

[\[:SOURce\]:CORRection:CSET:CATalog?](#) on page 462

### Recent files

Displays the files last used.

### Show SCPI List

Opens the "SCPI List", which lists the current settings of the R&S SMB100B as SCPI commands.

The R&S SMB100B provides this function for [Operation Mode > SCPI-Export](#).

### SCPI List

Provides a list of all SCPI commands corresponding to the current instrument settings.

### Save

Saves the current instrument settings under the defined filename.

Remote command:

[:MMEMory:STORe:STATe](#) on page 377

### Save Immediate x

Stores the current instrument setting in one of the intermediate memories.

These instrument settings are retained until a different instrument setting is stored in the intermediate memory. When the instrument is switched off, the contents of the intermediate memories are retained.

Remote command:

[\\*SAV](#) on page 365

### Exclude Frequency

The current frequency is retained when a stored instrument setting is loaded.

Remote command:

[\[:SOURce<hw>\]:FREQuency\[:CW|FIXed\]:RCL](#) on page 467

### Exclude Level

The current level is retained when a stored instrument setting is loaded.

Remote command:

[\[:SOURce<hw>\]:POWER\[:LEVel\]\[:IMMediate\]:RCL](#) on page 513

### Recall

Restores the selected configuration.

During recall, the instrument considers all related settings, for example sweeps in active state or lists. An error message indicates the settings which cannot be implemented.

Remote command:

[:MMEMory:LOAD:STATe](#) on page 375

### Recall Immediate x

Loads the selected configuration from one of the intermediate memories. A message appears if no instrument configuration is stored in this memory.

Remote command:

[\\*RCL](#) on page 364

### File Manager

Accesses the "File Manager" dialog, see [Chapter 9.8, "Using the file manager"](#), on page 218.

## 9.4.2 Saving and recalling instrument settings

Instrument settings can be saved to a file and loaded again later, so that you can repeat the tests with the same settings.

### To access and recall instrument setups quickly

- ▶ Assign the appropriate action to the [**★** (User)] key.  
See [Chapter 10.2.4, "How to assign actions to the \[\*\*★\*\* \(User\)\] key"](#), on page 248.

### To save and recall instrument settings

1. Select "System Config > Save/Recall" > "Operation Mode" > "Save".
2. Select "Save Immediate 1".  
The instrument saves its settings in the intermediate memory 1. The filename and the storage location cannot be changed.
3. Adapt the instrument settings as required. Select "Save Immediate 2"
4. To restore the settings, select the "Operation Mode > Recall"
5. Select "Recall Immediate 1"  
The instrument is restored to the previous state.
6. Select "Recall Immediate 2" to switch to the settings saved in the second file.

**To save complete instrument settings**

1. Select "System Config > Save/Recall" > "Operation Mode" > "Save".
2. In the file selection dialog, select a filename and storage location for the settings file.
3. Select "Save".

A file with the defined name and path and the extension \*.savrc1.txt is created.

**To restore an instrument configuration**

Save the configuration as described in ["To save complete instrument settings"](#) on page 215.

1. To restore settings, select "System Config > Save/Recall" > "Operation Mode > Recall".
2. To retain the current frequency and level settings, enable "Save"/"Recall" > "Exclude Frequency"/"Exclude Level",
3. In the file select dialog, select the filename and storage location of the settings file.

The settings are restored, but the frequency and level settings are retained. You can repeat the signal generation with the same settings.

See also [Chapter 9.2.3, "Presetting the instrument to a user-defined state"](#), on page 208.

## 9.5 Accessing files with user data

Signal generation in list mode, the generation of pulse train signals or applying user correction values use data from list files. Whenever a list file is required as a data source, the instrument provides direct access to the standard "File Select" function. This function enables you to select, create and edit the list files.


### 9.5.1 File select settings

The "File Select" dialog opens automatically each time the signal generation requires list file as data source.

**To access a loadable data list file**

1. Select "Sweep" > "List Mode Data" > "List Mode" = "Data".

A file select dialog for loading, creating and modifying a file opens.

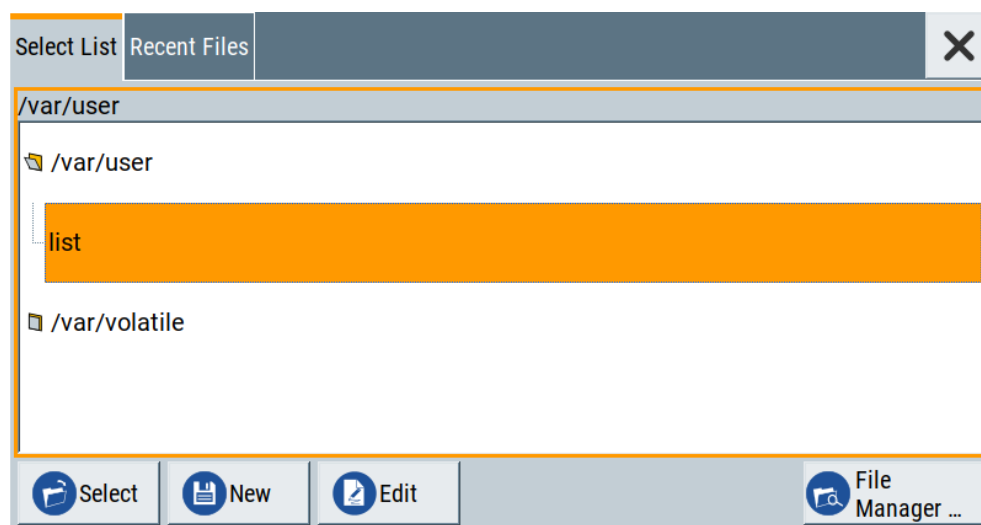

**Tip:** The name of the dialog is context-sensitive and differs depending on the particular function this dialog is from. However, the provided functions are similar.

2. To load an existing file:  
Navigate through the file system.  
Select the file and confirm with "Select".
3. To create a file, for example if there is no data list file specified:  
Navigate through the file system.  
Select "New" and specify the filename.  
A new empty file is created and saved in the selected folder.
4. To edit an existing or newly created file:  
Navigate through the file system.  
Select the file and select "Edit".  
The standard "Data List Editor" dialog opens
5. Edit the file content.  
Confirm with "Save".

#### Settings:

<a href="#">Directory, File List and Filename</a> .....	216
<a href="#">Functions for handling of data lists</a> .....	217
<a href="#">Recent files</a> .....	217
<a href="#">File Manager</a> .....	217

#### Directory, File List and Filename

##### Note:

You access this generic standard function each time you perform one of the following:

- Save or load (settings) files
- Define a folder in that these files are saved
- Navigate through the file system.



The dialog name changes depending on the context. The provided functions are self-explanatory and similar.

Use the settings for example as follows:

- To navigate through the file system, use the directory tree.
- To create a file, load and save files, use the dedicated functions "New", "Select", Save, and Recent files.
- To access the general data list editor, use the "Edit" button (see also [Chapter 6.7, "List editor"](#), on page 147).
- To perform standard file management functions, like create directories, move, copy, delete files and/or directories, use the standard "File Manager" function (see [Chapter 9.8, "Using the file manager"](#), on page 218).

Remote command:

To list all files in a directory:

`:MMEMory:CDIRectory` on page 373

`:MMEMory:CATalog?` on page 372

`[ :SOURce ] :CORRection:CSET:CATalog?` on page 462

### Functions for handling of data lists

Provided are the following standard functions for file handling:

"Select"	Select and load the file. Remote command: <code>[ :SOURce&lt;hw&gt; ] :LIST:SElect</code> on page 495 <code>[ :SOURce&lt;hw&gt; ] :PULM:TRAI:n:SElect</code> on page 446 <code>[ :SOURce&lt;hw&gt; ] :CORRection:CSET [ :SElect ]</code> on page 461
"New"	Creates file with the specified "Filename". To confirm, select "OK"; use "Cancel" to undo the operation. To edit the file content, select "File Select > Edit".
"Edit"	Accesses the "Data List Editor" and loads the selected file for editing

### Recent files

Displays the files last used.

### File Manager

Accesses the "File Manager" dialog, see [Chapter 9.8, "Using the file manager"](#), on page 218.

## 9.6 Exporting and importing remote command lists

To set specific instrument settings or perform tasks automatically, you can create scripts or import scripts that contain the settings in the form of remote control command sequences.

The R&S SMB100B also offers a SCPI macro recorder with code generator to record manual settings and create an executable script.

Completed scripts are saved in files and possibly converted to different formats, depending on the language of the source code.

The R&S SMB100B supports the following commonly used languages:

- Plain SCPI: \*.txt
- MATLAB: \*.m
- NICVI: \*.c
- Python: \*.py

It is also possible to convert the SCPI command list to a user-specific language.

How to: [Chapter 11.13, "To automate tasks with remote command scripts"](#), on page 338

## 9.7 Loading, importing and exporting lists

The R&S SMB100B provides built-in editors for creating list files, for example for the list mode or lists with user correction data. You can also create or evaluate them with an external application. The instrument provides interfaces with the following functionality:

- Import and export list files in a standard ASCII format file

Lists are saved and loaded in the corresponding dialogs. For example, the user correction data list is created and saved in the "User Correction" dialog.

## 9.8 Using the file manager

The "File Manager" is a tool similar to a standard Windows Explorer. It helps you manage mass storage media and files saved on the R&S SMB100B.


You can perform the following tasks:

- Copying multiple files from disk to other media  
See [Chapter 9.9, "Transferring files from and to the instrument"](#), on page 224
- Copying files into another directory  
See [Cut, Copy&Paste and Delete](#)
- Renaming and deleting files
- Creating directories  
See [Create New Directory](#)
- Mapping shared network folders  
See [Chapter 9.8.4, "Mapping a network folder"](#), on page 222
- Displaying saved files  
See [Chapter 9.8.3, "Displaying all saved files"](#), on page 222

Access:

- ▶ Select "System Config > Save/Recall" > "File Manager".

**Tip:** Each "Save/Recall" dialog and each "File Select" dialog provides a quick access to the "File Manger".

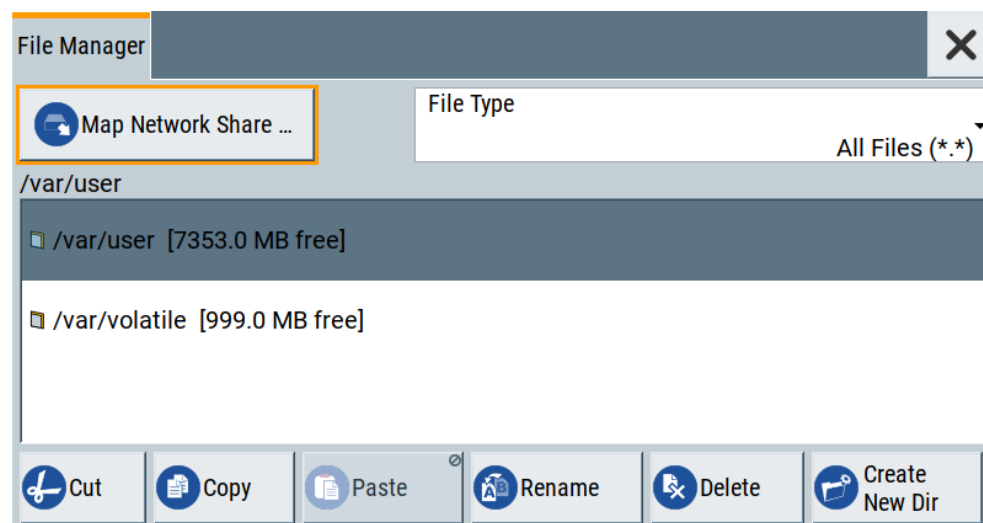

The "File Manager" dialog provides all standard functions required for file management. It displays the contents of the selected folder on the R&S SMB100B and provides functions to rename, delete, copy, or move individual files.

### 9.8.1 File manager settings

Access:

- ▶ Select "System Config > Save/Recall" > "File Manager".

**Settings:**

Map Network Share.....	219
File Type.....	219
Directory and Filename.....	220
Cut, Copy&Paste and Delete.....	220
Rename.....	220
Create New Directory.....	220

#### Map Network Share

Opens a dialog where you can map one or more network folders. See [Chapter 9.8.2, "Map network share settings"](#), on page 220.

See also [Chapter 9.8.4, "Mapping a network folder"](#), on page 222.

#### File Type

Selects the file type to be listed. If a file type with a specific file extension is selected, only files with this extension are listed.

See [Chapter A.2, "Extensions for user files"](#), on page 629 for an overview of the supported file extensions.

**Directory and Filename**

Selects the directory in which the file to be deleted or copied is located. The dialog lists all files in this directory. Selected files are highlighted. The path is indicated above the directory tree.

Unlike the "Save/Recall" and "File Select" dialogs, the "File Manager" displays the full filenames including extensions.

Remote command:

[:MMEMory:CDIRectory](#) on page 373

**Cut, Copy&Paste and Delete**

Standard file management functions.

Before a file is deleted, you have to confirm the delete operation.

Remote command:

[:MMEMory:DELeTe](#) on page 375

[:MMEMory:COpy](#) on page 373

**Rename**

Renames the selected file or directory.

Remote command:

[:MMEMory:MOVE](#) on page 376

**Create New Directory**

Creates a folder and opens an edit dialog box to enter name and path (absolute or relative to the current directory) of the new folder.

Remote command:

[:MMEMory:MDIRectory](#) on page 376

## 9.8.2 Map network share settings

Access:

- ▶ Select "System Config > Save/Recall" > "File Manager" > "Map Network Share".

The "Map Network Share" dialog provides settings that are similar to the standard Windows Explorer function "Map network drive". These settings help you to create up to 10 "shortcuts" to shared folders or computers in the network.

The dialog displays a list of current mapped network folders. The directory tree of the "File Manager", "Save/Recall", and "File Select" dialogs indicate a mapped network folder as `/shares/<"Local Folder">`.

Map Network Share			
Network Folder	Local Folder	User Name	Reconnect at Startup
//10.124.0.166/user	setups	instrument	Off
Network Folder //10.124.0.166/user		Local Folder setups	
User Name instrument		Password *****	
Reconnect at Startup <input type="checkbox"/>			
Connect		Change	
		Disconnect	

See also [Chapter 9.8.4, "Mapping a network folder"](#), on page 222.

#### Settings:

<a href="#">Network Folder</a> .....	221
<a href="#">Local Folder</a> .....	221
<a href="#">User Name</a> .....	221
<a href="#">Password</a> .....	221
<a href="#">Reconnect at Startup</a> .....	221
<a href="#">Connect</a> .....	222
<a href="#">Change</a> .....	222
<a href="#">Disconnect</a> .....	222

#### Network Folder

Enter the path of the folder or computer, e.g. //<IP Address>/user or //<server name>/user.

#### Local Folder

Enter a letter or an alias name to describe the folder.

In the directory tree, a mapped network folder is indicated as /shares/<"Local Folder">.

#### User Name

Enter a user name of a user that has the permission to access the selected network folder.

#### Password

Enter the password of the selected user.

#### Reconnect at Startup

Enables reconnecting every time you start up the instrument.

**Connect**

Triggers the instrument to prove the credential and to map (i.e. connect) the selected network folder or computer to the instrument.

You can map up to 10 network folders.

**Change**

Applies the changes.

**Disconnect**

Disconnects the network drive.

### 9.8.3 Displaying all saved files

**To display all files on the internal memory**

1. Select "System Config > Save/Recall" > "File Manager".
2. Navigate to `/var/user/`.

**To display all files on a connected USB flash drive**

1. Select "System Config > Save/Recall" > "File Manager".
2. Navigate to `/usb/`.

**To display all files in the volatile memory**

1. Select "System Config > Save/Recall" > "File Manager".
2. Navigate to `/var/volatile/`.

### 9.8.4 Mapping a network folder

Possibly you would like to transfer instrument or user settings to another R&S SMB100B, distribute waveform files to several instruments or you have to access frequently the same network drive. In these cases, on a R&S SMB100B connected to a LAN you can create a shortcut to this network folder or this computer.

How to: [Chapter 3.1.7, "Connecting to LAN"](#), on page 25

To map a network folder, proceed as follows:

1. On the computer or the network folder you want to map, enable remote access. You can specify a list of users allowed for remote access. The remote access settings depend on the operating system the remote computer is using. For step-by-step instructions, refer to the documentation of the particular operating system.
2. On the R&S SMB100B, [enable file transfer via SMB \(samba\)](#).

3. Select "System Config" > "Setup" > "Remote Access" > "Network" to configure the following network settings:
  - a) Select "Address Mode" > "Auto (DHCP)".
  - b) Check that the "DNS Suffix" and "DNS Server" are correct.
4. In the "Save/Recall" dialog, select "File Manager" > "Map Network Share".
5. In the "Map Network Share" dialog, select:
  - a) In the "Network Folder" field, enter `//<IP Address>/user` or `//<Server Name>/user`.
  - b) In the "Local Folder" field, enter an alias name, e.g. *setups*.
  - c) Enter the "User Name" and "Password" of a user with a remote access permission to the selected network folder.
  - d) If necessary, enable "Reconnect at Startup".
  - e) Select "Connect".


The selected network folder is mapped to your instrument. The list of mapped network folders is updated.

Network Folder	Local Folder	User Name	Reconnect at Startup
//10.124.0.166/user	setups	instrument	Off

Network Folder	Local Folder
//10.124.0.166/user	setups
User Name	Password
instrument	*****
Reconnect at Startup	<input type="checkbox"/>

6. Close the "Map Network Share" dialog.

The navigation tree in the "File Manager" dialog displays the mapped network folder as `/shares/Setups`.

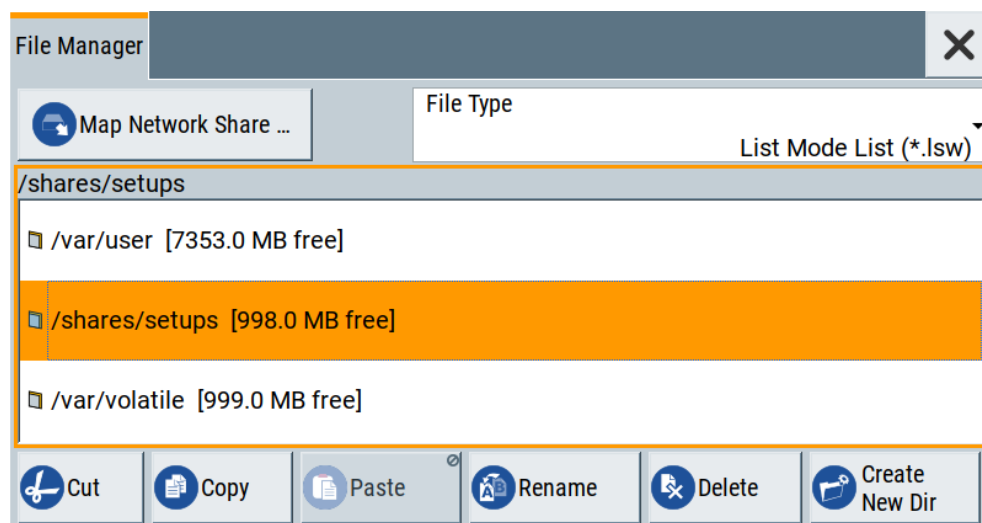

If the connection does not succeed, consider to check the following:

- Is the network folder or computer you try to map turned on?
- Is the network folder or computer enabled for remote access?
- Does the selected user name have the necessary permissions?

See also [Chapter 9.9.5, "Using a file server for test files exchange"](#), on page 229.

## 9.9 Transferring files from and to the instrument

As explained in ["File handling"](#) on page 203, you access the file system of the R&S SMB100B via one of the following ways:

- Via the built-in "File Manager"  
See [Chapter 9.8, "Using the file manager"](#), on page 218.
- On an instrument connected to a LAN:
  - Via one of the standard functions FTP or SMB (samba)  
See [Chapter 9.9.2, "Accessing the file system using FTP"](#), on page 226 and [Chapter 9.9.3, "Accessing the R&S SMB100B file system using SMB \(Samba\)"](#), on page 227
  - Via mapped network drives  
See [Chapter 9.8.4, "Mapping a network folder"](#), on page 222.
- Via a connected USB storage device  
See [Chapter 9.9.4, "Using a USB storage device for file transfer"](#), on page 229

Mainly because of security reasons, the access to the file system of your R&S SMB100B can be denied, because one or all these access methods are deliberately disabled. Access to the file system via LAN and/or USB requires that the corresponding service is enabled and a write access to the file system is enabled. Refer to [Chapter 9.9.1, "Removing file system protection"](#), on page 225 for description of the required steps.



This section provides an introduction to the topic. For comprehensive information, refer to the application note [1GP72: Connectivity of Rohde&Schwarz Signal Generators](#).

- [Removing file system protection](#)..... 225
- [Accessing the file system using FTP](#)..... 226
- [Accessing the R&S SMB100B file system using SMB \(Samba\)](#)..... 227
- [Using a USB storage device for file transfer](#)..... 229
- [Using a file server for test files exchange](#)..... 229

### 9.9.1 Removing file system protection

Before you try to access the file system via FTP, SMB (samba) or USB, fulfill the following:

- Disable write protection on the file system
- Enable the corresponding service or interface

#### To enable write permission on the file system

1. Select "System Config" > "Setup" > "Security" > "Security".
2. Select "General" > "Disk & Memory".
3. Enable "Volatile Mode".
4. Enter the "Security Password".  
The default password is 123456. For more information, see [Chapter 10.4, "Using the security settings"](#), on page 259.  
The R&S SMB100B requests a reboot.
5. Confirm the request.  
The system reboots. The enabled settings are active.

#### To enable file transfer over FTP

1. Select "System Config" > "Setup" > "Security" > "Security".
2. Select "LAN Services" > "Common Services" > "LAN" > "On".
3. Enable "FTP"
4. Enter the "Security Password".  
The default password is 123456. For more information, refer to [Chapter 10.4, "Using the security settings"](#), on page 259.
5. Select "Accept".

#### To enable file transfer over SMB (samba)

1. Select "System Config > Setup > Security > Security > LAN Services"
2. Enable "LAN Interface"
3. Select "Samba Services".

4. Enable the "SMB 1.0/2.0 Client".
5. Enable the "SMB 1.0/2.0 Server".
6. Enter the "Security Password".  
The default password is *123456*. For more information, see [Chapter 10.4, "Using the security settings"](#), on page 259.
7. Select "Accept".

#### To enable file transfer over USB

1. Select "System Config > Setup > Security > Security > General"
2. Select "Disk & Memory".
3. Enable "USB Storage"
4. Enter the "Security Password".  
The default password is *123456*. For more information, see [Chapter 10.4, "Using the security settings"](#), on page 259.
5. Select "Accept".

## 9.9.2 Accessing the file system using FTP

If the R&S SMB100B is connected to a LAN, you can use file transfer protocol (FTP) to access the file system and to transfer files from and to the instrument.

How to: [Chapter 3.1.7, "Connecting to LAN"](#), on page 25

#### To access the file system over FTP

We assume that the instrument and the remote PC are connected to a LAN.

1. [Enable file transfer via FTP](#)
2. [Enable write permission on the file system](#)
3. On the remote PC, start the Windows Explorer.
4. In the address field, enter `ftp://<"IP Address" of the Instrument>`, e.g. `ftp://10.124.0.166`.

**Tip:** The R&S SMB100B indicates its IP address on the home screen.

A log-on dialog opens and requests a password.

The default user name and password is *instrument*.

#### Tip:


##### Default password

The FTP and SAMBA file access use the user "instrument" with default password "instrument".

We recommend that you change this password in the "Setup > Security > Password Management > Change User Password" dialog before connecting the instrument to the network.

See [Chapter 10.4.4, "Password management"](#), on page 270.


5. Enter the password to access the `user` directory.  
The `user` directory corresponds to the `/var/user/` directory of the instrument.

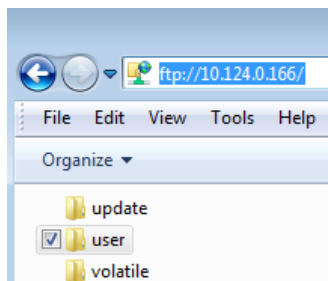

There, you can perform standard functions like creating directory, or saving files.

6. In the `user` directory, create a directory, e.g. `test ftp`.
7. Select "System Config > Save/Recall".  
Open the `/var/user/` directory.

The dialog displays the `/var/user/test ftp` directory.

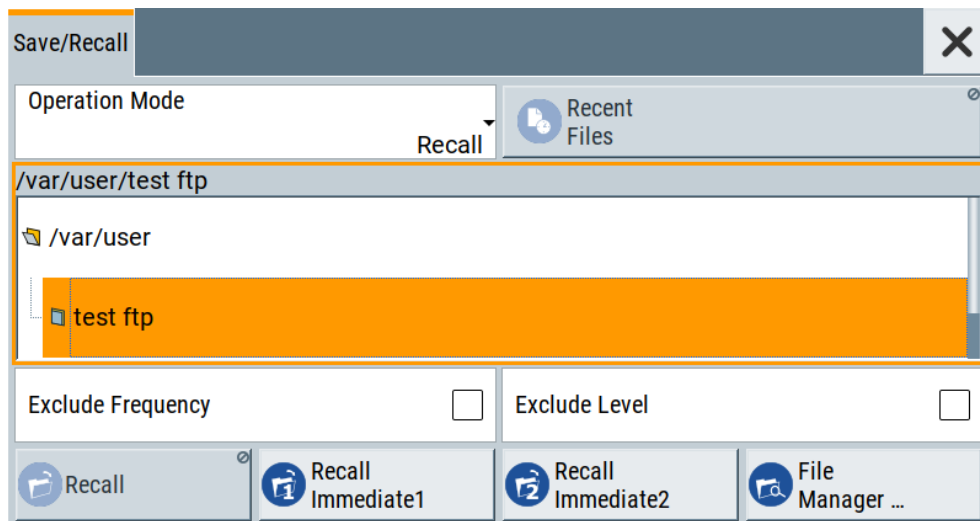

### 9.9.3 Accessing the R&S SMB100B file system using SMB (Samba)

The SMB (Samba) protocol is an alternative way to access the file system of the instrument from a remote PC. This protocol works if both the instrument and the PC are connected to a LAN.

How to: [Chapter 3.1.7, "Connecting to LAN"](#), on page 25


#### To access the file system over SMB

We assume that the instrument and the remote PC are connected to a LAN.

1. [Enable file transfer via FTP](#)

2. [Enable write permission on the file system](#)
3. On the remote PC, start the Windows Explorer.
4. In the address field, enter `\\<"IP Address" of the Instrument>`, e.g. `ftp://10.124.0.166`.

**Tip:** The R&S SMB100B indicates its IP address on the home screen.

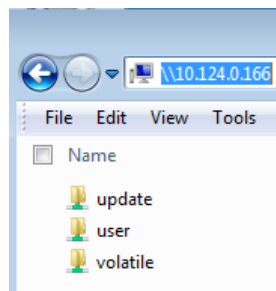

The `user` directory corresponds to the `/var/user/` directory of the instrument; the `volatile` directory - to the `/var/volatile` directory.

### To map the R&S SMB100B as a network drive to the remote PC

We assume that the instrument and the remote PC are connected to a LAN.

1. [Enable file transfer via SMB \(Samba\)](#)
2. [Enable write permission on the file system](#)
3. On the remote PC, start the Windows Explorer. Open the "Map Network Drive" dialog.
  - a) Select a valid "Drive", e.g. *W*.
  - b) In the "Folder" field, enter `\\<"IP Address" of the Instrument>/user` or `\\<"Hostname" of the Instrument>/user`.  
For example: `\\10.124.0.166/user` or `\\SMB100B-102030/user`.  
**Tip:** The R&S SMB100B indicates its IP address on the screen.
  - c) Select "Finish".

A log-on dialog opens and requests a user name and a password.

#### **Tip:**

##### **Default password**


The FTP and SAMBA file access use the user "instrument" with default password "instrument".

We recommend that you change this password in the "Setup > Security > Password Management > Change User Password" dialog before connecting the instrument to the network.

See [Chapter 10.4.4, "Password management"](#), on page 270.

4. Enter the user name and the password of your instrument.

The `/var/user/` directory of the instrument is mapped to and displayed as a network drive of the remote PC.

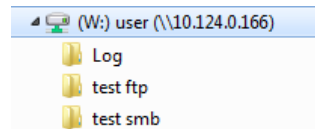

You can access the files in the `/var/user/` directory, perform standard function like creating directory, or saving files.

### 9.9.4 Using a USB storage device for file transfer

Alternatively to the file transfer possibility via LAN, you can use a USB storage device for direct file transfer from and to the instrument.

We recommend that you transfer files with user data (like lists or instrument setup files) to the instrument, rather than load and play them from a connected USB storage device.

#### To transfer a file with user data to the instrument

1. Connect a USB storage device, for example a USB memory stick to one of the USB interfaces of the instrument.  
The R&S SMB100B recognizes the connected USB storage device automatically.
2. [Enable file transfer via USB](#)
3. [Enable write permission on the file system](#)
4. Select "System Config > Save/Recall".  
The dialog displays the `/var/user/` directory and the `/usb/` drive.
5. In the "Save/Recall" dialog, select "File Manager".
6. In the directory tree, navigate to the `/usb/` drive.  
Select the required file with user data.
7. Select "Copy".
8. In the directory tree, navigate to the `/var/user/` directory.  
Select "Paste".  
The file with user data is transferred to the instrument.

### 9.9.5 Using a file server for test files exchange

You can use a central file storage location like a file server in your company network to save setup files, SCPI scripts, application programs, or waveform files on it. Usually, you would like to distribute the files to several instruments. If the R&S SMB100Bs are connected to a LAN, you can create a shortcut on the instruments to the file server.

**To access the file server**

1. On each R&S SMB100B, map the required directory of the file server to the instrument.  
Perform the steps described in [Chapter 9.8.4, "Mapping a network folder"](#), on page 222.
2. On each R&S SMB100B, use the same alias name for the directory of the file server, i.e. enter the same "Local Folder" (in this example `Setups`).

On any of the R&S SMB100B, you access the file server directly from the "File Manager" and under the same name, e.g. `/shares/Setups`.

An extra advantage in remote control is that the same application program would control the instruments.

For example, use the remote control command `MMEemory:CDIRectory "/shares/Setups"` to set the default directory for mass storage.

## 9.10 Creating screenshots of current settings


The save/recall function enables you to save current settings in a file. To document the most important settings for a performed signal generation, you can also save a hardcopy of the current display.

- [Hardcopy settings](#)..... 230
- [Creating a hardcopy of the display](#).....234

### 9.10.1 Hardcopy settings

Access:

- ▶ Select "System Config" > "Setup" > "User Interface" > "Hardcopy".

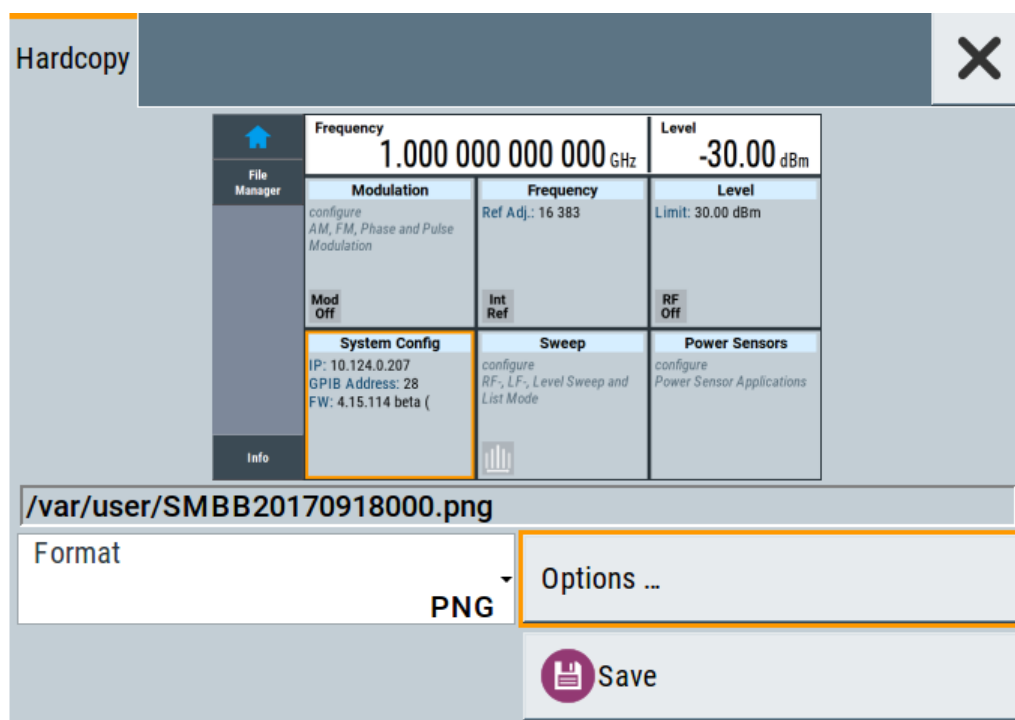

The remote commands required to define these settings are described in [Chapter 12.11, "HCOPY subsystem"](#), on page 398.

#### Settings:

File.....	231
Format.....	232
Options.....	232
Save.....	232
Hardcopy Options > Common.....	232
L Automatic Naming.....	232
L Format.....	232
L Region.....	232
Hardcopy Options > Automatic Naming.....	233
L Path.....	233
L Clear Path.....	233
L Prefix, Year, Month, Day.....	233
L Current Auto Number.....	234

#### File...

In "Automatic Naming > Off" mode, accesses the standard file select dialog for selecting the filename and folder the hardcopy is stored in.

If you have enabled "Automatic Naming", the instrument displays the automatically generated filename.

Remote command:

`:HCOPY:FILE[:NAME]` on page 400

**Format**

Selects the output file format, for example \*.bmp, \*.jpg\*.xpm and \*.png.

Remote command:

:HCOPY:IMAGe:FORMat on page 400

:HCOPY:DEVIce:LANGUage on page 400

**Options...**

Accesses [Hardcopy Options](#) dialog.

**Save**

Saves a hardcopy of the current display as a file.


Remote command:

:HCOPY[:EXECute] on page 401

**Hardcopy Options > Common**

Access: select "Hardcopy > Options... > Common".

With the provided settings, you can customize the file format and the syntax of the automatically assigned filename.

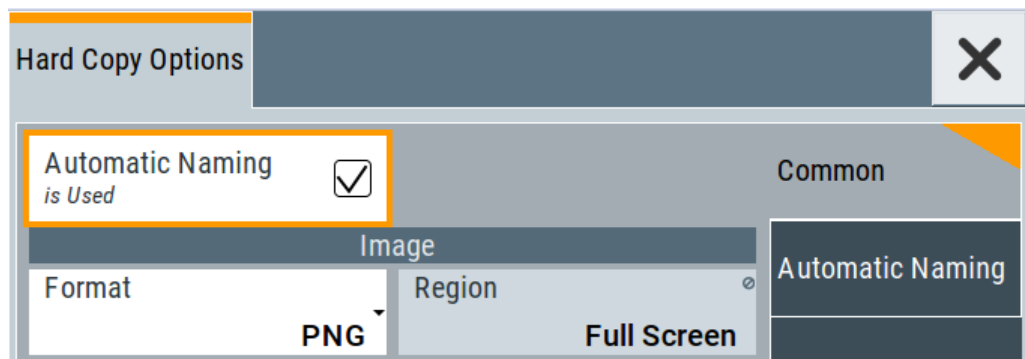**Automatic Naming ← Hardcopy Options > Common**

If enabled, creates the output filenames automatically according to the rules set with the [Hardcopy Options > Automatic Naming](#) settings.

Remote command:

:HCOPY:FILE[:NAME]:AUTO:STATE on page 402

**Format ← Hardcopy Options > Common**

Selects the output file format, for example \*.bmp, \*.jpg\*.xpm and \*.png.

Remote command:

:HCOPY:IMAGe:FORMat on page 400

:HCOPY:DEVIce:LANGUage on page 400

**Region ← Hardcopy Options > Common**

Displays the snapshot area.

Remote command:

:HCOPY:REGion on page 400



**Hardcopy Options > Automatic Naming**

Access: select "Hardcopy > Options... > Automatic Naming".

Provided are the following settings:

**Path... ← Hardcopy Options > Automatic Naming**

Selects the directory.

**Note:** To select the destination path, specify also a filename. Otherwise an error message is displayed and selection is canceled.

Remote command:

`:HCOPY:FILE[:NAME]:AUTO:DIRectory` on page 401

**Clear Path ← Hardcopy Options > Automatic Naming**

Deletes all image files with extensions \*.bmp, \*.jpg, \*.png and \*.xmp in the directory set for automatic naming.

Before the command is executed, a warning message prompts you to confirm the deletion of the files.

Remote command:

`:HCOPY:FILE[:NAME]:AUTO:DIRectory:CLEar` on page 402

**Prefix, Year, Month, Day ← Hardcopy Options > Automatic Naming**

Determines the rules for "Automatic Naming".

Per default, the automatically generated filename is composed of:

`<Path>/<Prefix><YYYY><MM><DD><Number>.<Format>`, where Y, M and D mean year, month, Day; Number is the [Current Auto Number](#).

You can activate or deactivate each component separately.

The "Resulting filename" indicates the current filename syntax.

Remote command:

`:HCOPY:FILE[:NAME]:AUTO[:FILE]:PREFix` on page 403

`:HCOPY:FILE[:NAME]:AUTO[:FILE]:PREFix:STATe` on page 403

:HCOPY:FILE[:NAME]:AUTO[:FILE]:YEAR:STATE on page 402

:HCOPY:FILE[:NAME]:AUTO[:FILE]:MONTH:STATE on page 402

:HCOPY:FILE[:NAME]:AUTO[:FILE]:DAY:STATE on page 402

### Current Auto Number ← Hardcopy Options > Automatic Naming

Indicates the number which is used in the automatically generated filename.


**Note:** When initially switching on the instrument, the number is reset to the lowest possible value. Starting with number 0 the output directory is scanned for existing files. As long as files with the same name are existing, the number is increased by 1. The number is automatically set so that the resulting filename is unique within the selected path. The current number is not in the save/recall file but is temporarily stored within the database. At the following save operation, the number is increased.

Remote command:

:HCOPY:FILE[:NAME]:AUTO[:FILE]:NUMBER? on page 403

## 9.10.2 Creating a hardcopy of the display

1. Select "System Config" > "Setup" > "User Interface" > "Hardcopy".

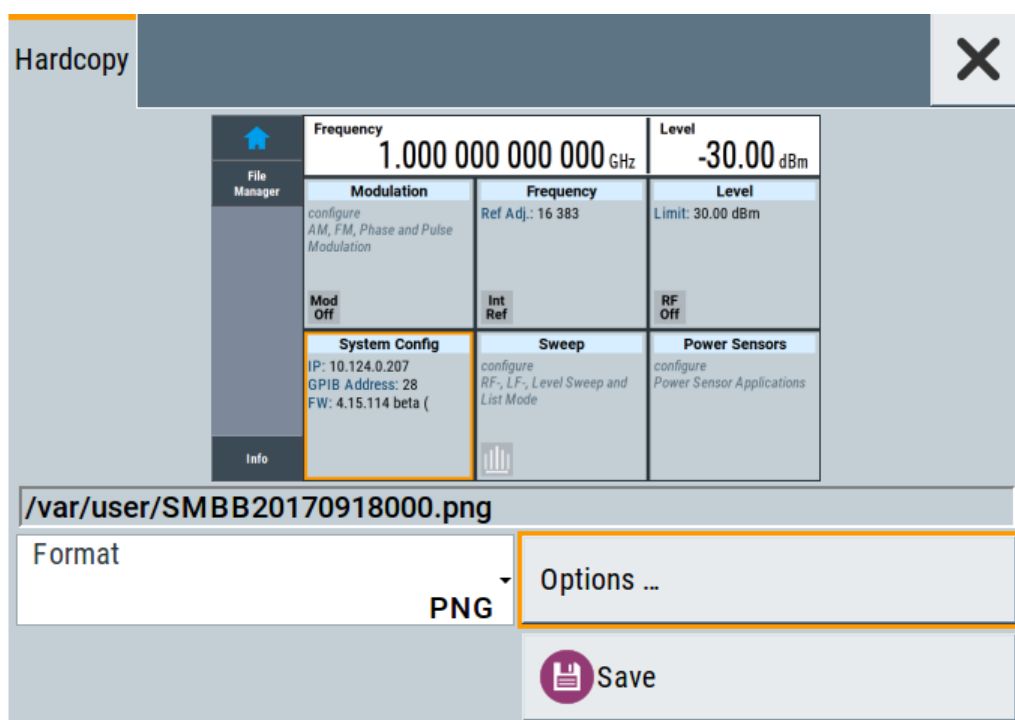

2. To define the output format, select "Format" > "JPG".
3. To enable the instrument to create output filenames, select "Automatic Naming" > "On".
4. Select "Options ...".
5. In the "Hardcopy Options" dialog:

- a) To change the default storage directory, select "Automatic Naming Settings" > "Path".
  - b) Define a path and a filename.  
For example, select the default directory `/var/user`.
  - c) If necessary, modify the parameters in the "Automatic Naming Settings".
  - d) Close the "Hardcopy Options" dialog.
6. In the "Hardcopy" dialog, select "Save".  
The instrument saves a hardcopy of the current instrument display as a `*.jpg` file.  
Also, creates the filename automatically.
7. To print the hardcopy, proceed as follows:
- a) Connect the instrument to the LAN.
  - b) Transfer the file to a remote computer  
See [Chapter 9.9, "Transferring files from and to the instrument"](#), on page 224.
  - c) On the remote computer, navigate through the file system.
  - d) Print the selected file.  
For more information, refer to the online help of the operating system of the remote computer.

# 10 General instrument functions

The general instrument functions include basic instrument settings, regardless of the selected operating mode and measurement. Some of these settings like screen display and peripherals are initially configured at the setup of the instrument, according to personal preferences and requirements. However, you can individually adjust the settings at any time, for example, if necessary for specific applications.

The following special functions help you in service and basic system configuration:

- [Chapter 10.1, "Customizing the user interface"](#), on page 236  
Allows you to adjust the display and keyboard language settings.
- [Chapter 10.2, "Organizing frequently used settings as favorites"](#), on page 242  
Enables you to group user defined settings in a favorites list or to assign actions to the [★ (User)] as quick access for later retrieval.
- [Chapter 10.3, "Managing licenses and license keys"](#), on page 249  
If you have purchased an additional option for the R&S SMB100B, you can enable it using a license key.
- [Chapter 9.2, "Restoring an instrument configuration"](#), on page 205  
At any time, you can restore a default configuration to start a measurement at a defined instrument state, or set the instrument to factory preset.
- [Chapter 15.3, "Performing maintenance tasks"](#), on page 609  
Special functions like calibration routines and self-tests put your instrument to an initial state.
- [Chapter 10.4, "Using the security settings"](#), on page 259  
Special security and protection functions protect your instrument from unauthorized use or activate specific test routines.

## 10.1 Customizing the user interface

The R&S SMB100B provides basic alignments of instrument settings regarding the user interface, that means the touch panel (screen), the appearance of the displayed dialogs and graphics, and an external keyboard.

### Start / stop display update

The operating system of the R&S SMB100B refreshes the displayed settings by default in almost real-time, to keep the display updated with the internally used values. However, you can turn off this function to reduce settling times when the instrument is remote controlled.



We recommend that you switch off the display update for optimum sweep performance with short dwell times and for fast settling times.

Consider that in this case the displayed values can differ from the operated values.

In detail described in the following paragraphs, you can:

- Set display and keyboard language, see [Chapter 10.1.1, "Display and keyboard settings"](#), on page 237
- Set date and time for the system clock, see [Chapter 15.3.2, "Date and time"](#), on page 613
- Configure and activate a [Screen Saver](#)
- Deactivate display update to improve performance, see [Chapter 10.1.2, "Display update settings"](#), on page 239
- Determine the state of the RF signal, and the level display in the status bar when you turn on the R&S SMB100B, see [Chapter 10.1.3, "Defining the RF signal state on power on"](#), on page 240.


### 10.1.1 Display and keyboard settings

Access:

1. Select "System Config > Setup > User Interface > Display/Keyboard > Display".

Display Settings	
Screen Saver <i>is Inactive</i>	<input type="checkbox"/>
Wait time	10 Min
Brightness	
Display	14
RF Hardkey	14

2. Select "Display/Keyboard > Keyboard".

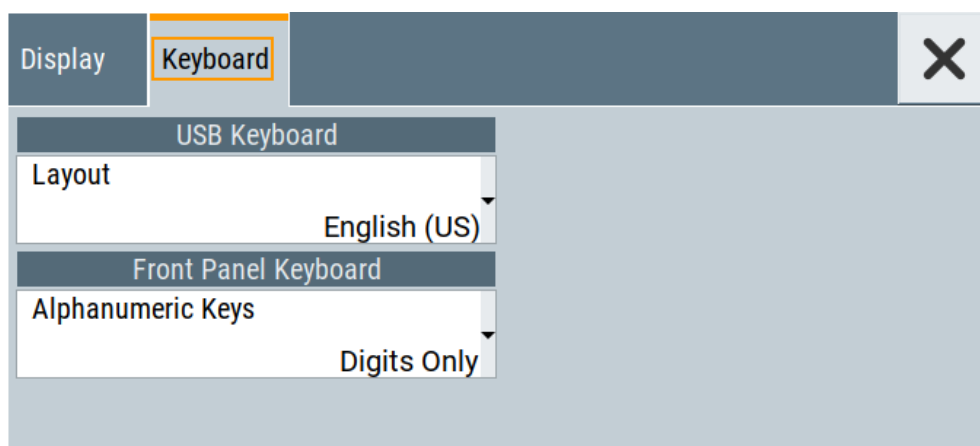

In the "Display/Keyboard" dialog, you can enable the screen saver function, configure the language for the key assignment of an external keyboard and select the front panel keypad layout.

The remote commands required to configure the display and keyboard are described in [Chapter 12.9, "DISPlay subsystem"](#), on page 392 and [Chapter 12.12, "KBOard subsystem"](#), on page 403.

<a href="#">Screen Saver</a> .....	238
<a href="#">Wait Time</a> .....	238
<a href="#">Display</a> .....	238
<a href="#">RF Hardkey</a> .....	239
<a href="#">Layout</a> .....	239
<a href="#">Alphanumeric Keys</a> .....	239

### Screen Saver

Activates the screensaver.

If activated, the display including backlight is switched off after the selected [Wait Time](#) elapses and if no entries via touch panel, front panel, external mouse, or external keyboard are made

Remote command:

[:DISPlay:PSAVe\[:STATe\]](#) on page 393

### Wait Time

Enters the idle time that must elapse before the display lamp is shut off when no entries are made.

Remote command:

[:DISPlay:PSAVe:HOLDoff](#) on page 393

### Display

Adjusts the brightness of the display.

Increase the value to turn up the display brightness.

Remote command:

[:DISPlay:BRIGhtness](#) on page 394

**RF Hardkey**

Adjusts the brightness of the [RF on/off] key.

Increase the value to change the contrast between the key and the front panel background color.

Remote command:

`:DISPlay:BUtTon:BRIGhtness` on page 394

**Layout**

Selects the language of an external keyboard connected over USB. The function assigns the corresponding keys automatically.

Remote command:

`:KBOard:LAYout` on page 404

**Alphanumeric Keys**

Selects the layout of the numeric keypad on the front panel.

"Digits Only" Assigns only numeric keys.

"Digits and Letters" Enables numeric and alphanumeric keys.


Remote command:

`:FPANel:KEYBoard:LAYout` on page 404

## 10.1.2 Display update settings

Access:

- ▶ Select "System Config > Setup > User Interface > Start/Stop Display Update".

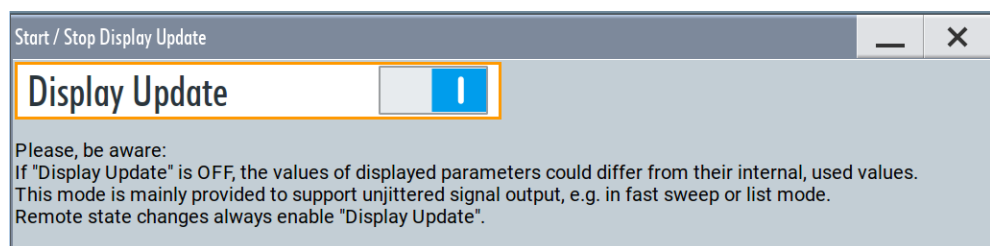

This dialog enables you, to deactivate updating the display.

The remote command to switch off the display update is described in [Chapter 12.9, "DISPlay subsystem"](#), on page 392.

**Display Update is**

Disables the automatic refreshing of the displayed values.

Remote command:

`:DISPlay:UPDate[:STATe]` on page 394


### 10.1.3 Defining the RF signal state on power on

As additional functions for the level settings, you can determine the state of the RF signal, and the level display in the status bar when you turn on the R&S SMB100B.

#### Power-On/EMF settings

Access:

- ▶ Select "Level" > "Power-On / EMF".

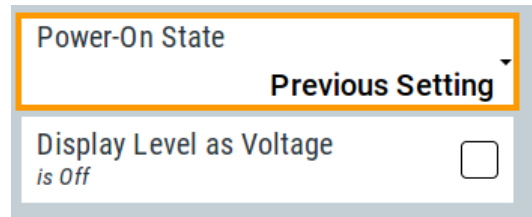

The "Power-On/EMF" dialog contains all settings for configuring the power-on behavior and the level display.

#### Settings:

Power-On State.....	240
Display Level as Voltage of EMF.....	240

#### Power-On State

Determines the RF signal output state when the instrument is switched on.

You can disable the RF output signal in general, or start it in the same state as it had been when it was switched off.

Remote command:

`:OUTPut<hw>[:STATe]:PON` on page 405

#### Display Level as Voltage of EMF

Activates display of the signal level as voltage of the EMF (no-load voltage).

If disabled, the level is displayed as a voltage over a 50 Ohm load.

#### Note:

The setting is not affected by an instrument preset ([Preset] key or \*RST) and the "Save/Recall" function. It is reset only by factory preset.

Remote command:

`[:SOURce<hw>]:POWer:EMF:STATe` on page 506

### 10.1.4 How to set the initial instrument settings

This section describes how to set up the R&S SMB100B initially.




#### 10.1.4.1 Setting the keyboard language

You can select the language of the external keyboard connected to the instrument.

##### To adjust the keyboard settings

1. Press the [Setup] key.
2. Select "User Interface > Keyboard".

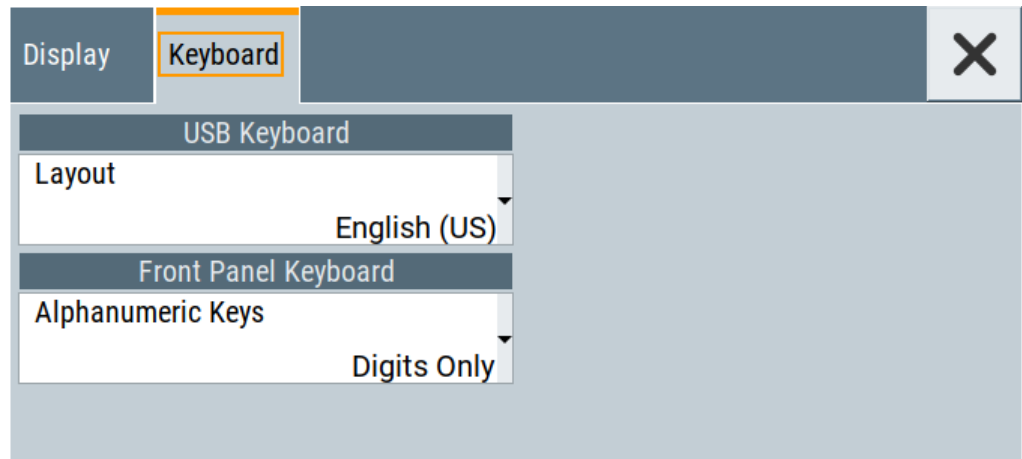

3. Select the "Layout".


The dialog closes and the changes take effect immediately.

#### 10.1.4.2 Setting the screen saver

You can enable a screen saver that automatically turns off the display after a user-defined period of time. The screen saver is activated if no settings are made on the touch screen, or via keys or the rotary knob during the selected wait time.

##### To activate the screen saver

1. Press the [Setup] key.
2. Select "User Interface > Display"
3. Activate the "Screen Saver".

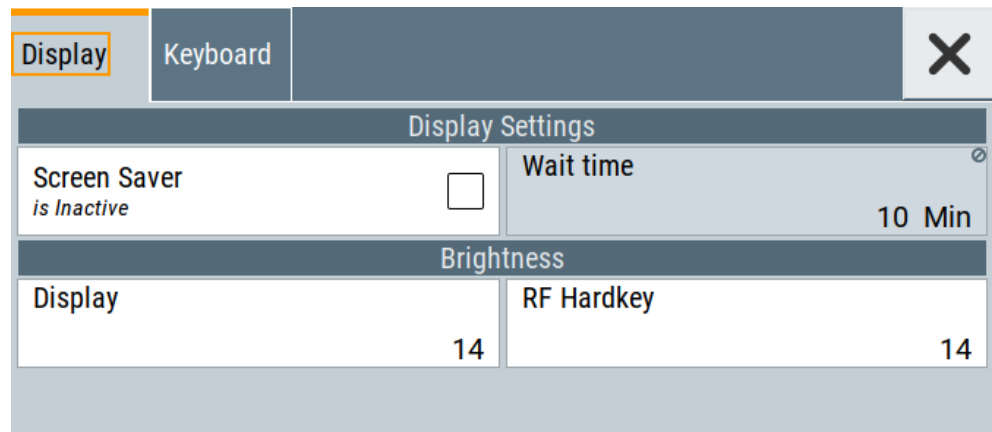

- Define the "Wait Time" in minutes.  
The instrument turns off the display after the defined period of time.
- To reactivate the display, tap the screen or press any key on the front panel.

#### To deactivate the screen saver

- Press the [Setup] key.
- Select "User Interface > Display"
- Disable the "Screen Saver" state.

## 10.2 Organizing frequently used settings as favorites

The R&S SMB100B provides two possibilities to define frequently used settings and procedures for later retrieval individually.

#### User menu and [★ (User)] key

These two functions work similar to the favorites function of a browser or other programs. They allow you to create a list of frequently used actions or to group frequently used settings in one dialog.

You can collect the parameters of your configuration in a favorites list, i.e. in the "User Menu", or define settings and actions with the [★ (User)] key:

- "User Menu" to group settings of specific tasks.  
Similar to a favorites function, you can use this menu for:
  - Grouping the settings required for a task in one dialog.
  - Saving and recalling the settings of a task.
  - Transferring the settings for use on multiple instruments.
- [★ (User)] key, with customizable function.  
You can perform the following steps using this key:
  - Open the "User Menu" (default functionality).

- Add or remove settings and functions.
- Execute actions and access functions.

### Possible applications

The ★ (User) key and the "User Menu" are useful for the following situations:

- There are functions or tasks you have to perform in a defined order but the setting parameters are distributed across several dialogs.
- There are functions or tasks you have to perform frequently but they are not accessible via the front panel keys.
- The required functions are grouped in a dialog that is not directly accessible from the home screen.
- Your task involves loading and executing of SCPI scripts.  
See [Chapter 11.13.4, "How to record / create SCPI lists"](#), on page 343 for information on how to create a SCPI script.
- A quick access to saved setups is required.
- There are functions and tasks you have to perform on several instruments.

### Dialog identification

To identify each dialog, the instrument uses a dedicated dialog ID. The dialog ID contains the dialog position on the display and the current active tab. The action that triggers the instrument to open a dialog uses this identification.

### Save/Recall vs. recall setup

If you need to restore a specific signal generation setup and perform further configurations based on this particular instrument state, the R&S SMB100B provides two options:

- "Save/Recall" function  
For a detailed description, refer to [Chapter 9.4, "Saving and recalling settings"](#), on page 211.
- "Recall Setup" function  
If the "Recall Setup" is the only user action assigned to the [★ (User)] key, pressing this key triggers the R&S SMB100B to load the user-defined preset file immediately.

## 10.2.1 User menu settings

The "User Menu" dialog contains function keys to organize, save and load a favorites list. You can also modify, add or delete list entries directly in the dialog.

### Clear User Menu

Removes all entries from the "User Menu" at once.

### Save User Menu

Saves the current "User Menu" under the defined filename.

**Recall User Menu**

Loads the selected "User Menu" file.

This function enables you to use the user specific favorites file on another instrument. However, if functions or parameters are not provided due to varying configuration of the instrument, the settings of these particular parameters take no effect.


**10.2.2 How to use the user menu for fast adjustments**

Access:



1. Press the [★ (User)] key.

The "User Menu" dialog opens.

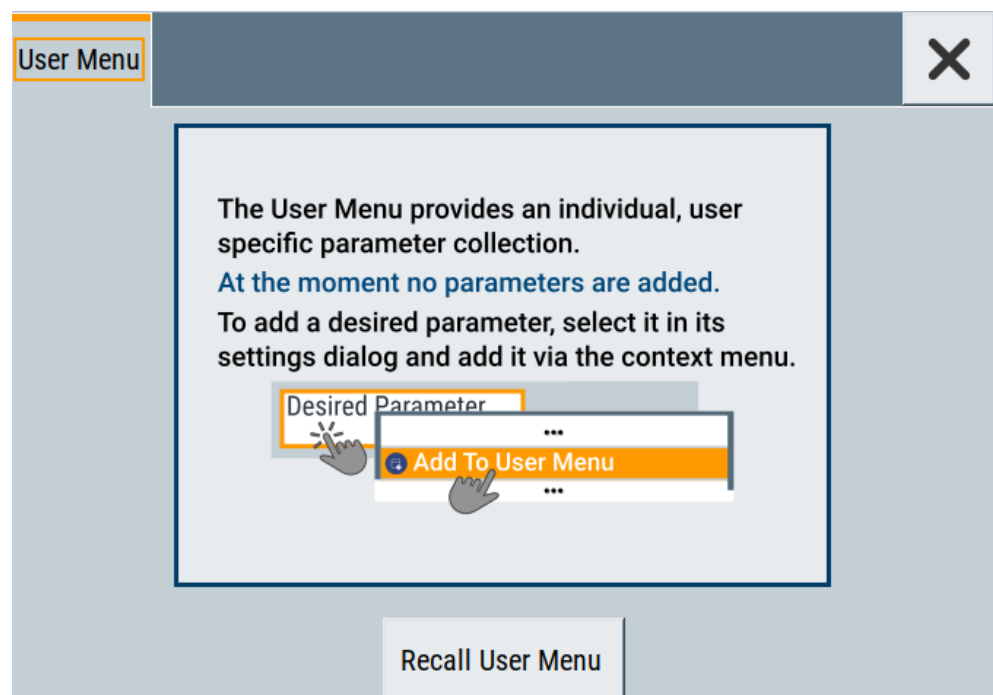

If you execute this action for the first time, the dialog displays instructions on how to use the "User Menu".

2. If you already have a saved user menu file on the instrument, you can load with "Recall User Menu".


**Creating a user menu**

To create your own user dialog with settings:

1. Open a dialog with settings you frequently use.
2. Select a parameter.
3. Open the context menu and select "Add to User Menu".




A favorites icon ★ indicates that the parameter is used in the "User Menu".

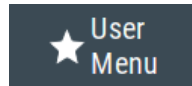

The "User Menu" button in the taskbar confirms that you have created a "User Menu" with at least one entry.

4. Press the [★ (User)] key.

The "User Menu" dialog shows all parameters that you have added to the list.

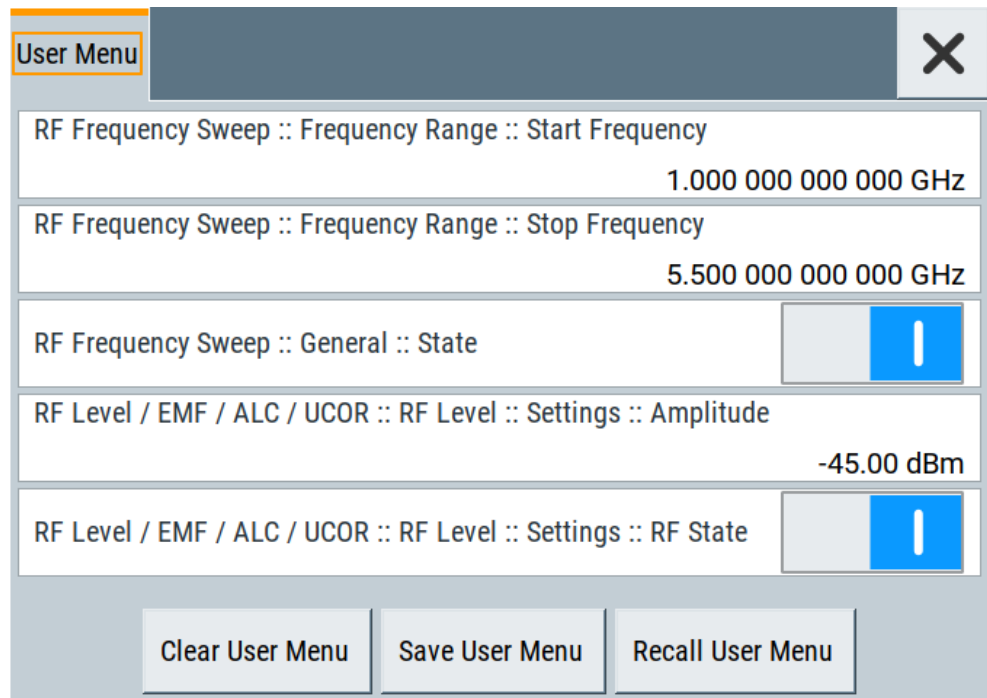

You can modify the parameter settings directly in this dialog, e.g. change a state or set values, as you do in the particular dialog the parameter originally belongs to.

5. To remove an entry, select the parameter either in the "User Menu" or in the dialog where it originally belongs to.
  - a) Open the context menu and select "Remove from User Menu".



6. To remove all entries at once, select "Clear User Menu".

7. To save your individual favorites list, select "Save User Menu", and follow the file managing instructions.  
The file system automatically assigns the file extension \*.user\_menu.
8. To recall a previously saved user menu, select "Recall User Menu" and proceed accordingly.

### Providing a user menu favorites list for several instruments


To transfer files from or to an instrument:

1. Create the favorites list, as described in ["Creating a user menu"](#) on page 244.
2. Save the favorites list.
3. To transfer a file from or to an instrument, the R&S SMB100B provides several options, see ["File handling"](#) on page 203.

## 10.2.3 Define user key actions settings

Access:

- ▶ Select "System Configuration > Setup > User Interface > Define User Key".

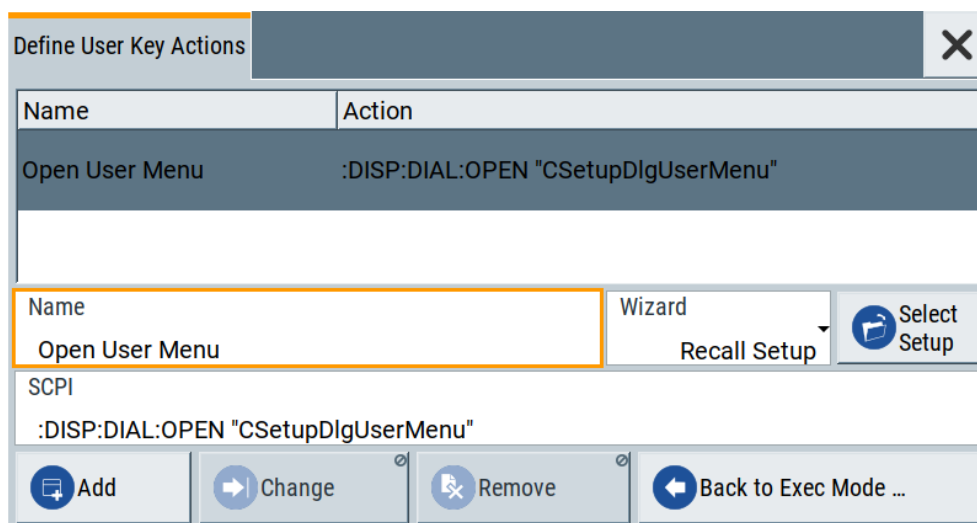

The dialog displays a list of the currently enabled actions and provides functions to define new, edit or remove existing actions. If no actions have been defined, the list is empty.

See [Chapter 10.2.4, "How to assign actions to the \[★ \(User\)\] key"](#), on page 248.

The remote commands required to define these settings are described in [Chapter 12.9, "DISPlay subsystem"](#), on page 392.

### Name

Enters a user-defined name for the action.

**Wizard**

Defines the action to be executed.

"Load SCPI Script"

Selects and executes the SCPI script.

"Recall Setup" Opens the file dialog for selecting a saved setup with user-defined settings.

"Open Dialog"

Selects an open settings dialog or menu.

**Select**

Depending on the selected "Wizard", provides access to:

- the standard "File Select" function for loading an SCPI script or setup file
- a list of all currently opened dialogs.  
See [SCPI](#).

**SCPI**

For the currently selected action, displays the corresponding SCPI command with the associated parameter for dialog identification (dialog ID). The automatically displayed SCPIs are enabled for subsequent modification.

Remote command:

[:DISPlay:DIALog:OPEN](#) on page 396

See also [:DISPlay:DIALog:ID?](#) on page 395

**Add, Change, Remove**


Standard functions for managing of the actions.

**Back to Execute Mode**

Opens the "Select Action to Execute" dialog. Select an Action form the list to execute it.

To return to the "Define User Key Actions" dialogs, select [Select Action to Execute > Define Actions](#).

## Select Action to Execute &gt; Define Actions

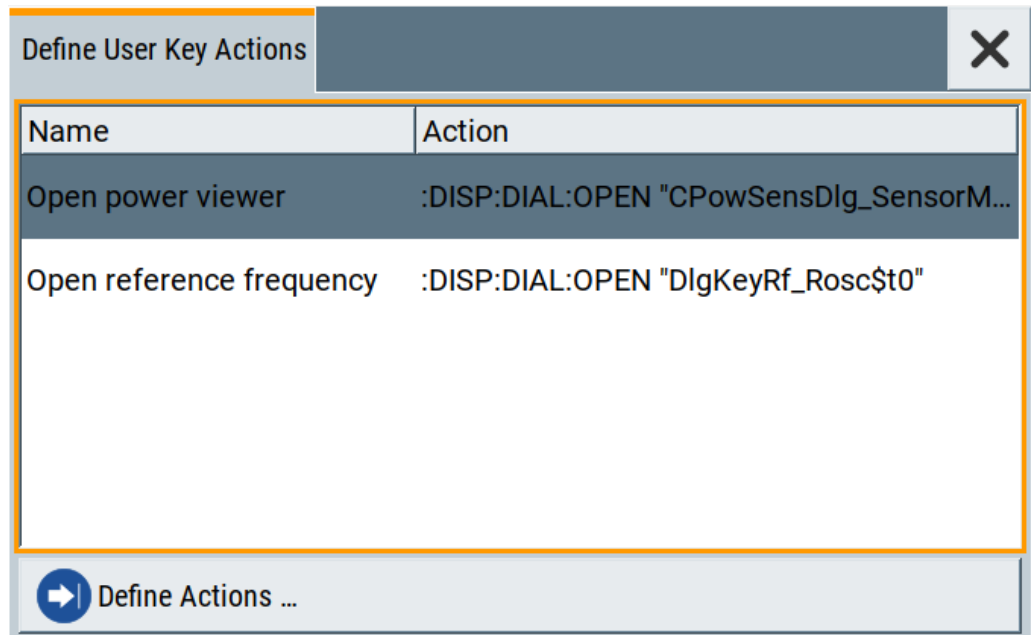

Opens the "Define User Key Actions" settings dialog.


#### 10.2.4 How to assign actions to the [★ (User)] key

The customizable [★ (User)] key has no predefined function assigned. You can individually define actions to be executed or functions to be accessed when pressing this key.


To assign a frequently used dialog to the [★ (User)] key:

1. Open the dialog you want to quickly access.  
For example, select "Level > UCOR > Import/Export"
2. Select "System Configuration > Setup > User Interface > Define User Key".
3. To create an action:
  - a) Specify the "Name".  
E.g. *Open reference frequency*.
  - b) Select "Wizard > Open Dialog"
  - c) Select "Select Dialog" and select a settings dialog from the list  
The corresponding SCPI command is automatically displayed and can be modified.
4. Select "Add" to save the new action in the list of user key actions.



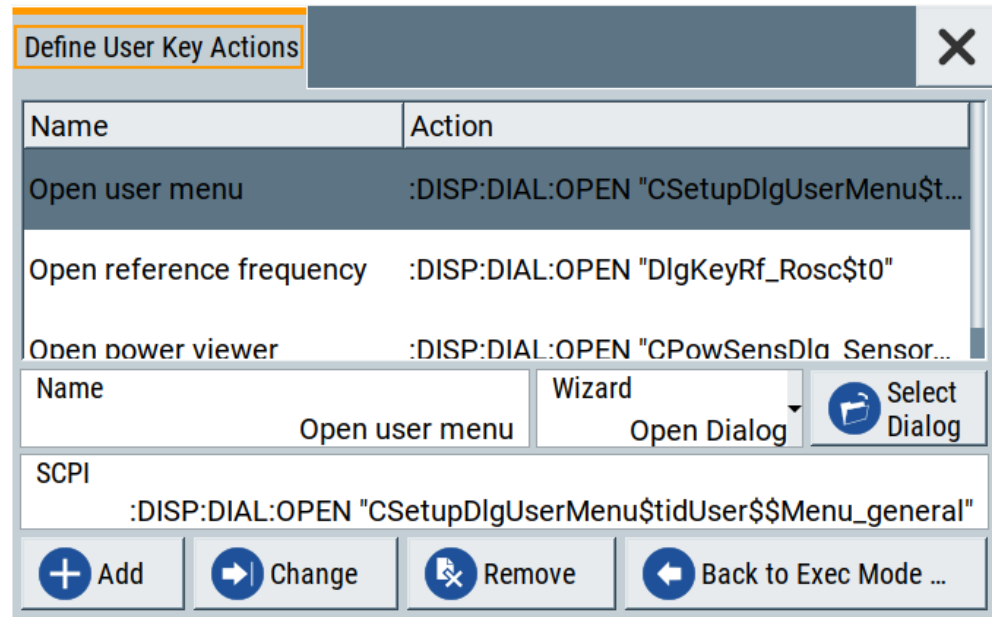

5. To execute the created action, press ★ (User).  
 In the list of actions ("Select Action to Execute" dialog), navigate to the required action.  
 In this example, this is "Open reference frequency".

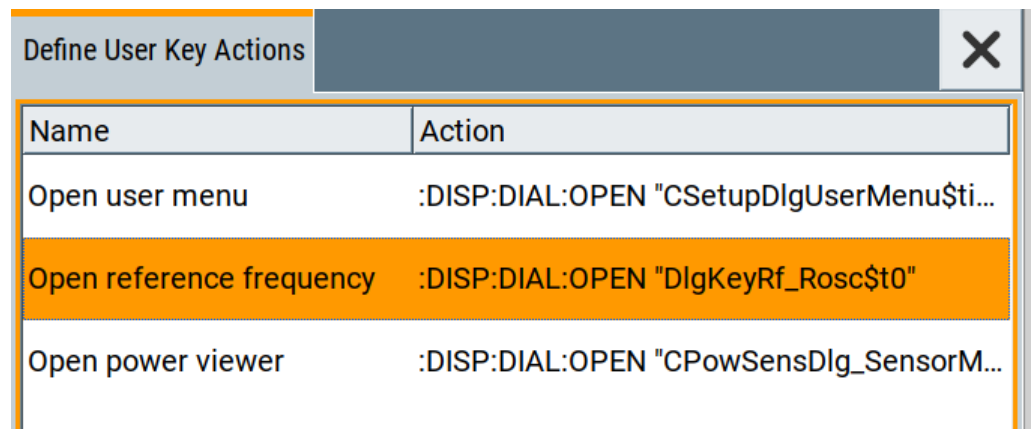

The R&S SMB100B executes the action and opens the dialog.

### 10.3 Managing licenses and license keys

An option is ready to operate after it is enabled with a license keycode supplied with the option. The license key is delivered as a file or on paper. Unregistered licenses must be registered for a particular instrument before the corresponding option can be enabled for operation.



For reliable operation, a software option usually requires the latest firmware version. The required version is specified in the delivery. If your instrument works with a former firmware version, update the firmware before enabling the software option.


The firmware update is described in the release notes provided on the product page of the R&S SMB100B.

### 10.3.1 Manage license keys settings

The "Manage License Keys" dialog provides all information on the available licenses. Instrument-related steps guide you through the process of registering or deactivating licenses.

Access:

1. Select "System Config > Setup > Instrument Assembly > Manage License Keys > Manage License Keys".

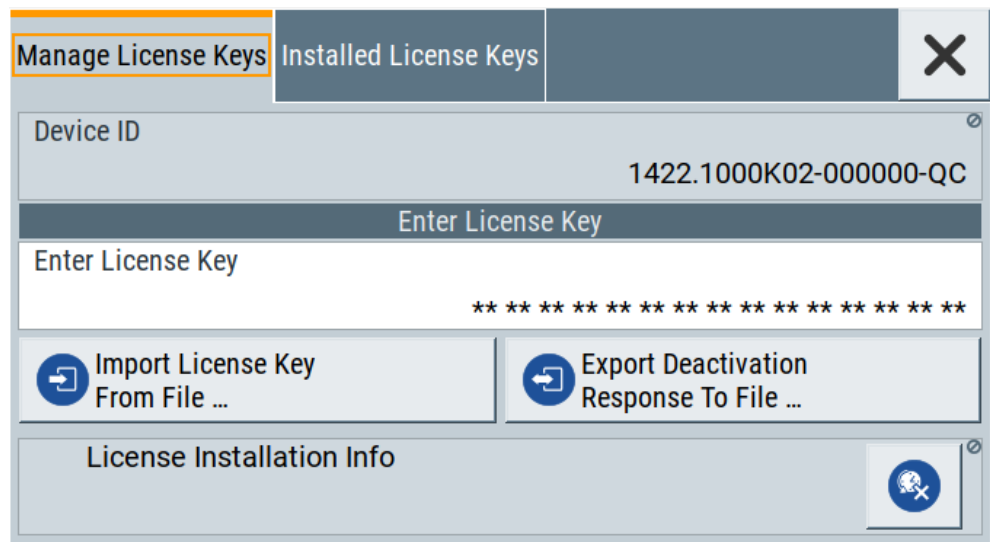

In this tab, you can activate licenses for newly purchased or newly registered options.

2. Select "Installed License Keys".

Manage License Keys		Installed License Keys			✕
Show Inactive <input type="checkbox"/>		Show Deactivated <input type="checkbox"/>		Open License Server	
Export License Key To File	Option	License Count	License Type	Registrations	
1 ...	<InstName>-Opt>	1	Permanent		
2 ...	<InstName>-Opt>	2	Permanent		
3 ...	<InstName>-Opt>	1	Timed (2160 h left)		

This tab lists all active options, with information on the available number of an option, the license type and registration. You can query inactive or disabled options also.

3. Select "Open License Server".

The "Manage License Keys" dialog covers all required parameters for activating or deactivating newly purchased or newly registered options, and provides access to the onboard license server, see [Chapter 10.3.2, "Using the license server"](#), on page 253.

## Settings

Device ID.....	251
Enter License Key.....	251
Import License Key from File.....	252
Export Deactivation Response to File.....	252
License Installation Info.....	252
Installed License Keys.....	252
L Show Inactive.....	252
L Show Deactivated.....	252
L Installed License Keys Table.....	252
Open License Server.....	253

## Device ID

Displays the instrument-specific identification number. The device ID is a unique string with the following structure:

```
<stock number>-<serial number>-<checksum>
```

## Enter License Key

Type here the license key provided with the option.

For license keys delivered as a file, use [Import License Key from File...](#)

**Import License Key from File...**

Opens a dialog for selecting the file with the license key.

Use this function also to import the deactivation key file generated by the R&S License Manager online tool (see [How to move a portable license](#)).

**Export Deactivation Response to File...**

Exports the generated deactivation response key to a file and opens a file management dialog to save the file.

This key is required during the unregistration process, e.g. when you want to deinstall an option or have a portable option, which you want to register later on another instrument (see [How to move a portable license](#)).

**License Installation Info**

Indicates status information on the performed actions.

**Installed License Keys**

Access: select "System Config > Setup > Instrument Assembly > Manage License Keys > Installed License Keys".

Comprises information on the installed options.

**Show Inactive ← Installed License Keys**

Enables the display of the inactive (expired) licenses in the [Installed License Keys Table](#).

**Show Deactivated ← Installed License Keys**

Enables the display of the deactivated licenses in the [Installed License Keys Table](#).

See [How to move a portable license](#) for information on how to activate deactivated licenses.

**Installed License Keys Table ← Installed License Keys**

Shows information on the currently installed options.

**"Export License Key to File"**

Opens a dialog to save the generated license key file. This file is required during the unregistration process.

If you have a portable unregistered option, you can register it later on another instrument (see [How to move a portable license](#)).

**"Option"**

Displays the short designation of the option.

**Note:** Open the [Hardware Options/Software Options](#) dialog to retrieve more information about the installed options.

**"License Count"**

Displays the number of the licenses for the selected option key.

- "License Type" Displays the type of license.  
A license type determines the common qualification application duration and the portability of a license. The following license types are provided: evaluation, permanent, portable, quantified, time-controlled with a duration of 1, 3, 6 or 12 months. A license can also be deactivated or expired.  
For time limited licenses, the left time of applicability is displayed too.
- "Registrations" (reserved for future use)

#### Open License Server

Opens the R&S License Server of the R&S SMB100B, see [Chapter 10.3.2, "Using the license server"](#), on page 253.

### 10.3.2 Using the license server

The R&S SMB100B now supports handling of software licenses using the license server from Rohde & Schwarz.

The R&S License Server is a browser application you can access directly in the R&S SMB100B. The onboard license server is integrated in the instrument firmware with connection to a *local smartcard* memory. The local smartcard holds local licenses, i.e. licenses used on this specific instrument.

#### To open the license server

Access:


1. Select "System Config > Setup > Instrument Assembly > Manage License Keys > Installed License Keys".

The screenshot shows a software interface titled "Manage License Keys". The "Installed License Keys" tab is selected and highlighted with an orange border. Below the tab are three buttons: "Show Inactive" with an unchecked checkbox, "Show Deactivated" with an unchecked checkbox, and "Open License Server" which is highlighted with an orange border. Below these buttons is a table with the following columns: "Export License Key To File", "Option", "License Count", "License Type", and "Registrations". The table contains three rows of data:

	Export License Key To File	Option	License Count	License Type	Registrations
1 ...		<InstName>-Opt>	1	Permanent	
2 ...		<InstName>-Opt>	2	Permanent	
3 ...		<InstName>-Opt>	1	Timed (2160 h left)	

2. Select "Open License Server".

The license server browser opens in a browser window and starts initially in the "Configuration" view.

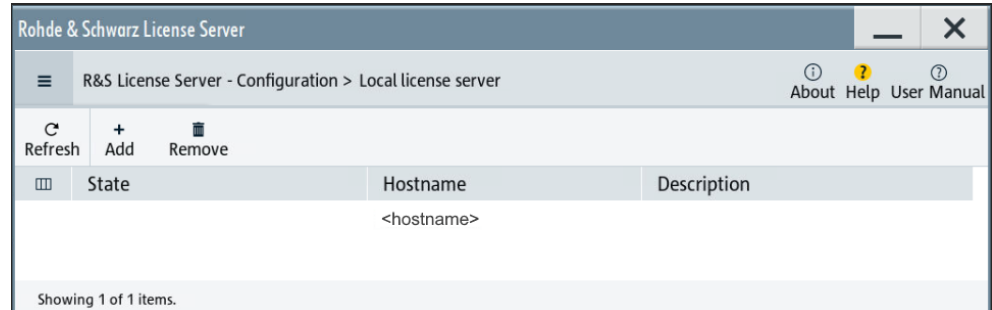

**Figure 10-1: R&S license server dialog**

The selection button in the status bar on the left enables you to access the "Analytics" or "Licenses" views, see ["Short glance at the main views"](#) on page 254.

The icons in the status bar on the right lead you to information on the license server:


- "About": shows the software version.
- "User Manual": opens the embedded license server user manual.
- "Help": provides the functional description on a specific dialog and its settings.

### Short glance at the main views

The section provides a brief insight into the main windows of the license server. For details and handling of the application, refer to the embedded user documentation.




1. To access a view, select the menu button.
2. Select "Configuration".

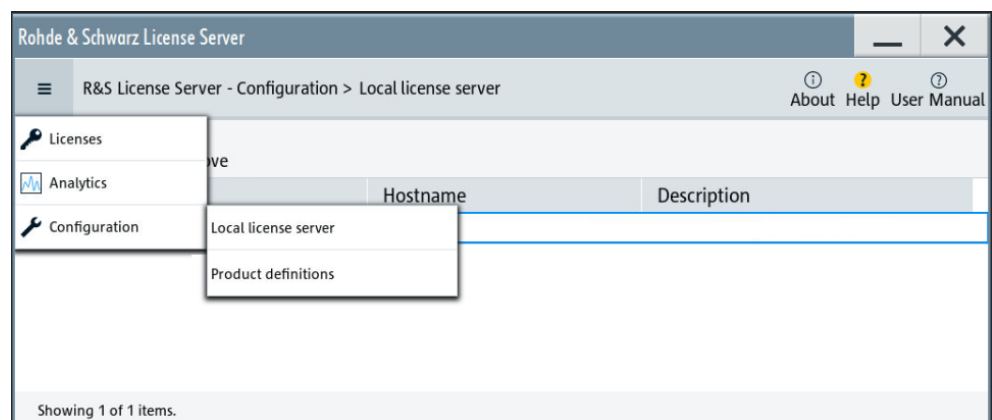

**Figure 10-2: Configuration menu**

Accesses the license server, access lists and installed product definitions.


- a) Select "Local license server".

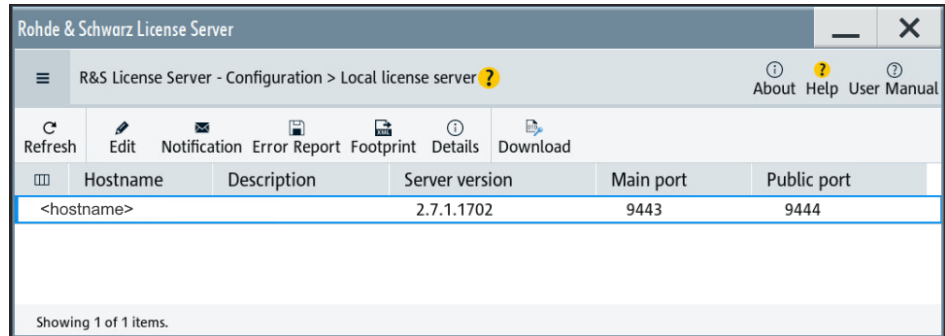

**Figure 10-3: Example of a local license server view**

Shows the onboard license server of the instrument. With the column selection, you can indicate or unhide characteristics of the available server. The task bar buttons provide access to the corresponding functions and access lists.


- b) Select "Product definitions".

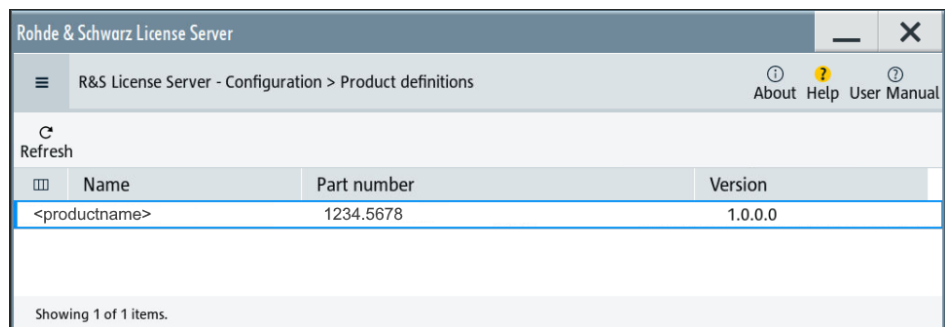

**Figure 10-4: Example of a product definition view**

Shows installed product definitions. To view the available characteristics, use the column selection.

3. Select "Licenses".  
Provides access to the available license servers.  
The "License keys" view lists the license key options that are available on the selected server. To show additional information, use the column selection.  
The task bar functions enable you to activate or deactivate a license, to get details on an option and export license keys or information on the selected product.
4. Select "Analytics".

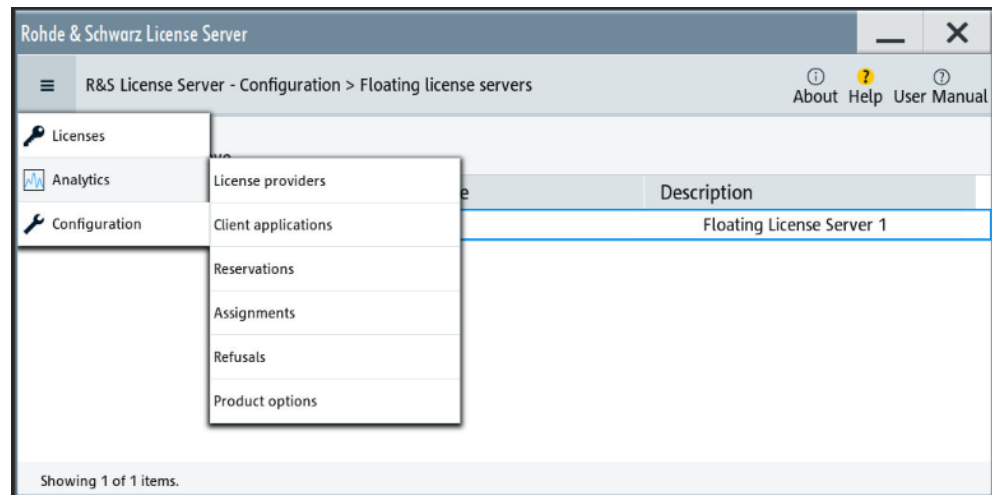

**Figure 10-5: Analytics menu**

Provides access to the license providers, client applications and enables you to export statistics data for evaluation in external applications.

Shows information on configured client applications, license providers and license types. To show additional information, use the column selection.

### To manage licenses on the R&S SMB100B

To request or return a license, proceed as follows:

1. Access: see ["To open the license server"](#) on page 253.  
The browser application opens.
2. Select "Licenses"
3. Select a license server in the menu list, e.g. "R&S SMB100B".  
The "License keys" view lists the enabled options available on the selected server.
4. Select "Status" > "Select all" to list also options that are currently deactivated.  
The "Licenses" view shows all active, inactive and time limited options.
5. To get detailed information on a specific option:
  - a) Select the option in the list.



- b) In the task bar, select "Details".

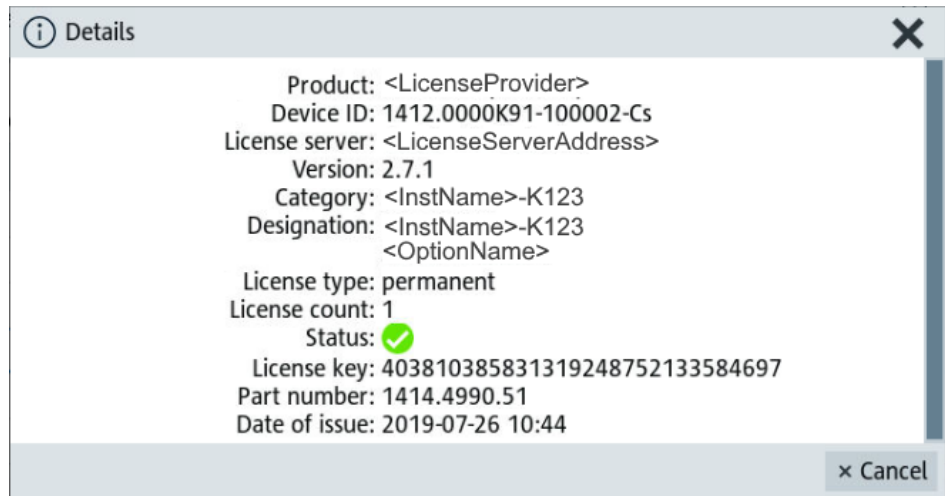
 




Figure 10-6: Example of the license characteristics of an option

6. To enable a discontinued license: , select  in the taskbar.
  - a) Select the license you want to activate.
  - b) In the task bar, select .
7. To return a license, proceed the same way:
  - a) Select the license.
  - b) Deactivate the license with .
8. Follow the instructions on the screen.

### 10.3.3 How to move a portable license

This example is intended to explain how to perform the required steps at the instrument.


Use a USB flash drive to transfer the license key files between the instruments and the browser.



We assume knowledge about the handling of the R&S License Manager online tool and the description of the whole process.

1. Open your browser. Enter <https://extranet.rohde-schwarz.com/service>.  
Select "Manage Licenses > Move Portable License".  
The first step requires the Device IDs of the source and target instruments.
2. To find out the Device IDs, proceed as follows:

- a) On the source instrument, select "System Config > Setup > Instrument Assembly > Manage License Keys > Manage License Keys > Device ID".

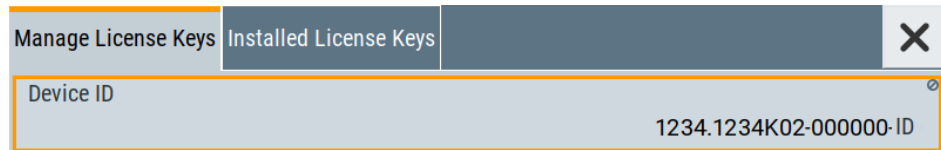

- b) On the target instrument, select "System Config > Setup > Instrument Assembly > Manage License Keys".
- c) In the "Mange License Keys" tab, select "Device ID".
- d) In the browser, select "Manage Licenses > Move Portable License > Select Devices".
- e) Enter the Device IDs.
3. On the source instrument, select "System Config > Setup > Instrument Assembly > Installed License Keys > License Keys Table".
- a) Navigate to the portable license that you want to move.
- b) Select the "Export License to File" column.
- A standard file manager dialog opens.
4. Enter a filename.
5. Save the exported license key, e.g. k123\_portable\_key\_to\_move.xml.
6. In the browser, select "Manage Licenses > Move Portable License > Select License (from file)":
- a) Select the exported license key.
- b) Check the selection.
- c) Create the deactivation key.
- d) Save it to file.
7. On the source instrument, select "System Config > Setup > Instrument Assembly > Manage License Keys > Import License Keys from File".  
Select the transferred deactivation key.
8. On the source instrument, select "System Config > Setup > Instrument Assembly > Manage License Keys > Export Deactivation Response to File".
9. In the browser, go to "Manage Licenses > Move Portable License > Install Deactivation Key (from file)".
10. Enter the deactivation response of the instrument.  
The license is deactivated for the source instrument.
11. In the "Manage Licenses > Move Portable License", go to step "Create License" to generate a license key for this portable option and the selected target instrument.
- a) Download the license key as a file.
- b) Transfer it to the target instrument.

12. In the target instrument, select "System Config > Setup > Instrument Assembly > Manage License Keys > New License > Import License Keys from File".

13. Select the created license key file.

The portable option is installed on the target instrument.

## 10.4 Using the security settings

The protection function of the R&S SMB100B provides several levels to activate particular functions like self-test or tests for service purposes specifically.

### Protection

The five protection levels are automatically active on startup that means all protected functions are locked.

To unlock a protection level:

- ▶ In the "System Config > Setup > Security > Protection" dialog, enter the correct password.

To lock a protection level:

- ▶ Clear the corresponding checkbox.

### Protection levels

The following functions are protected in the respective levels:

- Protection level 1  
Protects against accidental changes, like, for example, the clock and date, several internal adjustments functions and the self-test, as well as network settings or the instrument hostname.  
You can access this level with the password 123456.
- Protection level 2  
Unlocks protected service functions. It is accessible to authorized personnel of Rohde & Schwarz service department only.
- Protection level 3 to 5  
Are reserved for internal use.

### Security

The security concept of the R&S SMB100B helps you to protect your instrument against uncontrolled access and changes. All provided security services require that you enter the security password.

Provided security services are:

- **General** security parameters, such as:
  - **USB storage** that secures controlled access to the mass memory of the instrument

- **Volatile mode** that prevents information to be written to the internal memory permanently.
- **Sanitizing** that prevents the instrument from leaving a secure environment with stored user information.
- **Annotation** frequency and amplitude prevent reading the display.
- **Secure Update Policy** check that verifies the integrity and origin of the firm-ware package to be installed.  
To access the settings of these topics, see [Setting security parameters](#) > "[Secure Update Policy](#)" on page 262.
- **Password** management secures controlled user access to the instrument  
With the two-step password concept, you can assign a user-defined password for the operating system, and a security password for accessing the mass storage of the instrument.  
See [Chapter 10.4.4, "Password management"](#), on page 270.
- **LAN services** secure controlled network access  
You can individually lock and unlock supported LAN interface services, including the SMB client and SMB server that use versions 1.0 and 2.0 of the SMB protocol. Remote control over LAN requires you have enabled the interface, but you can disable not needed LAN services individually.  
**Note:** Disabling LAN services needed for remote control over LAN locks the instrument access persistently. You cannot address the instrument any longer.  
See [Chapter 10.4.3, "Configuring LAN services"](#), on page 266.
- **User interface** prevents front panel operation and/or reading the display.

For more information, see the document R&S SMB100B Instrument Security Procedures.

## 10.4.1 Protection level settings

Access:

- ▶ Select "System Config > Setup > Security > Protection".

Protection Level 1	<input checked="" type="checkbox"/>	Password	*****
Protection Level 2	<input checked="" type="checkbox"/>	Password	*****
Protection Level 3	<input checked="" type="checkbox"/>	Password	*****
Protection Level 4	<input checked="" type="checkbox"/>	Password	*****
Protection Level 5	<input checked="" type="checkbox"/>	Password	*****

The "Protection" dialog provides access to the unlocking of different protection levels.

Several functions in the instrument are password-protected to prevent for example accidental changes, "[Protection](#)" on page 259.

The remote commands required to unlock a protected stage are described in [Chapter 12.16, "SYSTem subsystem"](#), on page 531.

#### Protection Level/Password

Unlocks the selected level of protection, if you enter the correct password.

The default protection level 1 password is 123456.

To lock the protection level again, clear the checkbox.


Remote command:

:SYSTem:PROTeCt<ch>[:STATe] on page 542

## 10.4.2 Setting security parameters

Access:

- ▶ Select "System Config > Setup > Security > Security > General".

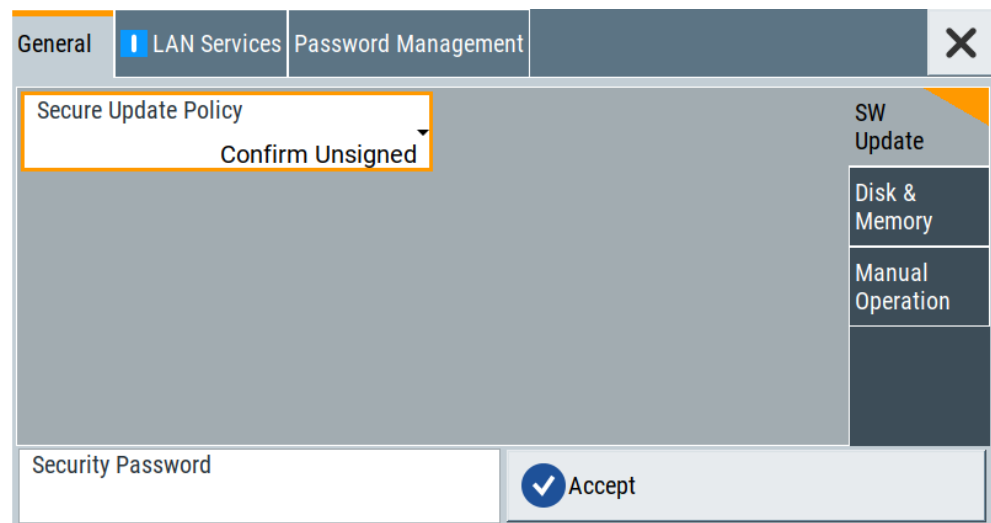

In the "General" tab, you can determine the security level for firmware updates, and configure the security settings for the mass memory and manual operation.




All modified settings in this dialog are not applied until you enter the [Security Password](#) and confirm with [Accept](#).

### 10.4.2.1 Update policy security settings

Access:

1. Select "System Config > Setup > Security > Security".

2. Select "General > SW Update".

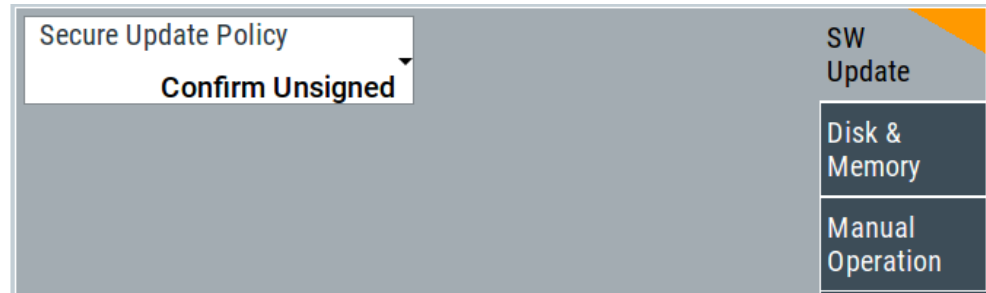

The "SW Update" tab enables you to select the security mode for firmware updates.

The remote commands available to control security settings are described in [Chapter 12.16, "SYSTem subsystem"](#), on page 531.

### Secure Update Policy

Allows you to configure the automatic signature verification for firmware installation.

To apply the change: enter the security password and confirm with "Accept". Otherwise the change has no effect.

See also:

- [Chapter 10.4, "Using the security settings"](#), on page 259 for more information on the security concept.
- The release notes for details on signature verification when installing new or former firmware versions, available at [www.rohde-schwarz.com/firmware/smb100b](http://www.rohde-schwarz.com/firmware/smb100b).  
The release notes for details on signature verification when installing new or former firmware versions, available at [www.rohde-schwarz.com/firmware/sma100b](http://www.rohde-schwarz.com/firmware/sma100b).

"Confirm Unsigned"

Performs the signature verification.

If the check detects any discrepancies, the instrument issues a warning message. You can still update the firmware or reject updating.

This setting also enables you to downgrade the firmware version.

"All Packages" Accepts all packages without signature verification.

"R&S Signed Packages"

Performs the signature check.

If the check detects any discrepancies, the instrument issues a warning message and locks the update to this firmware.

Remote command:


`:SYSTem:SECurity:SUPolicy` on page 554

#### 10.4.2.2 Disk & memory security settings

Access:

1. Select "System Config > Setup > Security > Security".

2. Select "General > Disk & Memory".

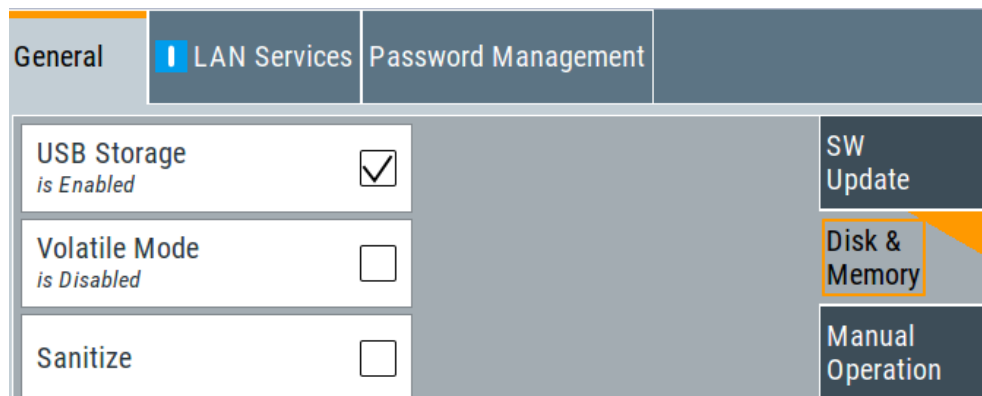

The "Disk & Memory" tab secures controlled access to the mass memory and prevents information from leaving a secure environment.

The remote commands available to control security settings are described in [Chapter 12.16, "SYSTem subsystem"](#), on page 531.

### USB Storage

Activates the access to external USB storage media.

To apply the change: enter the security password and confirm with "Accept". Otherwise the change has no effect.

See [Chapter 9.9.4, "Using a USB storage device for file transfer"](#), on page 229.

**Note:** Remove all USB memory devices before disabling the USB storage. If any USB memory device remains connected, disabling is blocked, and the instrument returns a warning message.

The microSD card is also considered a USB memory device and must be removed. If you have sealed the SD card slot, you can not disable the USB storage.


### Volatile Mode

Activates volatile mode, so that no user data can be written on the internal memory permanently.

In volatile mode:

- Data that the instrument normally stores on the internal memory is redirected to volatile memory.
- The user directory is mapped to the volatile memory. You access the temporary data just as data stored in the `/var/user/`, see [Chapter 9.3, "Protecting data"](#), on page 210.
- Data on the internal memory cannot be changed. It is protected against modification or erasure.
- You can only save data:
  - Temporarily in the volatile memory
  - On a connected external storage device, such as a memory stick

To activate volatile mode: enter the security password, confirm with "Accept" and reboot the instrument. Otherwise the change has no effect.

Activated volatile mode is indicated by the icon .

Remote command:

`:SYSTem:SECurity:VOLMode[:STATe]` on page 554

### Sanitize

Executes the erase procedure that sanitizes the internal memory.

The sanitizing function makes sure that no user information is stored on the instrument when it leaves the secure environment.

To apply the change: enter the security password and confirm with "Accept". Otherwise the change has no effect.

**Note:** If the instrument is subject to high security, and you have disabled volatile mode, the internal memory holds user-data, and thus poses a security risk.

See also [Chapter 10.4, "Using the security settings"](#), on page 259 for more information on the security concept.


Remote command:

`:SYSTem:SECurity:SANitize[:STATe]` on page 553

### 10.4.2.3 Manual operation security settings

Access:

1. Select "System Config > Setup > Security > Security".
2. Select "General > Manual Operation".

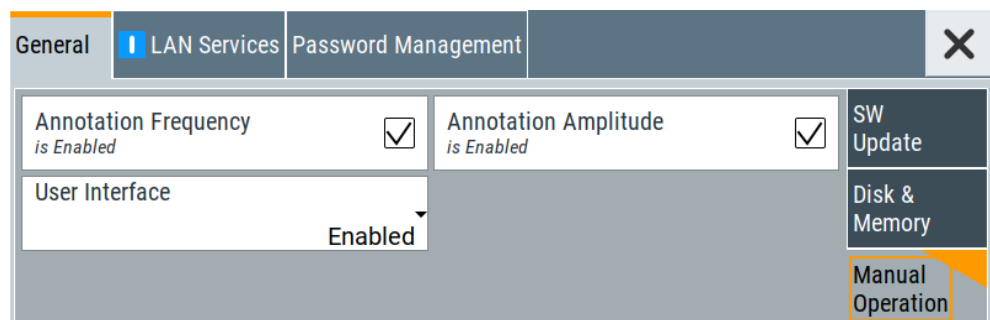

The "SW Update" tab enables you to lock front panel operation and/or reading the display.

The remote commands available to control security settings are described in:

- [Chapter 12.9, "DISPlay subsystem"](#), on page 392
- [Chapter 12.16, "SYSTem subsystem"](#), on page 531.

### Annotation Frequency

Enables the display of the currently used frequency in the status bar.

How to: see ["To disable frequency and level indication in the status bar"](#) on page 275.

Remote command:

`:DISPlay:ANNotation:FREQuency` on page 395



**Annotation Amplitude**

Enables the display of the currently selected level in the status bar.

How to: see ["To disable frequency and level indication in the status bar"](#) on page 275.

Remote command:

:DISPlay:ANNotation:AMPLitude on page 395

**User Interface**

Allows you to lock the controls for manual operation and the display individually.

How to: see ["To disable the user interface"](#) on page 276.

See also [Chapter 10.4, "Using the security settings"](#), on page 259.

"Enabled" Enables the display and all controls for the manual operation of the instrument.

"Touchscreen Off"

Locks the touch sensitivity of the screen.

This security feature protects the instrument against unintentional change of settings by accidentally touching of the screen.

Still available controls for manual operation are:

- The keys at the front panel, including the rotary knob
- The external mouse and keyboard
- Remote operation over VNC

The instrument indicates the locked touchscreen by an icon .

Unlocking is possible via VNC, external controls or remote control.

"VNC Only"

Locks the keys at the front panel, the touchscreen and externally connected keyboard and mouse.

The display on the screen remains and shows the current settings and changes.

The instrument indicates the activated "VNC only" feature by the icon .

Unlocking is possible via VNC or turning off and on again.

"Display Only"

Locks the manual operation of the instrument. The display on the screen remains and shows the current settings and changes.

This security feature protects the instrument against unauthorized access, but still shows the current settings and processes, for example when you operate the instrument via remote control.

The function disables:


- The touchscreen functionality of the display
- The keys at the front panel of the instrument
- The external mouse and keyboard

The instrument indicates the locked controls by a padlock  softkey.

How to unlock: see ["Unlocking \(reactivating\) the user interface for manual operation"](#) on page 276.

"Disabled" Locks the display and all controls for the manual operation of the instrument.  
This security feature protects the instrument against unauthorized reading and access, for example when you operate the instrument via remote control.  
The function disables:

- The display
- The touchscreen
- The keys at the front panel of the instrument
- The external mouse and keyboard

The screen shuts off and displays a padlock symbol  instead.  
How to unlock: see ["Unlocking \(reactivating\) the user interface for manual operation"](#) on page 276.

Remote command:

:SYSTem:ULOCK on page 540

:SYSTem:DLOCK on page 539

:SYSTem:KLOCK on page 539

#### Enabling a locked user interface for manual operation

Follow the instructions listed in ["Unlocking \(reactivating\) the user interface for manual operation"](#) on page 276.

Remote command:

:SYSTem:ULOCK on page 540

:SYSTem:DLOCK on page 539

:SYSTem:KLOCK on page 539


### 10.4.3 Configuring LAN services

Access:

1. Select "System Config > Setup > Security > Security > LAN Services > Common Services".
2. **NOTICE!** Risk of loosing access over LAN. Disabling the LAN interface or the common services "SCPI over LAN", "VNC" and "HTTP" locks the remote access to the instrument.


Do not disable the LAN interface or LAN services needed for remote control while you operate the instrument remotely.

Proceed with step [step 4](#) for troubleshooting disabled services.

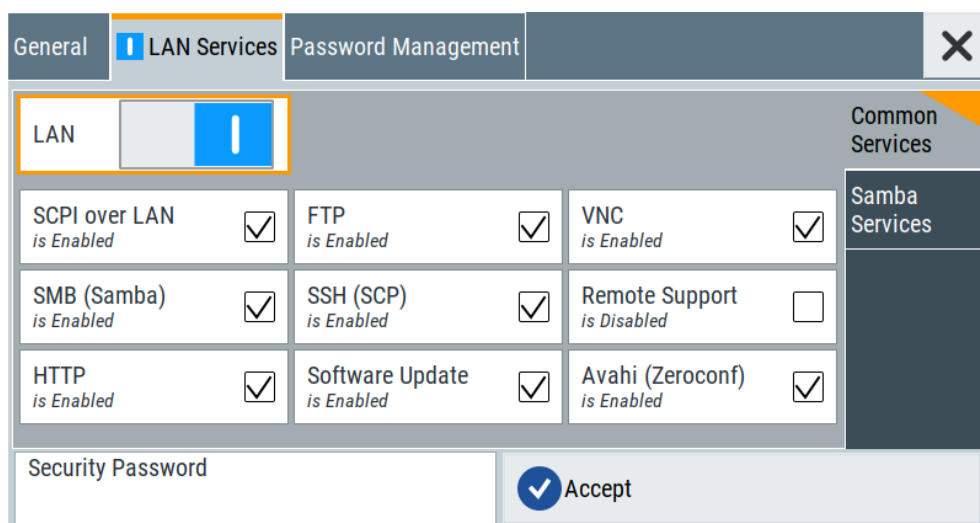

In the "Common Services" side tab, you can individually disable the supported services of the LAN interface.

3. Disable LAN services as needed.
  - a) Disable the service.
  - b) To confirm disabling, enter the security password.
  - c) Select "Accept".
4. If you have locked the access accidentally, you have the following options:
  - Update the instrument firmware using ISO image (`<instrument>_<version-number>.iso`).  
**Note:** A firmware update with the ISO image resets the instrument. The instrument reset dismisses user-specific configurations and deletes user data. Contact the Rohde & Schwarz (<https://www.rohde-schwarz.com/support>) to get the ISO image.
  - Ship the instrument to your local service department. The service center experts can enable the remote access over LAN without losing user-specific settings and data.  
 See [www.services.rohde-schwarz.com](http://www.services.rohde-schwarz.com).
5. Select "System Config > Setup > Security > Security > LAN Services > Samba Services".

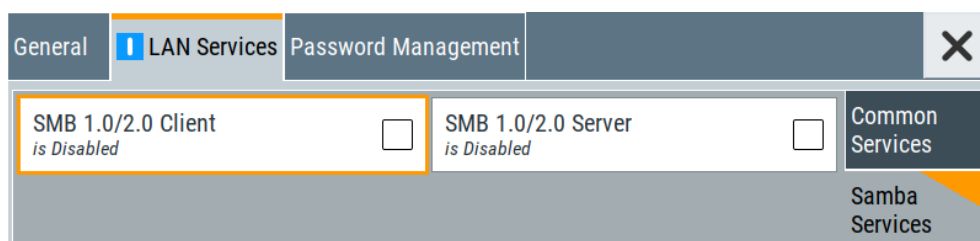

In the "Samba Services" side tab, you can activate former versions of the SMB client and SMB server.

The remote commands available to control security settings are described in [Chapter 12.16, "SYSTEM subsystem"](#), on page 531.

How to:

- ["To disable LAN access in general"](#) on page 273
- ["To disable LAN services individually"](#) on page 274
- ["To enable SMB version 1.0/2.0 client and server"](#) on page 275

Common Services.....	268
L LAN.....	268
L LAN Services.....	268
Samba Services.....	269
L SMB 1.0/2.0 Client.....	269
L SMB 1.0/2.0 Server.....	270
Security Password.....	270
Accept.....	270

### Common Services

Enables the LAN interface and supported LAN interface services.

#### LAN ← Common Services

Enables the LAN interface in general, and thus provides remote access over all unlocked services.

Remote command:

`:SYSTEM:SECURITY:NETWORK[:STATe]` on page 553

#### LAN Services ← Common Services

Enables the supported LAN interface services individually.

"SCPI over LAN"

Access over LAN to control the instrument remotely, by using SCPI (Standard Commands for Programmable Instruments) commands. See also ["To set up the controller with R&S VISA"](#) on page 329 and ["To start remote control with R&S VISA"](#) on page 332

Remote command:

`:SYSTEM:SECURITY:NETWORK:SOE[:STATe]` on page 552

"VNC"

Access over VNC (Virtual Network Computing) interface, a graphical desktop sharing system that uses RFB protocol to control the instrument remotely.

See also [Chapter 11.14, "To operate the instrument using VNC"](#), on page 349.

Remote command:

`:SYSTEM:SECURITY:NETWORK:VNC[:STATe]` on page 553

- "SSH (SCP)" Access over SSH (Secure Shell), a network protocol for secure data communication.  
Remote command:  
`:SYSTEM:SECURITY:NETWORK:SSH[:STATE]` on page 552
- "Remote Support"  
Remote support over SSH (SCP).  
The service provides communication for service purposes only.  
Remote command:  
`:SYSTEM:SECURITY:NETWORK:REMSupport[:STATE]`  
on page 551
- "HTTP" Access with HTTP (Hyper Text Transfer Protocol), the application protocol for hypermedia information systems.  
Remote command:  
`:SYSTEM:SECURITY:NETWORK:HTTP[:STATE]` on page 551
- "FTP" Access with FTP (File Transfer Protocol), used to transfer files from a host to the instrument and vice versa.  
See also [Chapter 9.9.2, "Accessing the file system using FTP"](#), on page 226.  
Remote command:  
`:SYSTEM:SECURITY:NETWORK:FTP[:STATE]` on page 550
- "SMB (Samba)"  
Access to SMB (Server Message Block), used for providing shared access to files, printers and serial ports of a network.  
See also [Chapter 9.9.3, "Accessing the R&S SMB100B file system using SMB \(Samba\)"](#), on page 227.  
Remote command:  
`:SYSTEM:SECURITY:NETWORK:SMB[:STATE]` on page 552
- "Avahi (Zeroconf)"  
Avahi, a service for automatic configuration of the instrument in a network environment.  
Remote command:  
`:SYSTEM:SECURITY:NETWORK:AVAHi[:STATE]` on page 550
- "Software Update"  
Allows updating the software.  
Remote command:  
`:SYSTEM:SECURITY:NETWORK:SWUPDATE[:STATE]` on page 553

**Samba Services**

Enables support of SMB client and SMB server version 1.0 and 2.0 of the SMB protocol.

Support of version 1.0 and 2.0 is additional to the current SMB protocol version supported in the firmware. This firmware supports SMB protocol up to version 3.1.1.

**SMB 1.0/2.0 Client ← Samba Services**

Enables support of the SMB client compatible with SMB protocol versions 1.0 and 2.0.

**SMB 1.0/2.0 Server ← Samba Services**

Enables support of the SMB server compatible with SMB protocol versions 1.0 and 2.0.

**Security Password**

Enters the password that is required to enable or to disable the settings protected by a security password. Default is 123456.

How to: ["To change the security password"](#) on page 273

**Accept**

Applies the modified settings, provided the security password is entered and correct.

## 10.4.4 Password management


Access:

1. Select "System Config > Setup > Security > Security > Password Management > User Password".

General	LAN Services	Password Management
Valid for VNC, FTP and SMB (Samba) access		User Password
User Name		Security Password
instrument		
Old Password		
New Password		
Confirm Password		
Change Password		

In this tab, you can assign the security and a user-defined password.

2. Select "System Config > Setup > Security > Security > Password Management > Security Password".

General	LAN Services	Password Management	
Old Password		User Password	
New Password		Security Password	
Confirm Password			
		 Change Password	

How to:

- ["To change the user password of the instrument"](#) on page 273.
- ["To change the security password"](#) on page 273.

### User Name

Indicates the user name used for access to the Linux operating system and valid for VNC, FTP and SMB (Samba) access.

### User Password

Access: select "System Config > Setup > Security > Security > Password Management > User Password".

Allows you to change and confirm the user password.

### Old Password ← User Password

Enters the current user password. The default password is "instrument".

**Note:** We recommend that you change the default password before connecting the instrument to a network.

How to:

- ["To change the user password of the instrument"](#) on page 273.
- ["To change the security password"](#) on page 273.

**Note:** Note that you cannot reset the password to factory state.

If you encounter problems with the password, contact the Rohde & Schwarz customer support, see [Chapter 13.10, "Contacting customer support"](#), on page 606.

### New Password ← User Password

Enters the new user password.

The security password can contain decimal characters only.

### Confirm Password ← User Password

Confirms the new user password by repeating.

How to:

- ["To change the user password of the instrument"](#) on page 273.

- ["To change the security password"](#) on page 273.

**Change Password ← User Password**

Changes the user password accordingly.

**Security Password**

Access: select "System Config > Setup > Security > Security > Password Management > Security Password".

Enables you to change and confirm the security password.

**Old Password ← Security Password**

Enters the currently used security password. The default password is '123456'.

**Note:** We recommend that you change the default password before connecting the instrument to a network.

How to:

- ["To change the user password of the instrument"](#) on page 273.
- ["To change the security password"](#) on page 273.

The security password is required when changing the status of the USB and LAN interface or other security settings.

**Note:** Note that you cannot reset the password to factory state.

If you encounter problems with the password, contact the Rohde & Schwarz customer support, see [Chapter 13.10, "Contacting customer support"](#), on page 606.

**New Password ← Security Password**

Enters the new security password.

The security password can contain decimal characters only.

**Confirm Password ← Security Password**

Confirms the new security password by repeating.

How to:

- ["To change the user password of the instrument"](#) on page 273.
- ["To change the security password"](#) on page 273.

**Change Password ← Security Password**

Changes the password accordingly.

## 10.4.5 Preventing unauthorized access

The default computer name and user password are *instrument*. The user password is the password required for VNC, FTP and SMB (samba) connections. If for example, the VNC service or FTP are enabled, anyone in the network who knows the computer name and user password of the instrument can access it.

The default security password is *123456*. The security password is required when changing the status of the USB and LAN interfaces.



To prevent unauthorized access, use the following configurations exclusively or complementary:

- ["To change the user password of the instrument"](#) on page 273
- ["To change the security password"](#) on page 273
- ["To disable LAN access in general"](#) on page 273
- ["To disable LAN services individually"](#) on page 274
- ["To enable SMB version 1.0/2.0 client and server"](#) on page 275
- ["To disable frequency and level indication in the status bar"](#) on page 275
- ["To disable the user interface"](#) on page 276

If security is a concern, see the document instrument security procedures for comprehensive description.

### To change the user password of the instrument

- **Note:** We recommend that you change the default password before connecting the instrument to a network.

How to:

- ["To change the user password of the instrument"](#) on page 273.
  - ["To change the security password"](#) on page 273.
- a) Select "System Config > Setup > Security > Security > Password Management > User Password".
  - b) Enter the current password in the "Old Password" field.
  - c) Enter the new password in the "New Password" and "Confirm Password" fields.
  - d) Select "Change Password".

The user password is changed; the user name is displayed ("Security > Password Management > User Password > User Name").

### To change the security password

- **Note:** We recommend that you change the default password before connecting the instrument to a network.

How to:

- ["To change the user password of the instrument"](#) on page 273.
  - ["To change the security password"](#) on page 273.
- a) Select "System Config > Setup > Security > Security > Password Management > Security Password".
  - b) Enter the current password in the "Old Password" field.  
The default password is *123456*.
  - c) Enter the new password in the "New Password" and "Confirm Password" fields.
  - d) Select "Change Password".

### To disable LAN access in general

1. **NOTICE!** Risk of loosing access over LAN. Disabling the LAN interface or certain services lock the remote access to the instrument.

The following services lock the remote access when disabled: "LAN", "SCPI over LAN", "VNC" and "HTTP".

If you have locked the access accidentally, you have the following options:

- Update the instrument firmware using ISO image (`<instrument>_<version-number>.iso`).  
**Note:** A firmware update with the ISO image resets the instrument. The instrument reset dismisses user-specific configurations and deletes user data. Contact the Rohde & Schwarz (<https://www.rohde-schwarz.com/support>) to get the ISO image.
- Ship the instrument to your local service department. The service center experts can enable the remote access over LAN without losing user-specific settings and data.  
See [www.services.rohde-schwarz.com](http://www.services.rohde-schwarz.com).

2. Select "System Config > Setup > Security > Security".
3. Select "LAN Services > Common Services".
4. Disable "LAN" state.
5. Enter the [Security Password](#).
6. Select "Accept".

All LAN connections are blocked, including the LAN services. Communication over LAN is not possible.

#### To disable LAN services individually

1. Select "System Config > Setup > Security > Security".
2. Select "LAN Services > Common Services".
3. Uncheck all services you want to block, for example "FTP > Off" or "VNC > Off".

General		LAN Services	Password Management	X	
LAN	<input type="checkbox"/>	Common Services			
SCPI over LAN <i>is Enabled</i>	<input checked="" type="checkbox"/>	FTP <i>is Disabled</i>	<input type="checkbox"/>	VNC <i>is Disabled</i>	<input type="checkbox"/>
SMB (Samba) <i>is Enabled</i>	<input checked="" type="checkbox"/>	SSH (SCP) <i>is Disabled</i>	<input type="checkbox"/>	Remote Support <i>is Disabled</i>	<input type="checkbox"/>
HTTP <i>is Disabled</i>	<input type="checkbox"/>	Software Update <i>is Enabled</i>	<input checked="" type="checkbox"/>	Avahi (Zeroconf) <i>is Enabled</i>	<input checked="" type="checkbox"/>
Security Password		<input checked="" type="checkbox"/> Accept			

4. Uncheck the services you want to block, for example "FTP" and "VNC".

5. Enable "LAN" state, if disabled.
6. Enter the [Security Password](#).
7. Select "Accept".


Communication over LAN is possible for the enabled services only.

#### To enable SMB version 1.0/2.0 client and server

By default, support of SMB client and SMB server of the SMB protocol versions 1.0 and 2.0 is disabled.

Activate support only, if needed:

1. Select "System Config > Setup > Security > Security".
2. Select "LAN Services > Samba Services".

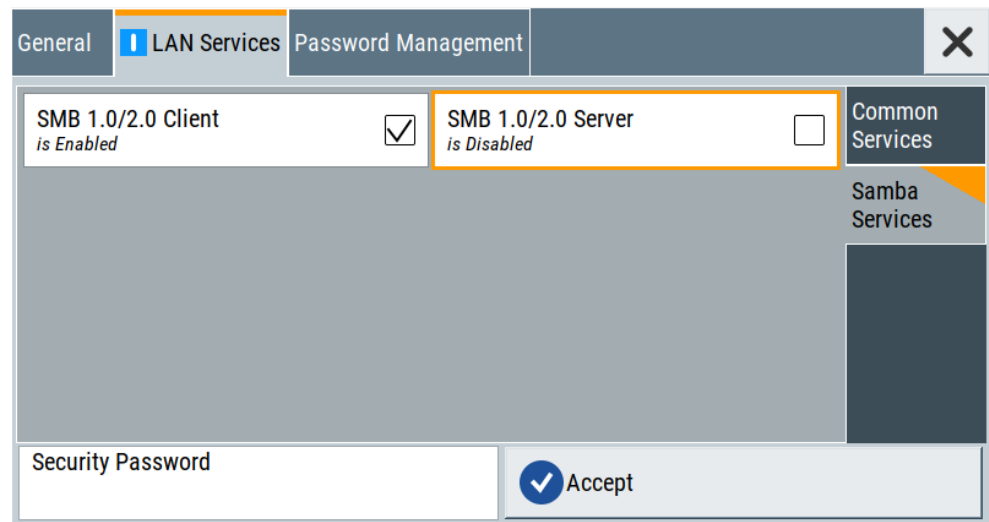

3. For example, check "SMB 1.0/2.0 Client".
4. Select "SMB 1.0/2.0 Client > On" and "SMB 1.0/2.0 Server > On".
5. Enter the [Security Password](#).
6. Select "Accept".

Enables the access for the SMB Samba client, the access for the SMB Samba server remains blocked.

#### To disable frequency and level indication in the status bar

These settings are useful to prevent unauthorized personnel from reading the display, when you remotely control the instrument from a different location.

1. Select "System Config > Setup > Security > General > Manual Operation".
2. Select "Annotation Frequency > Off" or "Annotation Amplitude > Off".
3. Enter the [Security Password](#).

4. Select "Accept".

#### To disable the user interface


1. Select "System Config > Setup > Security > General > Manual Operation".
2. Select "User Interface > Disabled".
3. Enter the [Security Password](#).
4. Select "Accept".

The screen shuts off and displays a padlock symbol  instead.

There are further possible configurations. For details, see ["User Interface"](#) on page 265.

#### Unlocking (reactivating) the user interface for manual operation

1. In manual operation:
  - a) On the instrument's keypad or external keyboard, press any key.  
The instrument prompts you to enter the security password for unlocking.

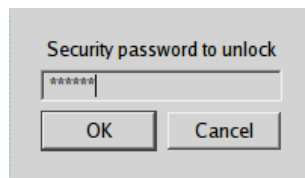

If you press the character of the first key, the input field accepts the character immediately.

- b) Delete the entry before inserting the password.  
Enter the security password 123456.
2. In remote control mode:
    - a) Send the command `SYST:ULOC ENABled` to release all locks at once.
    - b) Send the command `SYST:KLOC OFF` to unlock the keyboard and touchscreen.
    - c) Send the command `SYST:DLOC OFF` to release all locks.

Via remote control, there is no password required.

## 10.5 Undoing or restoring actions

"Undo" is a function that removes the effect of the last action on the instrument and reverts it to an older state. Conversely, "Redo" restores a previously undone action.


You can "Undo/Redo" actions according to two criteria:

- Step by step  
Gradually undo/redo the actions in reverse order as previously performed.  
Depending on the available memory the "Undo/Redo" steps may restore all actions.

- Multiple steps at once  
Select any specific action in the history list to "Undo/Redo" multiple actions in a single step.  
**Note:** This mode requires a system restoration file on the instrument.

**Access:**

- ▶ Select "Setup > Settings > Undo/Redo".

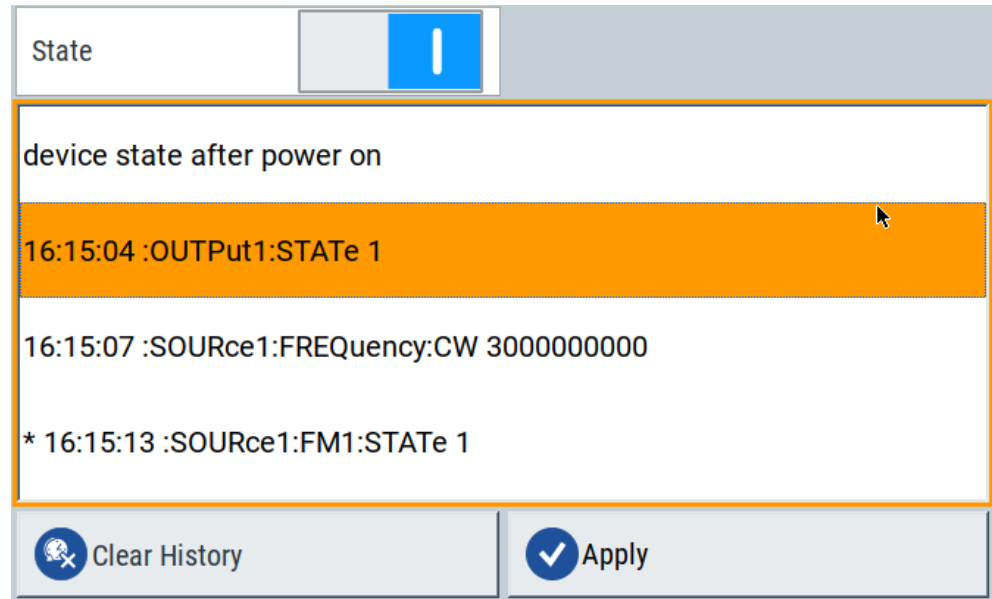

The dialog contains all functions for enabling the "Undo/Redo" functionality.

**Settings:**

State.....	277
History List.....	277
Clear History.....	277
Apply.....	277

**State**

Enables the recording of the performed actions.

**History List**

Lists the performed actions, provided "Undo/Redo" state is "On".

**Clear History**

Deletes the recorded list of the performed steps.

**Apply**

Performs the "Undo/Redo".

If you select a previously performed action of the list, all subsequent actions are undone. The list entries remain.


If you select a subsequently executed action, you can restore all the actions undone up to this state.

## 10.6 Shutting down and rebooting the instrument

The [On/Standby] front panel key switches the instrument from the standby to the ready state or vice versa. In remote operation from a remote computer or in manual control, there is another possibility to shut down the instrument or to reboot the system.

Access:

- ▶ Select "System Config > Setup > Maintenance > Shut Down".

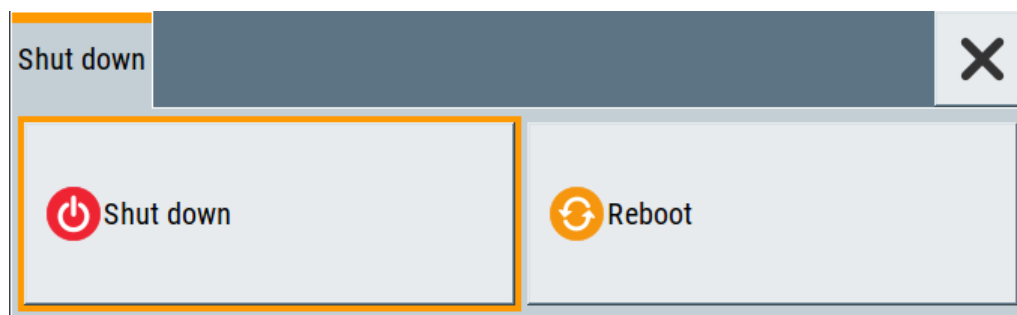

- [:SYSTem:REBoot](#) on page 561
- [:SYSTem:SHUTdown](#) on page 561

# 11 Network operation and remote control

As an alternative to the interactive operation directly at the instrument, you can operate the R&S SMB100B also from a remote location.

The various interfaces provide flexible access to the instrument, such as *remote control*, *remote operation* or *remote file access*. These remote access modes are fundamentally different, although they are often considered interchangeable, as described in [Overview of remote access modes](#).


[Figure 11-1](#) shows the possibilities of the physical connection (interfaces) for remote access.



The following descriptions provide information required for operating the R&S SMB100B remotely. The information applies to all applications and operating modes supported by the instrument. Definitions specified in the SCPI standard are not provided.

For basic knowledge on remote control operation and additional information, see the following documents, available on the Rohde & Schwarz website:

- [Remote control via SCPI](#)
- [1GP72: Connectivity of Rohde&Schwarz Signal Generators](#)
- [1MA208: Fast Remote Instrument Control with HiSLIP](#)

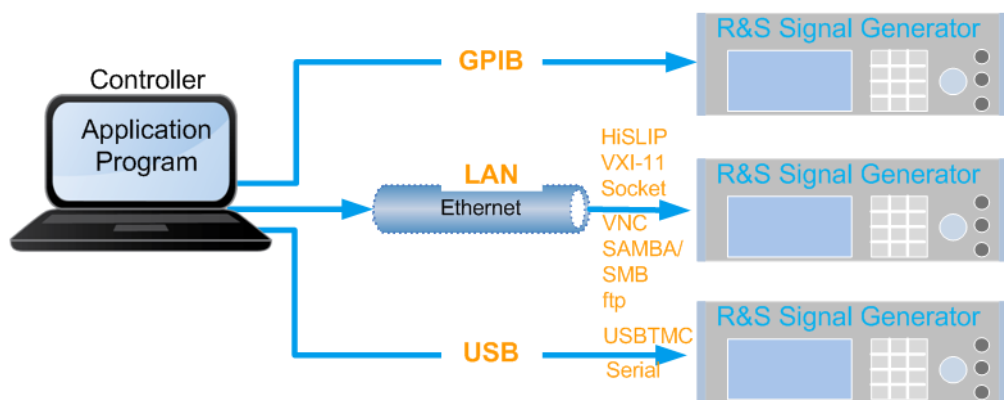

**Figure 11-1: Supported remote connections**

• <a href="#">Overview of remote access modes</a> .....	280
• <a href="#">Remote control interfaces and protocols</a> .....	281
• <a href="#">Remote control programs and libraries</a> .....	286
• <a href="#">Status reporting system</a> .....	289
• <a href="#">Remote access settings</a> .....	292
• <a href="#">LXI settings</a> .....	315
• <a href="#">To configure the instrument for remote access</a> .....	323
• <a href="#">To establish a remote control session over LAN</a> .....	328
• <a href="#">To establish a remote control session over GPIB</a> .....	335
• <a href="#">To establish a remote control session over USB</a> .....	336

- [To trace messages with the LXI web browser interface](#)..... 337
- [To return to manual operation](#)..... 337
- [To automate tasks with remote command scripts](#)..... 338
- [To operate the instrument using VNC](#)..... 349
- [References](#)..... 355

## 11.1 Overview of remote access modes

This section outlines the possible access modes and their major characteristics.

### Remote control (SCPI)

- A remote PC controls the instrument, usually via VISA (Virtual Instrument Software Architecture) interfaces.
- Remote control disables the manual operation of the instrument; you can set different lock states.
- The GUI is not visible.
- Remote control commands (SCPI) perform the settings, either individually or in sequences (SCPI programs).
- Using SCPI programs is faster than the manual operation, since they automate repeating applications.

### Remote operation (VNC)

- A remote device accesses the instrument via the common platform technology VNC (Virtual Network Computing).
- The protocol allows simultaneous operation from several remote devices and the instrument nevertheless remains locally operable.
- The GUI is visible.
- To perform the settings, you can operate the instrument as with the manual control.
- During remote operation via VNC, the direct control of the instrument is not disabled.  
You can control the instrument from the front panel and via the remote computer alternately.
- Clients supporting remote operation depend on the used remote device, see [Table 11-1](#).
- How to: see [Chapter 11.14, "To operate the instrument using VNC"](#), on page 349.



Table 11-1: Supported VNC operation modes

Remote device	VNC client	Requirements	Characteristics
Desktop (Windows, Linux, Mac™OS)	<ul style="list-style-type: none"> <li>• Ultr@VNC</li> <li>• Other dedicated client software</li> </ul>	<i>Ultr@VNC or Client Software</i> must be installed.	Fast, supports several options like full screen mode or auto-login.
	<ul style="list-style-type: none"> <li>• Any web browser</li> </ul>	<i>Java Runtime</i> must be installed and activated in the browser settings.	Fast and convenient - only the instrument address required. Java runtime is sometimes considered as security concern.
	<ul style="list-style-type: none"> <li>• Web browser with HTML5</li> </ul>	<i>Web sockets</i> must be supported.	Slower than the other modes. No additional installation or activation required. No security concern.
Smart device (Tablet/ smartphone)	<ul style="list-style-type: none"> <li>• Dedicated client App</li> </ul>	<i>App</i> must be installed.	Fast, supports several options like full screen mode or auto-login.
	<ul style="list-style-type: none"> <li>• Web browser with HTML5</li> </ul>	<i>Web sockets</i> must be supported.	Support of QR code scanning Slower than a dedicated App.

### Remote file access (FTP, SAMBA/SMB)

- A remote client accesses the instrument's file system, using the protocols FTP (file transfer protocol) and SAMBA/SMB (server message block).
- The protocols enable you to transfer files from or to the instrument and to get direct access to its file sharing directory *share*.

How to:

[Chapter 9.9.2, "Accessing the file system using FTP"](#), on page 226.

[Chapter 9.9.3, "Accessing the R&S SMB100B file system using SMB \(Samba\)"](#), on page 227

["To enable SMB version 1.0/2.0 client and server"](#) on page 275

## 11.2 Remote control interfaces and protocols

The instrument supports various interfaces for remote control. [Table 11-2](#) gives an overview on the connectivity:

Table 11-2: Remote control interfaces and protocols

Interface	Protocols, VISA <sup>*)</sup> address string and library	Remarks
Local area network (LAN)	<ul style="list-style-type: none"> <li>• <b>HISLIP</b> High-Speed LAN Instrument Protocol (IVI-6.1) TCP/IP::host address::hislip0[::INSTR] VISA</li> <li>• <b>VXI-11</b> TCP/IP::host address[:: LAN device name][::INSTR] VISA</li> <li>• <b>Socket communication</b> (Raw Ethernet, simple Telnet) TCP/IP::host address[:: LAN device name]::&lt;port&gt;::SOCKET VISA or socket controller</li> </ul>	<p>The LAN connector is at the rear panel of the instrument.</p> <p>The interface is based on TCP/IP, see <a href="#">Chapter 11.2.1, "LAN interface"</a>, on page 282 for details on the address information.</p>
USB	<ul style="list-style-type: none"> <li>• <b>USBTMC</b> USB::&lt;vendor ID&gt;::&lt;product ID&gt;:: &lt;serial number&gt;[::INSTR] VISA</li> </ul>	<p>The USB In connector is at the rear panel of the instrument.</p> <p>For a description of the interface, see <a href="#">Chapter 11.2.2, "USB interface"</a>, on page 284</p>
GPIB (IEC/IEEE Bus Interface)	<ul style="list-style-type: none"> <li>• VISA<sup>*)</sup> address string: GPIB::&lt;address&gt;[::INSTR] (no secondary address) VISA (optional)</li> </ul>	<p>The optional GPIB bus interface according to standard IEC 625.1/IEEE 488.1 is at the rear panel of the instrument.</p> <p>For a description of the interface, see <a href="#">Chapter 11.2.3, "GPIB interface (IEC/IEEE bus interface)"</a>, on page 285.</p>

<sup>\*)</sup> VISA (Virtual Instrument Software Architecture) is a standardized software interface library providing input and output functions to communicate with instruments. A VISA installation on the controller is a prerequisite for remote control over LAN (when using VXI-11 or HiSLIP protocol), USB and serial interface. When using socket communication or the GPIB interface, VISA installation is optional. For basic information, see [Remote control via SCPI](#).



[www.rohde-schwarz.com/rsvisa](http://www.rohde-schwarz.com/rsvisa) provides the standardized I/O software library R&S VISA for download at the Rohde & Schwarz website [www.rohde-schwarz.com/rsvisa](http://www.rohde-schwarz.com/rsvisa).

How to: [Chapter 11.8, "To establish a remote control session over LAN"](#), on page 328 describes how to configure the remote control interfaces.

- [LAN interface](#)..... 282
- [USB interface](#)..... 284
- [GPIB interface \(IEC/IEEE bus interface\)](#)..... 285
- [LXI browser interface](#)..... 286

## 11.2.1 LAN interface

The LAN interface of the instrument consists of a connector, a network interface card and protocols.

For remote control, the instrument and the controller PC must be connected to a common network with TCP/IP network protocol.

There are two methods to establish a LAN connection to the instrument:

- A non-dedicated network (Ethernet) connection from the instrument to an existing network.
- A dedicated network connection (Point-to-point connection) between the instrument and a single computer.

How to: [Chapter 3.1.7, "Connecting to LAN"](#), on page 25



### Identifying instruments in a network

If several instruments are connected to the network, each instrument has its own IP address and associated resource string. The controller identifies these instruments by the resource string.

### VISA resource strings

The VISA resource string is required to establish a communication session between the controller and the instrument in the LAN. The resource string is a unique identifier, composed of the specific IP address of the instrument and some network and VISA-specific keywords.

**TCPIP::<host address>[:<LAN device name>][:INSTR]**

TCPIP	= designates the network protocol
host address	= designates the IP address or hostname of the instrument
[:LAN device name]	= defines the protocol and the instance number of a subinstrument
[:INSTR]	= indicates the instrument resource class (optional)

The **IP address** (host address/computer name) is used by the programs to identify and control the instrument. It is automatically assigned by the DHCP server the first time the device is registered in the network. Optionally, you can also assign its **LAN device name**.

If assigned, the IP address is displayed in the home screen.

The following section lists the characteristics of the VISA resource strings for the corresponding interface protocols. The emphasized characters determine the protocol.



For description of the interface protocols, control commands and messages, refer to [Remote control via SCPI](#).

### HiSLIP

**TCPIP::<host address>::hislip0[:INSTR]**

hislip0 = HiSLIP device name, designates that the interface protocol HiSLIP is used (mandatory)

**hislip0** is composed of `[::HiSLIP device name[,HiSLIP port]]` and must be assigned.

**Example:**

```
TCPIP::192.1.2.3::hislip0
```

**VXI-11**

```
TCPIP::<host address>[::inst0][::INSTR]
```

[::inst0] = LAN device name, indicates that the VXI-11 protocol is used (optional)

**inst0** currently selects the VXI-11 protocol by default and can be omitted.

**Example:**

```
TCPIP::192.1.2.3::INSTR
```

**Socket communication**

```
TCPIP::<host address>::<port>::SOCKET
```

port = determines the used port number

SOCKET = indicates the raw network socket resource class

Socket communication requires the specification of the port (commonly referred to as port number) and of "SOCKET" to complete the resource string.

Basically, instruments from Rohde & Schwarz use port number 5025 for socket communication.

**Example:**

```
TCPIP::192.1.2.3::5025::SOCKET
```

## 11.2.2 USB interface

Option: R&S SMBB-K986

For remote control using USB, the controller PC and the instrument must be connected over the USB type B interface. Software for instrument control and the VISA program library must be installed on the controller.

The serial interface "RS232" enables you to connect the instrument over serial interface. You can connect to the interface by using the external USB/serial-adapter R&S TS1-USB and a serial crossover (null modem) cable.

For more information, refer to the specifications document.

VISA detects and configures the Rohde & Schwarz instrument automatically when the USB connection is established. You do not have to install a separate driver.

USBTMC (USB Test & Measurement Class Specification) is a protocol that is built on top of USB for communication with USB devices. It defines class code information of the instrument, that identifies its functionality to load the respective device driver. Using

VISA library, the protocol supports service request, trigger, and other specific operations.

### USB resource string

The resource string represents an addressing scheme that is used to establish a communication session with the instrument. It is based on the instrument address and some instrument- and vendor-specific information.

The USB resource string syntax is as follows:

**USB::`<vendor ID>`::`<product ID>`::`<serial number>`[::`INSTR`]**

USB	= denotes the used interface
<code>&lt;vendor ID&gt;</code>	= is the manufacturer ID for Rohde & Schwarz
<code>&lt;product ID&gt;</code>	= is the product identification of the instrument
<code>&lt;serial number&gt;</code>	= is the individual serial number at the rear of the instrument
[:: <code>INSTR</code> ]	= indicates the instrument resource class (optional)

### RS232 resource string

The RS232 resource string represents the addressing scheme for a device connected to the serial interface of the instrument.

The USB resource string syntax is as follows:

**ASRL`<port number>`[::`INSTR`]**

ASRL is the name of the serial interface

`<port number>` is the number of the serial interface

#### Example:

ASRL1::INSTR

## 11.2.3 GPIB interface (IEC/IEEE bus interface)

Option: R&S SMBB-K986

To control the R&S SMB100B over the GPIB bus, the instrument and the controller PC must be connected with a GPIB bus cable. A GPIB bus card, the card drivers and the program libraries for the used programming language must be installed on the controller.



For description of the characteristics, control commands and messages of the GPIB interface, refer to [Remote control via SCPI](#).

### GPIB address

The controller PC addresses the instrument with the GPIB bus channel, see [Chapter 11.5.3, "GPIB address settings"](#), on page 299. GPIB provides channel addresses from 0 to 30.

The GPIB resource string syntax is as follows:

`GPIB::<channel>::INSTR`

GPIB = denotes the used interface  
<channel address> = the used channel  
[::INSTR] = indicates the instrument resource class (optional)

**Note:** If the VISA implementation supports the GPIB interface, you can optionally define the VISA Instrument Control Resource (INSTR). It is used to define the basic operations and attributes for a device, such as reading, writing, or triggering.

**Example:**

`GPIB::28::INSTR`

28 is the selected GPIB bus channel

## 11.2.4 LXI browser interface

The LXI browser interface allows easy configuration of the LAN and remote control of the R&S SMB100B without additional installation requirements. The instrument's LXI browser interface works correctly with all W3C compliant browsers.

See [Chapter 11.15.1, "LXI functionality"](#), on page 355 for more about LXI.

The LAN settings are configured using the instrument's LXI browser interface described in [Chapter 11.6.2.1, "LAN configuration"](#), on page 318.

For LXI status information in the R&S SMB100B, see [Chapter 11.6.1, "LXI status settings"](#), on page 315.

## 11.3 Remote control programs and libraries

This section shows how the remote-control programs access the instrument, and the libraries they require for the corresponding interface protocols.

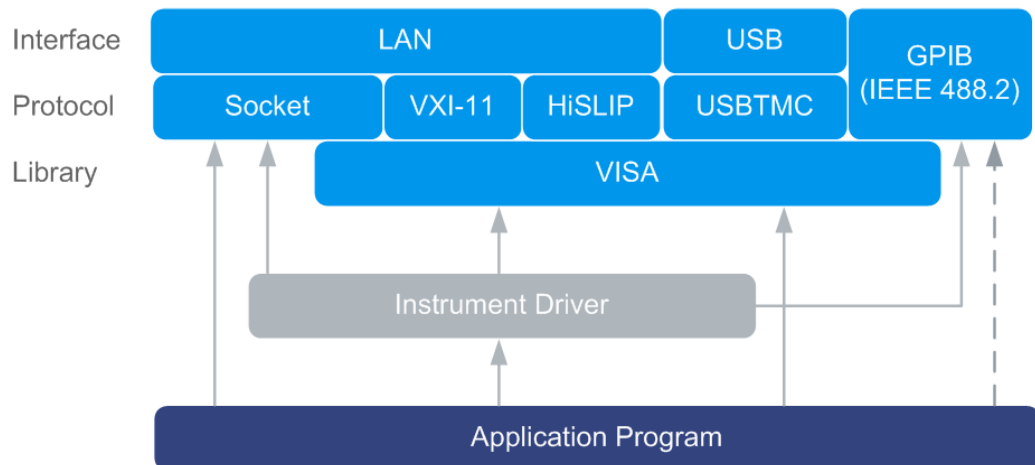


Figure 11-2: Overview of remote control interfaces, protocols and libraries

### Possible setups and access functions

The following examples give an overview of dependencies between the available libraries, the possible interfaces and protocols, and whether an instrument driver is provided. For detailed information, see the application note 1GP72.

#### Example: Remote control (application) program using VISA


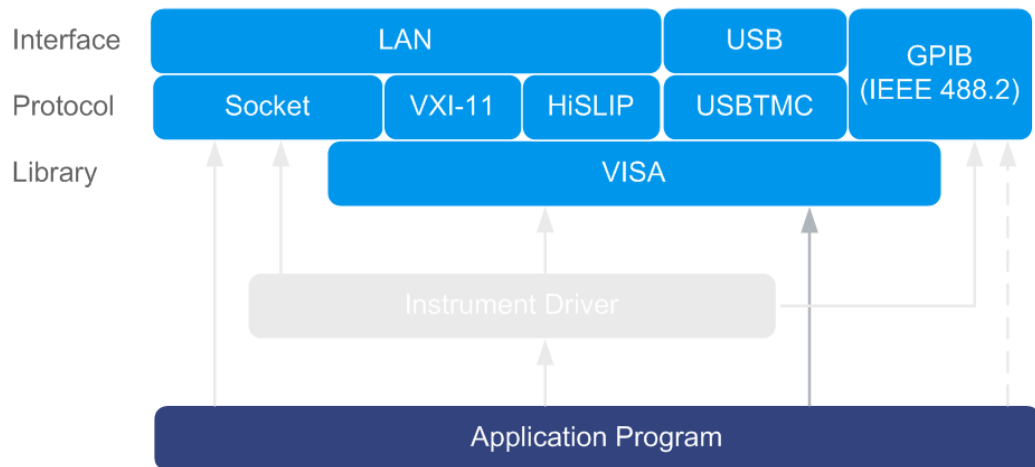


Figure 11-3: Application program using VISA

Protocol	Remote control program
Socket	<code>viOpen (... , "TCPIP:SMB100B-102030::5025::SOCKET", ...)</code> <code>viPrintf (... , "SOUR:FREQ 2GHz\n")</code>
VXI-11	<code>viOpen (... , "TCPIP:SMB100B-102030::inst0::INSTR", ...)</code> <code>viPrintf (... , "SOUR:FREQ 2GHz\n")</code>
HiSLIP	<code>viOpen (... , "TCPIP:SMB100B-102030::hislip0::INSTR", ...)</code> <code>viPrintf (... , "SOUR:FREQ 2GHz\n")</code>

Protocol	Remote control program
USBTCM	<pre>viOpen (... , "USB::0x0AAD::0x01DE::100001::INSTR", ...) viPrintf (... , "SOUR:FREQ 2GHz\n")</pre>
GPIB	<pre>viOpen (... , "GPIB::28::INSTR", ...) viPrintf (... , "SOUR:FREQ 2GHz\n")</pre>


**Example: Remote control program using instrument driver (VISA available)**

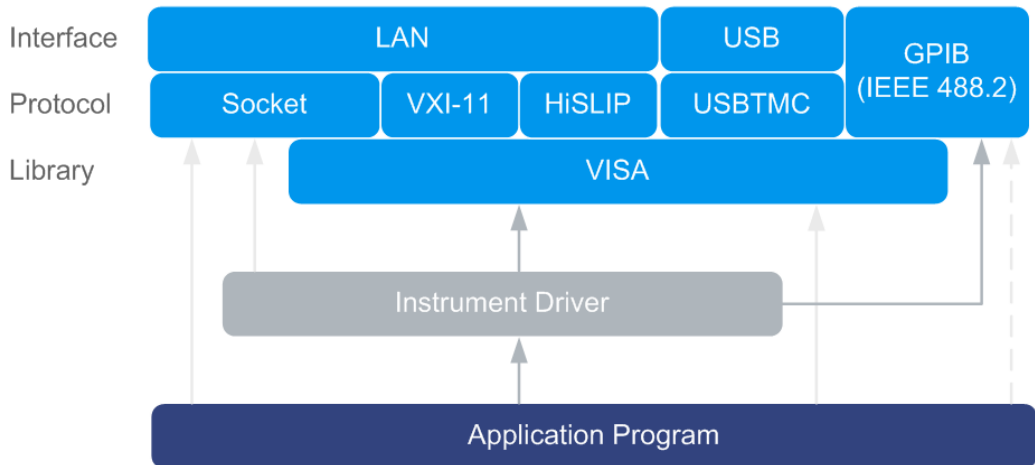

**Figure 11-4: Application using instrument driver (VISA available)**

Protocol	Remote control program
Socket	<pre>rssmb_init ("TCPIP:SMB100B-102030::5025::SOCKET", ...) rssmb_SetFrequency (... , 2e9)</pre>
VXI-11	<pre>rssmb_init ("TCPIP:SMB100B-102030::inst0::INSTR", ...) rssmb_SetFrequency (... , 2e9)</pre>
HiSLIP	<pre>rssmb_init ("TCPIP:SMB100B-102030::hislip0::INSTR", ...) rssmb_SetFrequency (... , 2e9)</pre>
USBTCM	<pre>rssmb_init ("USB::0x0AAD::0x01DE::100001::INSTR", ...) rssmb_SetFrequency (... , 2e9)</pre>
GPIB	<pre>rssmb_init ("GPIB::28::INSTR", ...) rssmb_SetFrequency (... , 2e9)</pre>

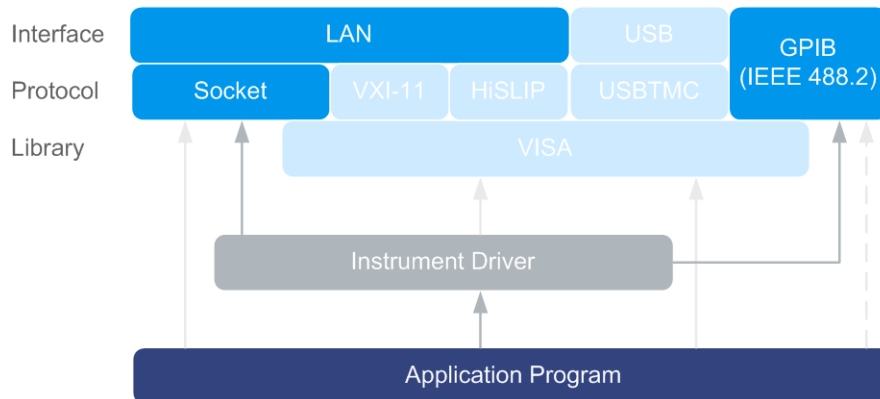

**Example: Remote control program using instrument driver (VISA not available)****Figure 11-5: Remote control program using instrument driver (VISA not available)**

Protocol	Remote control program
Socket	<pre>rssmb_init ("TCPIP:SMB100B-102030::5025::SOCKET", ...) rssmb_SetFrequency (... , 2e9)</pre>
GPIB	<pre>rssmb_init ("GPIB::28::INSTR", ...) rssmb_SetFrequency (... , 2e9)</pre>

## 11.4 Status reporting system

The status reporting system stores all information on the current operating state of the instrument and on errors which have occurred. This information is stored in the status registers and in the error queue. You can query the status of the registers with the remote commands of the [Chapter 12.17, "STATus subsystem"](#), on page 562.

### 11.4.1 Overview of the status registers

The [Figure 11-6](#) shows the hierarchical structure of information in the status registers (ascending from left to right).

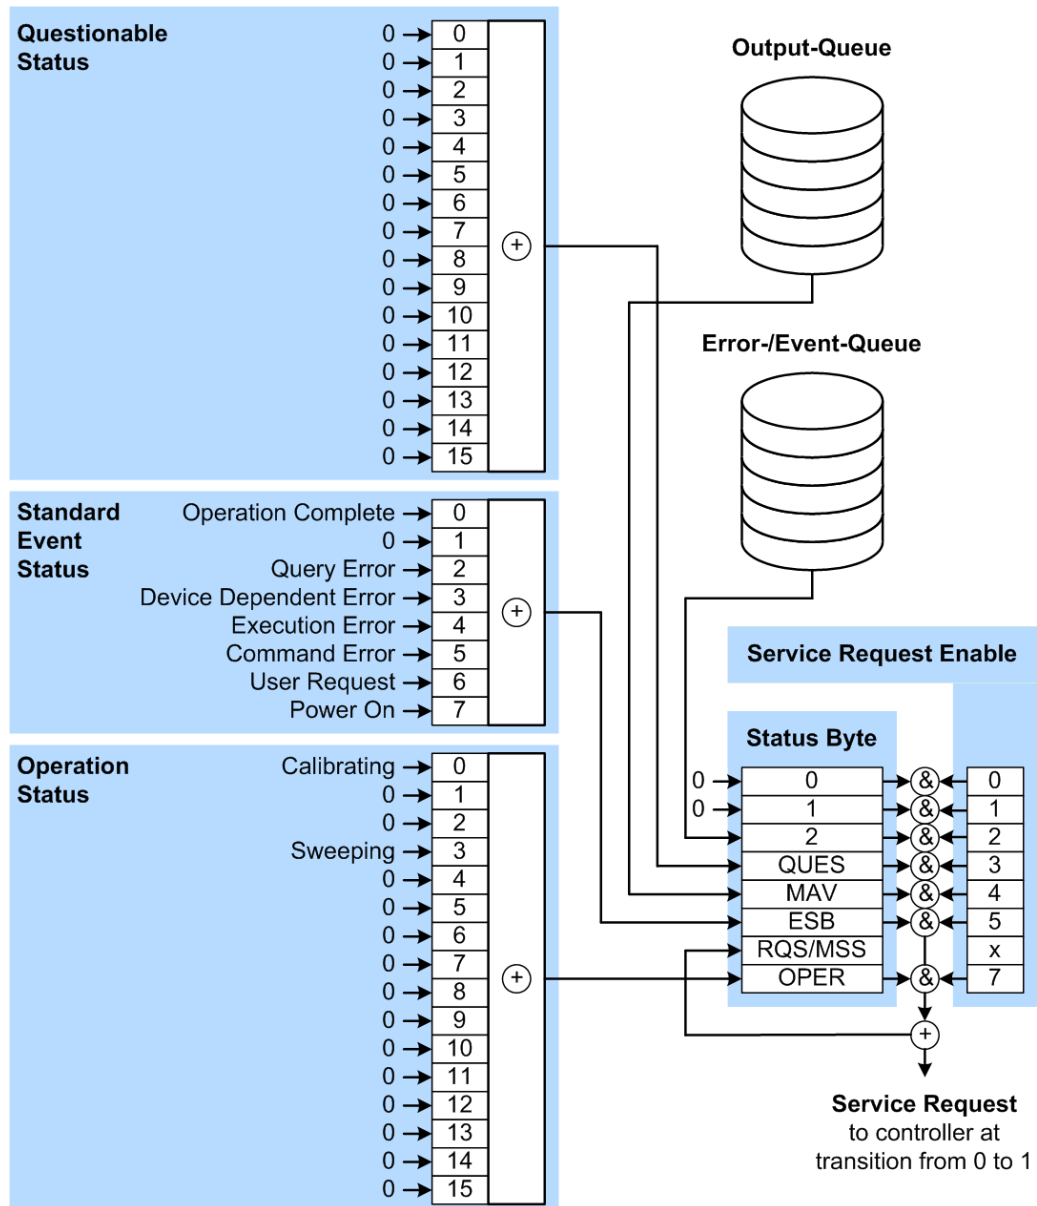


Figure 11-6: Graphical overview of the status registers hierarchy

- OPER = Operation Status Summary Bit
- RQS/MSS = Service Request Generation
- ESB = Standard Event Status Summary Bit
- MAV = Message Available in Output Queue
- QUES = Questionable Status Summary Bit
- 2 = Error- /Event-Queue
- 1, 0 = not used



The following sections describe the instrument-specific bit assignments of the operation status and the questionable status registers.

For more information, see:

- [Remote control via SCPI](#): provides general information on the status reporting system of Rohde & Schwarz instruments. This document also provides information on the standard event status register and the error queue.
- SCPI standard documentation for comprehensive information on the standard

### 11.4.2 Instrument-specific status operation register

The condition part contains information on currently executed actions. The event part covers information on the actions performed since the last readout of the register.

To read the register, use the query commands `:STATus:OPERation:CONDition?` on page 562 and `:STATus:OPERation[:EVENT]` on page 563.

The remote commands for the status questionable register are described in [Chapter 12.17, "STATus subsystem"](#), on page 562.

**Table 11-3: Assignment of the bits used in the operation status register**

Bit No.	Meaning
0	Calibrating The bit is set during the calibration phase.
1–2	Not used
3	Sweeping This bit is set during a sweep in automatic or single mode.
4–15	Not used

### 11.4.3 Instrument-specific status questionable register

This status register contains information on questionable instrument states. Questionable states occur when the instrument is not operated in compliance with its specifications.

To read the register, use the query commands `:STATus:QUEStionable:CONDition` on page 564 or `:STATus:QUEStionable[:EVENT]` on page 564.

The remote commands for the status questionable register are described in [Chapter 12.17, "STATus subsystem"](#), on page 562.

**Table 11-4: Assignment of the bits used in the questionable status register**

Bit No.	Meaning
0–15	Not used

### 11.4.4 Reset values of the status reporting system

The following table contains the different commands and events causing the status reporting system to be reset. None of the commands, except for \*RST and SYSTem:PRESet affect the functional instrument settings. In particular, DCL does not change the instrument settings.

**Table 11-5: Resetting the status reporting system**

Event	Switching on supply voltage Power-On-Status-Clear		DCL, SDC (Device Clear, Selected Device Clear)	*RST or SYSTem: PRESet	STATus: PRESet	*CLS
	0	1				
Clear STB, ESR	-	Yes	-	-	-	Yes
Clear SRE, ESE	-	Yes	-	-	-	-
Clear PPE	-	Yes	-	-	-	-
Clear error queue	Yes	Yes	-	-	-	Yes
Clear output buffer	Yes	Yes	Yes	1)	1)	1)
Clear command processing and input buffer	Yes	Yes	Yes	-	-	-

1) The first command in a command line that immediately follows a <PROGRAM MESSAGE TERMINATOR> clears the output buffer.

## 11.5 Remote access settings

This section outlines the settings required for accessing and configuring the provided remote control interfaces. It includes network settings, access addresses, emulation settings for using the command sets of other generators, and the access with smart devices.

### About instrument emulations

You can remotely control the R&S SMB100B using the command set of another signal generator. With this function you can, for example, replace a signal generator with an R&S SMB100B in an automated test setup, without adjusting the command scripts used.



The R&S SMB100B also covers command sets of Rohde & Schwarz signal generators. To achieve optimal compatibility when replacing an instrument, we recommend that you select the emulation command set for the corresponding signal generator.

You find the remote control command sets supported by the R&S SMB100B in a selection list.

The selected instrument also defines the identification string that is retrieved with query `*IDN?`. If necessary, use the parameter `Mode` and `IDN String` to change this string.

As any other parameter, the remote control command set can also be changed remotely by the command `:SYSTem:LANGuage`.

While working in an emulation mode, the R&S SMB100B specific command set is disabled and the SCPI command `:SYSTem:LANGuage` is discarded.

To return to the SCPI command set of the R&S SMB100B, use the corresponding command of the selected command set.

If for example an HP generator is emulated, the HP command `EX` returns to the instrument-specific GPIB command set.

### About health and utilization monitoring system (HUMS)

The R&S SMB100B comes with a health and utilization monitoring system (HUMS) providing information about the R&S SMB100B. Aim is to increase the overall utilization, to avoid downtime and to increase the overall security level of a fleet of instruments.

HUMS provides, for example, information about:

- Instrument identification, hardware components, software packages, licenses
- Usage of remote control, usage via keyboard / mouse, usage of test applications
- Hardware utilization and status, including S.M.A.R.T. data of the system drive
- User-defined static information, for example, an inventory code

### Interfaces and protocols

The HUMS installation on the R&S SMB100B includes an SNMP agent and a REST service with HTTP endpoints. So you can access the health and usage information via LAN, using the SNMP protocol or the REST protocol. Accessing the data does not interfere with remote control via SCPI commands or with measurement execution.

Reference information for both protocols is available on the R&S SMB100B at the address `http://<instrument>/api/hums/v1/documents?name=<interface>`.

For `<instrument>`, enter the hostname (e.g. `SMB100B-102030`) or the IP address (e.g. `10.121.0.34`) of your instrument, as for access to the GUI.

For `<interface>` = `snmp`, you get a `.zip` file containing the MIB files for SNMP. For `<interface>` = `rest`, you get a web page with the OpenAPI specification of the REST API.

Address example: `http://SMB100B-102030/api/hums/v1/documents?name=snmp`.

The following table lists the REST endpoints and the SNMP MIB file names.

REST endpoint /api/hums/v1/...	SNMP MIB	Description	Typical data
documents	---	developer information	SNMP MIB files, swagger specification of HUMS REST endpoints
greetings	RS-GREETINGS-MIB	identity information	manufacturer, model, serial number, version
equipment/bios	RS-BIOS-INFO-MIB	BIOS information	BIOS manufacturer, version and release date
date-time	RS-TIME-DATE-MIB	time and date information	UTC and local time, timezone, dst (daylight savings time)
device-history	RS-DEVICE-HISTORY-MIB	history events	instrument-specific event information and notifications
device-tags	RS-DEVICE-TAGS-MIB	customer information	user-definable key information, associated with the instrument, e.g. asset number, owner, location
equipment	RS-EQUIPMENT-MIB	footprint information	hardware and software configuration, licenses
hums-info	RS-HUMS-INFO-MIB	basic information on the HUMS service	HUMS version, counter of SNMP and REST requests, amount of collected data, HUMS database size
storage	RS-STORAGE-MIB	S.M.A.R.T. data of drive	system drive temperature, drive health
system-info	RS-SYSTEM-INFO-MIB	a system overview	OS and BIOS version, IP address, locale
system-status	RS-SYSTEM-STATUS-MIB	system status information	global system status, static notifications
utilization	RS-UTILIZATION-MIB	utilization information	instrument activity, e.g., power on time, RF on time, option utilization, remote interface traffic

For detailed information about HUMS and its applications, refer to:

- The R&S®HUMS Health and Utilization Monitoring Service user manual, available on the Rohde & Schwarz website.
- The application note GFM336

### 11.5.1 Network settings

Access:

- ▶ Select "System Config" > "Remote Access" > "Network".

Network	Visa Resource Strings	GPIB Address	RS232	Instrument Emulations	Remote Connections	HUMS	QR-Code
Network Status		● Connected		Restart Network			
Instrument Name							
Hostname		Workgroup					
INSTRUMENT		INSTRUMENT					
Instrument Address							
Address Mode		Auto (DHCP)		Show Connector ...			
IP Address		Subnet Mask		Default Gateway			
10.111.1.17		255.255.252.0		10.111.0.1			
DNS Suffix		DNS Server		MAC Address			
rsint.net		10.0.2.166		08 00 27 55 c0 44			

The "Network" dialog provides settings of the general network environment, and specific identification parameters of the instrument in the network. If necessary, you can configure the instrument address settings manually.

How to: ["To assign the instrument address manually"](#) on page 324.

The remote commands required to configure the network remotely are described in [Chapter 12.16, "SYSTEM subsystem"](#), on page 531.

#### Settings:

<a href="#">Network Status</a> .....	295
<a href="#">Restart Network</a> .....	295
<a href="#">Hostname</a> .....	296
<a href="#">Workgroup</a> .....	296
<a href="#">Address Mode</a> .....	296
<a href="#">IP Address</a> .....	296
<a href="#">Subnet Mask</a> .....	296
<a href="#">Default Gateway</a> .....	297
<a href="#">DNS Suffix</a> .....	297
<a href="#">DNS Server</a> .....	297
<a href="#">MAC Address</a> .....	297

#### Network Status

Indicates that the instrument is connected to the network.

Remote command:

:SYSTEM:COMMunicate:NETWork:STATus? on page 545

#### Restart Network

Terminates the network connection of the instrument and sets it up again. You can use this function to fix network problems.

**Note:** This function restarts only the connection of the instrument to the network. It does not impact the network itself.

Remote command:

:SYSTEM:COMMunicate:NETWork:REStart on page 545

### Hostname

Displays the hostname.

Each instrument is delivered with an assigned hostname, a logical name which can be used instead of the IP address. With the default network settings, the IP address is allocated by the DHCP server. This address can change each time the instrument is reconnected. Unlike the IP address, the hostname name does not change.

#### Note:

This function is password-protected. Unlock the protection level 1 to access it.

- We recommend that you do not change the default network settings or the host-name to avoid problems with the network connection.  
If you change the hostname, be sure to use a unique name.

Remote command:

`:SYSTEM:COMMunicate:NETWork[:COMMON]:HOSTname` on page 545

### Workgroup

Sets the individual windows workgroup name of the R&S SMB100B. This parameter is required in case the instrument is integrated in a windows network.

This function is password-protected. Unlock the protection level 1 to access it.

Remote command:

`:SYSTEM:COMMunicate:NETWork[:COMMON]:WORKgroup` on page 546

### Address Mode

Selects the mode for assigning the IP address.

"Auto (DHCP)"

Assigns the IP address automatically, provided the network supports DHCP (Dynamic Host Configuration Protocol).

"Static"

Enables you to assign the IP address manually.

Remote command:

`:SYSTEM:COMMunicate:NETWork:IPAddress:MODE` on page 544

### IP Address

Displays the IP address of the instrument in the network.

To assign the IP address manually, see ["To assign the instrument address manually"](#) on page 324.

Remote command:

`:SYSTEM:COMMunicate:NETWork:IPAddress` on page 544

### Subnet Mask

Displays the bit group of the subnet in the host identifier.

The TCP/IP protocol is preinstalled with the subnet mask 255.255.255.0. If the DHCP server is available [Address Mode A AUTO \(DHCP\)](#), the setting is read-only. The subnet mask consists of four number blocks separated by dots. Each block contains 3 numbers in maximum (e.g. 100.100.100.100), but also one or two numbers are allowed in a block (as an example see the preinstalled address).

To assign the subnet mask manually, select [Address Mode > Static](#).



**Note:** When assigning the subnet mask manually, make sure that the address matches with the subnet mask of the controlling host interface.

How to: "[To assign the instrument address manually](#)" on page 324.

Remote command:

`:SYSTem:COMMunicate:NETWork[:IPADdress]:SUBNet:MASK` on page 546

### Default Gateway

Displays the gateway address.

This address identifies the router on the same network as the instrument that is used to forward traffic to destinations beyond the local network.

To assign the gateway address manually, select [Address Mode](#) > "Static".

Remote command:

`:SYSTem:COMMunicate:NETWork[:IPADdress]:GATeway` on page 546

### DNS Suffix

Displays the primary DNS (Domain Name System) suffix, that means the DNS name without the hostname part.

The DNS system uses the suffix for registration and name resolution for unique identification of the instrument in the entire network.

To assign the DNS suffix manually, select [Address Mode](#) > "Static".

Remote command:

`:SYSTem:COMMunicate:NETWork[:COMMON]:DOMain` on page 545

### DNS Server

Determines the preferred server for name resolution. The DNS server contains the underlying numerical values that are required for name resolution of the hostname as part of the IP address.

To select the DNS server manually, select [Address Mode](#) > "Static".

Remote command:

`:SYSTem:COMMunicate:NETWork[:IPADdress]:DNS` on page 546

### MAC Address

Indicates the MAC (Media Access Control) address, a unique identifier of the network adapter in the R&S SMB100B.


Remote command:

`:SYSTem:COMMunicate:NETWork:MACaddress` on page 544

## 11.5.2 VISA resource strings

Access:

- ▶ Select "System Config > Remote Access > Visa Resource Strings".

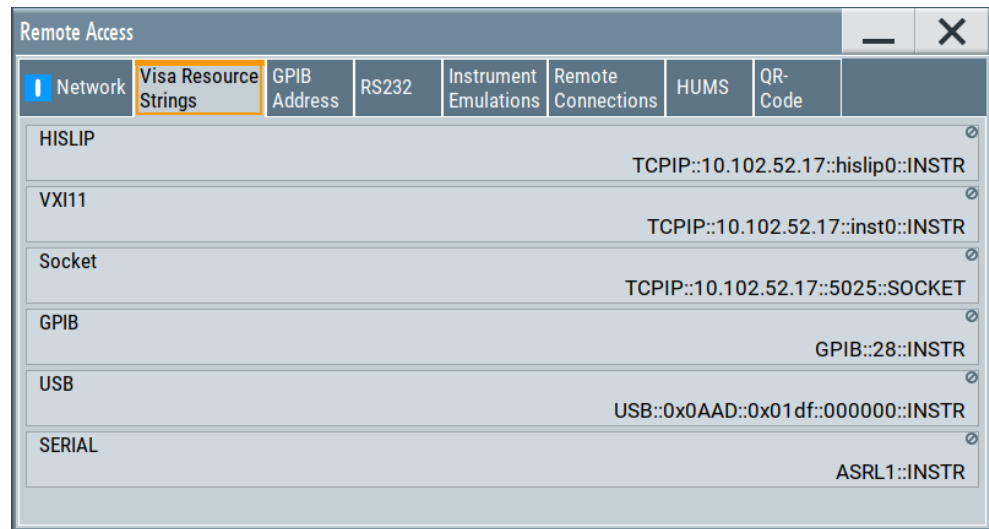

The "Visa Resource String" dialog displays the VISA resource strings provided for remote control over the different interfaces.

The remote commands required to query the address information remotely are described in [Chapter 12.16, "SYSTem subsystem"](#), on page 531.

#### Settings:

<a href="#">HISLIP</a> .....	298
<a href="#">VXI11</a> .....	298
<a href="#">Socket</a> .....	298
<a href="#">GPIB</a> .....	299
<a href="#">USB</a> .....	299
<a href="#">SERIAL</a> .....	299

#### HISLIP

Displays the visa resource string for remote control with HiSLIP protocol.

See also [Chapter 11.2.1, "LAN interface"](#), on page 282.

Remote command:

`:SYSTem:COMMunicate:HISLip:RESource?` on page 543

#### VXI11

Displays the visa resource string for remote control over LAN.

See also [Chapter 11.2.1, "LAN interface"](#), on page 282.

Remote command:

`:SYSTem:COMMunicate:NETWork:RESource?` on page 544

#### Socket

Displays the visa resource string for remote control over LAN, using the socket communication protocol.

See also [Chapter 11.2.1, "LAN interface"](#), on page 282.

Remote command:

`:SYSTem:COMMunicate:SOCKet:RESource?` on page 547

### GPIB

Displays the visa resource string for remote control over the GPIB interface.

See also [Chapter 11.2.3, "GPIB interface \(IEC/IEEE bus interface\)"](#), on page 285.

Remote command:

`:SYSTem:COMMunicate:HISLip:RESource?` on page 543

### USB

Displays the visa resource string for remote control over the USB interface.

See also [Chapter 11.2.2, "USB interface"](#), on page 284.

Remote command:

`:SYSTem:COMMunicate:USB:RESource?` on page 548

### SERIAL

Displays the visa resource string for remote control over the serial interface.

See also [Chapter 11.2.2, "USB interface"](#), on page 284.


Remote command:

`:SYSTem:COMMunicate:SERial:RESource?` on page 547

## 11.5.3 GPIB address settings

Access:

- ▶ Select "System Config > Remote Access > GPIB Address".

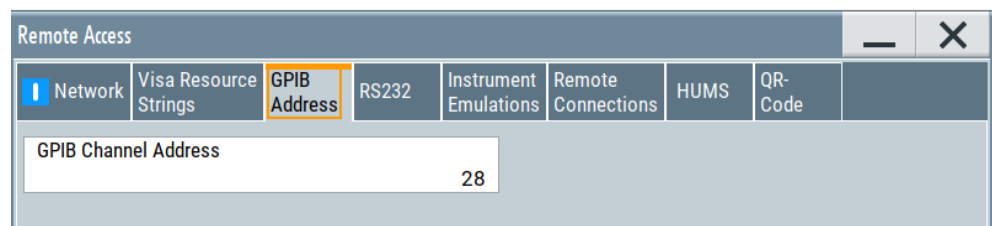

The "GPIB Address" enables you to select the channel for remote control over the IEC/IEE bus interface.

The remote command to configure the setting remotely is described in [Chapter 12.16, "SYSTem subsystem"](#), on page 531.

### Settings:

[GPIB Channel Address](#)..... 299

### GPIB Channel Address

Sets the GPIB (IEC/IEEE bus) channel address for the connected instrument.


Remote command:

:SYSTem:COMMunicate:GPIB[:SELf]:ADDRes on page 543

## 11.5.4 RS232 settings

Access:

- ▶ Select "System Config > Remote Access > RS232".

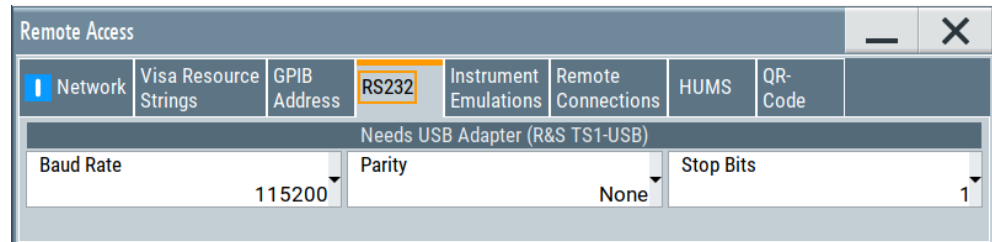

The "RS232" dialog enables you to control the instrument over a serial interface using a USB adapter. The controller and the instrument must be connected with the external USB/serial-adapter R&S TS1-USB and a serial crossover (null modem) cable. The USB connection requires the Visa library to be installed on the controller. Visa detects and configures the R&S SMB100B automatically when the USB connection is established.

For more information, refer to the specifications document.

The remote commands required to configure the parameters remotely are described in [Chapter 12.16, "SYSTem subsystem"](#), on page 531.

### Settings:

#### Baud Rate

Sets the baudrate for the serial remote control interface.

Remote command:

:SYSTem:COMMunicate:SERial:BAUD on page 547

#### Parity

Sets the parity for the serial remote control interface.

Remote command:

:SYSTem:COMMunicate:SERial:PARity on page 547

#### Stop Bits

Sets the number of stop bits for the serial remote control interface.


Remote command:

:SYSTem:COMMunicate:SERial:SBITs on page 547

## 11.5.5 Instrument emulations settings

Access:

- ▶ Select "System Config > Remote Access > Instrument Emulations".

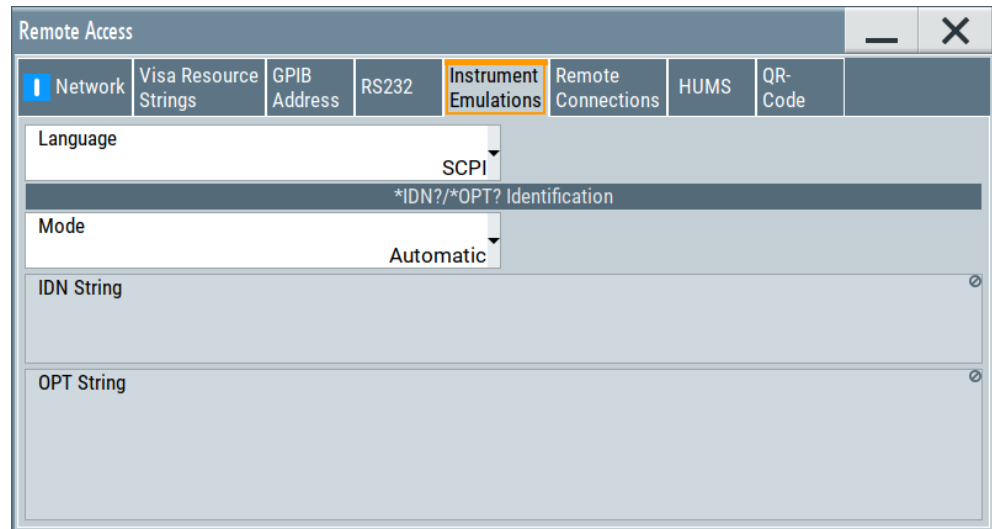

The "Instrument Emulations" dialog enables you to emulate a remote control command set of another signal generator.

The remote commands required to configure the emulation settings remotely are described in [Chapter 12.16, "SYSTEM subsystem"](#), on page 531.

### Settings:

#### Language

Selects the instrument whose remote command set is emulated by the R&S SMB100B.

Remote command:

[:SYSTEM:LANGUage](#) on page 550

#### Mode

Selects the way the instrument identification is performed.

"Automatic" Sets the "IDN String" and the "OPT String" automatically for the instrument selected with the parameter [Language](#).

"User Defined" Enables you to define the "IDN String" and the "OPT String".

Remote command:

[:SYSTEM:IDENTification](#) on page 548

#### Set to Default

In "Mode > User Defined", resets the \*IDN and \*OPT strings.

Remote command:

[:SYSTEM:IDENTification:PRESet](#) on page 549

**IDN String**

Indicates the identification string of the instrument when queried with the common command `*IDN?`.

In addition to the preset values, you can define your own identification string so that each generator uses an individual identification, like `My_SigGen` for instance, see [Mode](#).

Remote command:

`*IDN?` on page 363

`:SYSTEM:IRESpOse` on page 549

**OPT String**

Indicates the option string of the instrument as queried with common command `*OPT?`.

In [Mode](#) > "User Defined", you can define your own option string. A query responds with this option string instead of the automatically created option string.

Remote command:

`*OPT?` on page 363

`:SYSTEM:ORESpOse` on page 549


**11.5.6 Remote connections settings**

The "Remote Connections" dialog covers the active SCPI and TCP/IP connections, and a history list of the connections that have accessed the instrument before.

**11.5.6.1 Active connections**

Access:

- ▶ Select "System Config > Remote Access > Remote Connections > Active".

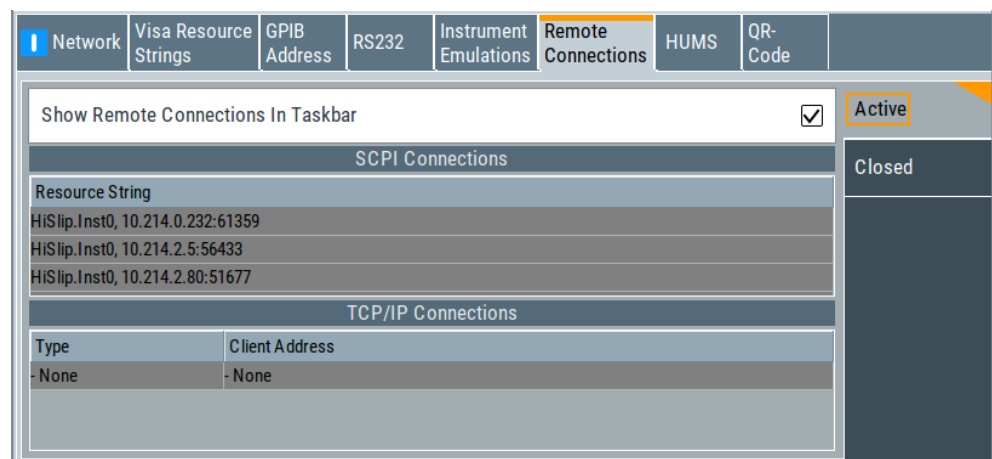

The "Active" tab shows the currently active remote connections, and you can enable the display of the active connections in the task bar.

**Settings:**

Show Remote Connections in Taskbar.....	303
SCPI Connections.....	303
TCP/IP Connections.....	303

**Show Remote Connections in Taskbar**

Displays the currently active connections in the taskbar.

**SCPI Connections**

Displays the VISA resources strings of the remote connections currently controlling the instrument via the LAN interface.

Remote command:

n.a.

**TCP/IP Connections**

Displays the types and client addresses of the remote connections currently controlling the instrument via the LAN interface.


Remote command:

n.a.

**11.5.6.2 Closed connections**

Access:

- ▶ Select "System Config > Remote Access > Remote Connections > Closed".

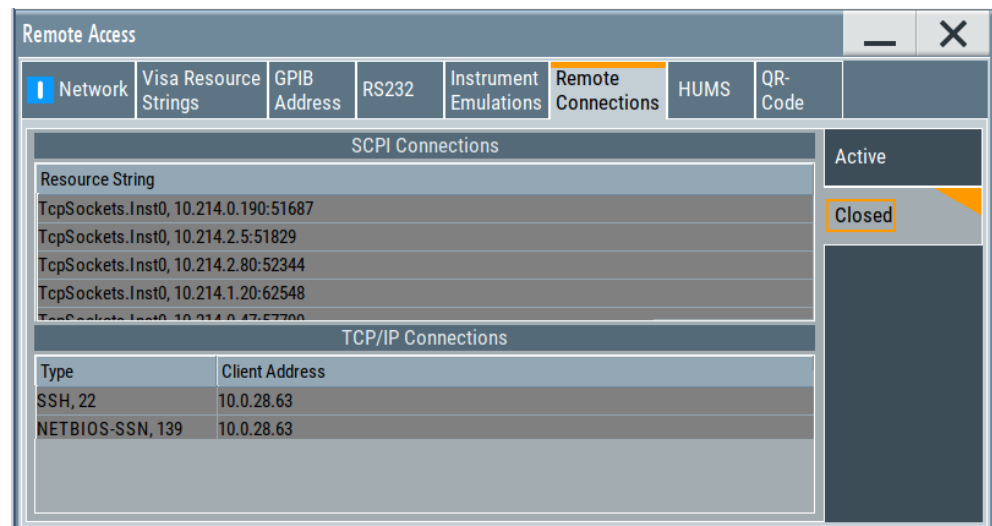

The "Closed" tab shows the currently active remote connections, and you can enable the display of the active connections in the task bar.

**Settings:**

<a href="#">SCPI Connections</a> .....	304
<a href="#">TCP/IP Connections</a> .....	304

**SCPI Connections**

Lists the VISA resource strings of the last remote connections that have accessed the instrument via the LAN interface before.

Remote command:  
n.a.

**TCP/IP Connections**

Lists the types and client addresses of the last remote connections that had accessed the instrument via the LAN interface before.


Remote command:  
n.a.

**11.5.7 HUMS settings**

Requires R&S SMBB-K980.

Access:

- ▶ Select "System Config > Remote Access > HUMS".

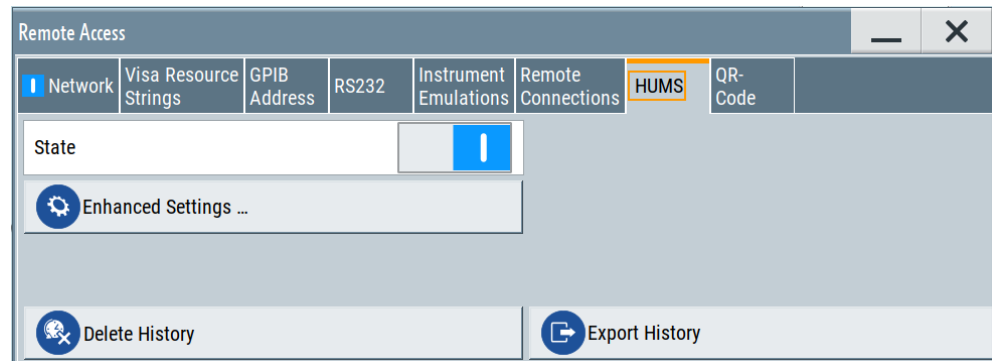

The dialog provides settings to configure the health and utilization monitoring system (HUMS) of the R&S SMB100B.

The remote commands required to define these settings are described in [Chapter 12.8, "HUMS remote control commands"](#), on page 385.

**Settings:**

<a href="#">State</a> .....	305
<a href="#">Enhanced Settings</a> .....	305
<a href="#">Delete History</a> .....	305
<a href="#">Export History</a> .....	305



**State**

Activates HUMS.

Data is only recorded if HUMS is enabled. If disabled, already recorded data can still be retrieved.

The setting is reset by a factory preset to "off".

Remote command:

[DIAGnostic:HUMS:STATe](#) on page 387

**Enhanced Settings**

Opens a dialog for configuring enhanced protocol settings, see [Chapter 11.5.8, "HUMS enhanced settings"](#), on page 305.

Access is only available, when HUMS is enabled, see [State](#).

**Delete History**

Deletes all information from the HUMS service including the device history.

**Note:** Regarding the instrument security, the sanitization procedure also deletes the history of the HUMS service, see [Chapter 10.4.2.2, "Disk & memory security settings"](#), on page 262.

Remote command:

[DIAGnostic:HUMS:DEVIce:HISTory:DELeTe:ALL](#) on page 386

**Export History**

Triggers an export of the logged data of the HUMS service into a \*.zip file.

A standard file dialog opens, to save the log file. By default, the file is saved to the directory /var/user/.

Remote command:

[DIAGnostic:HUMS:DEVIce:HISTory?](#) on page 386

[DIAGnostic:HUMS:SAVE](#) on page 387

## 11.5.8 HUMS enhanced settings

Access:

1. Select "System Config > Remote Access > HUMS".
2. Select "State > ON".
3. Select "Enhanced Settings".

The dialog provides enhanced settings for configuring protocol settings and device tags.

The remote commands required to define these settings are described in [Chapter 12.8, "HUMS remote control commands"](#), on page 385.

- [Protocol settings](#).....306
- [SNMP user settings](#)..... 308
- [Device tag settings](#).....312

### 11.5.8.1 Protocol settings

The "Protocol" tab of the "Enhanced HUMS Settings" dialog provides protocol settings for SNMP or REST protocol.

Access:

1. Select "System Config > Remote Access > HUMS".
2. Select "State > ON".
3. Select "Enhanced Settings".
4. Select "Protocol".

The dialog provides enhanced settings for configuring protocol settings and device tags.

Settings:

- [SNMP](#).....307
- [REST](#).....307
- [SNMP Configuration](#)..... 307
  - └ [Location](#)..... 307
  - └ [Contact](#).....307

L Access.....	307
L Community.....	308
User Settings.....	308

### SNMP

Enables the SNMP agent and selects the supported SNMP version to communicate with the service.

The setting is reset by a factory preset to "v1/v2c".

"Off"	The SNMP agent is disabled.
"v1/v2c"	Selects SNMP version 2, which also enables version v1.
"v1/v2c/v3"	Selects all SNMP version v1, v2c and v3.
"v3"	Selects SNMP version v3.

Remote command:

[SYSTem:COMMunicate:SNMP:VERSion](#) on page 392

### REST

Enables the REST API protocol.

The setting is reset by a factory preset to "On".

Remote command:

[SYSTem:COMMunicate:REST:ENABLe](#) on page 389

### SNMP Configuration

For SNMPv1 and SNMPv2c authentication, you can define "Access" and "Community". For SNMPv3 authentication, you can define "User" profiles.

#### Location ← SNMP Configuration

Defines the SNMP location information. This information complies with the server's physical location and is used for identification of the SNMP server. By default, this input field is empty.

Remote command:

[SYSTem:COMMunicate:SNMP:LOCation](#) on page 390

#### Contact ← SNMP Configuration

Sets the SNMP contact information. This information complies with the person who manages the SNMP server and is used for identification of the SNMP server. By default, this input field is empty.

Remote command:

[SYSTem:COMMunicate:SNMP:CONTact](#) on page 390

#### Access ← SNMP Configuration

Defines the access type for SNMP community string.

For read access, you can use "Read" or "Read & Write". For write access, use "Read & Write".

The setting is reset by a factory preset to "Read & Write".

Remote command:

[SYSTem:COMMunicate:SNMP:COMMunity:RO](#) on page 389

[SYSTem:COMMunicate:SNMP:COMMunity:RW](#) on page 389

### Community ← SNMP Configuration

Defines the SNMP community string that can be a group of instruments with SNMP version v2 support.

The setting is reset by a factory preset to the "<serial number>" of the instrument.

### User Settings


Accesses the "Configure SNMP Users for HUMS" dialog.

#### 11.5.8.2 SNMP user settings

For SNMPv3 authentication, you can define user profiles.

Access:

1. Select "System Config > Remote Access > HUMS".
2. Select "State > ON".
3. Select "Enhanced Settings".
4. In the protocol tab, select SNMP communication with SNMPv3, e.g. "SNMP > v1/v2c/v3".
5. Select "User Settings".

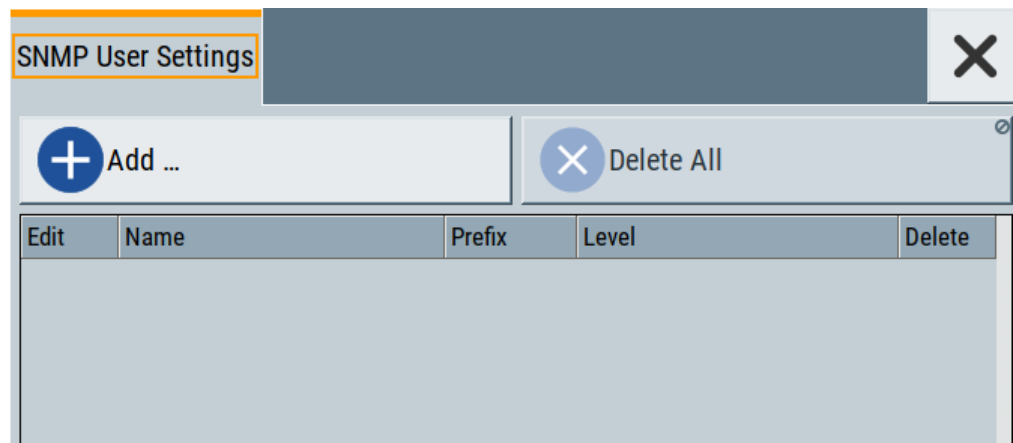

The "Configure SNMP User for HUMS" dialog provides an overview of all defined SNMP users and their profiles. With the "Add" and "Delete All" controls, you can add or remove users.

### Settings:

<a href="#">Add</a> .....	309
<a href="#">Delete All</a> .....	309
<a href="#">User table</a> .....	309

L Edit.....	309
L Name.....	310
L Prefix.....	310
L Level.....	310
L Delete.....	310
Add SNMP User for HUMS.....	310
L SNMP User Name.....	311
L SNMP User Prefix.....	311
L SNMP User Level.....	311
L SNMP User Public Passphrase.....	312
L SNMP User Encrypted Passphrase.....	312
L Add / Update.....	312

**Add**

Accesses the "Add SNMP User for HUMS" dialog.

In this dialog, you can define a user and its profile, see ["Add SNMP User for HUMS"](#) on page 310.

**Delete All**


Removes all users from the list.

Remote command:

[SYSTem:COMMunicate:SNMP:USM:USER:DELeTe:ALL](#) on page 391

**User table**

Lists all defined SNMP users.

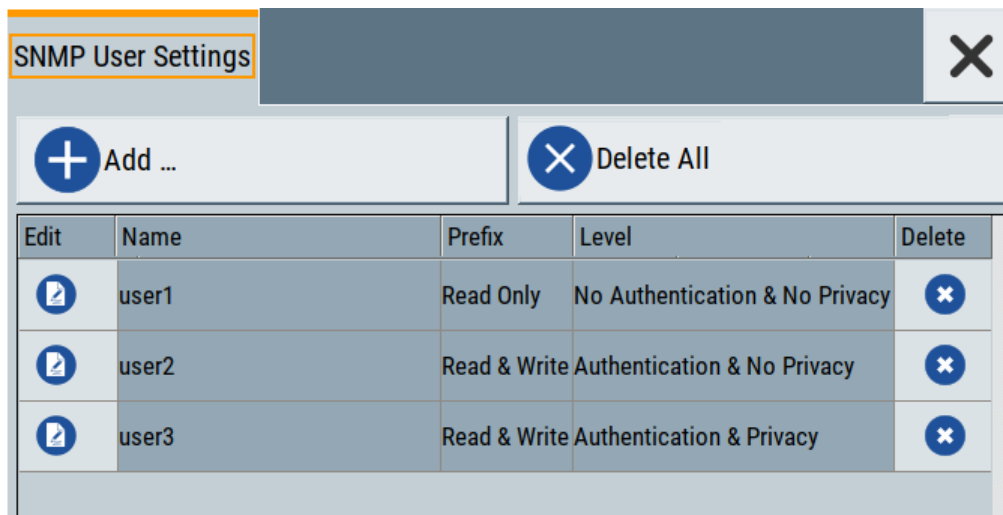

Edit	Name	Prefix	Level	Delete
	user1	Read Only	No Authentication & No Privacy	
	user2	Read & Write	Authentication & No Privacy	
	user3	Read & Write	Authentication & Privacy	

The table informs on the user name and its specified user profile.

Remote command:

[SYSTem:COMMunicate:SNMP:USM:USER:ALL?](#) on page 391

**Edit ← User table**

Accesses the "Edit SNMP Users for HUMS" dialog, where you can modify an already defined user profile.

For description on the entry fields, see [Add SNMP User for HUMS](#).

**Name ← User table**

Shows the user name of the user who should have specific user rights.

**Prefix ← User table**

Shows the access right of the selected user.

**Level ← User table**

Shows the security level of the selected user.

**Delete ← User table**

Removes the selected user from the list.

Remote command:

[SYSTem:COMMunicate:SNMP:USM:USER:DELete](#) on page 391

**Add SNMP User for HUMS**

Configuration dialog for defining SNMP users and their profiles.

Remote command:

[SYSTem:COMMunicate:SNMP:USM:USER](#) on page 390

#### **SNMP User Name** ← **Add SNMP User for HUMS**

Defines the name of the user for assigning specific user rights. Entering a user name is mandatory.

#### **SNMP User Prefix** ← **Add SNMP User for HUMS**

Defines the access right for a user.

"Read Only" Allows the user to only read information.

"Read & Write" Allows the user to read and modify information.

#### **SNMP User Level** ← **Add SNMP User for HUMS**

Defines the security level of the SNMP user. Depending on the security level, the service requests user name and passphrases for authentication and encryption.

"No Authentication & No Privacy"

Low security level. Using this level, the service queries the user name only. Password authentication and password for encrypted data transfer is not requested.

See "[SNMP User Public Passphrase](#)" on page 312 and "[SNMP User Encrypted Passphrase](#)" on page 312 for data transfer is not requested.

"Authentication & No Privacy"

Medium security level: Requests the user name and password authentication, but no data transfer encryption.

**"Authentication & Privacy"**

High security level: Requests the user name, and both, the password authentication and the password for data transfer encryption.

**SNMP User Public Passphrase ← Add SNMP User for HUMS**

Defines the password for authentication. The password must have of 8 to 12 characters with any combination of ASCII characters.

**SNMP User Encrypted Passphrase ← Add SNMP User for HUMS**

Defines the password for encryption. This password must have at least 8 characters with any combination of ASCII characters. When encryption is defined, the R&S SMB100B supports the DES (directed enhanced services) protocol.

**Add / Update ← Add SNMP User for HUMS**

Assigns the defined user with its profile to the list.

If you change an already defined user profile, the instrument provides the "Update" button to apply the modifications.

**11.5.8.3 Device tag settings**

The "Device Tags" tab of the "Enhanced HUMS Settings" dialogs displays the defined device tags. You can also add or delete device tags here.

A device tag is a label to assign to your instrument. You can create any device tag for your instrument and define it by a specific key and value.

Access:

1. Select "System Config > Remote Access > HUMS".
2. Select "State > ON".
3. Select "Enhanced Settings".



Protocol		Device Tags		✕
ID	Key	Value	Delete	
0			✕	
1			✕	
2			✕	
+ Add			✕ Delete All	

Configures device tags for tagging user-defined information of the instrument in a table. You can define up to 32 device tags, e.g., for HUMS history evaluation. To add a device tag, define "Key" and "Value" of the device tag in the table. Click "Add" to add all device tags of the table to the HUMS history.

#### Settings:

ID.....	313
Key.....	313
Value.....	313
Delete.....	314
Add.....	314
Delete All.....	314

#### ID

Identification count of a device tag entry.

#### Key

Sets the identification key of a device tag.

Remote command:

`DIAGnostic:HUMS:TAGS[:VALue]` on page 388

#### Value

Sets the value of the identification key of a device tag.

Remote command:

`DIAGnostic:HUMS:TAGS[:VALue]` on page 388

**Delete**

Deletes the selected device tag from the HUMS history.

Remote command:

[DIAGnostic:HUMS:TAGS:DELeTe](#) on page 388

**Add**

Adds a new device tag to the HUMS service.

Remote command:

[DIAGnostic:HUMS:TAGS\[:VALue\]](#) on page 388

[DIAGnostic:HUMS:TAGS:ALL?](#) on page 387

**Delete All**

Removes all device tags from the HUMS history.

Remote command:

[DIAGnostic:HUMS:TAGS:DELeTe:ALL](#) on page 388

## 11.5.9 QR code

Access:

- ▶ Select "System Config > Remote Access > QR Code".



The "QR Code" dialog shows the current instrument address (IP address) in quick response (QR) format.

This functionality provides fast access to the instrument via VNC with, for example, a smartphone or a tablet.

See [Chapter 11.14.3, "How to set up remote operation from a smart device"](#), on page 352.

## 11.6 LXI settings

On the R&S SMB100B, an LXI functionality is already installed and enabled. Thus, you can access the instrument using any web browser.


### 11.6.1 LXI status settings

On the R&S SMB100B, an LXI functionality is already installed and enabled. Thus, you can access the instrument using any web browser.

See [Chapter 11.6.2, "LXI browser settings"](#), on page 316.

Access:

- ▶ Select "System Config > Setup > Remote Access > LXI Status".

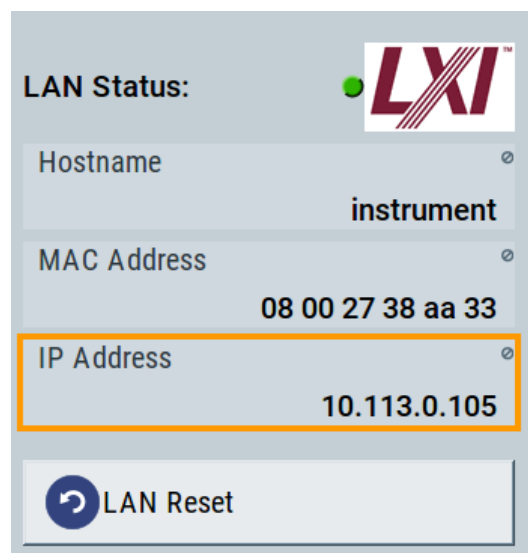

The LXI "LAN Status" dialog shows the parameters of the LAN connection.

Alternatively, you can change the LAN settings using the LXI web browser interface, see [Chapter 11.6.2.1, "LAN configuration"](#), on page 318.

#### LAN Status

The LED indicates the LXI status.

"green"	Normal operation
"green (flashing)"	Device identification
"red"	LAN fault

#### Hostname / MAC Address / IP Address

See ["Hostname"](#) on page 296.

**LAN Reset**

Initiates the network configuration reset mechanism for the instrument and resets the hostname, MAC address, and IP address.

According to the LXI standard, a LAN reset must set the following network parameters to a default state:

Parameter	Value
TCP/IP mode	DHCP + Auto IP address
Dynamic DNS	Enabled
ICMP ping	Enabled
Password for LAN configuration	LxiWebIfc

The LAN reset also resets the following parameters for the R&S SMB100B:

Parameter	
Hostname	Instrument-specific hostname
Description	signal generator
Negotiation	Auto detect
VXI-11 discovery	Enabled

**11.6.2 LXI browser settings**

Accessing the R&S SMB100B over the LXI browser interface, you can perform the following tasks:


- Modifying network configurations, see [Chapter 11.6.2.1, "LAN configuration"](#), on page 318.
- Accessing the instrument remotely
- Analyzing SCPI remote diagnostics
- Monitoring the use and status of the instrument  
This service requires option R&S SMBB-K980 "Health and utilization monitoring service (HUMS)".

Access:

- ▶ In the address field of the browser, enter the URL address, composed of the instrument's IP address or host name, for example *http://10.113.1.151*.

**Note:** Do not add the missing zeros in the IP address, while opening the instrument homepage.

The instrument homepage (welcome page) opens.

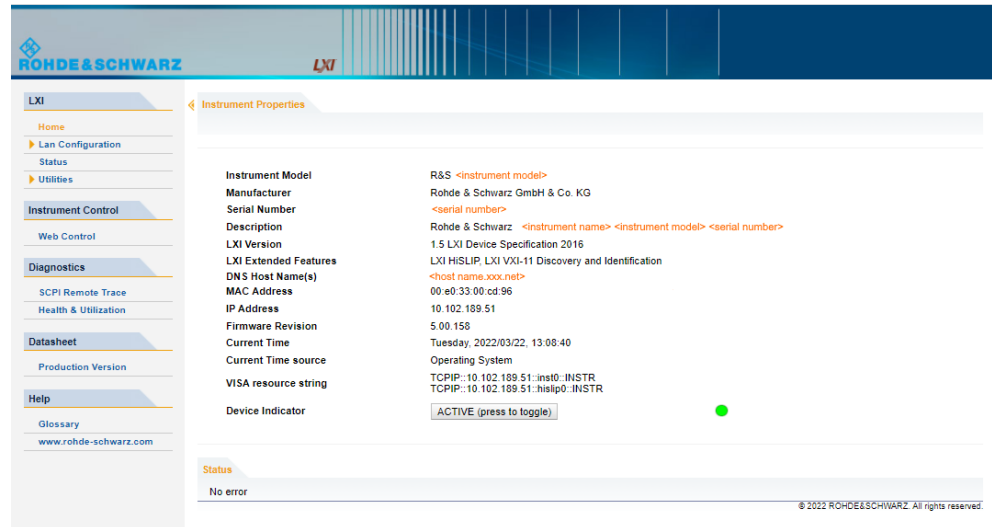

The navigation pane of the browser interface contains the following elements:

- "LXI"
  - "Home" opens the instrument homepage. The homepage displays the device information required by the LXI standard, including the VISA resource string in read-only format.
  - "Device Indicator" activates or deactivates the LXI status indication. When activated, the LXI LED flashes. A green LXI status symbol indicates that a LAN connection has been established; a red symbol indicates that no LAN cable is connected.
  - "Lan Configuration" allows you to configure LAN parameters and to initiate a ping, see ["Ping client"](#) on page 320.
  - "Status" displays information about the LXI status of the instrument.
  - "Utilities" provides access to the LXI event logging functionality required by the LXI standard.
- "Instrument Control"
  - "Web Control" provides remote access to the instrument. See ["To start remote control with the LXI browser"](#) on page 329.
- "Diagnostics"
  - "SCPI Remote Trace" records messages exchanged via the remote control interface, see [Chapter 11.6.2.2, "SCPI remote trace"](#), on page 320.
  - "Health & Utilization" (option: R&S SMBB-K980) enables you to monitor the use and status of an instrument, see [Chapter 11.6.2.3, "Health and utilization"](#), on page 322.
- "Datasheet"
  - Provides the Datasheet with the specification data of the instrument at the time of delivery, see [Chapter 11.6.2.4, "Datasheet"](#), on page 322.
- "Help"
  - "Glossary" explains terms related to the LXI standard.
  - [www.rohde-schwarz.com](http://www.rohde-schwarz.com) opens the Rohde & Schwarz homepage.

### 11.6.2.1 LAN configuration

The "LAN Configuration" web page displays all mandatory LAN parameters and allows their modification.

It comprises the following navigation entries.

- [IP configuration](#)..... 318
- [Advanced config](#).....319
- [Ping client](#).....320

#### IP configuration

The "IP configuration" web page displays all mandatory LAN parameters and allows their modification.

The screenshot shows the LXI LAN Parameters configuration page. The left sidebar contains navigation options: Home, Lan Configuration (with sub-items IP Configuration, Advanced Config, Ping Client), Status, Utilities, Instrument Control, Web Control, Diagnostics (with sub-items SCPI Remote Trace, Health & Utilization), Datasheet (with sub-items Production Version), and Help (with sub-items Glossary, www.rohde-schwarz.com). The main content area is titled 'LAN Parameters' and contains the following configuration fields:

- Hostname: <host name>
- DNS Hostname(s): <host name.xxx.net>
- Domain: rsint.net
- Description: <instrument>
- IP Address Mode: DHCP + Auto IP Address
- IP Address: 10.102.189.51
- Subnet Mask: 255.255.252.0
- Default Gateway: 10.102.188.1
- Obtain DNS Server Address automatically:
- DNS Server(s): 10.0.2.166
- Register Device at DNS Server dynamically:
- HiSLIP Port: 4880

A 'Submit' button is located below the HiSLIP Port field. A note on the right side of the form states: 'Attention! Changing the hostname reboots the device!'. At the bottom, there is a 'Status' section showing 'No error' and a copyright notice: '© 2022 ROHDE&SCHWARZ All rights reserved.'

The "IP Address Mode" selects a configuration mode for the IP address of the instrument. With static configuration, the entered IP address, subnet mask, and default gateway are used. With dynamic configuration, DHCP or dynamic link local addressing (automatic IP) is used to obtain the instrument IP address.



#### Changing the LAN configuration

This function is password-protected. Unlock the protection level 1 to access it.

**Note:** We recommend that you change the default password before connecting the instrument to a network.


How to:

- ["To change the user password of the instrument"](#) on page 273.
- ["To change the security password"](#) on page 273.

See [Chapter 10.4.4, "Password management"](#), on page 270.

## Advanced config

The "Advanced Config" web page provides LAN settings that are not declared mandatory by the LXI standard.

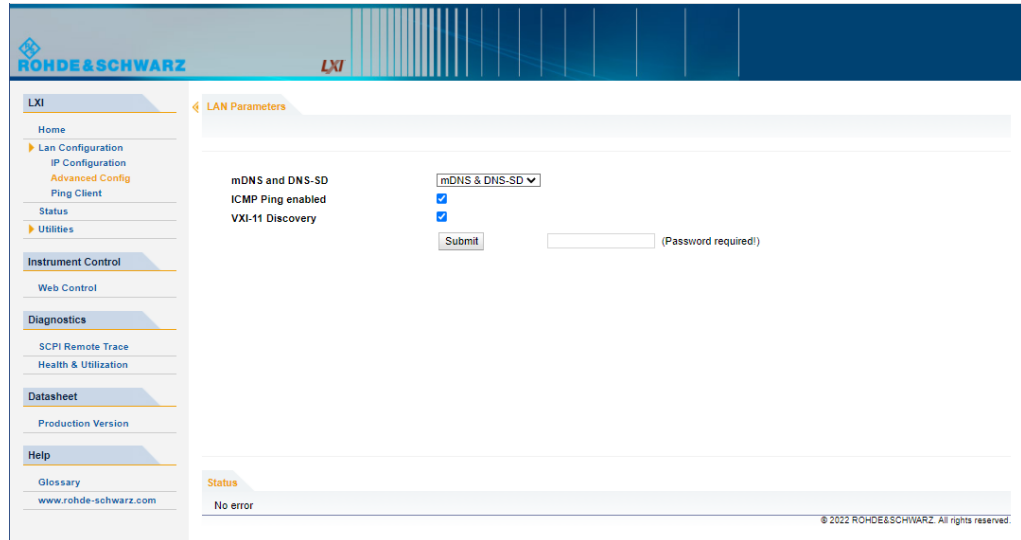

The following advanced parameters are available:

- "mDNS and DNS-SD": The additional protocols "multicast DNS" and "DNS service discovery" are used for device communication in zero configuration networks, working without DNS and DHCP.
- "ICMP Ping": Must be enabled to use the ping utility. If you disable this setting, the instrument does not answer ping requests. The setting does not affect the LXI ping client. You can ping other hosts from the instrument, even if the setting is disabled.
- "VXI-11 Discovery": Must be enabled to detect the instrument in the LAN. If you disable this setting, the instrument cannot be detected by the VXI-11 discovery protocol mechanism. The setting does not affect other detection mechanisms. Setting up a VXI-11 connection via the IP address or the host name is independent of this setting.



### Changing the LAN configuration

This function is password-protected. Unlock the protection level 1 to access it.

**Note:** We recommend that you change the default password before connecting the instrument to a network.

How to:

- ["To change the user password of the instrument"](#) on page 273.
- ["To change the security password"](#) on page 273.

See [Chapter 10.4.4, "Password management"](#), on page 270.


## Ping client

The "Ping Client" page provides the ping utility to verify the connection between the LXI-compliant instrument and another device.

The ping is initiated from the instrument. Using the `ICMP` echo request and echo reply packets, this function checks whether the communication with a device via LAN is working. Ping is useful for the diagnosis of IP network or router failures.

To initiate a ping at the instrument:

1. On the "Ping Client" page, enter the IP address of the host in the "Destination Address" field (for example 10.113.1.151).
2. Select "Submit".

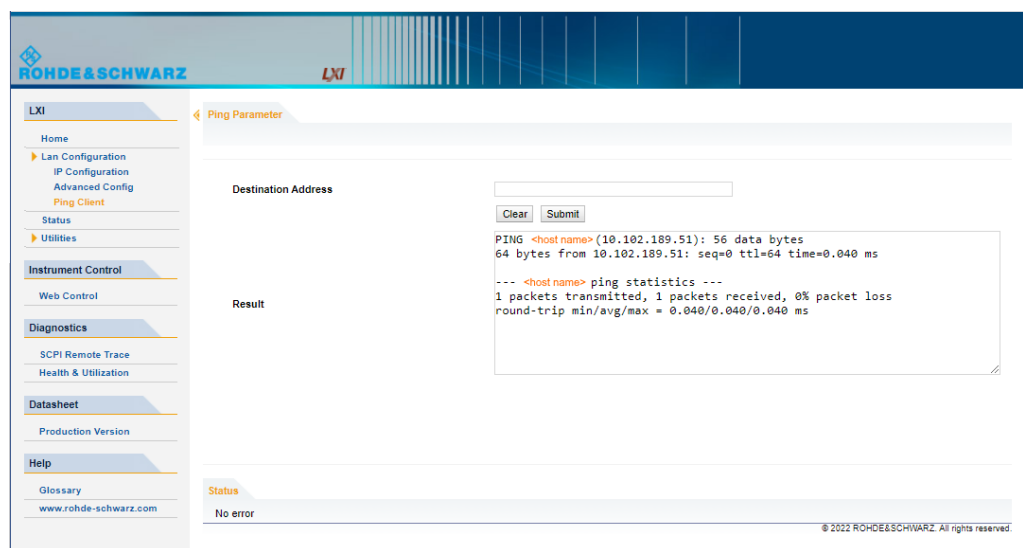

### 11.6.2.2 SCPI remote trace


The remote trace functionality allows you to trace input and output strings at the remote control interface of the R&S SMB100B.

See [Chapter 11.11, "To trace messages with the LXI web browser interface"](#), on page 337.

A recorded trace (message log) can be evaluated directly in the dialog. Use the highlighting and navigation functions provided by the lower toolbar to locate error messages and messages containing arbitrary search strings. You can also export the message log to a `*.CSV` file and evaluate the file using a suitable program.


To trace and display messages, switch on "logging" and "live mode" in the toolbar.



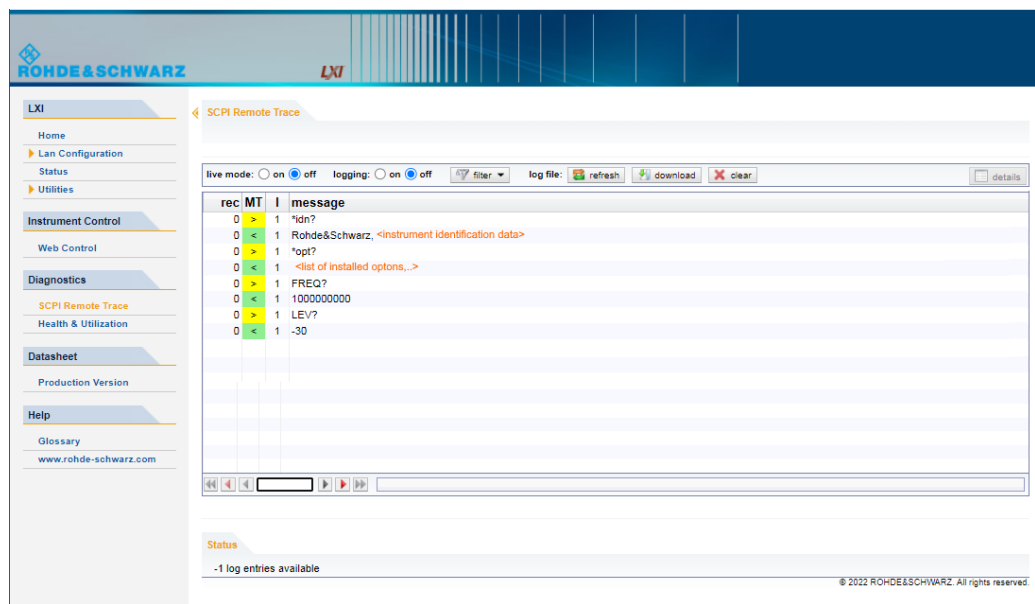

## Toolbars

The toolbar at the top of the dialog provides basic settings and functions.

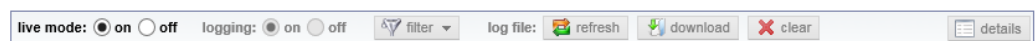

- "Live mode" / "logging": If logging is switched on, messages are traced. They are stored in an internal database and can be displayed upon request, using the refresh button (live mode off) or they can be displayed automatically (live mode on).
- "Filter": applies a filter to columns and/or rows when working (live mode off)
- "Refresh": reads the message log from the internal database and displays it
- "Download": stores the SCPI trace log to a \* .CSV file
- "Clear": deletes all message log entries in the database and at the screen
- "Details": displays details of the selected message, for example an SCPI command in hex format (also possible by double-clicking a message)

## Columns

The following columns are available if no column filter is applied:

- "Rec": record number of the message within the message log
- "MT": indicates the type of the message. Possible values and related message contents are:
  - > = incoming command
  - < = outgoing response to a query
  - E = error message, highlighted by red color
  - T = execution time, i.e. time required by the instrument to process the command internally.
- I: number of the subinstrument

- "message": indicates the type of the message. Possible values and related message contents are:
  - > = incoming command
  - < = outgoing response to a query
  - E = error message, denoted in red
  - T = execution time, i.e. time required by the instrument to process the command internally

### 11.6.2.3 Health and utilization

Option: R&S SMBB-K980

The health and utilization monitoring service allows you to monitor the usage and status of the instrument, it's options, including S.M.A.R.T. data of the system drive. You can retrieve information on remote accesses over SCPI commands, web browsers or protocols, as for example SNMP or REST.


For detailed information on R&S HUMS, see the following documents, available on the Rohde & Schwarz website:

- User manual "R&S Health and Utilization Monitoring Service" , describing how to access and use the service.
- Application note GFM336, providing information on the SNMP and REST API, including a list of all SNMP variables and REST endpoints.

### 11.6.2.4 Datasheet

The datasheet functionality allows you to retrieve the specification data of the instrument at the time of delivery.

The document contains all specified value ranges and information of the datasheet, for example important as reference values for recalibration.

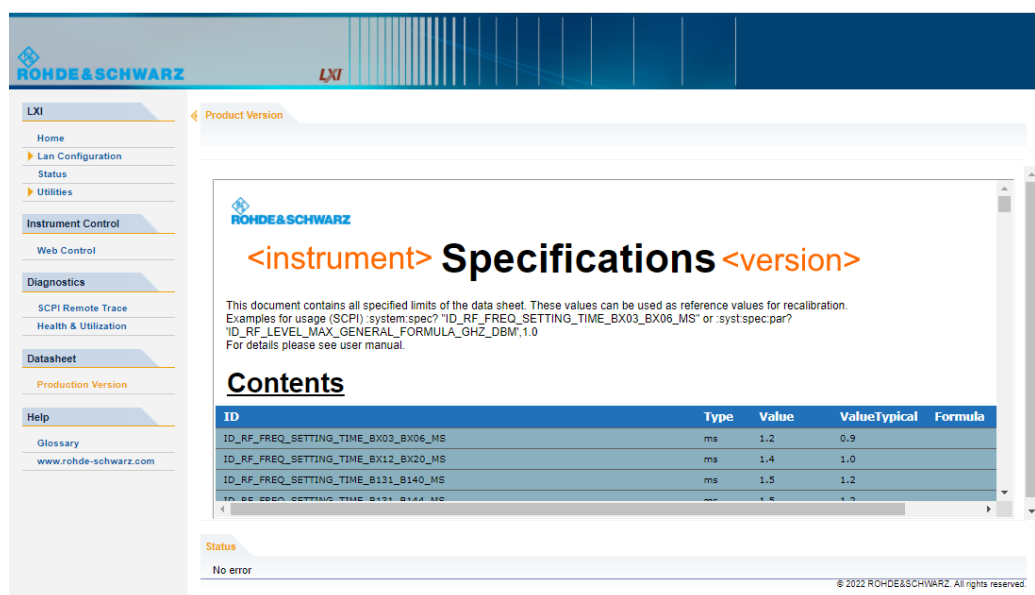

The screenshot shows the LXI web interface for the R&S SMB100B instrument. The main content area displays the "Specifications" page for a specific instrument and version. The page title is "<instrument> Specifications <version>". Below the title, there is a brief description of the document's purpose and examples of usage. A "Contents" section is visible, followed by a table of specifications.

ID	Type	Value	ValueTypical	Formula
ID_RF_FREQ_SETTING_TIME_BX03_BX06_MS	ms	1.2	0.9	
ID_RF_FREQ_SETTING_TIME_BX12_BX20_MS	ms	1.4	1.0	
ID_RF_FREQ_SETTING_TIME_B131_B140_MS	ms	1.5	1.2	
ID_RF_FREQ_SETTING_TIME_B141_B144_MS	ms	1.5	1.2	

The status bar at the bottom indicates "No error" and includes the copyright notice "© 2022 ROHDE&SCHWARZ. All rights reserved."

For more information, refer to the specifications document.

## 11.7 To configure the instrument for remote access

The R&S SMB100B is equipped with a network interface and can be connected to an Ethernet LAN (local area network).

How to: [Chapter 3.1.7, "Connecting to LAN"](#), on page 25

For identification in the network, all devices require an IP address.

How to:

- [To find the VISA resource string](#).....323
- [To configure the access over LAN](#)..... 324
- [To configure the access over GPIB](#).....327

### 11.7.1 To find the VISA resource string

#### To find the VISA resource string

- ▶ Select "System Config > Remote Access > VISA Resource Strings".

Net-work	Visa Res. Strings	GPIB Addr.	RS232	Instrument Emulations	Remote Connections	HUMS	QR-Code	X
	HISLIP				TCPIP::10.102.52.36::hislip0::INSTR			
	VXI11				TCPIP::10.102.52.36::inst0::INSTR			
	Socket				TCPIP::10.102.52.36::5025::SOCKET			
	GPIB					GPIB::28::INSTR		
	USB				USB::0x0AAD::0x01e1::000000::INSTR			
	SERIAL					ASRL1::INSTR		

The dialog shows the VISA resource strings that enable you to access the instrument for remote control.

**Note:** Using the RS232 serial interface via USB requires the USB serial adapter R&S TS-USB1.

## 11.7.2 To configure the access over LAN

### About network address information

Depending on the network capacities, the TCP/IP address information for the instrument can be obtained in different ways.

- If the network supports dynamic TCP/IP configuration using the [DHCP](#) protocol, this service assigns all address information automatically.
- If the network does not support DHCP or if there is no server available, the instrument tries to obtain the IP address using the [Zeroconf\(Avahi\)](#) protocol. This protocol enables the instrument to self-configure an IP address and subnet mask. Zeroconf (Avahi) IP addresses start with the number blocks 169.254.\*.\*, with the subnet mask of 255.255.

The automatic address configuration establishes the physical connection to the LAN without any additional configuration.



- An IP address that is assigned with the Zeroconf protocol although the network requires an IP address assigned from the DHCP server can cause network connection failures.  
See [Chapter 13.5, "Resolving network connection failures"](#), on page 598.
- If the dynamic TCP/IP configuration does not succeed, or if the instrument is expected to use alternate TCP/IP configuration, you must set the address information manually.  
See ["To assign the instrument address manually"](#) on page 324.

### 11.7.2.1 How to assign the IP address

If necessary, you can assign the IP address manually. It is assumed that you have connected controller PC and the instrument.

#### To assign the instrument address manually

It is assumed that you have connected the instrument in the LAN.

1. Obtain the instrument address information for the R&S SMB100B and the IP address for the local default gateway from your network administrator. If necessary, also obtain the name of your DNS domain and the IP addresses of the DNS server on your network.  
Obtain the IP address and subnet mask for the R&S SMB100B and the IP address for the local default gateway from your network administrator. If necessary, also obtain the name of your DNS domain and the IP addresses of the DNS server on your network.
2. On the instrument, select "System Config > Remote Access > Network".
3. Select "Address Mode > Static".
4. Select the "IP Address".

To configure the instrument for remote access

5. Enter the IP address, for example *192.168.0.1*.  
The IP address consists of four number blocks separated by dots. Each block contains 3 numbers in maximum.
6. Select the "Subnet Mask" and enter the subnet mask, for example *255.255.255.0*.  
**Note:** The subnet mask must be the same for both, the R&S SMB100B and the host interface, the instrument is connected to.
7. Enter the "Default Gateway", "DNS Suffix", and "DNS Server" if necessary.

#### To assign the IP address manually on the computer

- ▶ Obtain the necessary information from your network administrator. If you use more than one LAN connector, you need separate address information for each connector.  
For information on how to configure the address information, see the documentation of the operating system the computer uses.

#### 11.7.2.2 How to use the hostname

In a LAN that uses a [DNS](#) server, each computer or instrument connected in the LAN can be addressed with an unambiguous [Hostname](#) (also referred to as computer name) instead of the IP address. The DNS server translates the hostname to the IP address.



Using the hostname is useful in networks with dynamic TCP/IP and DHCP protocol services, that assign the address information automatically. Thus, it can be that the services assign a new IP address each time the instruments restarts, but they do not change the hostname.

Each instrument is delivered with an assigned hostname, that remains constant as long as it is not explicitly changed.

This function is password-protected. Unlock the protection level 1 to access it.

The default *hostname* name follows the syntax `<INST>-<Serial Number>`, where:

- `<INST>` is the short name of your instrument, as stated on the front panel.
- `<Serial Number>` is the individual serial number of the instrument.  
You can find the serial number at the rear panel of instrument. It is the third part of the device ID printed on the barcode sticker.



**Example:**

The default hostname of an R&S SMB100B with a serial number 102030 is SMB100B-102030.

**To query and change the hostname**

1. Select "System Config > Remote Access > Network".  
Section "Instrument Name" displays the assigned "Hostname".  
**Note:** This function is password-protected. Unlock the protection level 1 to access it.
2. Select "System Config > Setup > Security > Protection".
3. Enable the "Protection Level 1".  
The default protection level 1 password is *123456*.  
The parameter "Hostname" in the "Network" tab is now enabled for configuration.
4. Change the "Hostname".

**11.7.2.3 How to configure LAN interface access and services**

By default, the LAN interface and the supported LAN interface services are enabled.

For security reasons, for example to protect the instrument against unauthorized access, you can block either the LAN services individually, or the access over LAN in general.

**To disable LAN access in general**

1. Select "System Config > Setup > Security".
2. Select "Security".
3. Select "LAN Services".
4. Disable "LAN" state.
5. Enter the [Security Password](#).
6. Select "Accept".  
When disabled, communication over the LAN connection is not possible.

**To disable LAN services individually**

1. Select "System Config > Setup > Security".
2. Select "Security".
3. Select "LAN Services".
4. Enable "LAN" state.
5. In the "Common Services" side tab, uncheck all services you want to block.

To configure the instrument for remote access

General	LAN Services	Password Management	
LAN <input checked="" type="checkbox"/>			
SCPI over LAN <i>is Enabled</i>	<input checked="" type="checkbox"/>	FTP <i>is Disabled</i>	<input type="checkbox"/>
SMB (Samba) <i>is Enabled</i>	<input checked="" type="checkbox"/>	SSH (SCP) <i>is Disabled</i>	<input type="checkbox"/>
HTTP <i>is Disabled</i>	<input type="checkbox"/>	Software Update <i>is Enabled</i>	<input checked="" type="checkbox"/>
		VNC <i>is Disabled</i>	<input type="checkbox"/>
		Remote Support <i>is Disabled</i>	<input type="checkbox"/>
		Avahi (Zeroconf) <i>is Enabled</i>	<input checked="" type="checkbox"/>
Security Password		<input checked="" type="radio"/> Accept	

6. Select the "Samba Services" sidetab.

General	LAN Services	Password Management	
SMB 1.0/2.0 Client <i>is Enabled</i>			
SMB 1.0/2.0 Server <i>is Disabled</i>			
Security Password		<input checked="" type="radio"/> Accept	

7. For example, uncheck "SMB 1.0/2.0 Server" to block the access for the SMB Samba server.
8. Enter the [Security Password](#).
9. Select "Accept".

### 11.7.3 To configure the access over GPIB

To control the instrument remotely over the GPIB bus, it must be addressed using the GPIB address. The remote control address is factory-set to 28, but it can be changed if it does not fit in the network environment. For remote control, addresses 0 through 30 are allowed. The GPIB address is maintained after a reset of the instrument settings.

**How to change the GPIB address**

1. Select "System Config > Remote Access > GPIB Address".
2. Select "GPIB Channel Address" and enter a value between 0 and 30.

**Risk of losing remote connection**

If the remote access and network settings had been configured to values different to the default, executing a factory preset via remote control terminates the connection to the instrument.

## 11.8 To establish a remote control session over LAN

This section shows you how to establish remote control connections over the available interfaces.

The following general prerequisites must be fulfilled:

- The instrument and the controller have to be connected over the corresponding interface with the suitable cable.
- The instrument and the controller must be switched on.
- To operate the instrument remotely, it must be addressed using the defined interface address.

See:

- [Chapter 11.2.1, "LAN interface"](#), on page 282
- [Chapter 11.2.2, "USB interface"](#), on page 284
- [Chapter 11.2.3, "GPIB interface \(IEC/IEEE bus interface\)"](#), on page 285
- A remote control program must open a connection to the instrument, before it can send commands to and receive device responses from the instrument.



If security is a concern, see:

- Document Instrument Security Procedures.
- [Chapter 10.4.5, "Preventing unauthorized access"](#), on page 272.

- [To establish the connection with the LXI web browser](#)..... 328
- [To establish the connection using VXI-11 protocol](#).....329
- [To establish the connection using socket communication](#)..... 334

### 11.8.1 To establish the connection with the LXI web browser

Using the LXI browser interface you can access and control the R&S SMB100B instrument remotely from another PC without additional installation. File upload and download between the instrument and the remote PC is also available.



To establish a remote control session over LAN

It is assumed that the instrument is set up in the LAN, and the LAN service is enabled. See [Chapter 10.4.3, "Configuring LAN services"](#), on page 266.

#### To start remote control with the LXI browser

1. On the controller PC, start a browser that supports HTML5 (W3C compliant).
2. Enter the IP address of the R&S SMB100B in the browser's address bar.  
The browser displays the R&S SMB100B's welcome page.
3. In the navigation pane, select "Instrument Control" > "Web Control".  
Remote access to the instrument requires the password. The default password is *instrument*.
4. Enter the password.
5. Confirm with [Enter].  
The current screen of the R&S SMB100B appears in the browser window.
6. Use the mouse cursor and keyboard to access the functionality of the instrument as if you operate the instrument directly.

### 11.8.2 To establish the connection using VXI-11 protocol

In this example, the I/O software library R&S VISA from Rohde & Schwarz is used to set up a LAN remote control link and remotely control the R&S SMB100B. R&S VISA is running on a controller PC with Windows operating system. When the connection is set up, you can send commands to the instrument and receive the responses.

The remote control connection requires a VISA installation but no additional hardware on the controller PC. The LAN I/O channel is selected at initialization time using the VISA resource string (also referred to as "address string"). A VISA alias (short name) is used to replace the complete resource string. The host address is the R&S SMB100B's hostname or its IP address.


See also [Chapter 11.2.1, "LAN interface"](#), on page 282.

#### To set up the controller with R&S VISA


To remote control the R&S SMB100B, we use the R&S VISA Tester application. The application communicates over the TCP/IP protocol.

1. On the controller PC, install the R&S VISA program.  
See [www.rohde-schwarz.com/rsvisa](http://www.rohde-schwarz.com/rsvisa) > "RS VISA release notes".
2. On the instrument, enable the LAN interface and "SCPI over LAN".
3. On the controller, start, e.g., "R&S VISA > Tester".


To establish a remote control session over LAN

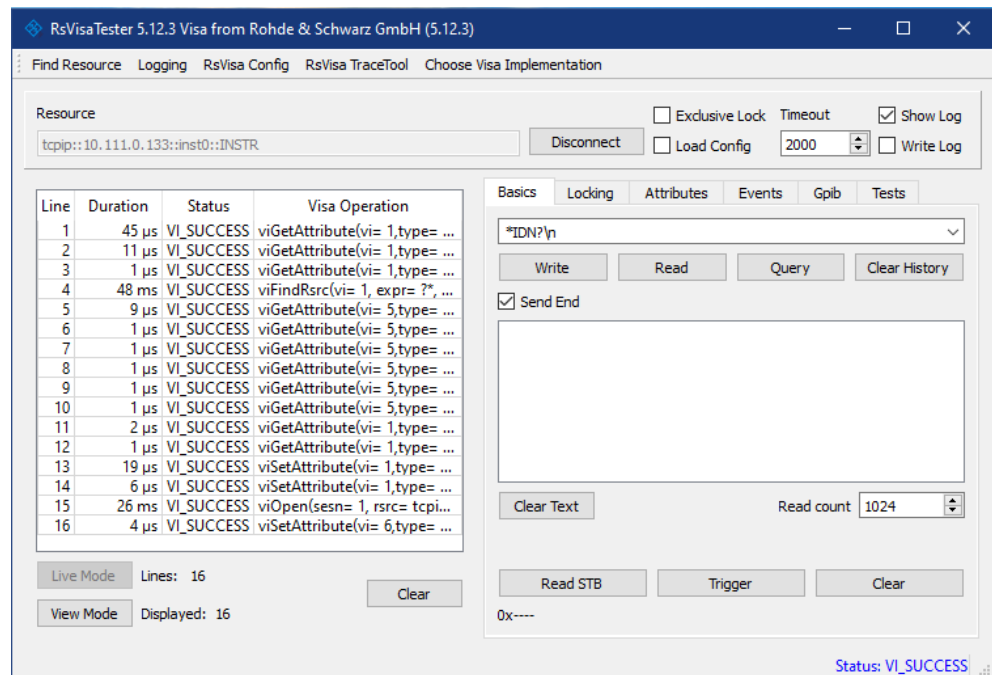

- In the menu bar, select "Choose VISA Implementation > Rohde & Schwarz Visa"
- Confirm with "OK".

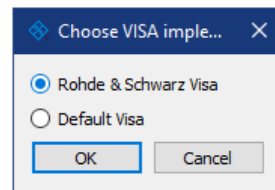

- In the menu bar, select "Find Resource" to search for the instrument in the LAN.

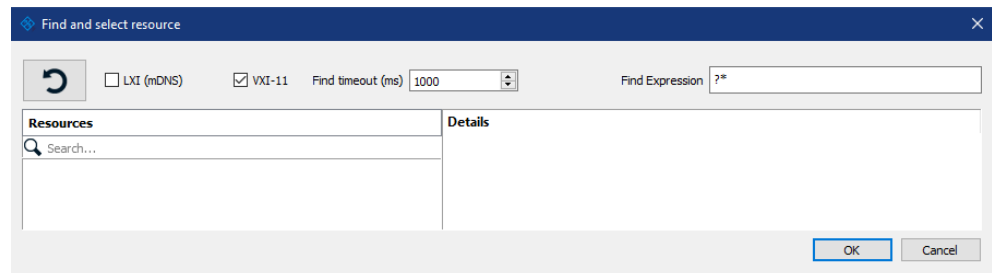


- Select "VXI-11".
- Select the "refresh" button to start the search.

R&S VISA scans the network for connected instruments and lists all detected instruments in the "Resource" list.

**Note:** The search can take some time, particularly in large networks.

- Select the required instrument.

To establish a remote control session over LAN

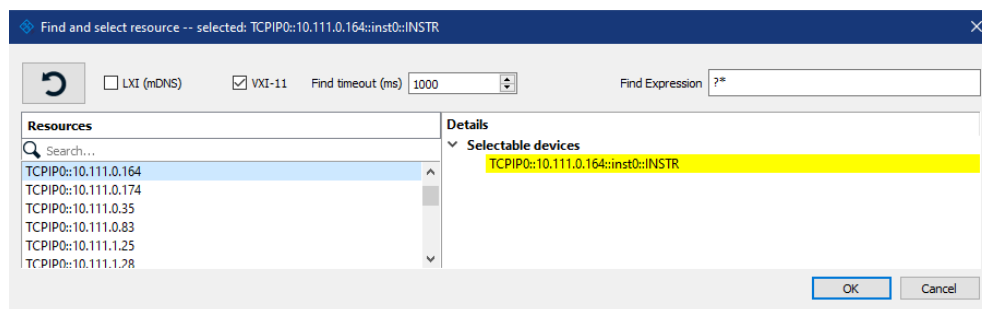


10. Confirm with "Ok".

The "Find and select resource" dialog closes and R&S VISA indicates the IP address in the "Resource" field of the main application window.

11. As an alternative to the IP address, you can assign an alias name to the R&S SMB100B:


a) In the menu bar, select "RsVisaConfig".

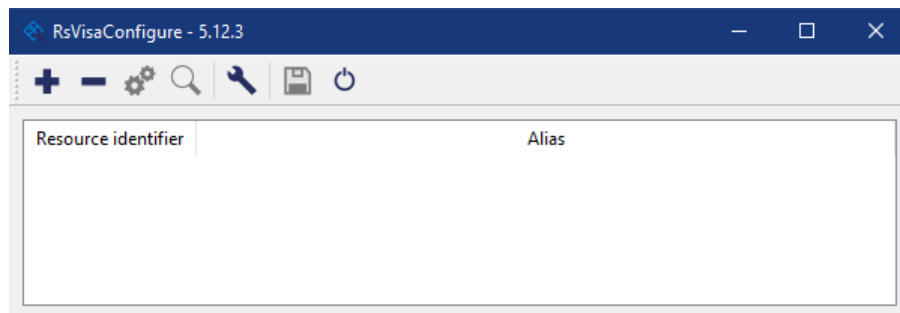


b) In the toolbar, select "+" to access the "VISA Resource String Composer".

To establish a remote control session over LAN

- c) Fill in the "Alias" name, the "VISA Resource String" and the "Device IP Address or hostname" as shown in the figure.

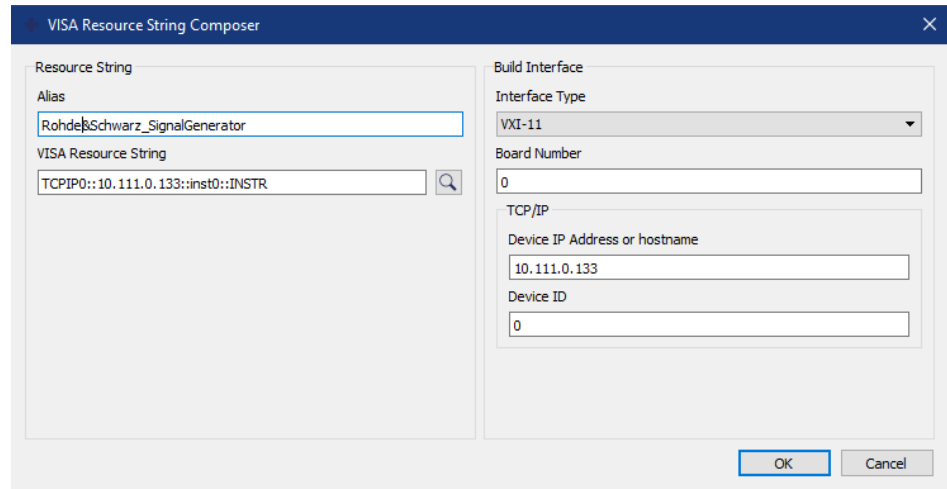

R&S VISA indicates the assigned "Alias" name.

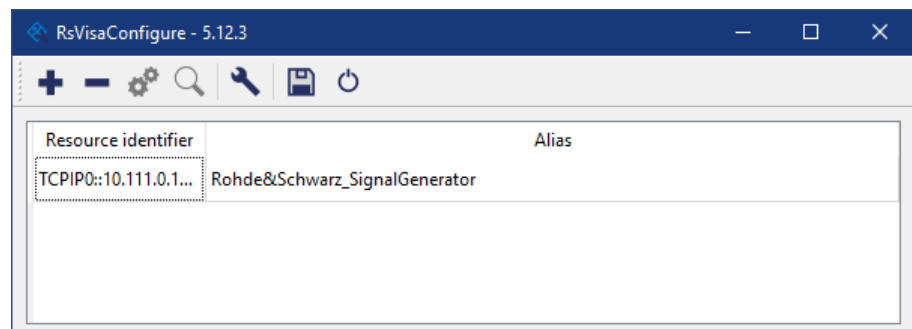

- d) Confirm with "OK".

R&S VISA identifies the R&S SMB100B and you can address it either with the resource string or the alias name.

12. In the main window, select "Connect".

R&S VISA establishes the connection to the R&S SMB100B.

You can send settings to configure the instrument and receive its responses.

**Note:** If the connection cannot be set up, R&S VISA displays an error in the log view.

See also [Chapter 13.5, "Resolving network connection failures"](#), on page 598.

### To start remote control with R&S VISA

To set the instrument to remote control state, you can send any command from the controller.

1. Start the R&S VISA Tester.

Establish the connection to the R&S SMB100B.

See ["To set up the controller with R&S VISA"](#) on page 329.


2. In the R&S VISA "Basics" tab, enter a SCPI command, e.g. \*IDN?.

To establish a remote control session over LAN

3. Confirm with "Query".

The instrument switches to remote control when it receives a command from the controller.

4. Select "Read" to obtain the instrument response.

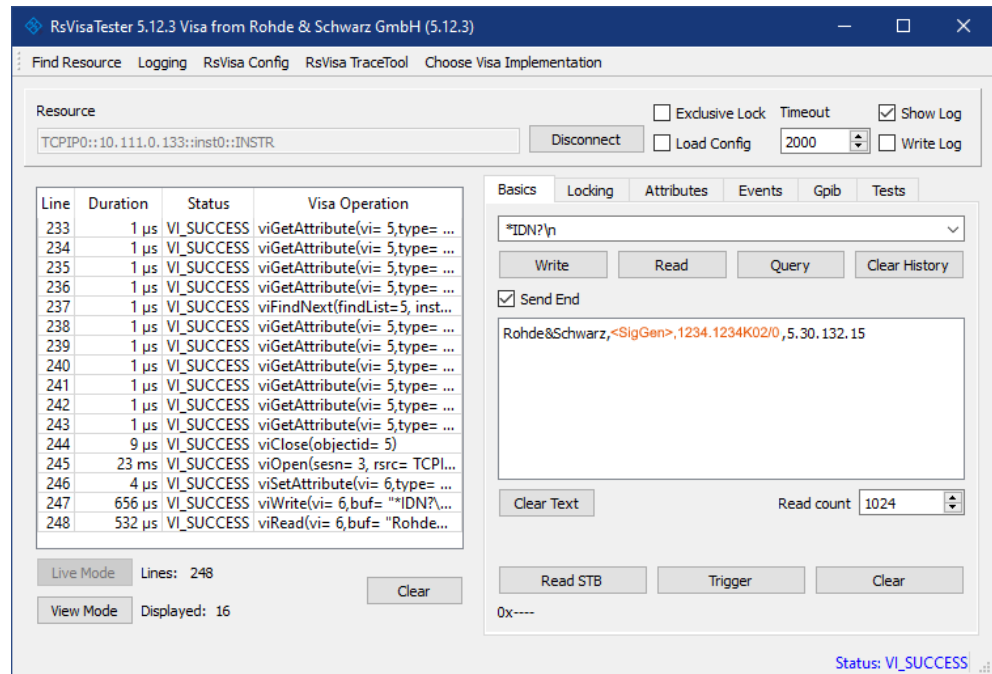

The instrument returns the response.  
Remote control over R&S VISA is enabled.

### To check remote control with VISA

You can check the communication by sending a setting command and querying the response:

1. Set, e.g. the frequency with the command:  
SOUR1:FREQ 3 GHz.
2. Select "Write".
3. Enter the command SOUR:FREQ?.
4. Select "Query".

If the R&S SMB100B responds with the frequency value you entered, remote control works properly.

### To monitor the remote control operation

1. Check the "Show Log" checkbox on the top right.  
R&S VISA displays each VISA operation in the log-view on the left.
2. Check the "Write Log" checkbox.

R&S VISA saves all log-view entries to a log file.

You can operate the log-view in two modes:

- "Live Mode": shows only the most recent messages
- "View Mode" allows you to scroll the history

### 11.8.3 To establish the connection using socket communication

This section provides an example on how to establish a remote control connection over Telnet client and a simple sockets-based program example that can be further developed.

See also [Chapter A.1, "Telnet program examples"](#), on page 624.



The telnet client transmits information unencrypted. Therefore, for sensitive information we recommend that you use a client which supports secure protocols, like SSH.

In the following example, we assume basic knowledge of programming and operation of the controller. You can find information on the interface commands in the corresponding manuals.

#### To set up a Telnet connection

To control the software, only a Telnet program is required. The Telnet program is part of each operating system.

The controller PC and the instrument are connected in the same network.

1. On the instrument, enable the LAN interface and "SCPI over LAN".  
See [Chapter 10.4.3, "Configuring LAN services"](#), on page 266.


2. On the controller PC, start the Telnet program.

3. Enter the socket address.

The socket address is a combination of the IP address or the hostname of the


R&S SMB100B and the number of the port configured for remote-control via Telnet.

**Tip:** The R&S SMB100B uses the port number 5025 for remote connection via Telnet.

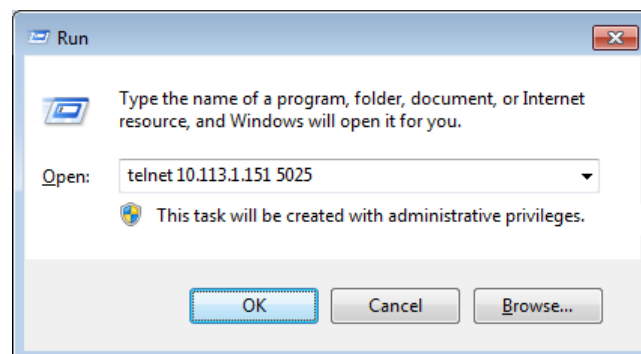


To establish a remote control session over GPIB

The connection to the instrument is set up and you can send remote-control commands.

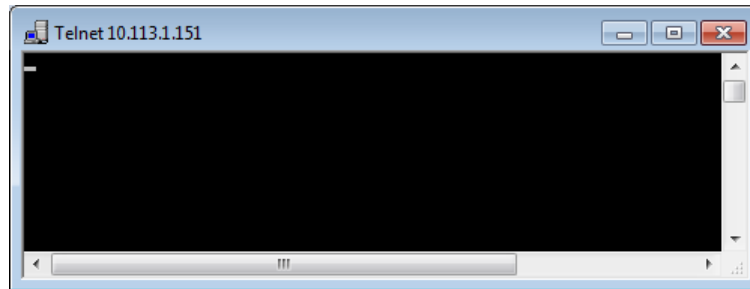

4. Telnet does not reflect your first entry. Insert a command, e.g. \*IDN and confirm with "Enter".
5. Observe the screen.  
A response on the query confirms that the connection is working. The client displays all subsequent inputs and responses.
6. Even if the cursor is not visible on the screen, just enter a remote-control command. Confirm with Enter.

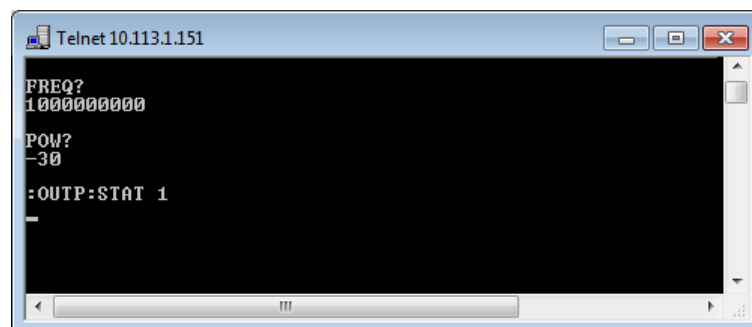

## 11.9 To establish a remote control session over GPIB

The program example in this section is written in VISUAL BASIC. A condition for programming in VISUAL BASIC is that the modules NIGLOBAL (Niglobal.bas) and VBIB32 (Vbib\_32.bas) are added to the projects.



Drivers for instrument, for example IVI-COM and LabVIEW drivers, are available for download area on the product page at:

<https://www.rohde-schwarz.com/driver/smb100b/>

### To start remote control over GPIB

1. Connect instrument and controller using a GPIB cable. Switch them on.

To establish a remote control session over USB

2. Select "System Config > Remote Access > GPIB Address" > **"GPIB Channel Address = 28"**.

The GPIB address of the instrument must be the default value of 28.

3. Execute the following commands on the controller:

- a) Open the port to the instrument.

```
CALL IBFIND("DEV1", generator%)
```

- b) Inform the controller about instrument address.

```
CALL IBPAD(generator%, 28)
```

- c) Reset the instrument.

```
CALL IBWRT(generator%, "*RST;*CLS")
```

- d) Set the instrument to new address.

```
CALL IBWRT(generator%, "SYST:COMM:GPIB:ADDR 18")
```

- e) Inform the controller about new address.

```
CALL IBPAD(generator%, 18)
```

The GPIB address of the instrument is changed.

4. To return to manual operation, press the Local key at the front panel.

## 11.10 To establish a remote control session over USB

For remote control, the PC and the instrument must be connected over the USB type B interface. A USB connection requires the VISA library to be installed. VISA detects and configures the R&S instrument automatically when the USB connection is established. You do not have to enter an address string or install a separate driver.

### To start remote control over USB

1. Connect instrument and controller using USB cable. Switch them on.

2. Execute the following commands on the controller:

- a) Open the port to the instrument.

```
viOpen (... , "USB::0x0AAD::0x01DE::100001::INSTR", ...)
```

- b) Reset the instrument.

```
viRST (generator%, "*RST;*CLS")
```

- c) Set 2 GHz frequency

```
viPrintf (... , "SOUR:FREQ 2GHz\n")
```

- d) Set 20 dBm output level

```
viPrintf (... , "SOUR:POW -20dBm\n")
```

The RF frequency and signal level of the instrument are changed.

3. To return to manual operation, press the [Local] key.



## 11.11 To trace messages with the LXI web browser interface

The remote trace functionality allows you to trace commands and messages exchanged via a remote control interface of the R&S SMB100B.

### To activate SCPI remote trace

The remote trace functionality allows you to trace SCPI commands and messages exchanged over the LAN of the R&S SMB100B. To communicate with the instrument over SCPI, use a suitable remote control application.

1. Set up the remote control session as described under "[To start remote control with the LXI browser](#)" on page 329.
2. In the navigation pane, select "Diagnostics > SCPI Remote Trace".
3. In the toolbar bar of the "SCPI Remote Trace" page, select "live mode > on".
4. Using the remote control program, send your SCPI commands to the R&S SMB100B.

The "SCPI Remote Trace" tab displays all sent commands and responses.

5. Select "logging > on".  
(Live mode and logging exclude each other).

"logging > on" displays all commands and responses, and traces messages also.

The SCPI remote trace function records all sent commands, received responses and messages, and saves them in an internal database. If "live mode" is disabled, you can display the recent traces on request, using the "refresh" button. You can also save the log in a file.

**Note:** The diagnostics functionality is extended in later releases, e.g. to download or upload SCPI command files from / to the instrument.

## 11.12 To return to manual operation



Before returning to manual control, command processing must be completed. Otherwise, the instrument switches back to remote control immediately.

1. To return from "Remote" state to manual state, perform one of the following:
  - On the controller, use the command `&GTL`  
**Note:** If `&NREN` has been set before `&GTL` is locked. Use `&GTR` instead.
  - In the status bar, select the "Remote" icon.
  - On the front panel, press the [Local] key.
  - In the block diagram, select "Context sensitive menu > Key Emulation > Local"
2. **Note:** In the local lockout state, the command `&GTL` and the [Local] key are locked. You can unlock this state only over remote control.

To return from "Remote LLO" state to manual or to "Remote" state, perform one of the following:

- On the controller, use the command `&LOCS`.  
This command switches directly to manual operation.
- Send the command `&REMS`.  
This command changes the remote control state from "Remote LLO" to "Remote".
- Use the Visual Basic command `CALL IBLOC (generator%)`.  
The command switches directly to manual operation.
- VISA function `viGpibControlREN()`  
This function switches directly to manual operation.

## 11.13 To automate tasks with remote command scripts

To achieve fast configuration, make complex test setups or repeating measurements reproducible, you can automate the required settings with scripts. A script contains a series of SCPI commands corresponding to the settings. When completed, it is converted to an executable format, saved in a file and can be run whenever needed.



If you frequently need to load and run a script, assign the script to the [★ (User)], and you can quickly and easily perform the task.

See [Chapter 10.2.4, "How to assign actions to the \[★ \(User\)\] key"](#), on page 248.

In contrast to "Recall Setup" over the [★ (User)] key, an assigned script execution does not close active dialogs and windows. Furthermore active window control (open / close) is possible.

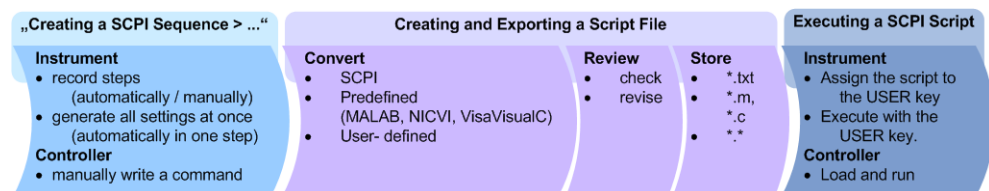


Figure 11-7: Steps for performing SCPI Scripts

The graph shows the main steps required to create and execute a SCPI script.

### Creating a SCPI list

Using the SCPI recorder functions, you can create a SCPI command list directly on the instrument and then export the list for use on the controller PC. You can also edit or write a script manually, using a suitable editor on the controller. For manual creation, you can retrieve the command corresponding to a setting directly on the instrument.

Directly in the instrument, you can create a SCPI list at any time of operation, in the following ways:

- Recording steps

Both, automatic and manual SCPI recording of settings is possible. You can start, stop and resume automatic recording, and also record individual commands manually.

- Manually record the steps selectively  
In manual recording mode, you can deliberately record a SCPI command with the "Add CPI Command to Recording List" function.  
See ["To record settings manually"](#) on page 344.
- Automatically record all performed steps  
The instrument records the SCPI command and settings value of each step you perform, and then writes the commands to the file system.  
See ["To record settings automatically"](#) on page 343.  
You can also add a SCPI command manually to the recording list during automatic SCPI recording.

**Note:** The signal generator clears the SCPI list after booting automatically.

- Generating all settings at once  
Generates the SCPI commands of the current instrument settings in one step, and writes the command list in a temporary list.  
See ["To generate a SCPI command list of all settings in one step"](#) on page 344.  
**Note:** This function lists all commands in alphabetical order, in contrast to the recording or manual creation, which consider the order the settings are configured. Using this function can slow down the runtime or cause errors during execution. Therefore, always check and revise a script if necessary, see ["How to check a SCPI list"](#) on page 346.
- Manually create a command script with "Copy" and paste  
"Show SCPI command" enables you to copy the SCPI command and the current setting and paste it into any suitable editor.  
See ["To copy and paste SCPI commands"](#) on page 345.



Some parameters cannot be set by a SCPI command.

If so, *no SCPI command found* is entered instead of a command when you record or generate all settings at once.

### The difference between Show SCPI Command and the provided cross-reference

If you want to enter your settings in a script, or use a remote control program, you must know the corresponding SCPI command and the exact syntax.

If you need to look up the SCPI command, the instrument offers two ways to figure it out quickly.

- "Show SCPI command" (context-sensitive menu)  
Displays the SCPI command syntax of a selected parameter including the current setting value, see ["Finding out the SCPI command with the "Show SCPI Command" function"](#) on page 348.  
The "Copy" function enables you to write a SCPI script conveniently by hand.
- Instrument help ([Help] key)  
Opens a help topic that describes the selected parameter or instrument function, including a cross-reference to the corresponding SCPI command. The reference

leads you to the description of the SCPI command comprising the complete SCPI syntax, all available setting values, value ranges, etc.

See ["Finding out the SCPI command using the online help"](#) on page 349.

### Creating and exporting a script file

When the script list is completed, a code generator translates the SCPI commands into the source code of a proprietary programming language, using a code template. Therefore, each language requires an appropriate code template. When converted, you can save the script in a file with an extension corresponding to the programming language.

The R&S SMB100B provides the following predefined code templates by default:

- Plain SCPI  
Represents SCPI base format, that is ASCII format, saved as text file (\*.txt).
- MATLAB  
A programming environment, frequently used in signal processing and test and measurement applications (\*.m).  
You can directly use this format with MATLAB(c) Toolkit. For comprehensive information on this topic, refer to the application note 1GP60.
- NICVI  
An ANSI C programming environment designed for measurements and tests (\*.c).  
You can directly use this format with National Instruments LabWindows CVI.
- Python3  
A general-purpose and high-level programming language (\*.py).

You can also convert a script to a user-specific format. In this case, you need a code template with the extension \*.expcodetmpl.

For information on how to select the code template and save the script in a file, see [Chapter 11.13.3, "SCPI recording export settings"](#), on page 342.

### Executing a SCPI script

A SCPI script primarily runs on the controller PC. In addition, you can execute a script directly on the instrument, by assigning the script to the [★ (User)] key.

See [Chapter 10.2.4, "How to assign actions to the \[★ \(User\)\] key"](#), on page 248.

## 11.13.1 Show SCPI command settings

Access:

1. Select the parameter.
2. Open the context-sensitive menu.
3. Select "Show SCPI Command".

This function provides the syntax of the remote command with the current setting.

**Settings:**

Copy.....	341
Close.....	341

**Copy**

Copies the command and the current setting.


**Close**

Exits the "SCPI Command" dialog.

**11.13.2 Displaying a SCPI list**

The instrument displays a recorded SCPI list and thus provides monitoring the recorded results before exporting.

- ▶ Depending on the starting point, you can access the "SCPI Recording List" dialog as follows:
  - During recording  
Select "Show SCPI Recording List" in the context-sensitive menu.
  - At any time outside recording  
Select "Show SCPI Recording List" in the context-sensitive menu.  
This function assumes that at least one recording has been executed after power-on.
  - At the end of the recording  
Select "Stop automatic SCPI recording". The dialog opens automatically.
  - After you have exported the script to a file.  
Select "SCPI Recording Export > Show file content"  
See [Chapter 11.13.3, "SCPI recording export settings"](#), on page 342.

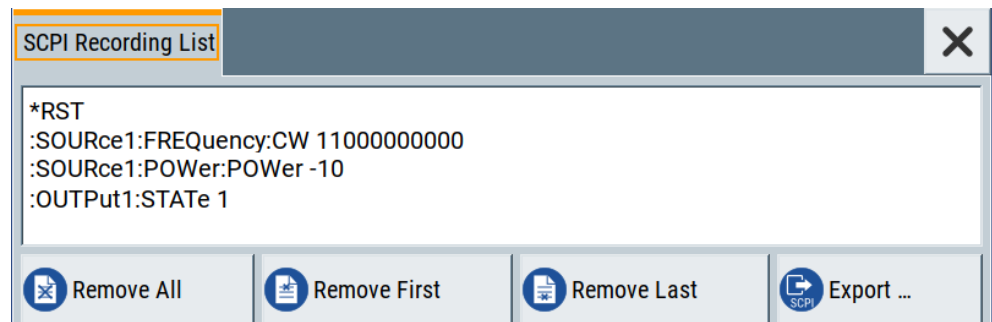

The "SCPI Recording List" shows the last recorded and exported commands.

**SCPI Recording List**

Lists the automatically or manually recorded SCPI commands.

**Remove All**

Deletes all entries in the SCPI command list.

**Remove First**

Deletes the first entry in the SCPI command list.

**Remove Last**

Deletes the last entry in the SCPI command list.

**Export**

Opens the "SCPI Recording Export" dialog for configuring the file parameters for the SCPI command script file.


See [Chapter 11.13.3, "SCPI recording export settings"](#), on page 342

**11.13.3 SCPI recording export settings**

Scripts are configured and saved in the "SCPI Recording Export" dialog. This dialog opens automatically, when you stop recording.

Access:

1. Select "Show SCPI Recording List" in the context-sensitive menu.  
The "SCPI Recording List" dialog opens.
2. Select "Export".

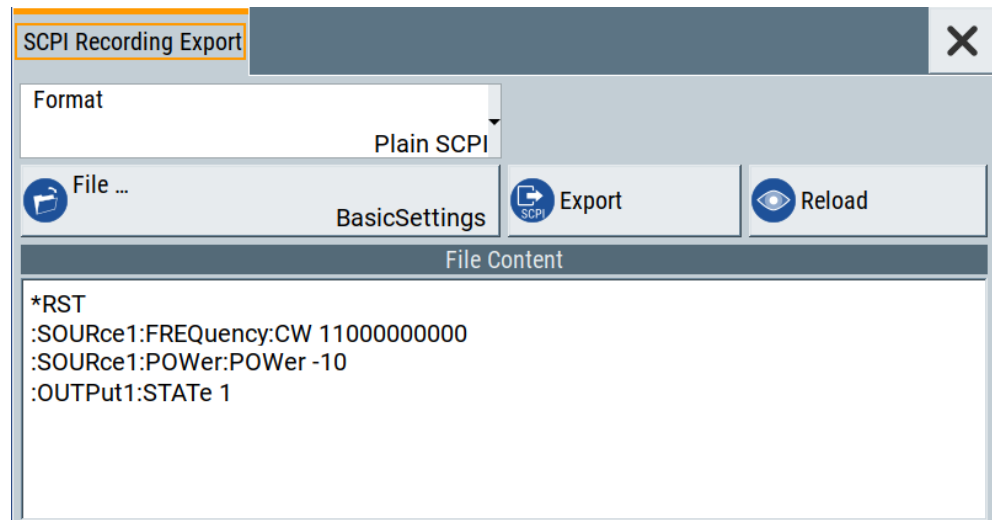

The "SCPI Recording Export" dialog contains all functions required for export of command lists to a file. It enables you to select the source code format, assign an individual filename and display the file content.

**Settings:**

<a href="#">Format</a> .....	343
<a href="#">Code Template</a> .....	343
<a href="#">File</a> .....	343

Export.....	343
Reload.....	343
File content.....	343

**Format**

Selects the source code format for the command list.

"Plain SCPI"      Uses SCPI syntax.

"Predefined Code Generator"

Accesses the predefined templates for common source code generators that convert the recorded settings in the programming languages MATLAB or NICVI or Python.

"User Code Generator"

Use this setting to convert a script by a user-specific code generator.

**Code Template**

Opens a standard file handling dialog for saving or loading predefined or user-defined code templates.

See [Chapter 9.5.1, "File select settings"](#), on page 215.

**File**

Opens a standard file handling dialog for selecting the directory and file name for the output file.

See [Chapter 9.5.1, "File select settings"](#), on page 215.

**Export**

Saves the remote command list file in the selected directory.

**Reload**

Reloads a remote command list file.

**File content**

Displays the content of the remote command list in the selected format and code template.

**11.13.4 How to record / create SCPI lists**

The following examples show how to proceed for creating remote command lists.

For comprehensive description, see [1GP98: SCPI Recorder Test Automation on a Fingertip](#).

**To record settings automatically**

1. On the screen, open the context-sensitive menu.
2. Select "Start SCPI recording".

An orange rectangular button with a white circle containing a play icon on the left and the text "Start SCPI Recording" to its right.

The R&S SMB100B now records all steps you take.

3. To stop SCPI recording, select "Stop SCPI recording" in the context-sensitive menu.

An orange rectangular button with a white square containing a stop icon on the left and the text "Stop SCPI Recording" to its right.

The "SCPI Recording List" dialog opens.

4. Proceed with ["To review a remote command list"](#) on page 346.

#### To record settings manually

1. Select the parameter or function.
2. Set the parameter.
3. Open the context-sensitive menu.
4. Select "Add SCPI Command to Recording List".

An orange rectangular button with a blue circle containing a plus sign and "SCPI" on the left and the text "Add SCPI Command to Recording List" to its right.

The R&S SMB100B adds the SCPI command of the setting including the value in a temporary SCPI command list.

**Tip:** "Context-Sensitive > Show SCPI Recording List" opens the dialog with the recorded settings.

An orange rectangular button with a blue circle containing a magnifying glass and "SCPI" on the left and the text "Show SCPI Recording List (4)" to its right.


5. Continue with the next setting accordingly whenever you want to record it.
6. Proceed with ["To review a remote command list"](#) on page 346.

#### To generate a SCPI command list of all settings in one step

Using the save/recall function, you can create a SCPI command list for all settings in one step.

1. Press the [Save/Recall] key.  
The instrument opens the standard "Save/Recall" dialog.
2. Select "Operating mode" > "SCPI Export".



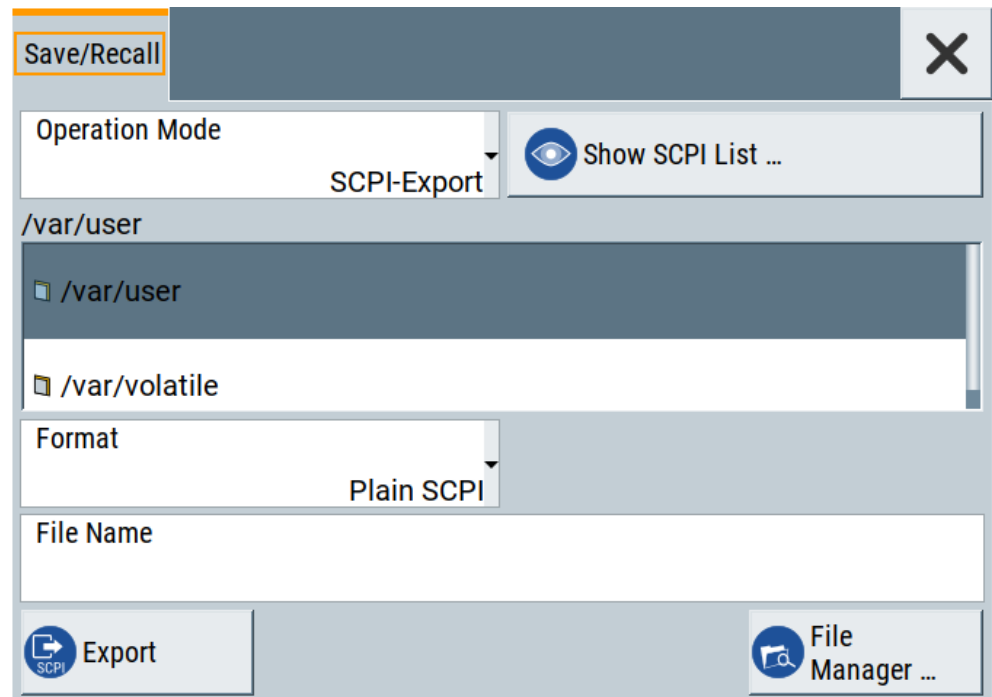

The dialog adjusts the entry fields for configuring the command list file. "Show SCPI List" provides access to the list of all settings the instrument has recorded.

3. Select the "/var/user" directory in which you want to save the SCPI command list.
4. In the "Format" entry field, select the source code format.
5. Enter a filename.
6. Select "Export".


The R&S SMB100B saves the SCPI command list as \*.txt file.

**Note:** Exporting the SCPI list of the instrument state in one step usually requires postprocessing on an external PC, as this function lists all instrument states and commands in alphabetical order.

In contrast, recording or manual creation of a SCPI command list considers the order the settings are configured.

#### To copy and paste SCPI commands

1. On the instrument, select the parameter or function.
2. Set the parameter.
3. Open the context-sensitive menu.
4. Select "Show SCPI Command".

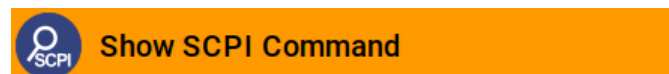

The R&S SMB100B displays the syntax and the setting value of the SCPI command.

With the "Copy" function, you can copy and paste the SCPI command and setting value, e.g., in a command script on a PC.

### How to check a SCPI list

The easiest way to check a list, is to execute it. The generator returns a warning if a setting could not be performed.

However, we recommend that you check the list and possibly rework. It can be that ...

- A parameter has not assigned a SCPI command or an element of the user interface has not an assigned parameter. In these cases, `:SYST:INF:SCPI 'SCPI command not available'` is entered in the list instead. Such entries are also detected during execution. The instrument recognizes these incomplete commands and displays an error message.
- A preset has been executed, but several standards then perform some internal settings that are also assigned to the list with "SCPI Export".
- After a preset still some settings are defined, which are then written to the list generated with "SCPI Export."

### To display a remote command list

On the instrument, you have different options to access a remote command list.

1. During automatic or manual recording:
  - a) Open the context-sensitive menu.
  - b) Select "Show SCPI Recording List".
2. At the end of automatic recording:
  - a) Open the context-sensitive menu.
  - b) Select "Stop SCPI Recording".
3. After exporting a command list to a file.
  - a) Select "SCPI Recording Export" > "Show file content".The "SCPI Recording List" opens.

### To review a remote command list

To rework a remote command list, you must transfer it to a computer.

1. Export the list to a PC, using, for example, a USB flash drive.
2. Check the list, e.g. by comparing it with the modified settings in the manual mode.

**Tip:** To find out your settings, you can use the "Mark all parameters changed from preset" function.  
See [Chapter 9.2.2, "Identifying parameters with non-default values"](#), on page 208.
3. Search for missing or incomplete command entries.
  - a) Add missing commands.

- b) Complete missing parts of commands.
  - c) Remove superfluous entries, e.g. `:SYST:INF:SCPI 'SCPI command not available'`.
  - d) Remove unnecessary content written after a preset.
4. Rearrange the commands to a reasonable order. For example, if you set a `STATE` command to the last position in a list, you can avoid intermediate calculations of the signal.

### 11.13.5 How to convert and save SCPI lists

For conversion of a remote command list into an executable script, a code generator translates the commands into the source code of a proprietary programming language, based on a code template. Therefore, each programming language requires a dedicated code template.

#### To configure a plain SCPI script file

1. Select "Show SCPI Recording List" in the context-sensitive menu.
2. Select "Export".  
The "SCPI Recording Export" dialog opens.
3. Select the "Format" > "Plain SCPI".
4. Select "File".  
A standard file handling dialog opens.
5. Configure filename and directory and confirm with "Ok".
6. In the "SCPI Recording Export" dialog, select "Export".  
The R&S SMB100B saves the recorded data in `*.txt` format. The "File Content" section shows the SCPI commands of the script file.

#### To convert the command list to a predefined code template

1. Select "Show SCPI Recording List" in the context-sensitive menu.
2. Select "Export".  
The "SCPI Recording Export" dialog opens.
3. In the "SCPI Recording Export" dialog, select "Format" > "Predefined Code Generator".  
The "CodeTemplate" button appears.
4. Select "Code Template".  
The "SCPI Recording Export - Select Predefined Code Template" dialog opens.
5. Select a predefined code template, e.g., "MATLAB".
6. Confirm with "Select".  
The R&S SMB100B returns to the "SCPI Recording Export" dialog.

7. Select "File".  
A standard file handling dialog opens.
8. Configure filename and directory and confirm with "Ok".
9. In the "SCPI Recording Export" dialog, select "Export".  
The R&S SMB100B saves the recorded data in the corresponding format. The "File Content" section shows the content of the script file in the corresponding programming language.

#### To convert the command list to a user-defined code template

Before creating a script in a user-specific format, make sure that you have saved the code template with the file extension `*.expcodetmpl` in the instrument.

1. Select "Show SCPI Recording List" in the context-sensitive menu.
2. In the "SCPI Recording Export" dialog, select "Format" > "Use Code Generator".  
The "CodeTemplate" button appears.
3. Select "Code Template".  
The "SCPI Recording Export - Select User Code Template" dialog opens.
4. Select your user-defined code template.
5. Confirm with "Select".  
The R&S SMB100B returns to the "SCPI Recording Export" dialog.
6. Select "File".  
A standard file handling dialog opens.
7. Configure filename and directory and confirm with "Ok".
8. In the "SCPI Recording Export" dialog, select "Export".  
The R&S SMB100B saves the recorded data in the corresponding format. The "File Content" section shows the content of the script file in the corresponding programming language.

### 11.13.6 How to find out the SCPI commands for GUI functions


#### Finding out the SCPI command with the "Show SCPI Command" function

1. To find out the SCPI command of a parameter in manual operation, select the parameter.
2. Open the context-sensitive menu and select "Show SCPI command"



You get the detailed command syntax, including the currently set value.

To operate the instrument using VNC

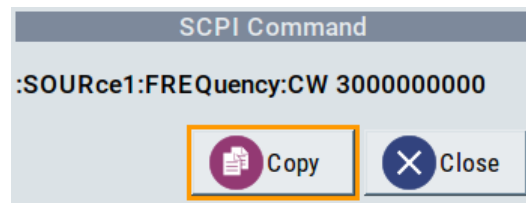

With the "Copy" function, you can conveniently paste the command including the current setting, e.g., in a command script.

### Finding out the SCPI command using the online help

If you are looking for the remote command to a function in manual operation, you find it in the description of the online help.

1. To find out the SCPI command of a parameter in manual operation, select the respective parameter.
2. To open the corresponding help topic, select one of the following:
  - In the display, select "context-sensitive menu > Help".



- On the front panel, press the [Help] key.

The help topic opens. Apart from the function description, it contains the SCPI command in detailed syntax.



### How to find the corresponding GUI function to a command

Conversely, if you are looking for a function in the GUI, which belongs to a SCPI, you find it via a cross-reference in the online help and in the user manual.

## 11.14 To operate the instrument using VNC

This section shows you some examples of the various possibilities to set up remote operation.

- Using a desktop system
  - [Chapter 11.14.2.1, "Using a web browser"](#), on page 350
  - [Chapter 11.14.2.2, "Using a VNC client software"](#), on page 350
- Using a smart device
  - [Chapter 11.14.3.1, "Using a VNC app"](#), on page 354
  - [Chapter 11.14.3.2, "Using a web browser with HTML5"](#), on page 354
  - [Chapter 11.14.3.3, "Special mode QR code"](#), on page 355

## 11.14.1 Enabling VNC service

### To enable VNC service on the R&S SMB100B

1. **NOTICE!** Enabled VNC service can lead to unauthorized access.  
Change the computer name and password of the instrument.  
See [Chapter 10.4.5, "Preventing unauthorized access"](#), on page 272.
2. Select "System Config > Setup > Security > Security".
3. Select "LAN Services > Common Services".
4. Enable "VNC".
5. Enter the [Security Password](#).
6. Confirm with "Accept".

## 11.14.2 How to set up remote operation from a desktop system

### 11.14.2.1 Using a web browser

The R&S SMB100B supports remote operation over VNC with any web browser, e.g., Windows Internet Explorer, Mozilla Firefox, or an HTML5 web browser.

#### To operate the instrument from a web browser over VNC

1. Install the *JRE (Java Runtime Environment)* on the remote computer.  
**Note:** Skip this step if you are working with an HTML5 web browser.
2. Enter the IP address of the instrument in the address field of the web browser, e.g. `http://10.113.1.151`  
The VNC authentication screen appears.
3. Enter the user password.  
The default password is *instrument*.
4. Confirm with "OK".

When the VNC connection is established, the screen of the signal generator appears and you can operate the instrument from the remote computer.

### 11.14.2.2 Using a VNC client software

A VNC client software is an application which can be used to access and control the instrument from a remote computer over the LAN connection.

The VNC client software for setting up the connection is included in the operating system Linux/Unix per default. For Windows operating systems, a VNC client software must be installed manually.

Various free-of charge programs such as Ultr@VNC or similar VNC client programs are available for download on the Internet.

### To operate the instrument from a Linux/Unix client over VNC

1. Start a web browser on the remote computer. Enter the IP address of the instrument.
2. Enter the following address:  
vnc://<IP-address of the instrument>, for example *vnc://10.113.1.151*.


A dialog opens requesting the password for the remote VNC connection.

3. Enter the user password.  
The default password is *instrument*.
4. Confirm with with "OK".

When the VNC connection is established, the screen of the signal generator appears and you can operate the instrument from the remote computer.

### To operate the instrument from a Windows client over VNC

1. Install the VNC viewer program component on the remote computer.
  - a) Download a VNC client program from the Internet.  
For example the free of charge software Ultr@VNC (*vncviewer.exe* is available, see <http://www.uvnc.com/download/index.html>).
  - b) Execute the VNC client installation.
  - c) Select the VNC viewer program component and follow the installation instructions.
2. Start VNC viewer program component on the PC.

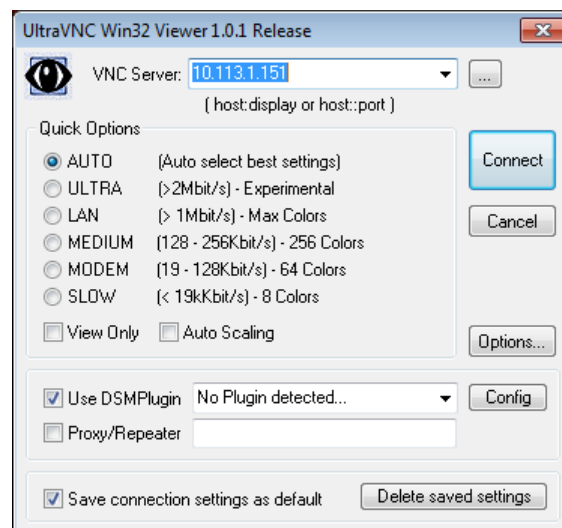


3. Select "VNC Server"
4. Enter the IP address of the instrument.

To operate the instrument using VNC

5. Confirm with "Connect".

An authentication dialog opens.

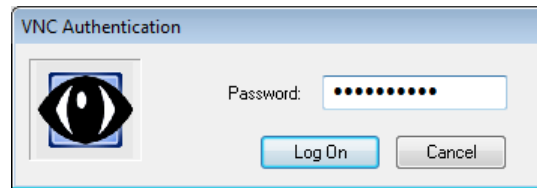

6. Enter the user password for authentication.

The default password is *instrument*.

7. Confirm with "LogOn".

When the connection is established, the screen of the signal generator appears and you can operate the instrument from the remote computer.

### To stop remote operation

To terminate remote operation over VNC depends on the used client:

- ▶ Select the action that applies to the used client:
  - a) On an external Unix/Linux PC, close the Internet browser or the signal generator window.
  - b) On an external Windows PC, close the VNC viewer program.
  - c) On a smart device, close the application.

The connection is terminated but not disabled. It can be established again anytime.

## 11.14.3 How to set up remote operation from a smart device

The R&S SMB100B supports remote operation over VNC from a smart device (remote client), like a tablet (tablet computer) or a smartphone. The smart device accesses the instrument over WLAN, either by a suitable App, or an HTML5 web browser with embedded *javascript*.


There are several possibilities to establish a WLAN connection between the smart device and the R&S SMB100B. This section gives an example of how a network environment can be built up, and some essential configuration steps.

For more information, see:

- [1MA216: Remote Operation of Windows Based Instruments with Apple iPad](#)
- [7BM82: Apple iPad Remote Control of Broadcasting T&M Instruments](#)



To operate the instrument using VNC

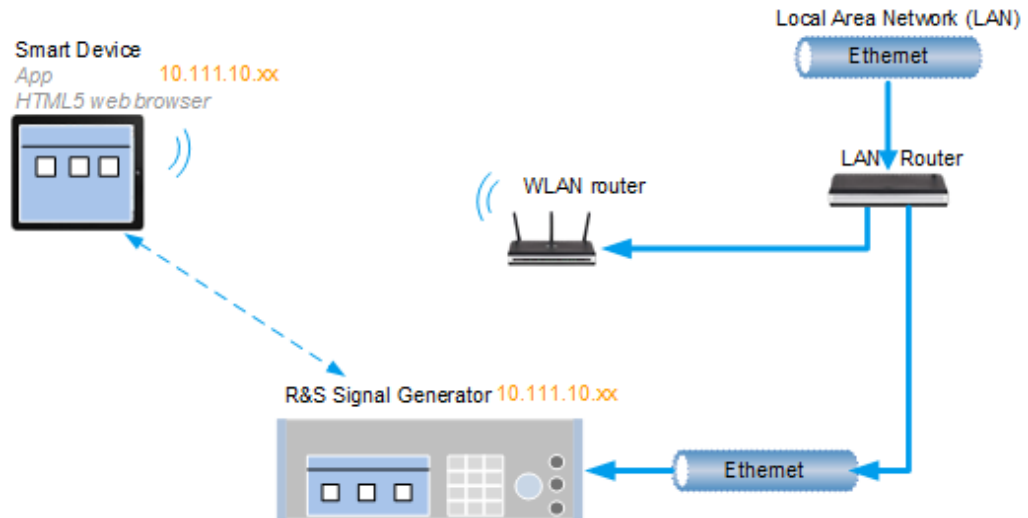**Example:**

**Figure 11-8: Example of a network configuration for remote operation with a smart device**

As shown in the figure, the R&S SMB100B and the WLAN router are connected to the LAN router. The smart device accesses the Rohde & Schwarz instrument via the WLAN router.

The WLAN router as an additional access point enables you to operate the instrument even from a great distance.

**Prerequisites**

For the remote operation, you need the following equipment and configuration:

- Equipment:
  - LAN router
  - WLAN router (hot spot) for accessing the instrument
  - Smart device
- The instrument and the smart device PC are connected in the same network.
- The instrument and the smart device are switched on.
- The LAN interface and VNC LAN service is enabled.  
See [Chapter 10.4.3, "Configuring LAN services"](#), on page 266.
- A suitable application is running on the smart device.
  - Web browser  
The R&S SMB100B supports remote operation over VNC with any HTML5 compliant web browser, e.g., Internet Explorer, Firefox, Google Chrome or Safari.
  - VNC app  
An application that implements the VNC functionality for remote operation. The VNC App must be suitable to the used smart device.  
Refer to the manufacturer's website to find a VNC App supported for your smart device, and how it is installed.
  - QR code

If your smart device is equipped with a camera and a QR code reader, you can scan the instrument's IP address or access the instrument with the Safari web browser.

Refer to the manufacturer's website to find a QR code reader supported for your smart device, and how it is installed.

We recommend that all components in the network use DHCP, which automatically assigns the relevant address information.

### 11.14.3.1 Using a VNC app

Using a *VNC App* enables the smart device to access the R&S SMB100B for remote operation over WLAN.

Refer to the manufacturer's website to find a VNC App supported for your smart device, and how it is installed.

#### To operate the instrument using a VNC App on a smart device

1. Set up the network connection as shown in [Figure 11-8](#)
2. Configure the WLAN router according to the manufacturer's instructions.
3. Install the required *VNC App* on your smart device.
4. On the smart device, start the *VNC App*.  
Enter the IP address of the instrument in the address field of *VNC App*.  
The VNC authentication screen appears.
5. Enter the user password.  
The default password is *instrument*.
6. Enter the password to establish the remote access.  
The default user name and password is *instrument*.

When the VNC connection is established, the screen of the signal generator appears and you can operate the instrument from the smart device.

### 11.14.3.2 Using a web browser with HTML5

The R&S SMB100B supports remote operation from a smart device over VNC with any HTML5 compliant web browser, like Internet Explorer, Firefox, Google Chrome, or Safari for instance.

#### To operate the instrument from a web browser over VNC

1. Install the *JRE (Java Runtime Environment)* on the remote computer.  
**Note:** Skip this step if you are working with an HTML5 web browser.
2. Enter the IP address of the instrument in the address field of the web browser, e.g. *http://10.113.1.151*  
The VNC authentication screen appears.

3. Enter the user password.  
The default password is *instrument*.
4. Confirm with with "OK".  
  
When the VNC connection is established, the screen of the signal generator appears and you can operate the instrument from the remote computer.

### 11.14.3.3 Special mode QR code

If your smart device is equipped with a camera and a QR code reader, you can scan the instrument's IP address or access the instrument with the Safari web browser.

Refer to the manufacturer's website to find a QR code reader supported for your smart device, and how it is installed.

#### To access the instrument with QR code on a smart device

1. Set up the network connection as shown in [Figure 11-8](#)
2. Configure the WLAN router according to the manufacturer's instructions.
3. Install the required QR code reader software on your smart device.
4. On the smart device, start the QR code reader.
5. On the R&S SMB100B, select "System Config > Remote Access".
6. Select the "QR-Code" tab.
7. Scan the QR code of the instrument with your smart device.
8. On the smart device, decode the scanned QR code and forward it to the web browser.  
  
The VNC authentication screen appears.
9. Enter the user password.  
The default password is *instrument*.

When the VNC connection is established, the screen of the signal generator appears and you can operate the instrument from the smart device.

## 11.15 References

### 11.15.1 LXI functionality

LAN Extensions for Instrumentation (LXI) is an instrumentation platform for measuring instruments and test systems that is based on standard Ethernet technology.

LXI is intended to be the LAN-based successor to GPIB, combining the advantages of Ethernet with the simplicity and familiarity of GPIB. Like GPIB, LXI determines and standardizes the way the instrument behaves in a LAN.

The LXI implementation in the R&S SMB100B allows you to change certain LAN settings, to reset the LAN connection, and to identify the instrument.



For information about the LXI standard, refer to the LXI website at <https://www.lxistandard.org>.

See also "News from Rohde & Schwarz, article 2006/II - 190".

The LXI functionality in the R&S SMB100B is characterized by a common LAN implementation, including an ICMP ping responder for diagnostics. Using a web browser, you can configure the instrument. A LAN Configuration Initialize (LCI) mechanism resets the LAN configuration. The instrument also supports automatic detection in a LAN via the VXI-11 discovery protocol and programming by IVI drivers.

In addition, the R&S SMB100B provides the following LXI-related functionality:

- Integrated "LXI Status" dialog for LXI status indication and reset of the LAN configuration, see [Chapter 11.6.1, "LXI status settings"](#), on page 315.
- "LXI Browser Interface", as described in [Chapter 11.6.2.1, "LAN configuration"](#), on page 318.
- "SCPI Remote Trace" utility, see [Chapter 11.6.2.2, "SCPI remote trace"](#), on page 320.



#### Firmware update

To enable the full LXI functionality after a firmware update, shut down and restart the instrument.

## 11.15.2 Code generator templates

This section describes the main structure of the code generator templates, and shows the method with the NICVI template.

The code generation is controlled by templates with the following blocks:

Command	Function
#EXTENSION_START #EXTENSION_END	Defines the output file extension.
#INIT_CODE_START #INIT_CODE_END	Contains initial entries, such as included files and libraries, buffer size, commands for synchronization, or creating a VISA session. All entries between start and end are written once at the beginning of the output file.
#COMMAND_CODE_START #COMMAND_CODE_END	Frame for a SCPI command. A command is accessed with %COMMAND.

Command	Function
#NO_COMMAND_CODE_START #NO_COMMAND_CODE_END	Frame for a parameter with no SCPI command available. A parameter is accessed with %PARAMETER.
#EXIT_CODE_START #EXIT_CODE_END	Closes the visa session.  All entries between start and end are written once at the end of the output file.

Templates are created in ASCII format with file extension \*.expcodetempl.

### Example:

Example to the code generator template NICVI.expcodetempl:

```
#EXTENSION_START
.c
#EXTENSION_END

#INIT_CODE_START
#include <ansi_c.h>
#include <visa.h>
#include <cvirte.h>

#define MAX_BUFFER_SIZE 200
static ViStatus status;
static ViSession defaultRM, handle;

static void write_command(char *command)
{
    char writeBuffer[MAX_BUFFER_SIZE];
    char readBuffer[MAX_BUFFER_SIZE];
    int length;
    int readCount;

    strcpy(writeBuffer, command);
    //append "*OPC?" to sync
    strcat(writeBuffer, "*OPC?");
    length = strlen (writeBuffer);
    writeBuffer[length]='\n';
    length = length+1;
    viWrite (handle, writeBuffer, length, VI_NULL);
    //read result
    viRead(handle, readBuffer, 100, &readCount);
}

int main (int argc, char *argv[])
{
    if (InitCVIRTE (0, argv, 0) == 0)
        return -1; /* out of memory */
        //create a VISA session and return a handle to it
    viOpenDefaultRM (&defaultRM);
```

```

        //create a VISA session to the serial port and return a handle to it
        viOpen (defaultRM, (ViRsrc)"TCPIP::localhost::INSTR", VI_NULL, VI_NULL,
&handle);
#INIT_CODE_END

#COMMAND_CODE_START
    write_command("%COMMAND");
#COMMAND_CODE_END

#NO_COMMAND_CODE_START
    //no SCPI command available for parameter %PARAMETER !
#NO_COMMAND_CODE_END

#EXIT_CODE_START
    viClose (handle);
        viClose (defaultRM);
        return 0;
}
#EXIT_CODE_END

```

### 11.15.3 Remote control states

#### How to recognize if there is an active remote connection to the instrument

- Observe the indication on the taskbar.





A softkey in the taskbar indicates if and what kind of remote connections are currently set up.

See also [Chapter 11.5.6, "Remote connections settings"](#), on page 302.

The following table shows the different remote control states and the associated commands or actions to return to manual control.

Table 11-6: Remote control status icons

GUI symbol	Transition to remote control state...	Transition to manual operation...(local state)
 	&GTR (controller) Remote control, but usable front panel keys. The parameters are in read-only mode.	<ul style="list-style-type: none"> <li>• &amp;GTL (controller)</li> <li>• Tap the "Remote" icon (display)</li> <li>• [Local] (front panel or key emulation)</li> </ul> <p>A currently performed setting is indicated by the green arrows.</p> <p>The setting must be completed (white arrows), otherwise the instrument remains in remote state.</p>
	&LLO (controller) Remote control with locked front panel keys to prevent user interaction. The parameters are in read-only mode. You can unlock LLO, and thus return to manual operation only via remote control.	<ul style="list-style-type: none"> <li>• &amp;LOCS (controller)</li> <li>• CALL IBLOC (generator%) (controller)</li> </ul> <p><b>Note:</b> The command &amp;REMS returns to "Remote" state.</p>

## 12 Remote control commands

In the following, all remote-control commands are presented in detail with their parameters and the ranges of numerical values.

For an introduction to remote control and the status registers, see [Chapter 11, "Network operation and remote control"](#), on page 279.

• <a href="#">Conventions used in SCPI command descriptions</a> .....	360
• <a href="#">Programming examples</a> .....	361
• <a href="#">Common commands</a> .....	362
• <a href="#">Preset commands</a> .....	366
• <a href="#">MMEMory subsystem</a> .....	368
• <a href="#">CALibration subsystem</a> .....	378
• <a href="#">DIAGnostic subsystem</a> .....	382
• <a href="#">HUMS remote control commands</a> .....	385
• <a href="#">DISPlay subsystem</a> .....	392
• <a href="#">FORMat subsystem</a> .....	397
• <a href="#">HCOPY subsystem</a> .....	398
• <a href="#">KBOard subsystem</a> .....	403
• <a href="#">OUTPut subsystem</a> .....	404
• <a href="#">SENSe, READ, INITiate and SLISt subsystems</a> .....	407
• <a href="#">SOURce subsystem</a> .....	422
• <a href="#">SYSTem subsystem</a> .....	531
• <a href="#">STATus subsystem</a> .....	562
• <a href="#">TEST subsystem</a> .....	566
• <a href="#">TRIGger subsystem</a> .....	568
• <a href="#">UNIT subsystem</a> .....	572
• <a href="#">Direct commands for the stereo/rds coder option R&amp;S SMBB-B5</a> .....	572

### 12.1 Conventions used in SCPI command descriptions

The following conventions are used in the remote command descriptions:

- **Command usage**  
If not specified otherwise, commands can be used both for setting and for querying parameters.  
If a command can be used for setting or querying only, or if it initiates an event, the usage is stated explicitly.
- **Parameter usage**  
If not specified otherwise, a parameter can be used to set a value, and it is the result of a query.  
Parameters required only for setting are indicated as **Setting parameters**.  
Parameters required only to refine a query are indicated as **Query parameters**.  
Parameters that are only returned as the result of a query are indicated as **Return values**.
- **Conformity**



Commands that are taken from the SCPI standard are indicated as **SCPI confirmed**. All commands used by the R&S SMB100B follow the SCPI syntax rules.

- **Asynchronous commands**  
A command which does not automatically finish executing before the next command starts executing (overlapping command) is indicated as an **Asynchronous command**.
- **Reset values (\*RST)**  
Default parameter values that are used directly after resetting the instrument (\*RST command) are indicated as \*RST values, if available.
- **Factory preset values**  
Default parameter values that are reset only by factory preset.
- **Default unit**  
The default unit is used for numeric values if no other unit is provided with the parameter.
- **Manual operation**  
If the result of a remote command can also be achieved in manual operation, a link to the description is inserted.

## 12.2 Programming examples

The corresponding sections of the same title provide simple programming examples for the R&S SMB100B. The purpose of these examples is to present all commands for a given task. Real applications require application-specific sets of commands and configurations.

The programming examples have been tested with a software tool which provides an environment for the development and execution of remote tests. To keep the examples as simple as possible, only the "clean" SCPI syntax elements are reported. Non-executable command lines start with two characters //, for example, comments.

At the beginning of the most remote control program, an instrument preset or reset is recommended to set the R&S SMB100B to a definite state. The commands \*RST and `SYSTEM:PRESet` are equivalent for this purpose. \*CLS also resets the status registers and clears the output buffer.

In all the examples we assume the following:

- A remote PC is connected to the instrument.
- The remote PC and the instrument are switched on.
- A connection between them is established.
- The security setting "System Config" > "Setup" > "Security" > "SCPI over LAN" is enabled.

## 12.3 Common commands

Common commands are described in the IEEE 488.2 (IEC 625-2) standard. These commands have the same effect and are employed in the same way on different devices. The headers of these commands consist of "\*" followed by three letters. Many common commands are related to the Status Reporting System.

Available common commands:

*CLS.....	362
*ESE.....	362
*ESR?.....	362
*IDN?.....	363
*IST?.....	363
*OPC.....	363
*OPT?.....	363
*PRE.....	364
*PSC.....	364
*RCL.....	364
*RST.....	364
*SAV.....	365
*SRE.....	365
*STB?.....	365
*TRG.....	365
*TST?.....	366
*WAI.....	366

---

### \*CLS

Clear status

Sets the status byte (STB), the standard event register (ESR) and the `EVENT` part of the `QUESTIONABLE` and the `OPERATION` registers to zero. The command does not alter the mask and transition parts of the registers. It clears the output buffer.

**Usage:**                      Setting only

---

### \*ESE <Value>

Event status enable

Sets the event status enable register to the specified value. The query returns the contents of the event status enable register in decimal form.

**Parameters:**

<Value>                      Range:      0 to 255

---

### \*ESR?

Event status read

Returns the contents of the event status register in decimal form and then sets the register to zero.

**Return values:**

<Contents>                      Range:        0 to 255

**Usage:**                              Query only

---

**\*IDN?**

Identification

Returns the instrument identification.

**Return values:**

<ID>                                      "Rohde&Schwarz,<device type>,<part number>/<serial number>,<firmware version>"

**Example:**                              Rohde&Schwarz,SMB100B,11400.1000K02/0,4.00.033

**Usage:**                                      Query only

**Manual operation:**    See ["IDN String"](#) on page 302  
    See ["Hardware Options/Software Options"](#) on page 604

---

**\*IST?**

Individual status query

Returns the contents of the IST flag in decimal form. The IST flag is the status bit which is sent during a parallel poll.

**Return values:**

<ISTflag>                                0 | 1

**Usage:**                                      Query only

---

**\*OPC**

Operation complete

Sets bit 0 in the event status register when all preceding commands have been executed. This bit can be used to initiate a service request. The query writes a "1" into the output buffer when all preceding commands have been executed, which is useful for command synchronization.

---

**\*OPT?**

Option identification query

Queries the options included in the instrument. For a list of all available options and their description, refer to the specifications document.

**Return values:**

<Options> The query returns a list of options. The options are returned at fixed positions in a comma-separated string. A zero is returned for options that are not installed.

**Usage:**

Query only

**Manual operation:**

See "[OPT String](#)" on page 302

See "[Hardware Options/Software Options](#)" on page 604

**\*PRE <Value>**

Parallel poll register enable

Sets parallel poll enable register to the indicated value. The query returns the contents of the parallel poll enable register in decimal form.

**Parameters:**

<Value> Range: 0 to 255

**\*PSC <Action>**

Power on status clear

Determines whether the contents of the `ENABLE` registers are preserved or reset when the instrument is switched on. Thus a service request can be triggered when the instrument is switched on, if the status registers ESE and SRE are suitably configured. The query reads out the contents of the "power-on-status-clear" flag.

**Parameters:**

<Action> 0 | 1  
**0**  
 The contents of the status registers are preserved.  
**1**  
 Resets the status registers.

**\*RCL <Number>**

Recall

Loads the instrument settings from an intermediate memory identified by the specified number. The instrument settings can be stored to this memory using the command `*SAV` with the associated number.

It also activates the instrument settings which are stored in a file and loaded using the `MMEMory:LOAD <number>, <file_name.extension>` command.

**Manual operation:** See "[Recall Immediate x](#)" on page 214

**\*RST**

Reset

Sets the instrument to a defined default status. The default settings are indicated in the description of commands.

The command is equivalent to `SYSTem:PRESet`.

**Usage:** Setting only

**Manual operation:** See "Preset" on page 207

**\*SAV** <Number>

Save

Stores the current instrument settings under the specified number in an intermediate memory. The settings can be recalled using the command `*RCL` with the associated number.

To transfer the stored instrument settings in a file, use the command `:MMEMory:STORe:STATe`.

**Manual operation:** See "Save Immediate x" on page 213

**\*SRE** <Contents>

Service request enable

Sets the service request enable register to the indicated value. This command determines under which conditions a service request is triggered.

**Parameters:**

<Contents> Contents of the service request enable register in decimal form.  
Bit 6 (MSS mask bit) is always 0.  
Range: 0 to 255

**\*STB?**

Status byte query

Reads the contents of the status byte in decimal form.

**Usage:** Query only

**\*TRG**

Trigger

Triggers all actions waiting for a trigger event. In particular, `*TRG` generates a manual trigger signal. This common command complements the commands of the `TRIGger` subsystem.

`*TRG` corresponds to the `INITiate:IMMediate` command.

**Usage:** Event

**\*TST?**

Self-test query

Initiates self-tests of the instrument and returns an error code.

**Return values:**

**<ErrorCode>**            **integer > 0 (in decimal format)**  
 An error occurred.  
 (For details, see the Service Manual supplied with the instrument).

**0**  
 No errors occurred.

**Usage:**                    Query only

**\*WAI**

Wait to continue

Prevents servicing of the subsequent commands until all preceding commands have been executed and all signals have settled (see also command synchronization and [\\*OPC](#)).

**Usage:**                    Event

## 12.4 Preset commands

The preset commands are not bundled in one subsystem. Therefore, they are listed separately in this section.

Four presetting actions are available:

- Activating the default state of all internal instrument functions ([\\*RST](#) on page 364). Functions that concern the integration of the instrument into a measurement setup are not changed, e.g. reference oscillator source settings.
- Activating the preset state of the parameters related to the selected signal path ([:SOURce<hw>:PRESet](#) on page 367)
- Activating the preset state of all parameters that are not related to the signal path ([:DEVice:PRESet](#) on page 367)
- Activating the original state of delivery (factory reset, [:SYSTem:FPReset](#) on page 367). Only functions that are protected by a password remain unchanged as well as the passwords themselves.



When resetting, the following deviation between remote and manual control exists: In contrast to the [Preset] key, the SCPI commands [\\*RST](#) and [:SYSTem:PRESet](#) do not close open dialogs in the GUI.

:DEVIce:PRESet.....	367
:SOURce<hw>:PRESet.....	367
:SYSTem:PRESet.....	367
:SYSTem:FPReset.....	367

---

### :DEVIce:PRESet

Presets all parameters which are not related to the signal path, including the LF generator.

**Example:**                 DEV: PRES  
Presets all instruments settings that are not related to the signal path.

**Usage:**                 Event

---

### :SOURce<hw>:PRESet

Presets all parameters which are related to the selected signal path.

**Example:**                 SOUR: PRES  
Presets all settings that are related to signal path

**Usage:**                 Event

---

### :SYSTem:PRESet

Triggers an instrument reset. It has the same effect as:

- The [Preset] key.  
However, the command does not close open GUI dialogs like the key does.
- The \*RST command

For an overview of the settings affected by the preset function, see [Table 9-1](#)

**Example:**                 SYST: PRES  
All instrument settings (also the settings that are not currently active) are reset to their default values.

**Usage:**                 Setting only

---

### :SYSTem:FPReset

Triggers an instrument reset to the original state of delivery.

**Example:**                 SYST: FPR  
All instrument settings (also the settings that are not currently active) are reset to the factory values.

**Usage:**                 Event

**Manual operation:** See "[Execute Factory Preset](#)" on page 207

## 12.5 MMEMory subsystem

The `MMEMory` subsystem (Mass MEMory) contains the commands for managing files and directories as well as for loading and saving complete instrument settings in files.

### Mass storage location

Without any additional measures, the R&S SMB100B stores user files on the internal memory or if connected, on a memory stick.

Both, the user directory `/var/user/` on the internal memory or the `/usb/` directory on the memory stick, can be used to **preserve** user-defined data. Any directory structure can be created.

The `/var/volatile` directory serves as a RAM drive and can be used to protect sensitive information. The data is available **temporarily**.

### Default storage location

The R&S SMB100B stores user data in the user directory.

In the file system, user directory is always indicated as `/var/user/`.

In manual control, you access this directory via the "File Manager", see [Chapter 9.8, "Using the file manager"](#), on page 218. In remote control, you can query it with the command `:SYSTem:MMEMory:PATH:USER?`.

To query and change the default directory used for mass storage, use the command `:MMEMory:CDIRectory`.

### 12.5.1 File naming conventions

To enable files to be used in different file systems, consider the following file naming conventions:

- The *filename* can be of any length and *is case-sensitive*, i.e it is distinguished between uppercase and lowercase letters.
- All letters and numbers are permitted (numbers are, however, not permitted at the beginning of the filename).
- Avoid using special characters.
- Do not use slashes "\" and "/". These symbols are used in file paths.
- Avoid using the following filenames: `CLOCK$, CON, COM1 to COM4, LPT1 to LPT3, NUL or PRN`  
They are reserved by the operating system.

#### File extension

The file and the optional file *extension* are separated by a period sign. The R&S SMB100B distinguishes the files according to their extensions; each type of file is assigned a specific file content and hence a specific file extension. Refer to [Chap-](#)



ter A.2, "Extensions for user files", on page 629 for an overview of the supported file extensions.

### Wildcards

The two characters "\*" and "?" function as "wildcards", i.e. they are used for selecting several files. The "?" character represents exactly one character, while the "\*" character represents all characters up to the end of the filename. "\*.\*" therefore represents all files in a directory.

### Filename and file path

When used in remote control commands, the parameter `<filename>` is specified as a string parameter with quotation marks. It can contain either the complete path including the root user directory `/var/user` and filename, or only the filename. The filename must include the file extension. The same applies for the directory `/var/volatile` and for the parameters `<directory_name>` and `<path>`.

Depending on how much information is provided, the values specified in the parameter or with the command `MMEM:CDIR` are used for the path and drive setting in the commands.

## 12.5.2 Handling files in the default or in a specified directory

For better overview and easy file handling, you may not save all user files in the user directory `/var/user` but rather organize them into subdirectories.

The command syntax defines two general ways to access files with user data in a *specific* directory:

- **Change the current default directory** for mass memory storage and then directly access the files in this default directory, like saved list files, files with user data or save/recall files.  
The subsequent commands for file handling (select, delete, read out files in the directory, etc.) require only specification of the filename. File extension can be omitted; after syntax evaluation of the used command, the R&S SMB100B filters out the relevant files.
- Define the **complete file path**, including the user directory `/var/user`, created subdirectories and filename.  
As a rule, whenever an complete file path is determined, it overwrites a previously specified default directory.

The following example explains this rule as a principle. Exceptions of this general rule are stated in the description of the corresponding command. The [Chapter 12.5.3, "Programming examples"](#), on page 370 explains the general working principle with the commands for mass memory storage.

The same rule applies to the `/var/volatile` directory, see [Example "Working with files in the volatile memory"](#) on page 372.

**Example: Load file with user data from a specific directory**

This example shows the principle of file handling in remote environment by using list commands. Working with the files of other subsystems is analogical. We assume that the directory `/var/user/my_files` is existing and contains the files `list_test.lsw` and `list_2.lsw`.

```
//Query files in the user diectory
SOURCEl:LIST:CATalog?
// -
// no files

// Set the default directory
MMEMemory:CDIRectory "/var/user/my_files"
SOURCEl:LIST:CATalog?
// "list_test","list_2"

// Specify the complete path to select a list file (*.lsw)
// in the specific directory
SOURCEl:LIST:SElect "/var/user/my_files/list_test"
SOURCEl:LIST:DElete "/var/user/my_files/list_2"
```

### 12.5.3 Programming examples

**Example: Saving and loading current settings**

This example shows two ways of how to save the current instrument setting in the file `settings.savrcltxt` in the directory `/var/user/savrcl`.



Before the instrument settings can be saved in a file, they have to be saved in an intermediate memory using common command `*SAV <number>`. The specified number is then used in the `:MMEMemory:STORe:STATe` command.

Also, after loading a file with instrument settings with command `:MMEMemory:LOAD:STATe`, these settings have to be activated with the common command `*RCL <number>`.

```
// Save the current settings in an intermediate memory with number 4
*SAV 4

// save the settings in a file in a specific directory;
// the complete path has to be specyified
MMEMemory:STORe:STATe 4,"/var/user/savrcl/settings.savrcltxt"

// save the settings in a file in the default directory;
// set the default directory; specify only the file name
MMEMemory:CDIRectory "/var/user/savrcl"
*SAV 4
```

```
MMEMory:STORe:STATe 4,"settings.savrc1txt"
```

```
// Load the saved settings in the intermediate memory 4 and activate them
MMEMory:LOAD:STATe 4,"/var/user/settings.savrc1txt"
*RCL 4
```

### Example: Working with files and directories

This example shows how to list files in a directory, list the subdirectories, query the number of files in a directory, create directory, rename and delete files.

```
// Query the current default directory for mass storage,
// change the directory to the default user directory "/var/user"
// and read out the files in it
MMEMory:CDIRectory?
// "/var/user/temp"
MMEMory:CDIRectory
MMEMory:CDIRectory?
// "/var/user/"
MMEMory:CATalog?
// 1282630,8102817792,".,DIR,4096",".,DIR,4096","Log,DIR,4096",
// "settings.savrc1txt,BIN,16949","temp,DIR,4096","test,DIR,4096",
// "list.lsw,BIN,1245201"
// the directory "/var/user" contains the predefined directory "Log",
// the subdirectories "test" and "temp"
// as well as the files "settings.savrc1txt" and "list.lsw"

// query only the subdirectories of the current or specified directory
MMEMory:DCATalog? "/var/user"
// ".,",".",,"Log","temp","test"

// query only number of subdirectories in the current or specified directory
MMEMory:DCATalog:LENGth? "/var/user"
// 5

// query number of files in the current or specified directory
MMEMory:CATalog:LENGth? "/var/user"
// 7

// Create a new directory for mass memory storage in the specified directory
MMEMory:MDIRectory "/var/user/new"

// Copy the file "settings.savrc1txt" into the new directory
MMEMory:COpy "/var/user/settings.savrc1txt","/var/user/new/settings.savrc1txt"

// Rename the file "settings.savrc1txt" into the new directory
// and read out the files in this specific directory
MMEMory:CDIRectory "/var/user/new"
MMEMory:MOve "settings.savrc1txt","settings_new.savrc1txt"
MMEMory:CATalog? "/var/user/new"
// 25141,8102789120,".,DIR,4096",".,DIR,4096","settings_new.savrc1txt,BIN,16949"
```

```
// Delete an empty directory, e.g. the "test" directory
MMEMory:RDIRectory "/var/user/test"
// Delete the entire directory, including files and subdirectories
:MMEMory:RDIRectory:RECURSive "var/user/test"
```

### Example: Working with files in the volatile memory

This example shows how to work with files in the `/var/volatile` directory.

```
// Change the default directory for mass storage,
// read out the files, load and play a file with the ARB
MMEMory:CDIRectory "/var/volatile"
MMEMory:CDIRectory?
// "/var/volatile"
MMEMory:CATalog?
//13928,525352960,".,DIR,60",".,DIR,4096","list.lst,BIN,9772"

SOURce1:LIST:SElect "/var/volatile/list"
SOURce1:FREQuency:MODE LIST
OUTPut1:STATe 1
```

## 12.5.4 Remote control commands

:MMEMory:CATalog?	372
:MMEMory:CATalog:LENGth?	373
:MMEMory:CDIRectory	373
:MMEMory:COpy	373
:MMEMory:DATA	374
:MMEMory:DCATalog?	375
:MMEMory:DCATalog:LENGth?	375
:MMEMory:DELeTe	375
:MMEMory:LOAD:STATe	375
:MMEMory:MDIRectory	376
:MMEMory:MOVE	376
:MMEMory:MSIS	376
:MMEMory:RDIRectory	376
:MMEMory:RDIRectory:RECURSive	377
:MMEMory:STORe:STATe	377
:MEMory:HFRee?	377

---

### :MMEMory:CATalog?

Returns the content of a particular directory.

**Return values:**

<Catalog> string  
 String parameter to specify the directory.  
 If you leave out the path, the command returns the contents of the directory selected with `:MMEMory:CDIRectory`.  
 The path may be relative or absolute.

**Usage:** Query only

**Manual operation:** See ["Directory, File List and Filename"](#) on page 212

**:MMEMory:CATalog:LENGth? [<Path>]**

Returns the number of files in the current or in the specified directory.

**Query parameters:**

<Path> string  
 String parameter to specify the directory. If the directory is omitted, the command queries the content of the current directory, queried with `:MMEMory:CDIRectory` command.

**Return values:**

<FileCount> integer  
 Number of files.

**Usage:** Query only

**:MMEMory:CDIRectory <Directory>**

Changes the default directory for mass memory storage. The directory is used for all subsequent `MMEM` commands if no path is specified with them.

**Parameters:**

<Directory> <directory\_name>  
 String containing the path to another directory. The path can be relative or absolute.  
 To change to a higher directory, use two dots '..'.

**Manual operation:** See ["Directory, File List and Filename"](#) on page 212  
 See ["Directory and Filename"](#) on page 220

**:MMEMory:COpy <SourceFile>, <DestinationFile>**

Copies an existing file to a new file. Instead of just a file, this command can also be used to copy a complete directory together with all its files.

**Setting parameters:**

<SourceFile> string  
 String containing the path and file name of the source file

**<DestinationFile>** string  
 String containing the path and name of the target file. The path can be relative or absolute.  
 If **<DestinationFile>** is not specified, the **<SourceFile>** is copied to the current directory, queried with the **:MMEMory:CDIRectory** command.  
**Note:** Existing files with the same name in the destination directory are overwritten without an error message.

**Usage:** Setting only

**Manual operation:** See "[Cut, Copy&Paste and Delete](#)" on page 220

**:MMEMory:DATA** <Filename>, <BinaryData>

**:MMEMory:DATA?** <Filename>

The setting command writes the block data **<BinaryBlock>** to the file identified by **<Filename>**.

**Tip:** Use this command to read/transfer stored instrument settings or waveforms directly from/to the instrument.

**Parameters:**

<BinaryData>

**Setting parameters:**

<Filename> string  
 String parameter to specify the name of the file.

**Query parameters:**

<Filename> #<number><length\_entry><data>  
 #: Hash sign; always comes first in the binary block  
 <number>: the first digit indicates how many digits the subsequent length entry has  
 <length\_entry>: indicates the number of subsequent bytes  
 <data>: binary block data for the specified length.  
 For files with a size with more than nine digits (gigabytes), the instrument allows the syntax # (<Length>), where <Length> is the file size in decimal format.

**Example:**

```
MMEMory:DATA '/var/user/test.txt',#15hallo
```

Writes the block data to the file `test.txt`.

The digit 1 indicates a length entry of one digit; the digit 5 indicate a length of the binary data (`hallo`) in bytes.

```
MMEMory:DATA? '/var/user/test.txt'
```

Sends the data of the file `test.txt` from the instrument to the controller in the form of a binary block.

Response: `#15hallo`

---

**:MMEMory:DCATalog?**

Returns the subdirectories of a particular directory.

**Return values:**

<DCatalog>                      <file\_entry>  
Names of the subdirectories separated by colons. The first two strings are related to the parent directory.

**Usage:**                              Query only

---

**:MMEMory:DCATalog:LENGth? [<Path>]**

Returns the number of subdirectories in the current or specified directory.

**Query parameters:**

<Path>                              string  
String parameter to specify the directory. If the directory is omitted, the command queries the contents of the current directory, to be queried with [:MMEMory:CDIRectory](#) command.

**Return values:**

<DirectoryCount>                integer  
Number of parent and subdirectories.

**Usage:**                              Query only

---

**:MMEMory:DELeTe <Filename>**

Removes a file from the specified directory.

**Setting parameters:**

<Filename>                        string  
String parameter to specify the name and directory of the file to be removed.

**Usage:**                              Setting only

**Manual operation:**    See "[Cut, Copy&Paste and Delete](#)" on page 220

---

**:MMEMory:LOAD:STATe <SavRclStateNumb>, <file\_name>**

Loads the specified file stored under the specified name in an internal memory.

After the file has been loaded, the instrument setting must be activated using an [\\*RCL](#) command.

**Setting parameters:**

<SavRclStateNumb>    Determines to the specific <number> to be used with the [\\*RCL](#) command, e.g. [\\*RCL 4](#).

<file\_name>                        String parameter to specify the file name with extension [\\*.savrcltxt](#).

**Usage:** Setting only

**Manual operation:** See ["Recall"](#) on page 214

---

**:MMEemory:MDIRectory** <Directory>

Creates a subdirectory for mass memory storage in the specified directory. If no directory is specified, a subdirectory is created in the default directory. This command can also be used to create a directory tree.

**Setting parameters:**

<Directory> string  
String parameter to specify the new directory.

**Usage:** Setting only

**Manual operation:** See ["Create New Directory"](#) on page 220

---

**:MMEemory:MOVE** <SourceFile>, <DestinationFile>

Moves an existing file to a new location or, if no path is specified, renames an existing file.

**Setting parameters:**

<SourceFile> string  
String parameter to specify the name of the file to be moved.

<DestinationFile> string  
String parameters to specify the name of the new file.

**Usage:** Setting only

**Manual operation:** See ["Rename"](#) on page 220

---

**:MMEemory:MSIS** <Path>

Defines the drive or network resource (in the case of networks) for instruments with windows operating system, using `msis` (MSIS = Mass Storage Identification String).

**Note:** Instruments with Linux operating system ignore this command, since Linux does not use drive letter assignment.

---

**:MMEemory:RDIRectory** <Directory>

Removes an empty directory from the mass memory storage system. If no directory is specified, the subdirectory with the specified name is deleted in the default directory.

To remove a directory with contents, use command `:MMEemory:RDIRectory:RECURSIVE` on page 377.



**Setting parameters:**

<Directory> string  
String parameter to specify the directory to be deleted.

**Example:** See [Example"Working with files and directories"](#) on page 371.

**Usage:** Setting only

**:MMEMory:RDIRectory:RECursive** <Directory>

Removes the specified directory, including files and subdirectories from the mass memory storage system. If no directory is specified, the command removes the subdirectories of the default directory.

The command the entire directory without further prompt or notification.

**Setting parameters:**

<Directory> string  
String parameter to specify the directory to be deleted.

**Example:** See [Example"Working with files and directories"](#) on page 371.

**Usage:** Setting only

**:MMEMory:STORE:STATe** <savrcl\_state\_nr>, <file\_name>

Stores the current instrument setting in the specified file.

The instrument setting must first be stored in an internal memory with the same number using the common command \*SAV.

**Setting parameters:**

<savrcl\_state\_nr> Corresponds to the specific <number> defined with the \*SAV command, e.g. \*SAV 4.

<file\_name> String parameter to specify the file name with extension \*.savrcltxt.

**Usage:** Event

**Manual operation:** See ["Save"](#) on page 213

**:MEMory:HFRee?**

Returns the used and available memory in Kb.

**Return values:**

<TotalPhysMemKb> integer  
Total physical memory.

<ApplicMemKb> integer  
Application memory.

<HeapUsedKb>	integer	Used heap memory.
<HeapAvailableKb>	integer	Available heap memory.
<b>Usage:</b>	Query only	

## 12.6 CALibration subsystem

The CALibration subsystem contains the commands needed for performing internal adjustments. This procedure is triggered by the query commands.

### Common suffixes

The following common suffixes are used in the remote commands:

Suffix	Value range	Description
CALibration<hw>	[1]	Optional suffix

### Understanding the query response

- 0: error-free execution of the adjustments
- 1: indicates that an error occurred; the process has been canceled

:CALibration:ALL[:MEASure]?	378
:CALibration<hw>:ALL:DATE?	379
:CALibration<hw>:ALL:INFormation?	379
:CALibration<hw>:ALL:TEMP?	379
:CALibration<hw>:ALL:TIME?	380
:CALibration<hw>:CONTinueonerror	380
:CALibration:DATA:EXPort	380
:CALibration:DATA:FACTory:DATE?	380
:CALibration:DElay:MINutes	381
:CALibration:DElay:SHUTdown[:STATe]	381
:CALibration:DElay[:MEASure]?	381

---

### :CALibration:ALL[:MEASure]? [<Force>]

Starts all internal adjustments that do not need external measuring equipment.

#### Query parameters:

<Force> string

#### Return values:

<Measure> 1 | ON | 0 | OFF

**Example:**

```
CAL:ALL:MEAS?
// Response: "0"
// Executes the adjustments of all instrument functions.
// When completed, it indicates that the adjustment
// has been performed successfully.
```

**Usage:** Query only

**Manual operation:** See "[Adjust All](#)" on page 610

#### :CALibration<hw>:ALL:DATE?

Queries the date of the most recently executed full adjustment.

**Suffix:**

<hw>	[1]
	Optional suffix

**Return values:**

<Date>	string
--------	--------

**Example:**

```
CAL:ALL:DATE?
// "2016-01-01"
```

**Usage:** Query only

**Manual operation:** See "[Last Full Adjustment](#)" on page 610

#### :CALibration<hw>:ALL:INFormation?

Queries the current state of the internal adjustment.

**Return values:**

<CallInfoText>	string
----------------	--------

**Example:**

```
CAL:ALL:INF?
"Instrument is calibrated, no adjustment required."
"UNCAL, instrument is warming up."
"UNCAL, Please perform full adjustment after warming up."
"UNCAL, Please perform full adjustment."
```

**Usage:** Query only

**Manual operation:** See "[Information](#)" on page 611

#### :CALibration<hw>:ALL:TEMP?

Queries the temperature deviation compared to the calibration temperature.

**Suffix:**

<hw>	[1]
	Optional suffix

**Return values:**

<Temperature>	string
---------------	--------

**Example:**           CALibration:ALL:TEMP?  
                  // "+12.00 K"

**Usage:**            Query only

**Manual operation:** See "[Temperature Offset](#)" on page 611

#### :CALibration<hw>:ALL:TIME?

Queries the time elapsed since the last full adjustment.

**Return values:**

<Time>            string

**Example:**           CAL:ALL:TIME?  
                  // "22 days"

**Usage:**            Query only

**Manual operation:** See "[Time](#)" on page 611

#### :CALibration<hw>:CONTinueonerror <State>

Continues the calibration even though an error was detected. By default adjustments are aborted on error.

**Suffix:**

<hw>                [1]  
                  Optional suffix

**Parameters:**

<State>            1 | ON | 0 | OFF  
\*RST:              n.a. (factory preset: 0)

**Example:**           CAL:CONT ON  
                  // Continues calibration after an error

**Manual operation:** See "[Continue Adjustment on Error](#)" on page 611

#### :CALibration:DATA:EXPort

Collects the internal adjustment data and provides the data for export in a zip file. You can export the data for service and evaluation purposes.

**Example:**           :CALibration:DATA:EXPort

**Usage:**            Event

#### :CALibration:DATA:FACTory:DATE?

Queries the date of the last factory calibration.

**Return values:**

<Date>            string

**Example:**            `CAL:DATA:FACT:DATE?`  
                       `// "2016-01-01"`

**Usage:**             Query only

**Manual operation:** See "[Last Factory Calibration](#)" on page 603

### **:CALibration:DELAy:MINutes** <Minutes>

Sets the warm-up time to wait before internal adjustment starts automatically.

Automatic execution starts only, if you have enabled the calibration with command :  
[CALibration:DELAy\[:MEASure\]? ON](#).

**Parameters:**

<Minutes>            integer  
                       Range:        30 to 120  
                       \*RST:         n.a. (no preset. default: 60)

**Example:**            `:CALibration:DELAy:MINutes 30`  
                       `// sets the time delay for warm-up of the instrument.`

**Manual operation:** See "[Warm Up Time](#)" on page 612

### **:CALibration:DELAy:SHUTdown[:STATe]** <Shutdown>

Enables the instrument to shut down automatically after calibration.

**Parameters:**

<Shutdown>         1 | ON | 0 | OFF  
                       \*RST:         0

**Example:**            `:CALibration:DELAy:SHUTdown[:STATe] ON|1`  
                       `// initiates that the instrument shuts down when the adjustments are completed.`

**Manual operation:** See "[Shutdown After Adjustment](#)" on page 612

### **:CALibration:DELAy[:MEASure]?**

Starts the delayed adjustment process. When the warm-up time has elapsed (see :  
[CALibration:DELAy:MINutes](#), it executes the internal adjustments.

If you have enabled automatic shutdown, [:CALibration:DELAy:SHUTdown\[:STATe\] ON](#), the instrument shuts down when the adjustments are completed.

**Return values:**

<Error>             1 | ON | 0 | OFF  
                       \*RST:         n.a. (no preset. default: 0)

**Example:**            `:CALibration:DELAy[:MEASure] ON|1`  
                       `// enables the adjustment process to start after the warm-up time automatically.`

**Usage:**             Query only

**Manual operation:** See "Adjust All Delayed" on page 612

## 12.7 DIAGnostic subsystem

The `DIAGnostic` subsystem contains the commands used for instrument diagnosis and servicing. SCPI does not define any `DIAGnostic` commands; the commands listed here are all device-specific. All `DIAGnostic` commands are query commands which are not affected by `*RST`.



The test functions are intended for services purposes.

They are thus password-protected functions. Unlock the corresponding protection level to access them, see `:SYSTem:PROTect<ch>[:STATe]`.

For more information, see R&S SMB100B Service Manual.

### Common suffixes

The following common suffixes are used in remote commands:

Suffix	Value range	Description
<code>DIAGnostic&lt;hw&gt;</code>	[1]	Optional suffix

### Example: Programming example

The example lists the commands required to query assemblies and test points for diagnosis purposes.

```
// Query the modules available in the instrument
// and variant and revision state of a certain assembly
DIAGnostic1:BGInfo:CATalog?
// FRONT_AF, PSU300, IFB.BV, MB2_AF, ...
DIAGnostic1:BGInfo? "PSU300"
// PSU300 2118.2067.02 01.00 100000

// Query the test points available in the instrument
// and trigger the measurement in a selected test point
DIAGnostic1:POINt:CATalog?
// ATT6HP_AF_DET_N, ATT6HP_AF_DET_P, ATT6HP_AF_DET_TEMP...
DIAGnostic1:MEASure:POINt? "ATT6HP_AF_DET_N"
// 0.000000V

// Query the operating hours and number of power-on so far.
DIAGnostic:INFO:OTIME?
// 112 h
DIAGnostic:INFO:POCount?
// 14
```

**Commands**

:DIAGnostic<hw>:BGInfo:CATalog?	383
:DIAGnostic<hw>:BGInfo?	383
:DIAGnostic:INFO:OTIME?	383
:DIAGnostic:INFO:POCount?	384
:DIAGnostic<hw>:POINt:CATalog?	384
:DIAGnostic<hw>[:MEASure]:POINt?	384

**:DIAGnostic<hw>:BGInfo:CATalog?**

Queries the names of the assemblies available in the instrument.

**Return values:**

<Catalog> string  
List of all assemblies; the values are separated by commas  
The length of the list is variable and depends on the instrument equipment configuration.

**Example:** See [Example "Programming example"](#) on page 382.

**Usage:** Query only

**:DIAGnostic<hw>:BGInfo? [<Board>]**

Queries information on the modules available in the instrument, using the variant and revision state.

**Query parameters:**

<Board> string  
Module name, as queried with the command :  
[DIAGnostic<hw>:BGInfo:CATalog?](#).  
To retrieve a complete list of all modules, omit the parameter.  
The length of the list is variable and depends on the instrument equipment configuration.

**Return values:**

<BgInfo> <Module name> <Module stock number incl. variant> <Module revision> <Module serial number>  
List of comma-separated entries, one entry per module.  
Each entry for one module consists of four parts that are separated by space characters.

**Example:** See [Example "Programming example"](#) on page 382.

**Usage:** Query only

**Manual operation:** See ["Assembly"](#) on page 602

**:DIAGnostic:INFO:OTIME?**

Queries the operating hours of the instrument so far.

**Return values:**

<OperationTime> integer  
 Range: 0 to INT\_MAX  
 \*RST: 0

**Example:** See [Example"Programming example"](#) on page 382.

**Usage:** Query only

**Manual operation:** See ["Operation Time / h"](#) on page 603

**:DIAGnostic:INFO:POCount?**

Queries how often the instrument has been turned on so far.

**Return values:**

<PowerOnCount> integer  
 Range: 0 to INT\_MAX  
 \*RST: 0

**Example:** See [Example"Programming example"](#) on page 382.

**Usage:** Query only

**Manual operation:** See ["Power On Count"](#) on page 603

**:DIAGnostic<hw>:POINT:CATalog?**

Queries the test points available in the instrument.

For more information, see R&S SMB100B Service Manual.

**Return values:**

<Catalog> string  
 List of comma-separated values, each representing a test point

**Example:** See [Example"Programming example"](#) on page 382.

**Usage:** Query only

**:DIAGnostic<hw>[:MEASure]:POINT? <Name>**

Triggers the voltage measurement at the specified test point and returns the measured voltage.

For more information, see R&S SMB100B Service Manual.

**Query parameters:**

<Name> <test point identifier>  
 Test point name, as queried with the command :  
[DIAGnostic<hw>:POINT:CATalog?](#)

**Return values:**

<Value> <value><unit>



**Example:** See [Example "Programming example"](#) on page 382.

**Usage:** Query only

## 12.8 HUMS remote control commands

The remote control commands for the health and utilizations monitoring system (HUMS) comprise commands of the `DIAGnostic` subsystem and the commands of the `SYSTEM:COMMunicate:REST` and `SYSTEM:COMMunicate:REST` subsystems.

For all HUMS-related remote control commands, see refer to the "R&S®HUMS Health and Utilization Monitoring Service" User Manual on the Internet.

### Commands

<a href="#">DIAGnostic:HUMS:DELeTe:ALL</a> .....	385
<a href="#">DIAGnostic:HUMS:DEVice:HISTory?</a> .....	386
<a href="#">DIAGnostic:HUMS:DEVice:HISTory:DELeTe:ALL</a> .....	386
<a href="#">DIAGnostic:HUMS:FORMat</a> .....	387
<a href="#">DIAGnostic:HUMS:SAVe</a> .....	387
<a href="#">DIAGnostic:HUMS:STATe</a> .....	387
<a href="#">DIAGnostic:HUMS:TAGS:ALL?</a> .....	387
<a href="#">DIAGnostic:HUMS:TAGS:DELeTe</a> .....	388
<a href="#">DIAGnostic:HUMS:TAGS:DELeTe:ALL</a> .....	388
<a href="#">DIAGnostic:HUMS:TAGS[:VALue]</a> .....	388
<a href="#">SYSTEM:COMMunicate:REST:ENABle</a> .....	389
<a href="#">SYSTEM:COMMunicate:SNMP:COMMunity:RO</a> .....	389
<a href="#">SYSTEM:COMMunicate:SNMP:COMMunity:RW</a> .....	389
<a href="#">SYSTEM:COMMunicate:SNMP:CONtact</a> .....	390
<a href="#">SYSTEM:COMMunicate:SNMP:LOCation</a> .....	390
<a href="#">SYSTEM:COMMunicate:SNMP:USM:USER</a> .....	390
<a href="#">SYSTEM:COMMunicate:SNMP:USM:USER:ALL?</a> .....	391
<a href="#">SYSTEM:COMMunicate:SNMP:USM:USER:DELeTe</a> .....	391
<a href="#">SYSTEM:COMMunicate:SNMP:USM:USER:DELeTe:ALL</a> .....	391
<a href="#">SYSTEM:COMMunicate:SNMP:VERSion</a> .....	392

---

### **DIAGnostic:HUMS:DELeTe:ALL**

Deletes the complete HUMS data. This includes device history, device tags, SCPI connections, utilization history and utilizations.

**Example:** //Delete HUMS data  
DIAG:HUMS:DEL:ALL

**Usage:** Event

**DIAGnostic:HUMS:DEvice:HISTory?**

Queries the device history information of the connected instrument. Depending on the set data format, the queried data is either displayed in XML or JSON format. For more information about setting the data format, see [DIAGnostic:HUMS:FORMat](#) on page 387.

**Return values:**

<HistoryInfo>            <block\_data>  
 Device history information of the connected instrument as block data in a comma-separated list:  
 #blockdata[{event1},{event2},{event3}...]  
 With the following parameters:  
 <eventID>,<eventTimestamp>,<eventMessage>,<eventDetails>,<eventSeverity>  
 Binary block data with the following syntax:  
 #<Digits><Length><Binarydata>  
 #  
 Indicates the start of the binary block  
**<Digits>**  
 Decimal value  
 Gives the number of decimal digits used for the <Length> value  
**<Length>**  
 Decimal value  
 Number of bytes the follow in the <Binary data> part  
**<Binary data>**  
 Binary data in ASCII format

**Example:**

```
//Return device history
DIAG:HUMS:DEV:HIST?
Returns for example:
#44715[{"eventId":32,"eventTimestamp":
"2021-02-02T17:25:39Z","eventMessage":
"Deviation from Self Alignment Temperature",
"eventDetails":
"Deviations resolved","eventSeverity":0}
```

**Usage:**                    Query only

**Manual operation:**    See ["Export History"](#) on page 305

**DIAGnostic:HUMS:DEvice:HISTory:DELeTe:ALL**

Deletes the complete device history information of the connected instrument.

**Example:**                    //Delete complete device history  
 DIAG:HUMS:DEV:HIST:DEL:ALL

**Usage:**                    Event

**Manual operation:**    See ["Delete History"](#) on page 305

**DIAGnostic:HUMS:FORMat** <DataFormat>

Selects the format for the queried HUMS data. You can query the HUMS data either in `JSON` format or `XML` format.

The defined format affects all other commands that return block data.

**Parameters:**

<DataFormat>      `JSON | XML`  
**JSON**  
 Returns the HUMS data in `JSON` format.  
**XML**  
 Returns the HUMS data in `XML` format.  
 \*RST:            `JSON`

**Example:**

```
//Return data in JSON format
DIAG:HUMS:FORM JSON
```

**DIAGnostic:HUMS:SAVE** <path>

Saves the HUMS history as a `ZIP` file to your preferred path.

**Setting parameters:**

<path>

**Example:**

```
//Save HUMS history data
DIAG:HUMS:SAVE 'C:\HUMS\hums_2021.zip'
```

**Usage:**

Setting only

**Manual operation:** See "[Export History](#)" on page 305

**DIAGnostic:HUMS:STATe** <State>

Turns the HUMS service and data collection on and off.

**Parameters:**

<State>            `ON | OFF | 1 | 0`  
 \*RST:            `ON`

**Example:**

```
//Turn on HUMS service
DIAG:HUMS:STAT ON
```

**Manual operation:** See "[State](#)" on page 305

**DIAGnostic:HUMS:TAgS:ALL?**

Queries all key-value tags that you have assigned to the instrument. Depending on the set data format, the queried data is either displayed in `XML` or `JSON` format. For more information about setting the data format, see [DIAGnostic:HUMS:FORMat](#) on page 387.

**Return values:**

<ID>	ID number of the defined tag.
<Key>	String containing key name of the defined tag.
<Value>	String containing value of the defined tag.

**Example:** //Return all tags  
 DIAG:HUMS:TAGS:ALL?  
 1,"location","building\_11",2,"time zone","CET"

**Usage:** Query only

**Manual operation:** See ["Add"](#) on page 314

**DIAGnostic:HUMS:TAGS:DELeTe <ID>**

Deletes a certain tag you assigned to your instrument, including its key and value.

**Setting parameters:**

<ID> ID number of the tag you want to delete.  
 To identify the ID number, query all device tags from the system first. For more information, see [DIAGnostic:HUMS:TAGS:ALL?](#) on page 387.

**Example:** //Delete tag  
 DIAG:HUMS:TAGS:DEL 0

**Usage:** Setting only

**Manual operation:** See ["Delete"](#) on page 314

**DIAGnostic:HUMS:TAGS:DELeTe:ALL**

Deletes all key-value tags you have assigned to the instrument.

**Example:** //Delete all tags  
 DIAG:HUMS:TAGS:DEL:ALL

**Usage:** Event

**Manual operation:** See ["Delete All"](#) on page 314

**DIAGnostic:HUMS:TAGS[:VALue] <ID>, <Key>, <Value>****DIAGnostic:HUMS:TAGS[:VALue]? <ID>**

Adds or modifies a key-value pair (device tag).

The query returns the key-value pair for a given ID or an empty string if the ID is unknown.

**Parameters:**

<Key>	String containing key name of the queried tag.
<Value>	String containing value of the queried tag.

**Parameters for setting and query:**

<ID> 0 - 31  
 ID number of the tag you want to modify or query.  
 To identify the ID number, query all device tags from the system first. For more information, read here [DIAGnostic:HUMS:TAGS:ALL?](#) on page 387.

**Example:** //Add or modify a tag (tag 1)  
 DIAG:HUMS:TAGS 1, 'location', 'building\_11'

**Manual operation:** See "[Key](#)" on page 313  
 See "[Value](#)" on page 313  
 See "[Add](#)" on page 314

**SYSTem:COMMunicate:REST:ENABLE <RestState>**

Turns communication via the REST API on and off.

**Parameters:**

<RestState> ON | OFF | 0 | 1

**Example:** //Return REST state  
 SYST:COMM:REST:ENAB?

**Manual operation:** See "[REST](#)" on page 307

**SYSTem:COMMunicate:SNMP:COMMunity:RO <CommunityString>**

Defines the SNMP community string for read-only access.

Prerequisites for this command:

- Select an SNMP version that supports communities ([SYSTem:COMMunicate:SNMP:VERSion](#) on page 392).

**Setting parameters:**

<CommunityString> String containing the community name.

**Example:** //Set community name  
 SYST:COMM:SNMP:VERS V12  
 SYST:COMM:SNMP:COMM:RO 'ABC'

**Usage:** Setting only

**Manual operation:** See "[Access](#)" on page 307

**SYSTem:COMMunicate:SNMP:COMMunity:RW <CommunityString>**

Defines the SNMP community string for read-write access.

Prerequisites for this command:

- Select an SNMP version that supports communities ([SYSTem:COMMunicate:SNMP:VERSion](#) on page 392).

**Setting parameters:**

<CommunityString> String containing the community name.

**Example:** //Set read-write access  
 SYST:COMM:SNMP:VERS V12  
 SYST:COMM:SNMP:COMM:RW 'ABC'

**Usage:** Setting only

**Manual operation:** See ["Access"](#) on page 307

**SYSTem:COMMunicate:SNMP:CONtact** <SnmpContact>

Defines the SNMP contact information for the administrator.

You can also set the contact information via SNMP if you do not set it via SCPI.

**Parameters for setting and query:**

<SnmpContact> String containing SNMP contact.  
 \*RST: "" (empty string)

**Example:** //Set SNMP contact  
 SYST:COMM:SNMP:CONT 'ABC'

**Manual operation:** See ["Contact"](#) on page 307

**SYSTem:COMMunicate:SNMP:LOCation** <SnmpLocation>

Defines the SNMP location information for the administrator.

You can also set the location information via SNMP if you do not set it via SCPI.

**Parameters for setting and query:**

<SnmpLocation> String containing SNMP location.  
 \*RST: "" (empty string)

**Example:** //Return SNMP location  
 SYST:COMM:SNMP:LOC?

**Manual operation:** See ["Location"](#) on page 307

**SYSTem:COMMunicate:SNMP:USM:USER** <Name>, <Access>, <Level>[, <Auth\_pwd>[, <Priv\_pwd>]]

Defines an SNMP user profile.

Prerequisites for this command:

- Select SNMPv3 ([SYSTem:COMMunicate:SNMP:VERSion](#) on page 392).

**Setting parameters:**

<Name> String containing name of the user.

<Access> RO | RW  
 Defines the access right a user can have.

<Level>	NOAuth   AUTH   PRIVacy Defines the security level.
<Auth_pwd>	String containing the authentication password.
<Priv_pwd>	String containing the privacy password.
<b>Example:</b>	//Create user profile SYST:COMM:SNMP:VERS V123 SYST:COMM:SNMP:USM:USER 'Peter','RO','PRIV', '1234','XYZ'
<b>Usage:</b>	Setting only
<b>Manual operation:</b>	See <a href="#">"Add SNMP User for HUMS"</a> on page 310

**SYSTem:COMMunicate:SNMP:USM:USER:ALL?**

Queries the number of users and a list of all SNMP users for SNMPv3.

Prerequisites for this command:

- Select SNMPv3 ([SYSTem:COMMunicate:SNMP:VERSion](#) on page 392).

**Return values:**

<Count>	Total number of registered SNMP users.
<Name>	List of all user names as a comma-separated list.

**Example:** //Return all SNMP users  
SYST:COMM:SNMP:USM:USER:ALL?

**Usage:** Query only

**Manual operation:** See ["User table"](#) on page 309

**SYSTem:COMMunicate:SNMP:USM:USER:DELeTe <UserName>**

Deletes a specific SNMP user profile.

**Setting parameters:**

<UserName>	String containing name of SNMP user profile to be deleted.
------------	--

**Example:** //Delete SNMP user profile  
SYST:COMM:SNMP:USM:USER:DEL "Peter"

**Usage:** Setting only

**Manual operation:** See ["Delete"](#) on page 310

**SYSTem:COMMunicate:SNMP:USM:USER:DELeTe:ALL**

Deletes all SNMP user profiles.

**Example:** //Delete all SNMP user profiles  
SYST:COMM:SNMP:USM:USER:DEL:ALL

**Usage:** Event

**Manual operation:** See "[Delete All](#)" on page 309

---

### SYSTem:COMMunicate:SNMP:VERSion <SnmVersion>

Selects the SNMP version.

#### Parameters for setting and query:

<SnmVersion> OFF | V12 | V123 | V3 | DEFault

#### OFF

SNMP communication is off.

#### V12

SNMP communication with SNMPv2 or lower.

#### V123

SNMP communication with SNMPv2 and SNMPv3.

#### V3

SNMP communication with SNMPv3.

\*RST: V123

**Example:** //Select the SNMP version  
SYST:COMM:SNMP:VERS V12

**Manual operation:** See "[SNMP](#)" on page 307

## 12.9 DISPlay subsystem

The DISPlay system contains the commands to set the power-save mode of the instrument.

### Programming Examples

#### Example: Activating screen saver mode and display update

Use the following commands to switch on the screen saver of your instrument or to automatic display. These settings are particularly useful when you control the instrument remotely.

```
// Set the wait time interval and activate the screen saver
DISPlay:PSAVe:HOLDoff 10
DISPlay:PSAVe:STATe ON

// Disable the display of the current frequency and level values in remote control
DISPlay:ANNotation:ALL ON
// DISPlay:ANNotation:FREQuency "<password>", ON
// DISPlay:ANNotation:AMPLitude "<password>", ON

// Enable automatic update of the display at defined time intervals
DISPlay:UPDate[:STATe] ON
```



**Example: Querying the dialog IDs, opening and closing dialogs**

Use the following commands to query the dialog IDs of all currently open dialogs. The dialog ID is a prerequisite for opening and closing dialogs via the remote control.



The dialog ID is also required to define user key actions.

See [Chapter 10.2.4, "How to assign actions to the \[★ \(User\)\] key"](#), on page 248.

```
// Query the dialog IDs of all open dialogs
DISPlay:DIALog:ID?
// CEUltraDLGenSetDlg,_, $A DlgKeyRf_Rosc
```

```
// Open and close dialogs via remote control
DISPlay:DIALog:OPEN "CEUltraDLGenSetDlg,_, $A"
DISPlay:DIALog:OPEN "DlgKeyRf_Rosc"
DISPlay:DIALog:CLOSe "DlgKeyRf_Rosc"
DISPlay:DIALog:CLOSe:ALL
```

:DISPlay:PSAVe:HOLDoff.....	393
:DISPlay:PSAVe[:STATe].....	393
:DISPlay:BRIGHtness.....	394
:DISPlay:BUtTon:BRIGHtness.....	394
:DISPlay:UPDate[:STATe].....	394
:DISPlay:ANNOtation:AMPLitude.....	395
:DISPlay:ANNOtation:FREQuency.....	395
:DISPlay:ANNOtation[:ALL].....	395
:DISPlay:DIALog:ID?.....	395
:DISPlay:DIALog:OPEN.....	396
:DISPlay:DIALog:CLOSe.....	396
:DISPlay:DIALog:CLOSe:ALL.....	397

---

**:DISPlay:PSAVe:HOLDoff** <HoldoffTimeMin>

Sets the wait time for the screen saver mode of the display.

**Parameters:**

<HoldoffTimeMin> integer  
 Range: 1 to 60  
 \*RST: n.a. (factory preset: 10)  
 Default unit: minute

**Example:** see [Example "Activating screen saver mode and display update"](#) on page 392

**Manual operation:** See ["Wait Time"](#) on page 238

---

**:DISPlay:PSAVe[:STATe]** <State>

Activates the screen saver mode of the display.

We recommend that you use this mode to protect the display, if you operate the instrument in remote control.

To define the wait time, use the command `:DISPlay:PSAVE:HOLDoff`.

**Parameters:**

<State> 1 | ON | 0 | OFF  
 \*RST: n.a. (factory preset: 0)

**Example:** See [Example"Activating screen saver mode and display update"](#) on page 392

**Manual operation:** See ["Screen Saver"](#) on page 238

**:DISPlay:BRIGhtness <BRIGhtness>**

Sets the brightness of the display.

**Parameters:**

<BRIGhtness> float  
 Range: 1.0 to 20.0  
 Increment: 1.0  
 \*RST: 14.0

**Example:** `DISPlay:BRIGhtness 14`

**Manual operation:** See ["Display"](#) on page 238

**:DISPlay:BUtTon:BRIGhtness <ButtonBrightnes>**

Sets the brightness of the [RF on/off] key.

**Parameters:**

<ButtonBrightnes> integer  
 Range: 1 to 20  
 \*RST: n.a. (no preset. default: 14)

**Example:** `DISPlay:BUtTon:BRIGhtness 15`

**Manual operation:** See ["RF Hardkey"](#) on page 239

**:DISPlay:UPDate[:STATE] <Update>**

Activates the refresh mode of the display.

**Parameters:**

<Update> 1 | ON | 0 | OFF  
 \*RST: n.a. (factory preset: 1)

**Example:** See [Example"Activating screen saver mode and display update"](#) on page 392

**Manual operation:** See ["Display Update is"](#) on page 239

---

**:DISPlay:ANNOtation:AMPLitude** <SecPassword>, <State>

Indicates asterisks instead of the level values in the status bar.

**Parameters:**

<SecPassword>      string  
 <State>            1 | ON | 0 | OFF  
 \*RST:            n.a. (factory preset: 1)

**Example:**        See [Example"Activating screen saver mode and display update"](#) on page 392

**Manual operation:** See ["Annotation Amplitude"](#) on page 265

---

**:DISPlay:ANNOtation:FREQuency** <SecPassWord>, <State>

Indicates asterisks instead of the frequency values in the status bar.

**Parameters:**

<SecPassWord>    string  
 <State>            1 | ON | 0 | OFF  
 \*RST:            n.a. (factory preset: 1)

**Example:**        See [Example"Activating screen saver mode and display update"](#) on page 392

**Manual operation:** See ["Annotation Frequency"](#) on page 264

---

**:DISPlay:ANNOtation[:ALL]** <State>

Displays asterisks instead of the level and frequency values in the status bar of the instrument.

We recommend that you use this mode if you operate the instrument in remote control.

**Parameters:**

<State>            1 | ON | 0 | OFF  
 \*RST:            1

**Example:**        See [Example"Activating screen saver mode and display update"](#) on page 392

---

**:DISPlay:DIALog:ID?**

Returns the dialog identifiers of the open dialogs in a string separated by blanks.

**Return values:**

<DialogIdList>      <DialogID#1>< ><DialogID#2>< > ... < ><DialogID#n>

Dialog identifiers are string without blanks. Blanks are represented as \$\$.

Dialog identifiers <DialogID> are composed of two main parts: <DialogName> [<OptionalParts>]

#### <DialogName>

Meaningful information, mandatory input parameter for the commands:

:DISPlay:DIALog:OPEN on page 396

:DISPlay:DIALog:CLOSe on page 396

#### <Optional parts>

String of \$<X> values, where <X> is a character, interpreted as follows:

\$q<DialogQualifier>: optional dialog qualifier, usually the letter A or B, as displayed in the dialog title.

\$i<Instances>: comma-separated list of instance indexes, given in the order h, c, s, d, g, u, 0. Default is zero; the terminating ", 0" can be omitted.

\$t<TabIds>: comma-separated indexes or tab names; required, if a dialog is composed of several tabs.

\$x<Left>\$y<Top>\$h<Left>\$w<Top>: position and size; superfluous information.

**Example:** See [Example"Querying the dialog IDs, opening and closing dialogs"](#) on page 393

**Usage:** Query only

**Manual operation:** See ["SCPI"](#) on page 247

#### :DISPlay:DIALog:OPEN <DialogId>

Opens the specified dialog.

#### Setting parameters:

<DialogId> string

To find out the dialog identifier, use the query [:DISPlay:DIALog:ID?](#).

The <DialogName> part of the query result is mandatory.

**Example:** See [Example"Querying the dialog IDs, opening and closing dialogs"](#) on page 393

**Usage:** Setting only

**Manual operation:** See ["SCPI"](#) on page 247

#### :DISPlay:DIALog:CLOSe <DialogId>

Closes the specified dialog.

**Setting parameters:**

<DialogId> string  
 To find out the dialog identifier, use the query `:DISPlay:DIALog:ID?`.  
 The <DialogName> part of the query result is sufficient.

**Example:** See [Example"Querying the dialog IDs, opening and closing dialogs"](#) on page 393

**Usage:** Setting only

**:DISPlay:DIALog:CLOSE:ALL**

Closes all open dialogs.

**Example:** See [Example"Querying the dialog IDs, opening and closing dialogs"](#) on page 393

**Usage:** Event

## 12.10 FORMat subsystem

The commands in the FORMat subsystem determine the format of data returned by the R&S SMB100B to the controller. This affects all query commands that return a list of numerical data or block data, noted in the descriptions of the commands. The set data format applies to both paths.

<code>:FORMat:BORDER</code> .....	397
<code>:FORMat:SREGister</code> .....	398
<code>:FORMat[DATA]</code> .....	398

**:FORMat:BORDER <Border>**

Determines the sequence of bytes within a binary block. This only affects blocks which use the IEEE754 format internally.

**Parameters:**

<Border> NORMal | SWAPped

**NORMal**  
 Expects/sends the *least* significant byte of each IEEE754 floating-point number first and the *most* significant byte last.

**SWAPped**  
 Expects/sends the *most* significant byte of each IEEE754 floating-point number first and the *least* significant byte last.

\*RST: NORMal

**Example:** `:FORM:BORD SWAP`  
 transfers the data with the most significant bit first.

**:FORMat:SREGister** <Format>

Determines the numeric format for responses of the status register.

**Parameters:**

<Format>                    ASCII | BINary | HEXadecimal | OCTal

**ASCII**

Returns the register content as a decimal number.

**BINary|HEXadecimal|OCTal**

Returns the register content either as a binary, hexadecimal or octal number. According to the selected format, the number starts with #B (binary), #H (hexadecimal) or #O (octal).

\*RST:            ASCII

**Example:**

:FORM:SREG HEX

returns the register content as a hexadecimal number.

**:FORMat[:DATA]** <Data>

Determines the data format the instrument uses to return data via the IEC/IEEE bus.

The instrument automatically detects the data format used by the controller, and assigns it accordingly. Data format determined by this SCPI command is in this case irrelevant.

**Parameters:**

<Data>                    ASCII | PACKed

**ASCII**

Transfers numerical data as plain text separated by commas.

**PACKed**

Transfers numerical data as binary block data.

The format within the binary data depends on the command.

The various binary data formats are explained in the description of the parameter types.

\*RST:            ASCII

**Example:**

:FORM ASC

transfers the data as ASCII data.

## 12.11 HCOPI subsystem

The HCOPI subsystem contains the commands to generate and save a hard copy of the display.



To access a stored hard copy file, use the commands of the MEMM subsystem.

**Example: Store a hard copy of the display**

The following example lists commands to configure and execute a hard copy to an automatic named file.

```
:HCOPY:DEVIce:LANGUage PNG
:HCOPY:FILE:NAME:AUTO:STATE 1
// defines the output format
// sets the instrument to automatically create output file names

// *****
// Configure hard copy options, set automatic naming rules
// An automatically generated file name consists of:
// <Prefix><YYYY><MM><DD><Number>.<Format>
// *****
:HCOPY:DEVIce:LANGUage BMP
// defines output format *.bmp
:HCOPY:REGIon DIALog
// selects the region to be copied
:HCOPY:FILE:AUTO:DIR "/usb/HCopy"
// sets destination directory of automatic named file
:HCOPY:FILE:NAME:AUTO:FILE:PREFIx:STATE 1
:HCOPY:FILE:NAME:AUTO:FILE:PREFIx:"hardcopy"
:HCOPY:FILE:NAME:AUTO:FILE:YEAR:STATE 1
:HCOPY:FILE:NAME:AUTO:FILE:MONTh:STATE 1
// uses automatic naming prefix
// sets automatic naming prefix to "hardcopy"
// uses automatic naming date parameters year and month

// *****
// Execute and transfer the hard copy
// *****
:HCOPY:EXECute
:HCOPY:DATA
// generates a hard copy
// transfers the hard copy to the remote client
:HCOPY:FILE:AUTO:FILE?
// queries the automatic file name
// "hardcopy1607001.bmp"
:HCOPY:FILE:AUTO:NUMBer?
// queries the number in the automatic file name
// "001"
:HCOPY:FILE:AUTO?
// queries the path and file name of the automatically generated file
// "/usb/HCopy/hardcopy1607001.bmp"
```

**12.11.1 Hard copy settings**

With the following commands, you can configure the settings of a hard copy.

:HCOPY:DATA?.....	400
:HCOPY:IMAGe:FORMat.....	400
:HCOPY:DEVIce:LANGUage.....	400
:HCOPY:REGion.....	400
:HCOPY:FILE[:NAME].....	400
:HCOPY[:EXECute].....	401

---

### :HCOPY:DATA?

Transfers the hard copy data directly as a NByte stream to the remote client.

#### Return values:

<Data>                    block data

**Example:**                See [Example"Store a hard copy of the display"](#) on page 399

**Usage:**                    Query only

---

### :HCOPY:IMAGe:FORMat <Format>

### :HCOPY:DEVIce:LANGUage <Language>

Selects the graphic format for the hard copy. You can use both commands alternatively.

#### Parameters:

<Language>                BMP | JPG | XPM | PNG

\*RST:                    PNG

**Example:**                See [Example"Store a hard copy of the display"](#) on page 399

**Manual operation:**    See ["Format"](#) on page 232

---

### :HCOPY:REGion <Region>

Selects the area to be copied.

You can create a snapshot of the screen or an active dialog.

#### Parameters:

<Region>                    ALL | DIALog

\*RST:                    ALL

**Example:**                See [Example"Store a hard copy of the display"](#) on page 399

**Manual operation:**    See ["Region"](#) on page 232

---

### :HCOPY:FILE[:NAME] <Name>

Determines the file name and path to save the hard copy, provided automatic naming is disabled.

**Note:** If you have enabled automatic naming, the instrument automatically generates the file name and directory, see [Chapter 12.11.2, "Automatic naming"](#), on page 401.



**Parameters:**

<Name> string

**Example:** See [Example"Store a hard copy of the display"](#) on page 399

**Manual operation:** See ["File..."](#) on page 231

**:HCOPY[:EXECute]**

Generates a hard copy of the current display. The output destination is a file.

**Example:** See [Example"Store a hard copy of the display"](#) on page 399

**Usage:** Event

**Manual operation:** See ["Save"](#) on page 232

## 12.11.2 Automatic naming

Use the following commands to automatically assign a file name.

<a href="#">:HCOPY:FILE[:NAME]:AUTO?</a> .....	401
<a href="#">:HCOPY:FILE[:NAME]:AUTO:DIRectory</a> .....	401
<a href="#">:HCOPY:FILE[:NAME]:AUTO:DIRectory:CLEar</a> .....	402
<a href="#">:HCOPY:FILE[:NAME]:AUTO:FILE?</a> .....	402
<a href="#">:HCOPY:FILE[:NAME]:AUTO:STATe</a> .....	402
<a href="#">:HCOPY:FILE[:NAME]:AUTO[:FILE]:DAY:STATe</a> .....	402
<a href="#">:HCOPY:FILE[:NAME]:AUTO[:FILE]:MONTh:STATe</a> .....	402
<a href="#">:HCOPY:FILE[:NAME]:AUTO[:FILE]:YEAR:STATe</a> .....	402
<a href="#">:HCOPY:FILE[:NAME]:AUTO[:FILE]:NUMBer?</a> .....	403
<a href="#">:HCOPY:FILE[:NAME]:AUTO[:FILE]:PREFix</a> .....	403
<a href="#">:HCOPY:FILE[:NAME]:AUTO[:FILE]:PREFix:STATe</a> .....	403

**:HCOPY:FILE[:NAME]:AUTO?**

Queries path and file name of the hardcopy file, if you have enabled *Automatic Naming*.

**Return values:**

<Auto> string

**Example:** See [Example"Store a hard copy of the display"](#) on page 399

**Usage:** Query only

**:HCOPY:FILE[:NAME]:AUTO:DIRectory <Directory>**

Determines the path to save the hard copy, if you have enabled *Automatic Naming*.

If the directory does not yet exist, the instrument automatically creates a new directory, using the instrument name and `/var/user/` by default.

**Parameters:**

<Directory> string  
 \*RST: /var/user/

**Example:** See [Example"Store a hard copy of the display"](#) on page 399

**Manual operation:** See ["Path..."](#) on page 233

**:HCOPY:FILE[:NAME]:AUTO:DIRectory:CLEar**

Deletes all files with extensions \*.bmp, \*.jpg, \*.png and \*.xpm in the directory set for automatic naming.

**Example:** See [Example"Store a hard copy of the display"](#) on page 399

**Usage:** Event

**Manual operation:** See ["Clear Path"](#) on page 233

**:HCOPY:FILE[:NAME]:AUTO:FILE?**

Queries the name of the automatically named hard copy file.

An automatically generated file name consists of:

<Prefix><YYYY><MM><DD><Number>.<Format>.

You can activate each component separately, to individually design the file name.

**Return values:**

<File> string

**Example:** See [Example"Store a hard copy of the display"](#) on page 399.

**Usage:** Query only

**:HCOPY:FILE[:NAME]:AUTO:STATe <State>**

Activates automatic naming of the hard copy files.

**Parameters:**

<State> 1 | ON | 0 | OFF  
 \*RST: 1

**Example:** See [Example"Store a hard copy of the display"](#) on page 399

**Manual operation:** See ["Automatic Naming"](#) on page 232

**:HCOPY:FILE[:NAME]:AUTO[:FILE]:DAY:STATe <State>****:HCOPY:FILE[:NAME]:AUTO[:FILE]:MONTH:STATe <State>****:HCOPY:FILE[:NAME]:AUTO[:FILE]:YEAR:STATe <State>**

Uses the date parameters (year, month or day) for the automatic naming. You can activate each of the date parameters separately.

**Parameters:**

<State> 1 | ON | 0 | OFF  
 \*RST: 1

**Example:** See [Example"Store a hard copy of the display"](#) on page 399

**Manual operation:** See ["Prefix, Year, Month, Day"](#) on page 233

**:HCOPY:FILE[:NAME]:AUTO[:FILE]:NUMBer?**

Queries the number that is used as part of the file name for the next hard copy in automatic mode.

At the beginning, the count starts at 0. The R&S SMB100B searches the specified output directory for the highest number in the stored files. It increases this number by one to achieve a unique name for the new file.

The resulting auto number is appended to the resulting file name with at least three digits.

**Return values:**

<Number> integer  
 Range: 0 to 999999  
 \*RST: 0

**Example:** See [Example"Store a hard copy of the display"](#) on page 399

**Usage:** Query only

**Manual operation:** See ["Current Auto Number"](#) on page 234

**:HCOPY:FILE[:NAME]:AUTO[:FILE]:PREFix <Prefix>****:HCOPY:FILE[:NAME]:AUTO[:FILE]:PREFix:STATe <State>**

Uses the prefix for the automatic generation of the file name, provided `PREF:STAT` is activated.

**Parameters:**

<State> 1 | ON | 0 | OFF  
 \*RST: 1

**Example:** See [Example"Store a hard copy of the display"](#) on page 399

**Manual operation:** See ["Prefix, Year, Month, Day"](#) on page 233

## 12.12 KBOard subsystem

The KBOard subsystem contains the commands to set a connected keyboard.

<a href="#">:FPANel:KEYBoard:LAYout.....</a>	404
<a href="#">:KBOard:LAYout.....</a>	404

**:FPANel:KEYBoard:LAYout** <Layout>

Selects the layout of the front panel keypad.

**Parameters:**

<Layout> DIGits | LETTers  
**DIGits**  
 Enables numerical keys only.  
**LETTers**  
 Enables numerical and alphanumerical keys.  
 \*RST: n.a. (factory preset: DIGits)

**Example:**

```
:FPANel:KEYBoard:LAYout LETTers
// enables the alphanumerical additional
// and the numerical assignment of the keys.
```

**Manual operation:** See "[Alphanumeric Keys](#)" on page 239

**:KBOard:LAYout** <Layout>

Selects the language for an external keyboard and assigns the keys accordingly.

**Parameters:**

<Layout> CHINese | DANish | DUTCh | DUTBe | ENGLish | ENGUk |  
 FINNish | FRENch | FREBe | FRECa | GERMan | ITALian |  
 JAPANese | KORean | NORWegian | PORTuguese | RUSSian |  
 SPANish | SWEDish | ENGUS  
 \*RST: n.a. (factory preset: ENGLish)

**Example:**

```
:KBOard:LAYout US
// activates American keyboard
```

**Manual operation:** See "[Layout](#)" on page 239

## 12.13 OUTPut subsystem

In the OUTPut subsystem, you can configure the output signals.

The LF output signal is defined with the commands of the [Chapter 12.15.5, "SOURCE:LFOutput subsystem"](#), on page 472 system.

**Common suffixes**

The following common suffixes are used in remote commands:

Suffix	Value range	Description
OUTPut<hw>	[1]	Optional suffix

:OUTPut:ALL[:STATe].....	405
:OUTPut<hw>[:STATe].....	405
:OUTPut<hw>[:STATe]:PON.....	405
:OUTPut<hw>:AMODe.....	406
:OUTPut<hw>:IMPedance?.....	406
:OUTPut<hw>:AFIXed:RANGe:LOWer?.....	406
:OUTPut<hw>:AFIXed:RANGe:UPPer?.....	406
:OUTPut<hw>:PROTection:CLEar.....	407
:OUTPut<hw>:PROTection:TRIPped?.....	407

---

### :OUTPut:ALL[:STATe] <State>

Enables the RF output signal of the instrument.

#### Parameters:

<State>                    1 | ON | 0 | OFF  
 \*RST:                    n.a. (factory preset: 0)

**Example:**                :OUTPut:ALL:STATe 0  
 Disables the RF output signal.

---

### :OUTPut<hw>[:STATe] <State>

Activates the RF output signal.

#### Parameters:

<State>                    1 | ON | 0 | OFF  
 \*RST:                    0

**Example:**                :OUTPut1 ON  
 Activates the RF output.

**Manual operation:**    See "[RF State/RF ON](#)" on page 57

---

### :OUTPut<hw>[:STATe]:PON <Pon>

Defines the state of the RF output signal when the instrument is switched on.

#### Parameters:

<Pon>                      OFF | UNCHanged  
 \*RST:                    n.a. (factory preset: UNCHanged)

**Example:**                :OUTPut1:PON OFF  
 The RF output is deactivated when the instrument is switched on.

**Manual operation:**    See "[Power-On State](#)" on page 240

---

**:OUTPut<hw>:AMODE <AMode>**

Sets the step attenuator mode at the RF output.

**Parameters:**

<AMode> AUTO | FIXEd | NORMAl | HPOWer

**AUTO**

The step attenuator adjusts the level settings automatically, within the full variation range.

**FIXEd**

The step attenuator and amplifier stages are fixed at the current position, providing level settings with constant output VSWR. The resulting variation range is calculated according to the position.

\*RST: AUTO

**Example:**

```
:SOURce1:POWer:ALC:STATe 1
:OUTPut1:AMODE FIXEd
```

**Manual operation:** See "[Mode](#)" on page 154

---

**:OUTPut<hw>:IMPedance?**

Queries the impedance of the RF outputs.

**Return values:**

<Impedance> G1K | G50 | G10K

\*RST: G50

**Example:**

```
:OUTPut1:IMP?
queries the impedance of RF output.
Response: 50
the impedance is 50 ohms
```

**Usage:** Query only

**Manual operation:** See "[RF output impedance](#)" on page 57

---

**:OUTPut<hw>:AFIXed:RANGE:LOWer?****:OUTPut<hw>:AFIXed:RANGE:UPPer?**

Queries the settable minimum/maximum value in mode :OUTPut:AMODE FIXEd, i.e. when the attenuator is not being adjusted.

See :OUTPut<hw>:AMODE on page 406

**Return values:**

<Upper> float

Increment: 0.01

Default unit: dBm

**Example:**

```
:OUTPut1:AMODe FIXed
:OUTPut1:AFIXed:RANGe:UPPer?
// -27
:OUTPut1:AFIXed:RANGe:LOW?
// -50
```

**Usage:** Query only

**Manual operation:** See "[Level Range](#)" on page 155

#### :OUTPut<hw>:PROTection:CLEAr

Resets the protective circuit after it has been tripped.

To define the output state, use the command `:OUTPut<hw>[:STATe]`.

**Example:**

```
:OUTPut1:PROT:CLE
Resets the protective circuit of the RF output.
```

**Usage:** Event

**Manual operation:** See "[Overload](#)" on page 155

#### :OUTPut<hw>:PROTection:TRIPped?

Queries the state of the protective circuit.

**Return values:**

```
<Tripped> 1 | ON | 0 | OFF
*RST: 0
```

**Example:**

```
:OUTPut1:PROT:TRIP
queries the state of the protective circuit of the RF output.
Response: 0
the protective circuit has not tripped.
```

**Usage:** Query only

**Manual operation:** See "[Overload](#)" on page 155

## 12.14 SENSE, READ, INITiate and SLISt subsystems

These subsystems contain the commands for configuring the power measurements with R&S NRP power sensor connected to the R&S SMB100B.



The local state is set with the `INIT` command. Switching off the local state enhances the measurement performance. Measurements results can be retrieved in local state on or off.

Sensor parameters are set with the `SENSe` commands.

To start the measurement and retrieve the result, use the `:READ<ch>[:POWER]?` command.

Suffix	Value range	Description
<code>SENSe&lt;ch&gt;</code>	[1] to 4	Indicates the sensor Use the <code>:SLISt</code> commands to change the sensor mapping
<code>READ&lt;ch&gt;</code>	[1] to 4	Sensor assignment
<code>INITiate&lt;hw&gt;</code>	[1] to 4	Sensor assignment
<code>ELEMeNt&lt;ch&gt;</code>	[1] to 25	Sensor-mapping list



## Programming examples

### Example: Detecting and assigning a power sensor

```

SLISt:LIST?
// Response: "NRP33SN-V-900007-USB Legacy","NRP-Z211-900001-USB Legacy"
// Lists all automatically detected sensors.

SLISt:SCAN:STATe 1
// Searches for sensors connected in the LAN or via the USBTMC protocol.

SLISt:SCAN:LSEnsor 'NRQ6',101624 // sensor name, serial number
SLISt:SCAN:LSEnsor 11.123.1.123, 101624 // IP address, serial number
// Adds sensors to the list, that are connected to LAN.

SLISt:SCAN:USEnsor 'NRQ6',101624 //sensor name, serial number
SLISt:SCAN:USEnsor #H15b,101624 //device ID (hexadecimal), serial number
SLISt:SCAN:USEnsor 347,101624 //device ID (decimal), serial number
// Adds a sensor to the list, that is connected to the USB interface.

SLISt:LIST?
// Response: "NRP33SN-V-900007-USB Legacy","NRP-Z211-900001-USB Legacy",
// "NRP33SN-V-900005-USBTMC","NRP33SN-V-900011-LAN"
// Lists all automatically detected sensors.

SLISt:ELEMent3:MAPPing SENS1
// Maps the third sensor from the list to the first sensor channel.

SLISt:SENSor:MAP "NRPS18S-100654-USB Legacy", SENS3
// Maps the sensor to channel 3.

SLISt:CLEar[ALL]
// Remove all sensors from the list.
SLISt:CLEar:LAN
// Remove all sensors from the list, that are connected over LAN.
SLISt:CLEar:USB
// Remove all sensors from the list, that are connected over USB.

```

### Example: Performing a simple power measurement

**Prerequisite:** The sensor is connected to the instrument and mapped to the first sensor channel.

```

INITiate1:CONTinuous ON
// Switches the continuous power measurement on.

READ1?
// Triggers the measurement and displays the results.

```

**Example: Performing a power measurement with a fixed filter**

**Prerequisite:** The sensor is connected to the instrument and mapped to the first sensor channel.

```

SENSe1:SOURce RF
// Sensor measures the power of the RF signal.

SENSe1:FILTer:TYPE NSRatio
// Selects fixed noise filter mode.

SENSe1:FILTer:NSRatio 0.02 DB
// Sets the maximum noise component in the result to 0.02 DB.

SENSe1:FILTer:NSRatio:MTIME 10
//Limits the settling time to 10 seconds.

SENSe1:APERture:DEFault:STATe 0
// Deactivates the default aperture time of the sensor.

SENSe1:APERture:TIME 10e-6
// Sets the aperture time to 10 us.

SENSe1:UNIT DBM
// Selects unit dBm for the measured value.

INITiate:CONTinuous ON
// Switches the continuous power measurement on.

READ?
// Triggers the measurement and displays the results.

```

:SLISt[:LIST]?.....	411
:SLISt:SCAN[:STATe].....	411
:SLISt:SCAN:LSEnSor.....	411
:SLISt:SCAN:USEnSor.....	412
:SLISt:CLEar:LAN.....	412
:SLISt:CLEar:USB.....	412
:SLISt:CLEar[:ALL].....	413
:SLISt:ELEMent<ch>:MAPPing.....	413
:SLISt:SENsOr:MAP.....	413
:INITiate<hw>[:POWer]:CONTinuous.....	413
:READ<ch>[:POWer]?.....	414
:SENSe<ch>:UNIT[:POWer].....	415
:SENSe<ch>[:POWer]:APERture:DEFault:STATe.....	415
:SENSe<ch>[:POWer]:APERture:TIME.....	415
:SENSe<ch>[:POWer]:CORRection:SPDevice:SELect.....	416
:SENSe<ch>[:POWer]:CORRection:SPDevice:STATe.....	416
:SENSe<ch>[:POWer]:CORRection:SPDevice:LIST?.....	416
:SENSe<ch>[:POWer]:DISPlay:PERManent:PRiority.....	416
:SENSe<ch>[:POWer]:DISPlay:PERManent:STATe.....	417
:SENSe<ch>[:POWer]:FILTer:LENGth:AUTO?.....	417

:SENSe<ch>[:POWer]:FILTer:LENGth[:USER].....	417
:SENSe<ch>[:POWer]:FILTer:NSRatio.....	418
:SENSe<ch>[:POWer]:FILTer:NSRatio:MTIME.....	418
:SENSe<ch>[:POWer]:FILTer:SONCe.....	418
:SENSe<ch>[:POWer]:FILTer:TYPE.....	419
:SENSe<ch>[:POWer]:FREQUency.....	419
:SENSe<ch>[:POWer]:LOGGing:STATe.....	420
:SENSe<ch>[:POWer]:OFFSet.....	420
:SENSe<ch>[:POWer]:OFFSet:STATe.....	420
:SENSe<ch>[:POWer]:SNUMber?.....	421
:SENSe<ch>[:POWer]:SOURce.....	421
:SENSe<ch>[:POWer]:STATus[:DEVice]?.....	421
:SENSe<ch>[:POWer]:SVERsion?.....	422
:SENSe<ch>[:POWer]:TYPE?.....	422
:SENSe<ch>[:POWer]:ZERO.....	422

---

### :SLISt[:LIST]?

Returns a list of all detected sensors in a comma-separated string.

#### Return values:

<SensorList>                      String of comma-separated entries  
 Each entry contains information on the sensor type, serial number and interface.  
 The order of the entries does not correspond to the order the sensors are displayed in the "NRP Sensor Mapping" dialog.

**Example:**                      See [Example "Detecting and assigning a power sensor"](#) on page 409.

**Usage:**                              Query only

**Manual operation:**    See ["Sensor Mapping List"](#) on page 186

---

### :SLISt:SCAN[:STATe] <State>

Starts the search for R&S NRP power sensors, connected in the LAN or via the USBTMC protocol.

#### Parameters:

<State>                              1 | ON | 0 | OFF  
 \*RST:                                0

**Example:**                              See [Example "Detecting and assigning a power sensor"](#) on page 409.

**Manual operation:**    See ["Scan"](#) on page 187

---

### :SLISt:SCAN:LSENsor <IP>

Scans for R&S NRP power sensors connected in the LAN.

**Setting parameters:**

<IP> string  
 \*RST: 0

**Example:** See [Example"Detecting and assigning a power sensor"](#) on page 409.

**Usage:** Setting only

**Manual operation:** See ["Add LAN Sensor"](#) on page 187

**:SLISt:SCAN:USENSor** <DeviceID>, <Serial>

Scans for R&S NRP power sensors connected over a USB interface.

**Parameters:**

<Serial> integer  
 Range: 0 to 999999

**Setting parameters:**

<DeviceID> String or Integer  
 Range: 0 to 999999  
 \*RST: 0

**Example:** See [Example"Detecting and assigning a power sensor"](#) on page 409.

**Usage:** Setting only

**Manual operation:** See ["Add USBTMC Sensor"](#) on page 188

**:SLISt:CLEAr:LAN**

Removes all R&S NRP power sensors connected in the LAN from the list.

**Example:** See [Example"Detecting and assigning a power sensor"](#) on page 409.

**Usage:** Event

**Manual operation:** See ["Clear"](#) on page 187

**:SLISt:CLEAr:USB**

Removes all R&S NRP power sensors connected over USB from the list.

**Example:** See [Example"Detecting and assigning a power sensor"](#) on page 409.

**Usage:** Event

**Manual operation:** See ["Clear"](#) on page 187

---

**:SLISt:CLEAr[:ALL]**

Removes all R&S NRP power sensors from the list.

**Example:** See [Example "Detecting and assigning a power sensor"](#) on page 409.

**Usage:** Event

**Manual operation:** See ["Clear"](#) on page 187

---

**:SLISt:ELEMent<ch>:MAPPING <Mapping>**

Assigns an entry from the `:SLISt[:LIST]?` to one of the four sensor channels.

**Parameters:**

<Mapping> SENS1 | SENSor1 | SENS2 | SENSor2 | SENS3 | SENSor3 |  
SENS4 | SENSor4 | UNMapped

Sensor channel.

\*RST: UNMapped

**Example:** See [Example "Detecting and assigning a power sensor"](#) on page 409.

**Manual operation:** See ["Sensor Mapping List"](#) on page 186

---

**:SLISt:SENSor:MAP <SensorId>, <Mapping>**

Assigns a sensor directly to one of the sensor channels, using the sensor name and serial number.

To find out the the sensor name and ID, you can get it from the label of the R&S NRP, or using the command `:SLISt:SCAN[:STATe]`. This command detects all R&S NRP power sensors connected in the LAN or via 'USBTMC protocol.

**Setting parameters:**

<SensorId> string

<Mapping> enum

**Example:** See [Example "Detecting and assigning a power sensor"](#) on page 409.

**Usage:** Setting only

**Manual operation:** See ["Sensor Mapping List"](#) on page 186

---

**:INITiate<hw>[:POWER]:CONTInuous <Continuous>**

Switches the local state of the continuous power measurement by R&S NRP power sensors on and off. Switching off local state enhances the measurement performance during remote control.

The remote measurement is triggered with `:READ<ch>[:POWER]?`). This command also returns the measurement results. The local state is not affected, measurement results can be retrieved with local state on or off.

**Parameters:**

<Continuous> 1 | ON | 0 | OFF  
\*RST: 0

**Example:**

INIT1:CONT ON  
Switches on the local state of continuous power measurement.

**Manual operation:** See ["State"](#) on page 182

**:READ<ch>[:POWER]?**

Triggers power measurement and displays the results.

**Note:** This command does not affect the local state, i.e. you can get results with local state on or off. For long measurement times, we recommend that you use an SRQ for command synchronization (MAV bit).

**Suffix:**

<ch> 1 to 3

**Return values:**

<Power> float or float,float

The sensor returns the result in the unit set with command `:SENSe<ch>:UNIT[:POWER]`

Certain power sensors, such as the R&S NRP-Z81, return two values, first the value of the average level and - separated by a comma - the peak value.

**Example:**

:SENS1:UNIT DBM  
Selects unit dBm for presentation of measurement result.  
:READ1?  
Queries the measurement result of the sensor.  
-45.6246576745440230  
-45.6 dBm were measured at the given frequency.

**Example:**

R&S NRP-Z81  
:READ1?  
-55.62403263352178, -22.419472478812476  
-55.6 dBm is the measured average level, -22.4 dBm is the measured peak level at the given frequency.

**Usage:**

Query only

**Manual operation:**

See ["Measured Level"](#) on page 178  
See ["Level \(Peak\) / Level \(Average\)"](#) on page 182

---

**:SENSe<ch>:UNIT[:POWer] <Power>**

Selects the unit (Watt, dBm or dB $\mu$ V) of measurement result display, queried with :  
[READ<ch>\[:POWer\]?](#).

**Parameters:**

<Power> DBM | DBUV | WATT  
 \*RST: DBM

**Example:**

:SENS2:UNIT DBM  
 Selects dBm as unit for the measured value returned by command READ.  
 :READ2?  
 Response: 7.34  
 7.34 dBm are measured by sensor 2.

**Manual operation:** See ["Measured Level"](#) on page 178  
 See ["Level \(Peak\) / Level \(Average\)"](#) on page 182

---

**:SENSe<ch>[:POWer]:APERTure:DEFault:STATe <UseDefAp>**

Deactivates the default aperture time of the respective sensor.

To specify a user-defined value, use the command [:SENSe<ch>\[:POWer\]:APERTure:TIME](#) on page 415.

**Parameters:**

<UseDefAp> 1 | ON | 0 | OFF  
 \*RST: 1

**Example:** See [Example"Performing a power measurement with a fixed filter"](#) on page 410.

**Manual operation:** See ["Default Aperture Time"](#) on page 184

---

**:SENSe<ch>[:POWer]:APERTure:TIME <ApTime>**

Defines the aperture time (size of the acquisition interval) for the corresponding sensor.

**Parameters:**

<ApTime> float  
 Range: depends on connected power sensor  
 Increment: 1E-9  
 \*RST: depends on connected power sensor

**Example:** See [Example"Performing a power measurement with a fixed filter"](#) on page 410.

**Manual operation:** See ["Aperture Time"](#) on page 185

---

**:SENSe<ch>[:POWer]:CORRection:SPDevice:SElect <Select>**

Several S-parameter tables can be stored in a sensor. The command selects a loaded data set for S-parameter correction for the corresponding sensor.

**Parameters:**

<Select> float  
\*RST: 0

**Manual operation:** See "[S-Parameter](#)" on page 185

---

**:SENSe<ch>[:POWer]:CORRection:SPDevice:STATe <State>**

Activates the use of the S-parameter correction data.

**Note:** If you use power sensors with attenuator, the instrument automatically activates the use of S-parameter data.

**Parameters:**

<State> 1 | ON | 0 | OFF  
\*RST: 0

**Example:** :SENSe1:POWer:CORRection:SPDevice:STATe 1  
Activates the use of the S-parameters correction data.

**Manual operation:** See "[S-Parameter](#)" on page 185

---

**:SENSe<ch>[:POWer]:CORRection:SPDevice:LIST?**

Queries the list of the S-parameter data sets that have been loaded to the power sensor.

**Return values:**

<List> string list  
\*RST: 0

**Usage:** Query only

**Manual operation:** See "[S-Parameter](#)" on page 185

---

**:SENSe<ch>[:POWer]:DISPlay:PERMANent:PRiority <Priority>**

Selects average or peak power for permanent display.

**Parameters:**

<Priority> AVERAge | PEAK  
\*RST: AVERAge

**Example:** :SENSe1:DISP:PERM:STAT ON  
Turns on the permanent view.  
:SENSe1:DISP:PERM:PRI AVER  
Sets the average power for display.

**Manual operation:** See "[Display](#)" on page 182

---



**:SENSe<ch>[:POWer]:DISPlay:PERMANent:STATe <State>**

Activates the permanent display of the measured power level results. The instrument also indicates the sensor type, the connection, the measurement source and the offset if set.

**Parameters:**

<State> 1 | ON | 0 | OFF  
\*RST: 0

**Example:** :SENS1:POW:DISP:PERM:STAT ON  
Turns on the permanent view.

**Manual operation:** See "[Display Permanent](#)" on page 182

**:SENSe<ch>[:POWer]:FILTer:LENGth:AUTO?**

Queries the current filter length in filter mode AUTO ([:SENSe<ch>\[:POWer\]:FILTer:TYPE](#))

**Return values:**

<Auto> float  
Range: 1 to depends on R&S NRP power sensor type

**Example:** :SENS1:FILT:TYPE AUTO  
Selects auto filter.  
:SENS1:FILT:LENG:AUTO?  
Queries the automatically set filter length.  
Response: 1024

**Usage:** Query only

**Manual operation:** See "[Filter Length](#)" on page 184

**:SENSe<ch>[:POWer]:FILTer:LENGth[:USER] <User>**

Selects the filter length for [SENS:POW:FILT:TYPE USER](#). As the filter length works as a multiplier for the time window, a constant filter length results in a constant measurement time (see also "[About the measuring principle, averaging filter, filter length, and achieving stable results](#)" on page 172).

The R&S NRP power sensors provide different resolutions for setting the filter length, depending on the used sensor type.

For more information, refer to the specifications document.

**Parameters:**

<User> float  
Range: 1 to depends on R&S NRP power sensor type  
\*RST: 1

**Example:**                   :SENS1:FILT:TYPE USER  
Selects user filter mode.  
                  :SENS1:FILT:LENG 16  
Sets a filter length of 16. E.g. using a sensor with 20 ms time window, the resulting measurement time is 640 ms (2x16x20 ms)

**Manual operation:** See ["Filter Length"](#) on page 184

**:SENSe<ch>[:POWer]:FILTer:NSRatio <NSRatio>**

Sets an upper limit for the relative noise content in fixed noise filter mode (:SENSe<ch>[:POWer]:FILTer:TYPE). This value determines the proportion of intrinsic noise in the measurement results.

**Parameters:**

<NSRatio>                   float  
Range:            0.001 to 1  
Increment:       0.001  
\*RST:            0.01

**Example:**                   See [Example"Performing a power measurement with a fixed filter"](#) on page 410.

**Manual operation:** See ["Noise/Signal Ratio"](#) on page 184

**:SENSe<ch>[:POWer]:FILTer:NSRatio:MTIME <MTime>**

Sets an upper limit for the settling time of the auto-averaging filter and thus limits the length of the filter.

**Parameters:**

<MTime>                   float  
Range:            1 to 999.99  
Increment:       0.01  
\*RST:            4

**Example:**                   See [Example"Performing a power measurement with a fixed filter"](#) on page 410.

**Manual operation:** See ["Timeout"](#) on page 184

**:SENSe<ch>[:POWer]:FILTer:SONCe**

Starts searching the optimum filter length for the current measurement conditions. You can check the result with command :SENS1:POW:FILT:LENG:USER? in filter mode USER (:SENSe<ch>[:POWer]:FILTer:TYPE).

**Example:**           SENS1:FILT:TYPE USER  
 Selects user filter mode.  
                   :SENS1:FILT:SONC  
 Activates the search for the optimum filter length.  
                   :SENS1:FILT:LENG?  
 Returns the found optimum filter length.  
 Response: 128

**Usage:**            Event

**Manual operation:** See "Auto Once" on page 184

**:SENSe<ch>[:POWER]:FILTer:TYPE <Type>**

Selects the filter mode. The filter length is the multiplier for the time window and thus directly affects the measurement time.

**Parameters:**

<Type>

AUTO | USER | NSRatio

**AUTO**

Automatically selects the filter length, depending on the measured value. The higher the power, the shorter the filter length, and vice versa.

**Note:** To avoid long settling times when the power is low, you can limit the averaging factor limited with the "timeout" parameter (:SENSe<ch>[:POWER]:FILTer:NSRatio:MTIME).

**USER**

Allows you to set the filter length manually. As the filter-length takes effect as a multiplier of the measurement time, you can achieve constant measurement times.

**NSRatio**

Selects the filter length (averaging factor) according to the criterion that the intrinsic noise of the sensor (2 standard deviations) does not exceed the specified noise content. You can define the noise content with command :SENSe<ch>[:POWER]:FILTer:NSRatio.

\*RST:            AUTO

**Example:**           See [Example "Performing a power measurement with a fixed filter"](#) on page 410.

**Manual operation:** See "Filter" on page 183

**:SENSe<ch>[:POWER]:FREQuency <Frequency>**

Sets the RF frequency of the signal, if signal source :SENSe<ch>[:POWER]:SOURce USER is selected.

**Parameters:**

<Frequency> float  
 \*RST: 1 GHz

**Example:**

```
:SENS1:SOUR USER
Selects user-defined source.
:SENS1:FREQ 2.44GHz
Sets the RF frequency of the source which is 2.44 GHz.
```

**Manual operation:** See "[Frequency](#)" on page 183

**:SENSe<ch>[:POWer]:LOGGing:STATe <State>**

Activates the recording of the power values, measured by a connected R&S NRP power sensor.

**Parameters:**

<State> 1 | ON | 0 | OFF  
 \*RST: 0

**Example:**

```
:SENS:LOGG:STAT ON
Activates recording of the power measurement of the first sensor.
```

**Manual operation:** See "[Enable Logging](#)" on page 185

**:SENSe<ch>[:POWer]:OFFSet <Offset>**

Sets a level offset which is added to the measured level value after activation with command `:SENSe<ch>[:POWer]:OFFSet:STATe`. The level offset allows, e.g. to consider an attenuator in the signal path.

**Parameters:**

<Offset> float  
 Range: -100.0 to 100.0  
 \*RST: 0  
 Default unit: dB

**Example:**

```
:SENS1:POW:OFFS 10.0
Sets a level offset of 10 dB
```

**Manual operation:** See "[Level Offset State,Level Offset](#)" on page 183

**:SENSe<ch>[:POWer]:OFFSet:STATe <State>**

Activates the addition of the level offset to the measured value. The level offset value is set with command `:SENSe<ch>[:POWer]:OFFSet`.

**Parameters:**

<State> 1 | ON | 0 | OFF  
 \*RST: 0

**Example:**                   :SENS1:POW:OFFS 0.4dB  
Sets a level offset of 0.4 dB  
                  :SENS1:POW:OFFS:STAT ON  
A level offset of 0.4 dB is added to the measured value.

**Manual operation:** See "[Level Offset State,Level Offset](#)" on page 183

#### :SENSe<ch>[:POWer]:SNUMber?

Queries the serial number of the sensor.

**Return values:**

<SNumber>               string

**Example:**                   :SENS1:SNUM?  
Queries the serial number.

**Usage:**                    Query only

**Manual operation:** See "[Sensor type and serial number](#)" on page 182

#### :SENSe<ch>[:POWer]:SOURce <Source>

Determines the signal to be measured.

**Note:** When measuring the RF signal, the sensor considers the corresponding correction factor at that frequency, and uses the level setting of the instrument as reference level.

**Parameters:**

<Source>                 A | USER | RF  
\*RST:                    A

**Example:**                See [Example"Performing a power measurement with a fixed filter"](#) on page 410.

**Manual operation:** See "[Use Frequency Of](#)" on page 183

#### :SENSe<ch>[:POWer]:STATus[:DEVice]?

Queries if a sensor is connected to the instrument.

**Return values:**

<Status>                 1 | ON | 0 | OFF  
\*RST:                    0

**Example:**                :SENS1:STAT?  
Response: 1  
A sensor is connected.

**Usage:**                    Query only

**Manual operation:** See "[State](#)" on page 182

---

**:SENSe<ch>[:POWer]:SVERsion?**

Queries the software version of the connected R&S NRP power sensor.

**Return values:**

<SVersion>                    string

**Example:**                    :SENS1:POW:SVER?  
Queries the software version of the power sensor.

**Usage:**                      Query only

---

**:SENSe<ch>[:POWer]:TYPE?**

Queries the sensor type. The type is automatically detected.

**Return values:**

<Type>                         string

**Example:**                    :SENS1:TYPE?  
Queries the type of sensor.  
Response: NRP-Z21  
The R&S NRP-Z21 sensor is used.

**Usage:**                      Query only

**Manual operation:**    See "[Sensor type and serial number](#)" on page 182

---

**:SENSe<ch>[:POWer]:ZERO**

Performs zeroing of the sensor.

Zeroing is required after warm-up, i.e. after connecting the sensor.

**Note:** Switch off or disconnect the RF power source from the sensor before zeroing.

We recommend that you zero in regular intervals (at least once a day), if:

- The temperature has varied more than about 5 °C.
- The sensor has been replaced.
- You want to measure very low power.

**Example:**                    :SENS1:ZERO  
Executes zeroing.

**Usage:**                      Event

**Manual operation:**    See "[Zero](#)" on page 182

---

## 12.15 SOURce subsystem

The SOURce subsystem contains the commands for configuring signals.

### Common suffixes

The following common suffixes are used in remote commands:

Suffix	Value range	Description
SOURce<hw>	[1]	<ul style="list-style-type: none"> <li>SOURce[1] = RF output (optional keyword)</li> <li>LF output = SOURce:LFOutput (SOURce is optional keyword)</li> </ul>

• <a href="#">Analog modulation subsystems</a> .....	423
• <a href="#">SOURce:CORRection subsystem</a> .....	457
• <a href="#">SOURce:FREQuency subsystem</a> .....	465
• <a href="#">SOURce:INPut subsystem</a> .....	471
• <a href="#">SOURce:LFOutput subsystem</a> .....	472
• <a href="#">SOURce:LIST subsystem</a> .....	485
• <a href="#">SOURce:NOISe subsystem</a> .....	498
• <a href="#">SOURce:PGEN subsystem</a> .....	500
• <a href="#">SOURce:PHASe subsystem</a> .....	501
• <a href="#">SOURce:POWEr subsystem</a> .....	502
• <a href="#">SOURce:ROSCillator subsystem</a> .....	515
• <a href="#">SOURce:SWEep subsystem</a> .....	520

## 12.15.1 Analog modulation subsystems

Option: see [Chapter 5.1, "Required options"](#), on page 68.

The subsystems in this section describe all commands for analog modulation of the RF signal. Divided in separate sections, you can configure amplitude modulation (AM), frequency modulation (FM), phase modulation (PhiM) and pulse modulation (PULM).

You can perform each of the modulations either with an internally generated modulation signal or with an externally applied signal.

To configure the internal signal, use the commands listed in [Chapter 12.15.5, "SOURce:LFOutput subsystem"](#), on page 472.

For more information:

See [Chapter 5, "Analog modulations"](#), on page 68.

### 12.15.1.1 SOURce:MODulation subsystem

The command in this subsystem allows you to disable all active modulations at once, and, vice versa, to restore the last active ones.

---

**[ :SOURce<hw>]:MODulation[:ALL][:STATe] <State>**

Activates all modulations that were active before the last switching off.

**Parameters:**

<State> 1 | ON | 0 | OFF  
 \*RST: 0

**Example:**

```
SOURce1:AM1:DEPTh 30
SOURce1:AM1:SOURce LF1
SOURce1:AM1:STATe 1
SOURce1:FM1:DEVIation 1000
SOURce1:FM1:STATe 1
// disable both modulation
SOURce1:MODulation:ALL:STATe 0
SOURce1:AM1:STATe?
// 0
SOURce1:FM1:STATe?
// 0
// enable both modulation
SOURce1:MODulation:ALL:STATe 1
SOURce1:AM1:STATe?
// 1
SOURce1:FM1:STATe?
// 1
```

**Manual operation:** See "[Mod on/off]" on page 70

**12.15.1.2 SOURce:AM subsystem**

Option: R&S SMBB-K720

The AM subsystem contains the commands for setting the amplitude modulation and also the broadband amplitude modulation.

The following examples show some variants for generating AM signals.

**Example: Creating an amplitude modulated RF signal**

Using the internal LF generator, the following command sequence configures an amplitude modulated signal.

```
// Reset the instrument to start from a defined state
*RST

// Set RF frequency and amplitude
SOURce1:FREQuency:CW 6000000000
SOURce1:POWer:LEVel:IMMediate:AMPLitude -25

// Configure the modulation signal
SOURce1:LFOutput1:SHAPE SINE
SOURce1:LFOutput1:FREQuency 20000

// Configure the amplitude modulation settings and switch AM on
SOURce1:AM1:SOURce LF1
SOURce1:AM1:DEPTh 30
```



```
SOURcel:AM:RATio 40
SOURcel:AM1:DEVIation:MODE UNC
SOURcel:AM1:STATe 1
```

### Example: Using combined LF signals

Using the internal LF generators of both paths, the following command sequences configure an amplitude modulated signal with determined deviations depths.

```
// Configure the AM modulation settings with combined LF signal sources
SOURcel:AM1:SOURce LF1
SOURcel:AM1:DEPTh 32
// Select the modulation signal source for the second path
SOURcel:AM2:SOURce LF2
// Combine the signals of both paths with fixed total deviation depth
SOURcel:AM1:DEVIation:MODE TOT
SOURcel:AM1:DEPTh:SUM 60

// Query the deviation depth of modulation signal in the second path
SOURcel:AM2:DEPTh?
// Response: 28

// Combine the signals of both paths with fixed ratio
SOURcel:AM1:DEVIation:MODE RAT
SOURcel:AM1:RATio 100
SOURcel:AM2:DEPTh 25

// Query the deviation depth of modulation signal in the first path
SOURcel:AM1:DEPTh?
// Response: 25

SOURcel:AM1:STATe 1
SOURcel:AM2:STATe 1
```

### Example: Using an external signal source

Using an external signal source, you can additionally determine whether you want to use only the AC component of the external modulation signal.

```
// Reset the instrument to start from a defined state
*RST

// Set frequency and amplitude
SOURcel:FREQuency:CW 6000000000
SOURcel:POWer:LEVel:IMMediate:AMPLitude -25

// Configure the amplitude modulation settings and turn on AM
SOURcel:AM1:SOURce EXT1
SOURcel:AM1:DEPTh 40

// Query the input sensitivity at the external modulation input
```

```

SOURce1:AM1:SENSitivity?
// Response: 40
// Since the voltage value for full modulation is 1V,
// the resulting sensitivity is precisely 50%/V.
// This value is assigned to the voltage value for full
// modulation of the input.

// Select the coupling mode AC for external amplitude modulation
SOURce1:INPut:MODext:COUPling1 AC

// For external AM signal input, adjust the sensitivity
SOURce1:AM1:SOURce EXT1
SOURce1:AM1:SENSitivity 25
SOURce1:AM1:SENSitivity?
Response: 25

// Switch on AM and RF signal output
SOURce1:AM1:STATe 1
OUTPut1:STATe 1

```

The following commands are available:

<a href="#">[:SOURce&lt;hw&gt;]:AM&lt;ch&gt;:STATe</a> .....	426
<a href="#">[:SOURce&lt;hw&gt;]:AM&lt;ch&gt;:SOURce</a> .....	426
<a href="#">[:SOURce&lt;hw&gt;]:AM&lt;ch&gt;[:DEPTH]</a> .....	427
<a href="#">[:SOURce&lt;hw&gt;]:AM:DEPTH:SUM</a> .....	427
<a href="#">[:SOURce&lt;hw&gt;]:AM:DEVIation:MODE</a> .....	428
<a href="#">[:SOURce&lt;hw&gt;]:AM:RATIo</a> .....	428
<a href="#">[:SOURce&lt;hw&gt;]:AM&lt;ch&gt;:SENSitivity</a> .....	428

---

#### **[\[:SOURce<hw>\]:AM<ch>:STATe <State>](#)**

Activates amplitude modulation.

##### **Parameters:**

<State>            1 | ON | 0 | OFF  
 \*RST:            0

**Example:**        See [Example "Creating an amplitude modulated RF signal"](#)  
 on page 424.

**Manual operation:** See ["State"](#) on page 74

---

#### **[\[:SOURce<hw>\]:AM<ch>:SOURce <Source>](#)**

Selects the modulation source for amplitude modulation.

##### **Parameters:**

<Source>            EXT1 | NOISe | LF2 | LF1 | INTernal | EXTernal  
**LF1|LF2**  
 Uses an internally generated LF signal.

**EXT1**

Uses an externally supplied LF signal.

**NOISe**

Uses the internally generated noise signal.

**INTernal**

Uses the internally generated signal of LF1.

**EXTernal**

Uses an external LF signal (EXT1).

**Example:** See [Example "Creating an amplitude modulated RF signal"](#) on page 424.

**Manual operation:** See ["Source"](#) on page 74

**[[:SOURce<hw>]:AM<ch>[:DEPTH] <Depth>**

Sets the depth of the amplitude modulation in percent.

**Suffix:**

<ch> 1..2  
Modulation signal channel

**Parameters:**

<Depth> float  
Range: 0 to 100

**Example:** See [Example "Creating an amplitude modulated RF signal"](#) on page 424.

**Manual operation:** See ["Depth"](#) on page 77

**[[:SOURce<hw>]:AM:DEPTH:SUM <AmDepthSum>**

Sets the total depth of the LF signal when using combined signal sources in amplitude modulation.

**Parameters:**

<AmDepthSum> float  
Range: 0 to 100  
Increment: 0.1  
\*RST: 30

**Example:** See [Example "Using combined LF signals"](#) on page 425.

**Manual operation:** See ["Total Depth"](#) on page 78

---

**[[:SOURce<hw>]:AM:DEVIation:MODE <AmDevMode>**

Selects the coupling mode. The coupling mode parameter also determines the mode for fixing the total depth.

**Parameters:**

<AmDevMode>            UNCOupled | TOTal | RATio

**UNCOupled**

Does not couple the LF signals.

The deviation depth values of both paths are independent.

**TOTal**

Couples the deviation depth of both paths.

**RATio**

Couples the deviation depth ratio of both paths

\*RST:            UNCOupled

**Example:**            See [Example"Using combined LF signals"](#) on page 425.

**Manual operation:**    See ["Deviation Mode"](#) on page 77

---

**[[:SOURce<hw>]:AM:RATio <Ratio>**

Sets the deviation ratio (path#2 to path#1) in percent.

**Parameters:**

<Ratio>                    float  
                               Range:        0 to 100  
                               Increment: 0.1  
                               \*RST:        100

**Example:**            See [Example"Creating an amplitude modulated RF signal"](#) on page 424.

**Manual operation:**    See ["Ratio Path2/Path1"](#) on page 78

---

**[[:SOURce<hw>]:AM<ch>:SENSitivity <Sensitivity>**

Sets the sensitivity of the external signal source for amplitude modulation in %/V.

**Parameters:**

<Sensitivity>             float  
                               Range:        0 to 100  
                               Increment: 0.1  
                               \*RST:        30

**Example:**            See [Example"Using an external signal source"](#) on page 425.

**Manual operation:**    See ["Sensitivity"](#) on page 77

### 12.15.1.3 SOURce:FM subsystem

Option: R&S SMBB-K720

The FM subsystem contains the commands for setting the frequency modulation.

#### Example: Creating a frequency modulated RF signal

Using the internal LF generator, the following command sequence configures a frequency modulated signal.

```
// Reset the instrument to start from a defined state
*RST

// Set RF frequency and amplitude
SOURce1:FREQuency:CW 6000000000
SOURce1:POWer:LEVel:IMMediate:AMPLitude -25

// Configure the modulation signal
SOURce1:LFOutput1:SHAPE SINE
SOURce1:LFOutput1:FREQuency 20000

// Configure the frequency modulation settings and switch FM on
SOURce1:FM1:SOURce LF1
SOURce1:FM1:DEVIation 1000
SOURce1:FM:RATio 40
SOURce1:FM:MODE LNOise
SOURce1:FM1:STATe 1

// Switch on LF and RF signal output
SOURce1:LFOutput1:STATe 1
OUTPut1:STATe 1
```

#### Example: Using combined LF signals

Using the internal LF generators of both paths, the following command sequences configure a frequency modulated signal with determined deviations.

```
// Configure the FM modulation settings with combined LF signal sources
SOURce1:FM1:SOURce LF1
SOURce1:FM1:DEVIation 1000
// Select the modulation signal source for the second path
SOURce1:FM2:SOURce LF2
// Combine the signals of both paths with fixed total deviation depth
SOURce1:FM1:DEVIation:MODE TOT
SOURce1:FM1:DEVIation:SUM 5000

// Query the deviation depth of modulation signal in the second path
SOURce1:FM2:DEVIation?
// Response: 4000

// Combine the signals of both paths with fixed ratio
```

```

SOURce1:FM1:DEVIation:MODE RAT
SOURce1:FM1:RATio 100
SOURce1:FM2:DEVIation 10000

// Query the deviation depth of modulation signal in the first path
SOURce1:AM1:DEVIation?
// Response: 1000

SOURce1:FM1:STATe 1
SOURce1:FM2:STATe 1

```

### Example: Using an external signal source

Alternatively configure the frequency modulation settings with an external modulation signal.

```

// Reset the instrument to start from a defined state
*RST

// Set RF frequency and amplitude
SOURce1:FREQuency:CW 6000000000
SOURce1:POWer:LEVel:IMMediate:AMPLitude -25

// Configure the frequency modulation settings and switch FM on
SOURce1:FM1:SOURce EXT1
SOURce1:FM1:DEVIation 5000

// Query the input sensitivity at the external modulation input
:SOURce1:FM1:SENSitivity?
// Response: 1000
// since the voltage value for full modulation is 1V,
// the resulting sensitivity is precisely 5000 Hz/V.

// Switch on FM and RF signal output
SOURce1:FM1:STATe 1
OUTPut1:STATe 1

```

The following commands are available:

<a href="#">[:SOURce&lt;hw&gt;]:FM&lt;ch&gt;:STATe</a> .....	430
<a href="#">[:SOURce&lt;hw&gt;]:FM&lt;ch&gt;[:DEVIation]</a> .....	431
<a href="#">[:SOURce&lt;hw&gt;]:FM&lt;ch&gt;:SOURce</a> .....	431
<a href="#">[:SOURce&lt;hw&gt;]:FM:DEVIation:MODE</a> .....	432
<a href="#">[:SOURce&lt;hw&gt;]:FM:DEVIation:SUM</a> .....	432
<a href="#">[:SOURce&lt;hw&gt;]:FM:RATio</a> .....	432
<a href="#">[:SOURce&lt;hw&gt;]:FM:MODE</a> .....	433
<a href="#">[:SOURce&lt;hw&gt;]:FM:SENSitivity?</a> .....	433

---

**[\[:SOURce<hw>\]:FM<ch>:STATe <State>](#)**

Activates frequency modulation.

**Suffix:**

FM<ch> 1..2  
determines the modulation signal channel.

**Parameters:**

<State> 1 | ON | 0 | OFF  
\*RST: 0

**Example:**

See [Example "Creating a frequency modulated RF signal"](#) on page 429.

**Manual operation:** See ["State"](#) on page 74

**[[:SOURce<hw>]:FM<ch>[:DEVIation] <Deviation>**

Sets the modulation deviation of the frequency modulation in Hz.

**Suffix:**

FM<ch> 1|2  
Modulation signal channel

**Parameters:**

<Deviation> float  
The maximum deviation depends on the RF frequency and the selected modulation mode (see the specification document).  
Range: 0 to max  
Increment: 0.01  
\*RST: 1E3

**Example:**

See [Example "Creating a frequency modulated RF signal"](#) on page 429.

**Manual operation:** See ["Deviation"](#) on page 74

**[[:SOURce<hw>]:FM<ch>:SOURce <Source>**

Selects the modulation source for frequency modulation.

**Suffix:**

FM<ch> 1|2  
Modulation signal channel.

**Parameters:**

<Source> EXT1 | NOISe | LF2 | LF1 | INTernal | EXTernal  
**LF1|LF2**  
Uses an internally generated LF signal.  
**INTernal**  
Uses the internally generated signal of LF1.  
**EXTernal**  
Uses an external LF signal (EXT1).  
**NOISe**  
Uses the internally generated noise signal.

\*RST: LF1 <FM1>; LF2 <FM2>

**Example:** See [Example"Creating a frequency modulated RF signal"](#) on page 429.

**Manual operation:** See ["Source"](#) on page 74

**[:SOURce<hw>]:FM:DEVIation:MODE <FmDevMode>**

Selects the coupling mode. The coupling mode parameter also determines the mode for fixing the total deviation.

**Parameters:**

<FmDevMode> UNCOupled | TOTal | RATio

**UNCOupled**

Does not couple the LF signals.

The deviation values of both paths are independent.

**TOTal**

Couples the deviation of both paths.

**RATio**

Couples the deviation ratio of both paths

\*RST: UNCOupled

**Example:** See [Example"Using combined LF signals"](#) on page 429.

**Manual operation:** See ["Deviation Mode"](#) on page 75

**[:SOURce<hw>]:FM:DEVIation:SUM <FmDevSum>**

Sets the total deviation of the LF signal when using combined signal sources in frequency modulation.

**Parameters:**

<FmDevSum> float

Range: 0 to 40E6

Increment: 0.01

\*RST: 1E3

**Example:** See [Example"Using combined LF signals"](#) on page 429.

**Manual operation:** See ["Total Deviation"](#) on page 75

**[:SOURce<hw>]:FM:RATio <Ratio>**

Sets the deviation ratio (path2 to path1) in percent.

**Parameters:**

<Ratio> float

Range: 0 to 100

Increment: 0.1

\*RST: 100



**Example:** See [Example"Creating a frequency modulated RF signal"](#) on page 429.

**Manual operation:** See ["Ratio Path2/Path1"](#) on page 75

**[[:SOURce<hw>]:FM:MODE <Mode>**

Selects the mode for the frequency modulation.

**Parameters:**

<Mode> HBANdwidth | LNOise

**HBANdwidth**

Selects maximum range for modulation bandwidth.

**LNOise**

Selects optimized phase noise and spurious characteristics with reduced modulation bandwidth and FM deviation.

\*RST: HBANdwidth

**Example:** See [Example"Creating a frequency modulated RF signal"](#) on page 429.

**Manual operation:** See ["Mode"](#) on page 75

**[[:SOURce<hw>]:FM:SENSitivity?**

Queries the sensitivity of the externally supplied signal for frequency modulation. The sensitivity depends on the set modulation deviation.

**Return values:**

<Sensitivity> float

Sensitivity in Hz/V.

It is assigned to the voltage value for full modulation of the input.

Range: 0 to max

Increment: 0.01

**Example:** See [Example"Using an external signal source"](#) on page 430.

**Usage:** Query only

#### 12.15.1.4 SOURce:PM subsystem

Option: R&S SMBB-K720

The PM subsystem contains the commands for setting the phase modulation. You can configure the internal modulation source (LF generator) with the commands listed in [Chapter 12.15.5, "SOURce:LFOutput subsystem"](#), on page 472 .

**Example: Performing phase modulation**

The following example shows a command sequence to perform phase modulation.

```

// Reset the instrument to start from an initial state
*RST; *CLS

// Set the RF signal frequency and level
SOURce:FREQuency:CW 400000000
SOURce:POWer:LEVel:IMMediate:AMPLitude -25

// Configure the phase modulation settings
SOURcel:LFOutput1:SHAPE SINE
SOURcel:LFOutput1:FREQuency 1000

// Select the LF signal generated by the internal modulation generator
// or the internally generated noise signal
SOURcel:PM1:DEVIation 1
SOURcel:PM1:SOURce LF1
// SOURcel:PM1:SOURce INTernal
// SOURcel:PM1:SOURce NOISe
SOURcel:PM1:RATio 40
SOURcel:PM1:MODE HBAN

// Alternatively configure the phase modulation settings for an
// external modulation source and query the input sensitivity.
SOURcel:PM1:SOURce EXT1
// SOURcel:PM1:SOURce EXTernal
SOURcel:PM1:DEVIation 1
SOURcel:PM1:SENSitivity?
// Response: 1
// since the voltage value for full modulation is 1V,
// the resulting sensitivity is precisely 1RAD/V.

// Activate the signal output
SOURcel:PM1:STATe 1
OUTPut1:STATe 1

```

### Example: Using combined LF signals

Using the internal LF generators of both paths, the following command sequences configure an phase modulated signal with determined deviations.

```

// Configure the Phase modulation settings with combined LF signal sources
SOURcel:PM1:SOURce LF1
SOURcel:PM1:DEVIation 1.5
// Select the modulation signal source for the second path
SOURcel:PM2:SOURce LF2
// Combine the signals of both paths with fixed total deviation depth
SOURcel:PM1:DEVIation:MODE TOT
SOURcel:PM1:DEVIation:SUM 2

// Query the deviation depth of the modulation signal in the second path
SOURcel:PM2:DEVIation?
// Response: 0.5

```

```
// Combine the signals of both paths with fixed ratio
SOURce1:PM1:DEVIation:MODE RAT
SOURce1:PM1:RATio 80
SOURce1:PM2:DEVIation?
// Response: 1.2

// Query the deviation depth of modulation signal in the first path
SOURce1:PM1:DEVIation?
// Response: 1.5

SOURce1:FM1:STATe 1
SOURce1:FM2:STATe 1
```

The following commands are available:

<a href="#">[:SOURce&lt;hw&gt;]:PM&lt;ch&gt;:STATe.....</a>	435
<a href="#">[:SOURce&lt;hw&gt;]:PM&lt;ch&gt;:SOURce.....</a>	435
<a href="#">[:SOURce&lt;hw&gt;]:PM:MODE.....</a>	436
<a href="#">[:SOURce&lt;hw&gt;]:PM:DEVIation:MODE.....</a>	436
<a href="#">[:SOURce&lt;hw&gt;]:PM:DEVIation:SUM.....</a>	437
<a href="#">[:SOURce&lt;hw&gt;]:PM:RATio.....</a>	437
<a href="#">[:SOURce&lt;hw&gt;]:PM:SENSitivity?.....</a>	437
<a href="#">[:SOURce]:PM&lt;ch&gt;[:DEVIation].....</a>	437

---

#### **[:SOURce<hw>]:PM<ch>:STATe <State>**

Activates phase modulation.

Activation of phase modulation deactivates frequency modulation.

##### **Suffix:**

PM<ch>                    1|2  
Sets the modulation signal channel.

##### **Parameters:**

<State>                    1 | ON | 0 | OFF  
\*RST:                    0

**Example:**                See [Example "Performing phase modulation"](#) on page 433.

**Manual operation:**    See ["State"](#) on page 74

---

#### **[:SOURce<hw>]:PM<ch>:SOURce <Source>**

Selects the modulation source for phase modulation signal.

##### **Suffix:**

PM<ch>                    1|2  
Sets the modulation signal channel.

##### **Parameters:**

<Source>                    EXT1 | NOISe | LF2 | LF1 | INTernal | EXTernal

**LF1|LF2**

Uses an internally generated LF signal.

**EXT1**

Uses an externally supplied LF signal.

**NOISe**

Uses the internally generated noise signal.

**INTernal**

Uses the internally generated signal of LF1.

**EXTernal**

Uses an external LF signal (EXT1).

**Example:** See [Example "Performing phase modulation"](#) on page 433.

**Manual operation:** See ["Source"](#) on page 74

**[:SOURce<hw>]:PM:MODE <Mode>**

Selects the mode for the phase modulation.

**Parameters:**

<Mode> HBANdwidth | HDEViation | LNOise

**HBANdwidth**

Sets the maximum available bandwidth.

**HDEViation**

Sets the maximum range for  $\Phi$ M deviation.

**LNOise**

Selects a phase modulation mode with phase noise and spurious characteristics close to CW mode.

\*RST: HBANdwidth

**Example:** See [Example "Performing phase modulation"](#) on page 433.

**Manual operation:** See ["Mode"](#) on page 77

**[:SOURce<hw>]:PM:DEViation:MODE <PmDevMode>**

Selects the coupling mode. The coupling mode parameter also determines the mode for fixing the total deviation.

**Parameters:**

<PmDevMode> UNCOupled | TOTal | RATio

**UNCOupled**

Does not couple the LF signals.

The deviation values of both paths are independent.

**TOTal**

Couples the deviation of both paths.

**RATio**

Couples the deviation ratio of both paths

\*RST: UNCOupled

**Example:** See [Example"Using combined LF signals"](#) on page 434

**Manual operation:** See ["Deviation Mode"](#) on page 76

**[:SOURce<hw>]:PM:DEVIation:SUM** <PmDevSum>

Sets the total deviation of the LF signal when using combined signal sources in phase modulation.

**Parameters:**

<PmDevSum> float  
 Range: 0 to max  
 Increment: 1E-6  
 \*RST: 1

**Example:** See [Example"Using combined LF signals"](#) on page 434

**Manual operation:** See ["Total Deviation"](#) on page 76

**[:SOURce<hw>]:PM:RATio** <Ratio>

Sets the deviation ratio (path2 to path1) in percent.

**Parameters:**

<Ratio> float  
 Range: 0 to 100  
 Increment: 0.01  
 \*RST: 100

**Example:** See [Example"Performing phase modulation"](#) on page 433.

**Manual operation:** See ["Ratio Path2/Path1"](#) on page 76

**[:SOURce<hw>]:PM:SENSitivity?**

Queries the sensitivity of the externally applied signal for phase modulation.

The returned value reports the sensitivity in RAD/V. It is assigned to the voltage value for full modulation of the input.

**Return values:**

<Sensitivity> float

**Example:** See [Example"Performing phase modulation"](#) on page 433.

**Usage:** Query only

**[:SOURce]:PM<ch>[:DEVIation]** <Deviation>

Sets the modulation deviation of the phase modulation in RAD.

**Parameters:**

&lt;Deviation&gt; float

The maximal deviation depends on the RF frequency and the selected modulation mode (see the specifications document).

Range: 0 to max

Increment: 1

\*RST: 1

Default unit: RAD

**Example:** See [Example "Performing phase modulation"](#) on page 433.**Manual operation:** See ["Deviation"](#) on page 76**12.15.1.5 SOURce:PULM subsystem**Option: see [Chapter 5.1, "Required options"](#), on page 68.

The PULM subsystem contains the commands for setting the pulse modulation.

- [Pulse modulation settings](#)..... 438
- [Pulse train settings](#)..... 443
- [Pulse train data exchange](#)..... 446

**Pulse modulation settings**

With the commands described in this section, you can configure the settings for pulse modulation, select the trigger mode and determine delay times for the pulse modulation signal.

**Example: Perform pulse modulation**

The example shows a command sequence to perform pulse modulation.

```
// Reset the instrument to start from an initial state
*RST; *CLS

// Set the RF signal frequency and level
SOURce:FREQuency:CW 4000000000
SOURce:POWer:LEVel:IMMediate:AMPLitude -25

// Configure the pulse modulation settings
// Select the internal modulation generator,
// set trigger mode, select pulse mode, transition type

// Trigger a single pulse

SOURce:PULM:SOURce INT
SOURce:PULM:TRIGger:MODE SING
SOURce:PULM:MODE DOUB
SOURce:PULM:TTYPe SMO

SOURce:PULM:TRIG:IMM
```

```

// Alternatively configure the pulse modulation settings for
// external modulation source
// Select the source, set the polarity of the external signal,
// select the impedance for the external pulse modulation input/
// for the external pulse modulation trigger input
SOURce:PULM:SOURce EXT
SOURce:PULM:POLarity NORMal
SOURce:PULM:IMPedance G1K

// Configure the pulse generator settings
// Set pulse period, width, and delay
SOURce:PULM:PERiod 10 us
SOURce:PULM:WIDTH 8 us
SOURce:PULM:DOUBle:WIDTH 0.0000012
SOURce:PULM:DOUBle:DELay 0.0000045

// Route the signal to the signal valid output connector
// to use the signal for synchronizing the pulse modulation.
:SOURce:PULM:OUTPut:SYNC ON

// Activate the signal output
SOURce:PGENERator:OUTPut:STATe 1
SOURce:PULM:STATe 1
OUTPut1:STATe 1

```

The following commands are available:

<a href="#">[:SOURce&lt;hw&gt;]:PULM:MODE</a> .....	439
<a href="#">[:SOURce&lt;hw&gt;]:PULM:TRIGger:MODE</a> .....	440
<a href="#">[:SOURce]:PULM[:INTernal][:TRain]:TRIGger:IMMEDIATE</a> .....	440
<a href="#">[:SOURce&lt;hw&gt;]:PULM:PERiod</a> .....	440
<a href="#">[:SOURce&lt;hw&gt;]:PULM:WIDTH</a> .....	441
<a href="#">[:SOURce&lt;hw&gt;]:PULM:DELay</a> .....	441
<a href="#">[:SOURce&lt;hw&gt;]:PULM:DOUBle:DELay</a> .....	441
<a href="#">[:SOURce&lt;hw&gt;]:PULM:DOUBle:WIDTH</a> .....	441
<a href="#">[:SOURce&lt;hw&gt;]:PULM:DOUBle:STATe</a> .....	442
<a href="#">[:SOURce&lt;hw&gt;]:PULM:STATe</a> .....	442
<a href="#">[:SOURce&lt;hw&gt;]:PULM:SOURce</a> .....	442
<a href="#">[:SOURce&lt;hw&gt;]:PULM:TTYPe</a> .....	442
<a href="#">[:SOURce&lt;hw&gt;]:PULM:OUTPut:SYNC[:STATe]</a> .....	443
<a href="#">[:SOURce&lt;hw&gt;]:PULM:POLarity</a> .....	443
<a href="#">[:SOURce&lt;hw&gt;]:PULM:IMPedance</a> .....	443

---

#### **[\[:SOURce<hw>\]:PULM:MODE <Mode>](#)**

Selects the mode for the pulse modulation.

#### **Parameters:**

<Mode>                    SINGle | DOUBle | PTRain  
**SINGle**  
Generates a single pulse.

**DOUBLE**

Generates two pulses within one pulse period.

**PTRain**

Generates a user-defined pulse train.

Specify the pulse sequence with the commands:

```
[ :SOURce<hw> ] :PULM:TRAI:n:ONTime
```

```
[ :SOURce<hw> ] :PULM:TRAI:n:OFFTime
```

```
[ :SOURce<hw> ] :PULM:TRAI:n:REPetition
```

```
*RST: SINGle
```

**Example:** See [Example "Perform pulse modulation"](#) on page 438.

**Options:** PTRain requires R&S SMBB-K27

**Manual operation:** See ["Pulse Mode"](#) on page 88

**[ :SOURce<hw> ] :PULM:TRIGger:MODE <Mode>**

Selects a trigger mode - auto, single, external, external single or external gated - for generating the modulation signal.

**Parameters:**

<Mode> AUTO | EXTeRnal | EGATe | SINGle | ESINGle

```
*RST: AUTO
```

**Example:** See [Example "Perform pulse modulation"](#) on page 438.

**Manual operation:** See ["Trigger Mode"](#) on page 89

**[ :SOURce ] :PULM [ :INTernal ] [ :TRAI:n ] :TRIGger:IMMediate**

If `[ :SOURce<hw> ] :PULM:TRIGger:MODE` SINGle, triggers the pulse generator.

**Example:** See [Example "Perform pulse modulation"](#) on page 438.

**Manual operation:** See ["Execute Single Trigger"](#) on page 91

**[ :SOURce<hw> ] :PULM:PERiod <Period>**

Sets the period of the generated pulse, that means the repetition frequency of the internally generated modulation signal.

**Parameters:**

<Period> float

The minimum value depends on the installed options  
R&S SMBB-K22 or R&S SMBB-K23

Range: 20E-9 to 100

Increment: 5E-9

```
*RST: 10E-6
```

**Example:** See [Example "Perform pulse modulation"](#) on page 438.



**Manual operation:** See ["Pulse Period"](#) on page 90

**[:SOURce<hw>]:PULM:WIDTH <Width>**

Sets the width of the generated pulse, that means the pulse length. It must be at least 20ns less than the set pulse period.

**Parameters:**

<Width> float  
 Range: 20E-9 to 100  
 Increment: 10E-9  
 \*RST: 2E-6

**Example:** See [Example"Perform pulse modulation"](#) on page 438.

**Manual operation:** See ["Pulse Width"](#) on page 90

**[:SOURce<hw>]:PULM:DELay <Delay>**

Sets the pulse delay.

**Parameters:**

<Delay> float  
 \*RST: 1ms

**Example:** See [Example"Perform pulse modulation"](#) on page 438.

**Manual operation:** See ["Pulse Delay"](#) on page 90

**[:SOURce<hw>]:PULM:DOUBLE:DELay <Delay>**

Sets the delay from the start of the first pulse to the start of the second pulse.

**Parameters:**

<Delay> float  
 \*RST: 1E-6

**Example:** See [Example"Perform pulse modulation"](#) on page 438.

**Manual operation:** See ["Double Pulse Delay"](#) on page 90

**[:SOURce<hw>]:PULM:DOUBLE:WIDTH <Width>**

Sets the width of the second pulse.

**Parameters:**

<Width> float  
 Increment: 5E-9

**Example:** See [Example"Perform pulse modulation"](#) on page 438.

**Manual operation:** See ["Double Pulse Width"](#) on page 90

---

**[:SOURce<hw>]:PULM:DOUBLE:STATe <State>**

Provided for backward compatibility with former Rohde & Schwarz signal generators.

Works like the command `[ :SOURce<hw> ] :PULM:MODEDOUBLE`.

**Parameters:**

<State>            1 | ON | 0 | OFF  
\*RST:            0

---

**[:SOURce<hw>]:PULM:STATe <State>**

Activates pulse modulation.

**Parameters:**

<State>            1 | ON | 0 | OFF  
\*RST:            0

**Example:**            See [Example"Perform pulse modulation"](#) on page 438.

**Manual operation:** See ["State"](#) on page 71

---

**[:SOURce<hw>]:PULM:SOURce <Source>**

Selects between the internal (pulse generator) or an external pulse signal for the modulation.

**Parameters:**

<Source>            INTernal | EXTernal  
\*RST:            INTernal

**Example:**            See [Example"Perform pulse modulation"](#) on page 438.

**Manual operation:** See ["Source"](#) on page 72

---

**[:SOURce<hw>]:PULM:TTYPe <Source>**

Sets the transition mode for the pulse signal.

**Parameters:**

<Source>            SMOothed | FAST  
**SMOothed**  
flattens the slew rate, resulting in longer rise/fall times.  
**FAST**  
enables fast transitions with shortest rise and fall times.  
\*RST:            FAST

**Example:**            See [Example"Perform pulse modulation"](#) on page 438.

**Manual operation:** See ["Transition Type"](#) on page 72

---

**[:SOURce<hw>]:PULM:OUTPut:SYNC[:STATe] <Sync>**

Routes the pulse modulation signal to the [Signal Valid] connector.

**Parameters:**

<Sync> 1 | ON | 0 | OFF  
\*RST: OFF

**Options:** R&S SMBB-K23 (Pulse Generator)

**Manual operation:** See ["Pulse Sync Out"](#) on page 91

---

**[:SOURce<hw>]:PULM:POLarity <Polarity>**

Sets the polarity of the externally applied modulation signal.

**Parameters:**

<Polarity> NORMal | INVerted  
**NORMal**  
Suppresses the RF signal during the pulse pause.  
**INVerted**  
Suppresses the RF signal during the pulse.  
\*RST: NORMal

**Example:** See [Example "Perform pulse modulation"](#) on page 438.

**Manual operation:** See ["Polarity"](#) on page 99

---

**[:SOURce<hw>]:PULM:IMPedance <Impedance>**

Sets the impedance for the external pulse trigger and pulse modulation input.

**Parameters:**

<Impedance> G50 | G10K  
\*RST: G10K

**Example:** See [Example "Perform pulse modulation"](#) on page 438.

**Manual operation:** See ["Impedance"](#) on page 99

---

**Pulse train settings**

Option: R&S SMBB-K27

This section describes the commands for the pulse train modulation and the associated file handling.

See [Chapter 5.4.4.2, "Pulse generator > pulse train settings"](#), on page 91.

**Example: Generating a pulse train signal**

The following settings are required to perform pulse train modulation.



Always create and select pulse train data list first before you activate the pulse train mode.

Otherwise, an error is displayed

```
*RST; *CLS

// Set the RF signal frequency and level
SOURce:FREQuency:CW 4000000000
SOURce:POWer:LEVel:IMMediate:AMPLitude -25

// Create a pulse train data list
// Select the directory
MMEM:CDIR '/var/user/'
SOURcel:PULM:TRAI:n:CATalog?
// my_pt
// Create and/or select the pulse train data file
SOURcel:PULM:TRAI:n:SElect "/var/user/pt"
// Enter the pulse train data
SOURce:PULM:TRAI:n:ONTime 0.0001,0.00025,0.0001
SOURce:PULM:TRAI:n:OFFTime 500us,500us,300us
SOURce:PULM:TRAI:n:REPetition 2,0,3
// the second pulse is ignored

// Select pulse train mode
// Select the internal modulation generator and the pulse mode
SOURcel:PULM:SOURce INT
SOURcel:PULM:MODE PTR
SOURcel:PULM:TRIGger:MODE EXT
SOURcel:PGENERator:OUTPut:STATe 1
SOURcel:PGENERator:OUTPut:POLarity NORM
SOURce:PGENERator:OUTPut:STATe 1
SOURce:PULM:STATe 1
OUTPut1:STATe 1

// SOURcel:PULM:TRAI:n:CATalog?
// my_pt, pt
// SOURcel:PULM:TRAI:n:DEL "/var/user/my_pt"
```

The following commands are available:

<a href="#">[:SOURce&lt;hw&gt;]:PULM:TRAI:n:CATalog?</a> .....	445
<a href="#">[:SOURce&lt;hw&gt;]:PULM:TRAI:n:DELeTe</a> .....	445
<a href="#">[:SOURce&lt;hw&gt;]:PULM:TRAI:n:ONTime</a> .....	445
<a href="#">[:SOURce&lt;hw&gt;]:PULM:TRAI:n:OFFTime</a> .....	445
<a href="#">[:SOURce&lt;hw&gt;]:PULM:TRAI:n:REPetition:POINts?</a> .....	446
<a href="#">[:SOURce&lt;hw&gt;]:PULM:TRAI:n:ONTime:POINts?</a> .....	446
<a href="#">[:SOURce&lt;hw&gt;]:PULM:TRAI:n:OFFTime:POINts?</a> .....	446
<a href="#">[:SOURce&lt;hw&gt;]:PULM:TRAI:n:REPetition</a> .....	446
<a href="#">[:SOURce&lt;hw&gt;]:PULM:TRAI:n:SElect</a> .....	446

**[:SOURce<hw>]:PULM:TRAI:n:CATalog?**

Queries the available pulse train files in the specified directory.

**Return values:**

<Catalog> string  
List of list filenames, separated by commas

**Example:** See [Example "Generating a pulse train signal"](#) on page 443.

**Usage:** Query only

**Manual operation:** See ["Pulse Train Data"](#) on page 93

**[:SOURce<hw>]:PULM:TRAI:n:DELeTe <Filename>**

Deletes the specified pulse train file.

**Setting parameters:**

<Filename> string  
Filename or complete file path; file extension is optional.

**Example:** See [Example "Generating a pulse train signal"](#) on page 443.

**Usage:** Setting only

**Manual operation:** See ["Pulse Train Data"](#) on page 93  
See ["Edit Pulse Train Data"](#) on page 94

**[:SOURce<hw>]:PULM:TRAI:n:ONTime <OnTime>****[:SOURce<hw>]:PULM:TRAI:n:OFFTime <OffTime>**

Enters the pulse on/off times values in the selected list.

**Parameters:**

<OffTime> Offtime#1{, Offtime#2, ...} | binary block data  
List of comma-separated numeric values or binary block data, where:  
The list of numbers can be of any length.  
In binary block format, 8 (4) bytes are always interpreted as a floating-point number with double accuracy.  
See [:FORMat \[ :DATA\]](#) on page 398 for details.  
The maximum length is 2047 values.  
Range: 0 ns to 10 ms

**Example:** See [Example "Generating a pulse train signal"](#) on page 443.

**Manual operation:** See ["Edit Pulse Train Data"](#) on page 94

---

```
[ :SOURce<hw>]:PULM:TRAI:n:REPetition:POINts?
```

```
[ :SOURce<hw>]:PULM:TRAI:n:ONTime:POINts?
```

```
[ :SOURce<hw>]:PULM:TRAI:n:OFFTime:POINts?
```

Queries the number of on and off time entries and repetitions in the selected list.

**Return values:**

```
<Points>          integer
                  Range:    0 to INT_MAX
                  *RST:     0
```

**Example:** See [Example "Generating a pulse train signal"](#) on page 443.

**Usage:** Query only

---

```
[ :SOURce<hw>]:PULM:TRAI:n:REPetition <Repetition>
```

Sets the number of repetitions for each pulse on/off time value pair.

**Parameters:**

```
<Repetition>      Repetition#1{, Repetition#2, ...}
                  0 = ignore value pair
                  Set "Repetition = 0" to skip a particular pulse without deleting
                  the pulse on/off time value pair
                  Range:    0 to 65535
```

**Example:** See [Example "Generating a pulse train signal"](#) on page 443.

**Manual operation:** See ["Edit Pulse Train Data"](#) on page 94

---

```
[ :SOURce<hw>]:PULM:TRAI:n:SElect <Filename>
```

Selects or creates a data list in pulse train mode.

If the list with the selected name does not exist, a new list is created.

**Parameters:**

```
<Filename>        string
                  Filename or complete file path; file extension can be omitted.
```

**Example:** See [Example "Generating a pulse train signal"](#) on page 443.

**Manual operation:** See ["Pulse Train Data"](#) on page 93  
 See ["File Name"](#) on page 98  
 See ["Functions for handling of data lists"](#) on page 217

### Pulse train data exchange

Option: R&S SMBB-K27

With the following commands, you can configure pulse trains in ASCII format and export or import them accordingly.

```

SOURCE1:PULM:SOURCE INT
SOURCE1:PULM:MODE PTR
SOURCE1:PULM:TRAIN:SELECT "/var/user/pt"
SOURCE1:PULM:STATE 1

SOURCE1:PULM:TRAIN:DEXCHANGE:MODE EXP
SOURCE1:PULM:TRAIN:DEXCHANGE:AFILE:EXTENSION TXT
SOURCE1:PULM:TRAIN:DEXCHANGE:AFILE:SEPARATOR:DECIMAL DOT
SOURCE1:PULM:TRAIN:DEXCHANGE:AFILE:SEPARATOR:COLUMN SEM
SOURCE1:PULM:TRAIN:DEXCHANGE:AFILE:SEPARATOR:COLUMN COMM
SOURCE1:PULM:TRAIN:DEXCHANGE:SELECT "/var/user/pt.pulstrn"
SOURCE1:PULM:TRAIN:DEXCHANGE:AFILE:SELECT "/var/user/pt_script.txt"
SOURCE1:PULM:TRAIN:DEXCHANGE:EXECUTE

```

The following commands are available:

<a href="#">[:SOURCE&lt;hw&gt;]:PULM:TRAIN:DEXCHANGE:MODE.....</a>	447
<a href="#">[:SOURCE&lt;hw&gt;]:PULM:TRAIN:DEXCHANGE:AFILE:EXTENSION.....</a>	447
<a href="#">[:SOURCE&lt;hw&gt;]:PULM:TRAIN:DEXCHANGE:AFILE:SEPARATOR:DECIMAL.....</a>	448
<a href="#">[:SOURCE&lt;hw&gt;]:PULM:TRAIN:DEXCHANGE:AFILE:SEPARATOR:COLUMN.....</a>	448
<a href="#">[:SOURCE&lt;hw&gt;]:PULM:TRAIN:DEXCHANGE:AFILE:CATALOG?.....</a>	448
<a href="#">[:SOURCE&lt;hw&gt;]:PULM:TRAIN:DEXCHANGE:AFILE:SELECT.....</a>	448
<a href="#">[:SOURCE&lt;hw&gt;]:PULM:TRAIN:DEXCHANGE:SELECT.....</a>	449
<a href="#">[:SOURCE&lt;hw&gt;]:PULM:TRAIN:DEXCHANGE:EXECUTE.....</a>	449

---

#### **[:SOURCE<hw>]:PULM:TRAIN:DEXCHANGE:MODE <Mode>**

Determines the import or export of a list.

Specify the source or destination file with the command `[ :SOURCE<hw> ] :PULM:TRAIN:DEXCHANGE:SELECT`.

#### **Parameters:**

<Mode>                   IMPort | EXPort  
                           \*RST:       IMPort

**Example:**               See ["Pulse train data exchange"](#) on page 446.

**Manual operation:**    See ["Mode"](#) on page 96

---

#### **[:SOURCE<hw>]:PULM:TRAIN:DEXCHANGE:AFILE:EXTENSION <Extension>**

Determines the extension of the ASCII file for import or export, or to query existing files.

#### **Parameters:**

<Extension>               TXT | CSV  
                           \*RST:       TXT

**Example:**               See ["Pulse train data exchange"](#) on page 446.

**Manual operation:**    See ["ASCII File Settings"](#) on page 96

---

**[ :SOURce<hw> ]:PULM:TRAI:n:DEXChange:AFILe:SEParator:DECimal <Decimal>**

Sets "." (decimal point) or "," (comma) as the decimal separator used in the ASCII data with floating-point numerals.

**Parameters:**

<Decimal> DOT | COMMa  
\*RST: DOT

**Example:** See ["Pulse train data exchange"](#) on page 446.

**Manual operation:** See ["ASCII File Settings"](#) on page 96

---

**[ :SOURce<hw> ]:PULM:TRAI:n:DEXChange:AFILe:SEParator:COLumn <Column>**

Selects the separator between the frequency and level column of the ASCII table.

**Parameters:**

<Column> TABulator | SEMicolon | COMMa | SPACe  
\*RST: COMMa

**Example:** See ["Pulse train data exchange"](#) on page 446.

**Manual operation:** See ["ASCII File Settings"](#) on page 96

---

**[ :SOURce<hw> ]:PULM:TRAI:n:DEXChange:AFILe:CATalog?**

Queries the available ASCII files in the current or specified directory.

**Return values:**

<Catalog> string  
List of ASCII files \*.txt or \*.csv, separated by commas.

**Example:** See ["Pulse train data exchange"](#) on page 446.

**Usage:** Query only

**Manual operation:** See ["Select \(ASCII\) Source/Select \(ASCII\) Destination"](#) on page 97

---

**[ :SOURce<hw> ]:PULM:TRAI:n:DEXChange:AFILe:SElect <Filename>**

Selects the ASCII file to be imported or exported.

**Parameters:**

<Filename> string  
Filename or complete file path; file extension can be omitted.

**Example:** See ["Pulse train data exchange"](#) on page 446.

**Manual operation:** See ["Select \(ASCII\) Source/Select \(ASCII\) Destination"](#) on page 97



---

**[ :SOURce<hw>]:PULM:TRAI:n:DEXChange:SELEct <Filename>**

Selects the ASCII file for import or export, containing a pulse train list.

**Parameters:**

<Filename>                    string  
                                   Filename or complete file path; file extension can be omitted.

**Example:**                    See "[Pulse train data exchange](#)" on page 446.

**Manual operation:**    See "[Select Source/Select ASCII Destination](#)" on page 97

---

**[ :SOURce<hw>]:PULM:TRAI:n:DEXChange:EXECute**

**Usage:**                      Event

**Manual operation:**    See "[Import / Export](#)" on page 97

Executes the import or export of the selected list file, according to the transfer direction set with command `[ :SOURce<hw>]:PULM:TRAI:n:DEXChange:MODE`.

### 12.15.1.6 SOURce:STEReo subsystem

Option: R&S SMBB-B5

The SOURce:STEReo subsystem contains the commands for generating FM stereo multiplex signals, the radio traffic service ARI (Automotive Radio Information) and Radio Data System (RDS).

Additional functions are available using the SOURce:STEReo:DIRect commands, see [Chapter 12.21, "Direct commands for the stereo/rds coder option R&S SMBB-B5"](#), on page 572.

**Example: Activating stereo modulation**

The following example shows a command sequence for stereo modulation.

```
// Reset the instrument to start from an initial state
*RST; *CLS
// Set the FM deviation, audio source, preemphasis
// and max modulation frequency

SOURce:STEReo:DEVIation 25000
SOURce:STEReo:SOURce SPEX
SOURce:STEReo:AUDio:PREemphasis:STATe 1
SOURce:STEReo:AUDio:PREemphasis 75 us
SOURce:STEReo:AUDio:MODE RNEL
SOURce:STEReo:MMF 1500

// Configure the pilot tone
SOURce:STEReo:PILot:DEVIation 5000
SOURce:STEReo:PILot:PHASe 3
```

```
// Configure and activate ARI
STEReo:ARI 2800
SOURce:STEReo:ARI:TYPE BK
STEReo:ARI:BK C
SOURce:Stereo:ARI:STATE 1
```

```
//Configure and activate RDS
STEReo:RDS 1200
SOURce:STEReo:RDS:DATaset DS3
SOURce:STEReo:RDS:TRAFfic:PROGram:STATE 1
SOURce:STEReo:RDS:TRAFfic:ANNouncement:STATE 1
STEReo:RDS:STATE 1
```

```
// Activate the signal output
SOURce:STEReo:STATE 1
```

[SOURce]:STEReo:DIRect.....	450
[SOURce]:STEReo:STATE.....	451
[SOURce]:STEReo[:DEViation].....	451
[SOURce]:STEReo:AUDio:MODE.....	451
[SOURce]:STEReo:SOURce.....	452
[SOURce]:STEReo:EXTeRnal:IMPedance.....	452
[SOURce]:STEReo:MMF.....	452
[SOURce]:STEReo:AUDio:PREemphasis.....	453
[SOURce]:STEReo:AUDio:PREemphasis:STATE.....	453
[SOURce]:STEReo:PILot:STATE.....	453
[SOURce]:STEReo:PILot[:DEViation].....	453
[SOURce]:STEReo:PILot:PHASe.....	454
[SOURce]:STEReo:ARI:STATE.....	454
[SOURce]:STEReo:ARI[:DEViation].....	454
[SOURce]:STEReo:ARI:TYPE:STATE.....	455
[SOURce]:STEReo:ARI:TYPE.....	455
[SOURce]:STEReo:ARI:BK[:CODE].....	455
[SOURce]:STEReo:RDS:STATE.....	456
[SOURce]:STEReo:RDS[:DEViation].....	456
[SOURce]:STEReo:RDS:DATaset.....	456
[SOURce]:STEReo:RDS:TRAFfic:PROGram[:STATE].....	456
[SOURce]:STEReo:RDS:TRAFfic:ANNouncement[:STATE].....	457

---

### [SOURce]:STEReo:DIRect <Direct>

Sends a R&S SMB100B command string to the stereo coder.

The direct commands offer extended settings possibilities for the stereo coder, see [Chapter 12.21, "Direct commands for the stereo/rds coder option R&S SMBB-B5"](#), on page 572.

#### Parameters:

<Direct>                      string

**Example:**                      See [Example "Activating stereo modulation"](#) on page 449.

**Manual operation:** See ["Program Service Name"](#) on page 86  
See ["Program Identification"](#) on page 86

---

**[[:SOURce]:STEReo:STATe <State>**

Activates/deactivates stereo modulation.

**Parameters:**

<State> 0 | 1 | OFF | ON  
\*RST: 0

**Example:** See [Example"Activating stereo modulation"](#) on page 449.

**Manual operation:** See ["State"](#) on page 80

---

**[[:SOURce]:STEReo[:DEViation] <Deviation>**

Sets the MPX (Multiplex stereo signal) deviation.

**Parameters:**

<Deviation> integer  
Range: 0 to depends on instrument hardware  
\*RST: 40 kHz

**Example:** See [Example"Activating stereo modulation"](#) on page 449.

**Manual operation:** See ["FM Deviation"](#) on page 80

---

**[[:SOURce]:STEReo:AUDio:MODE <Mode>**

Selects the generated identifiers of the AUDio signal.

**Parameters:**

<Mode> LEFT | RIGHT | RELeft | REMLeft | RNELeft

**LEFT**

A mono signal containing the left channel is generated/fed in.

**RIGHT**

A mono signal containing the right channel is generated/fed in.

**RELeft**

A stereo signal with right and left channel is generated/fed in.  
The channels have the same frequency and phase.

**REMLeft**

The signal on the left external audio input is used for both channels, left and right. The right channel is inverted.

**RNELeft**

(External source only)

A stereo signal containing different, independent right and left channels is feed in. It is possible, for example, to feed a fixed audio frequency to the first channel while a frequency sweep is being performed in the second channel.

\*RST: LEFT

**Example:** See [Example"Activating stereo modulation"](#) on page 449.

**Manual operation:** See ["Mode"](#) on page 80

**[ :SOURce ] :STEReo :SOURce <Source>**

Selects the source for the audio signal.

**Parameters:**

<Source>

OFF | LREXt | SPEXt | LFGen

**OFF**

No audio signal is provided, ARI and RDS signal can be generated separately.

**LREX**

The external audio signal is feed in via the analog L and R inputs.

**SPEX**

The external audio signal is feed in via the digital S/P DIF interface

**LFG**

The audio stereo signal is internally generated by the LF generator.

\*RST: LREXt

**Example:** See [Example"Activating stereo modulation"](#) on page 449.

**Manual operation:** See ["Audio Source"](#) on page 81

**[ :SOURce ] :STEReo :EXTernal :IMPedance <Impedance>**

For [ :SOURce ] :STEReo :SOURceLREX, selects the input impedance for the external analog audio signal inputs L and R.

**Parameters:**

<Impedance>

600 | 600Ohm | 100000 | 100kOhm | 1000000Ohm

\*RST: 100000

**Example:** See [Example"Activating stereo modulation"](#) on page 449.

**Manual operation:** See ["External R/L Impedance"](#) on page 81

**[ :SOURce ] :STEReo :MMF <Mmf>**

For [ :SOURce ] :STEReo :SOURceLREX and [ :SOURce ] :STEReo :AUDio :PREemphasis :STATe1, sets the maximum modulation frequency. It prevents over modulation but decreases S/N ratio.

**Parameters:**

<Mmf> integer  
 Range: 1000 to 18000  
 \*RST: 1000

**Example:** See [Example"Activating stereo modulation"](#) on page 449.

**Manual operation:** See ["Max Modulation Frequency"](#) on page 82

**[[:SOURce]:STEReo:AUDio:PREemphasis <PreEmphasis>**

If `[[:SOURce]:STEReo:AUDio:PREemphasis:STATe1]`, sets the preemphasis used for signal generation.

**Parameters:**

<PreEmphasis> OFF | 50 | 75  
 Range: 50 us to 75 us

**Example:** See [Example"Activating stereo modulation"](#) on page 449.

**Manual operation:** See ["Preemphasis"](#) on page 81

**[[:SOURce]:STEReo:AUDio:PREemphasis:STATe <State>**

Activates the use of preemphasis for signal generation.

**Parameters:**

<State> 0 | 1 | OFF | ON  
 \*RST: 0

**Example:** See [Example"Activating stereo modulation"](#) on page 449.

**Manual operation:** See ["Preemphasis"](#) on page 81

**[[:SOURce]:STEReo:PILot:STATe <State>**

Activates/deactivates the pilot tone generation.

**Parameters:**

<State> 0 | 1 | OFF | ON  
 \*RST: 1

**Example:** See [Example"Activating stereo modulation"](#) on page 449.

**Manual operation:** See ["Pilot State"](#) on page 83

**[[:SOURce]:STEReo:PILot[:DEViation] <Deviation>**

Sets the deviation of the pilot tone.

**Parameters:**

<Deviation> integer  
 Range: 0 to 10 kHz  
 \*RST: 6.75 kHz

**Example:** See [Example"Activating stereo modulation"](#) on page 449.

**Manual operation:** See ["Pilot Deviation"](#) on page 83

**[[:SOURce]:STEReo:PILot:PHASe <Phase>**

Sets the phase of the pilot tone in degrees, in relation to the 38 kHz carrier signal of the receiver. For a correct demodulation, the pilot tone must be in phase with the 38 kHz carrier.

**Parameters:**

<Phase> float  
 Range: -5 to 5  
 Increment: 0.1  
 \*RST: 0

**Example:** See [Example"Activating stereo modulation"](#) on page 449.

**Manual operation:** See ["Pilot Phase"](#) on page 83

**[[:SOURce]:STEReo:ARI:STATe <State>**

Activates/deactivates the ARI signal generation. ARI signals can be generated simultaneously with MPX and RDS signals.

**Parameters:**

<State> 0 | 1 | OFF | ON  
 \*RST: 0

**Example:** See [Example"Activating stereo modulation"](#) on page 449.

**Manual operation:** See ["ARI State"](#) on page 84

**[[:SOURce]:STEReo:ARI[:DEViation] <Deviation>**

Sets the frequency deviation of the ARI subcarrier signal.

**Parameters:**

<Deviation> integer  
 Range: 0 to 10000  
 \*RST: 3500

**Example:** See [Example"Activating stereo modulation"](#) on page 449.

**Manual operation:** See ["ARI Deviation"](#) on page 84

---

**[ :SOURce ] :STEReo:ARI:TYPE:STATe <State>**

Activates/deactivates the Stereo ARI Identifier. Activating selects the previously selected identifier type.

**Parameters:**

<State>                    0 | 1 | OFF | ON  
\*RST:                    0

**Example:**                    See [Example"Activating stereo modulation"](#) on page 449.

**Manual operation:**    See ["ARI Identification"](#) on page 84

---

**[ :SOURce ] :STEReo:ARI:TYPE <Type>**

Selects the generated identifiers of the ARI signal.

DK and BK are abbreviations of the German words Durchsagekennung and Bereichskennung.

**Parameters:**

<Type>                    OFF | DK | BK | BKDK

**OFF**

Only the 57 kHz subcarrier is generated.

**DK**

The message identification is generated in addition (low-frequency 30% AM).

**BK**

The area identification is generated in addition (60% AM). The specific code is selected in [\[ :SOURce \] :STEReo:ARI: BK \[ :CODE \]](#) on page 455.

**BKDK**

The area and message identification are generated in addition. The BK code is selected in [\[ :SOURce \] :STEReo:ARI: BK \[ :CODE \]](#) on page 455.

\*RST:                    OFF

**Example:**                    See [Example"Activating stereo modulation"](#) on page 449.

**Manual operation:**    See ["ARI Identification"](#) on page 84

---

**[ :SOURce ] :STEReo:ARI: BK [ :CODE ] <Code>**

Selects the area identification (BK) code of the ARI signal. The code is generated if the BK or DK+BK identifier of the ARI signal is activated.

**Parameters:**

<Code>                    A | B | C | D | E | F

The six letters (six different frequencies) identify a specific region in each country.

\*RST:                    A

**Example:** See [Example"Activating stereo modulation"](#) on page 449.

**Manual operation:** See ["ARI BK"](#) on page 84

#### **[[:SOURce]:STEReo:RDS:STATe <State>**

Activates/deactivates the RDS signal generation. RDS signals can be generated simultaneously with MPX (FM stereo multiplex) and ARI signals.

**Parameters:**

<State> 0 | 1 | OFF | ON  
\*RST: 0

**Example:** See [Example"Activating stereo modulation"](#) on page 449.

**Manual operation:** See ["RDS State"](#) on page 85

#### **[[:SOURce]:STEReo:RDS[:DEViation] <Deviation>**

Sets the deviation of the RDS subcarrier.

**Parameters:**

<Deviation> integer  
Range: 0 to 10 kHz  
\*RST: 2 kHz

**Example:** See [Chapter 12.15.1.6, "SOURce:STEReo subsystem"](#), on page 449.

**Manual operation:** See ["RDS Deviation"](#) on page 86

#### **[[:SOURce]:STEReo:RDS:DATaset <Dataset>**

Selects one of the five data sets provided on the instrument for use in the RDS signal.

**Parameters:**

<Dataset> DS1 | DS2 | DS3 | DS4 | DS5  
\*RST: DS1

**Example:** See [Example"Activating stereo modulation"](#) on page 449.

**Manual operation:** See ["RDS Data Set"](#) on page 86

#### **[[:SOURce]:STEReo:RDS:TRAFfic:PROGram[:STATe] <State>**

Activates the RDS traffic program. The receiver can recognize a frequency as being capable of traffic information only if the TP function is active.

**Parameters:**

<State> 0 | 1 | OFF | ON  
\*RST: 0

**Example:** See [Example"Activating stereo modulation"](#) on page 449.



**Manual operation:** See ["Traffic Program"](#) on page 86

---

**[:SOURce]:STEReo:RDS:TRAFfic:ANNouncement[:STATe] <State>**

Activates the RDS traffic announcement.

If TP is on, this function switches the receiver from the current status, e.g. playing a CD, to the receive mode and enables the broadcast of a traffic announcement.

**Parameters:**

<State>                    0 | 1 | OFF | ON  
 \*RST:                    0

**Example:** See [Example"Activating stereo modulation"](#) on page 449.

**Manual operation:** See ["Traffic Announcement"](#) on page 87

## 12.15.2 SOURce:CORRection subsystem

The SOURce:CORRection subsystem contains the commands for defining correction values for external test assemblies.

You can acquire the correction values anytime, regardless of the modulation settings of the generator. During correction, the R&S SMB100B adds the correction values to the output level of the respective RF frequency.

Determine the correction values in one of the following ways:

- Measure the RF output level at several frequency points and enter the value pairs manually in a table
- Connect an R&S NRP to the generator output signal and send the command `[ :SOURce<hw>]:CORRection:CSET:DATA[:SENSor<ch>] [:POWER]:SONCe` to fill the table automatically.

Save correction values to files with file extension `*.uco`.

Refer to [Chapter 12.5.2, "Handling files in the default or in a specified directory"](#), on page 369 for general information on file handling in the default and in a specific directory.

### Programming examples

The examples in this section assume that:

- The files are stored in the default directory.
- \*RST does not affect data lists.

#### Example: To create RF level correction values

The following example shows a command sequence to create and activate a list for assigning level correction values to arbitrary RF frequencies. Further hardware settings are not considered.

```

// Reset the instrument to start from an initial state
// Query the available user correction list files in the default directory
// Select a file or create a new one
// *****
*RST; *CLS
SOURcel:CORRection:CSET:CATalog?
// Response: shows the name of available user correction files (if applicable)
// Select a file
SOURcel:CORRection:CSET:SElect "/var/user/ucor1"
// Create a new file (if not existing)
SOURcel:CORRection:CSET:SElect "/var/user/ucor2"

// Enter the frequency/level value pairs in the table;
// existing data is overwritten
// Query the number of frequency/power entries in the selected list
SOURcel:CORRection:CSET:DATA:FREQuency 100MHz,110MHz,120MHz,130MHz,140MHz,150MHz
SOURcel:CORRection:CSET:DATA:POWer -10,-7.5,-5.0,-2.5,0,2.5
SOURcel:CORRection:CSET:DATA:FREQuency:POINTs?
// 6
SOURcel:CORRection:CSET:DATA:POWer:POINTs?
// 6

// Enable user correction mode and RF output
SOURcel:CORRection:STATe 1
OUTPut1:STATe ON

// Query the currently used correction value
SOURcel:CORRection:VALue?
// -2.5

// Delete a user correction file
SOURcel:CORRection:CSET:DELEte "/var/user/ucor1.uco"

```

### Example: To fill user correction data with a sensor

The following example shows a command sequence to fill a user correction list automatically supported by a connected R&S NRP.

```

// Fill a user correction list with the level values
// measured by an R&S NRP,
// store the data in a file and enable user correction.

*RST; *CLS

SOURcel:CORRection:CSET:SElect "/var/user/Ucor1_AutoFill.uco"
SOURcel:CORRection:CSET:DATA:FREQuency 100MHz,110MHz,120MHz,130MHz,140MHz,150MHz
SOURcel:CORRection:ZERoing:STATe 1
SOURcel:CORRection:CSET:DATA:SENSor1:POWer:SONCe
// Query the number of automatically filled correction level values
SOURcel:CORRection:CSET:DATA:POWer:POINTs?
// 6

```

```

SOURCE1:CORRection:STATe 1

// Query the correction value at a certain frequency
FREQ 120000000
SOURCE1:CORRection:VALue?
// -52.13

```

### Example: To export user correction lists

The following example shows a command sequence to export a user correction list (here the list created with the example before) into an ASCII file. Further hardware settings are not considered.

```

// Select a user correction file for exporting to file in ASCII format
// Set ASCII data parameters
// Set the ASCII file extension, the decimal separator
// and the column separator for the ASCII data
SOURCE1:CORRection:DEXChange:AFILe:CATalog?
// my_ucor
SOURCE1:CORRection:CSET:CATalog?
// ucor1,Ucor1_AutoFill
SOURCE1:CORRection:CSET:SElect "/var/user/Ucor1_AutoFill.uco"
SOURCE1:CORRection:DEXChange:AFILe:EXTension CSV
SOURCE1:CORRection:DEXChange:AFILe:SEParator:DECimal DOT
SOURCE1:CORRection:DEXChange:AFILe:SEParator:COLumn COMMa

// Select source and destination
SOURCE1:CORRection:DEXChange:AFILe:SElect "/var/user/ucor2ASCII"

// Export the user correction data into the ASCII file
SOURCE1:CORRection:DEXChange:MODE EXPort
SOURCE1:CORRection:DEXChange:EXECute

// Query the available ASCII files with extension .csv
SOURCE1:CORRection:DEXChange:AFILe:CATalog?
// ucor2ASCII,my_ucor

// Import a user correction ASCII file
SOURCE1:CORRection:DEXChange:MODE IMPort
SOURCE1:CORRection:DEXChange:AFILe:SElect "/var/user/my_ucor"
SOURCE1:CORRection:DEXChange:EXECute

```

### Commands:

- [Correction settings](#)..... 460
- [Correction data exchange](#)..... 463

### 12.15.2.1 Correction settings

---

**[ :SOURce<hw>]:CORRection:CSET:DATA:FREQuency <Frequency>**

Enters the frequency value in the table selected with `[ :SOURce<hw>]:CORRection:CSET[:SELEct]`.

**Parameters:**

<Frequency>                      Frequency#1[, Frequency#2, ...]  
 String of values with default unit Hz.

**Example:**                      See [Example "To create RF level correction values"](#) on page 457 .

**Manual operation:**    See ["Edit List Mode Data"](#) on page 148

---

**[ :SOURce<hw>]:CORRection:CSET:DATA:POWer <Power>**

Enters the level values to the table selected with `[ :SOURce<hw>]:CORRection:CSET[:SELEct]`.

**Parameters:**

<Power>                              Power#1[, Power#2, ...]  
 String of values with default unit dB.  
 \*RST: 0

**Example:**                      See [Example "To create RF level correction values"](#) on page 457 .

**Manual operation:**    See ["Edit List Mode Data"](#) on page 148

---

**[ :SOURce<hw>]:CORRection:CSET:DATA:FREQuency:POINts?**

**[ :SOURce<hw>]:CORRection:CSET:DATA:POWer:POINts?**

Queries the number of frequency/level values in the selected table.

**Return values:**

<Points>                              integer  
 Range:                              0 to 10000  
 \*RST:                                0

**Example:**                      See [Example "To create RF level correction values"](#) on page 457 .

**Usage:**                              Query only

---

**[ :SOURce<hw>]:CORRection:CSET:DATA[:SENSor<ch>][:POWer]:SONCe**

Fills the selected user correction table with the level values measured by the power sensor for the given frequencies.

To select the used power sensor set the suffix in key word `SENSe`.

- Example:** See [Example "To fill user correction data with a sensor"](#) on page 458.
- Usage:** Event
- Manual operation:** See ["Fill User Correction Data with Sensor"](#) on page 168

#### **[[:SOURce<hw>]:CORRection:CSET[:SElect] <Filename>**

Selects or creates a file for the user correction data.

If the file with the selected name does not exist, a new file is created.

**Parameters:**

<Filename> string  
 Filename or complete file path; file extension can be omitted.

**Example:** See [Example "To create RF level correction values"](#) on page 457 .

**Manual operation:** See ["UCOR Data"](#) on page 162  
 See ["Functions for handling of data lists"](#) on page 217

#### **[[:SOURce<hw>]:CORRection:VALue?**

Queries the current value for user correction.

**Return values:**

<Value> float  
 Range: -100 to 100  
 Increment: 0.01  
 \*RST: 0

**Example:** See [Example "To create RF level correction values"](#) on page 457 .

**Usage:** Query only

**Manual operation:** See ["User Correction"](#) on page 162

#### **[[:SOURce<hw>]:CORRection:ZERoing:STATe <State>**

Activates the zeroing procedure before filling the user correction data acquired by a sensor.

**Parameters:**

<State> 1 | ON | 0 | OFF  
 \*RST: 1

**Example:** See [Example "To fill user correction data with a sensor"](#) on page 458.

**Manual operation:** See ["Fill User Correction Data with Sensor"](#) on page 168

---

**[ :SOURce<hw> ] :CORRection:CSET:DATA[:SENSor<ch>][:POWer]:SONCe**

Fills the selected user correction list with the level values measured by the power sensor for the given frequencies.

**Suffix:**

SENSor<ch> Defines the used power sensor, i.e. the sensor whose values are used.

**Example:** See [Example "To fill user correction data with a sensor"](#) on page 458.

**Usage:** Event

---

**[ :SOURce<hw> ] :CORRection[:STATe] <State>**

Activates user correction with the currently selected table.

**Parameters:**

<State> 1 | ON | 0 | OFF  
\*RST: 0

**Example:** See [Example "To create RF level correction values"](#) on page 457 .

**Manual operation:** See ["State"](#) on page 162

---

**[ :SOURce ] :CORRection:CSET:CATalog?**

Queries a list of available user correction tables.

**Return values:**

<Catalog> string  
List of list filenames, separated by commas

**Example:** See [Example "To create RF level correction values"](#) on page 457 .

**Usage:** Query only

**Manual operation:** See ["UCOR Data"](#) on page 162  
See ["Directory, File List and Filename"](#) on page 212

---

**[ :SOURce ] :CORRection:CSET:DELeTe <Filename>**

Deletes the specified user correction list file.

**Setting parameters:**

<Filename> string  
Filename or complete file path; file extension is optional.

**Example:** See [Example "To create RF level correction values"](#) on page 457 .

**Usage:** Setting only  
**Manual operation:** See ["UCOR Data"](#) on page 162

### 12.15.2.2 Correction data exchange

With the following commands, you can configure user correction lists and export or import them accordingly.

---

#### **[:SOURce<hw>]:CORRection:DEXChange:AFILe:CATalog?**

Queries the available ASCII files for export or import of user correction data in the current or specified directory.

**Return values:**

<Catalog> string  
 List of ASCII files \*.txt or \*.csv, separated by commas.

**Example:** See [Example "To create RF level correction values"](#) on page 457 .

**Usage:** Query only

**Manual operation:** See ["Select \(ASCII\) Source/Select \(ASCII\) Destination"](#) on page 97

---

#### **[:SOURce<hw>]:CORRection:DEXChange:AFILe:EXTension <Extension>**

Determines the extension of the ASCII files for file import or export, or to query existing files.

**Parameters:**

<Extension> TXT | CSV  
 \*RST: TXT

**Example:** See [Example "To export user correction lists"](#) on page 459 .

**Manual operation:** See ["ASCII File Settings"](#) on page 96

---

#### **[:SOURce<hw>]:CORRection:DEXChange:AFILe:SElect <Filename>**

Selects the ASCII file to be imported or exported.

**Parameters:**

<Filename> string  
 Filename or complete file path; file extension can be omitted.

**Example:** See [Example "To export user correction lists"](#) on page 459 .

**Manual operation:** See ["Select \(ASCII\) Source/Select \(ASCII\) Destination"](#) on page 97

---

**[ :SOURce<hw> ] :CORRection:DEXChange:AFILe:SEParator:COLumn <Column>**

Selects the separator between the frequency and level column of the ASCII table.

**Parameters:**

<Column>           TABulator | SEMicolon | COMMa | SPACe  
\*RST:            COMMa

**Example:**           See [Example "To export user correction lists"](#) on page 459 .

**Manual operation:** See ["ASCII File Settings"](#) on page 96

---

**[ :SOURce<hw> ] :CORRection:DEXChange:AFILe:SEParator:DECimal <Decimal>**

Sets the decimal separator used in the ASCII data between '.' (decimal point) and ',' (comma) with floating-point numerals.

**Parameters:**

<Decimal>           DOT | COMMa  
\*RST:            DOT

**Example:**           See [Example "To export user correction lists"](#) on page 459 .

**Manual operation:** See ["ASCII File Settings"](#) on page 96

---

**[ :SOURce<hw> ] :CORRection:DEXChange:EXECute**

Executes the import or export of the selected correction list, according to the previously set transfer direction with command [\[ :SOURce<hw> \] :CORRection:DEXChange:MODE](#).

**Example:**           See [Example "To export user correction lists"](#) on page 459 .

**Usage:**            Event

**Manual operation:** See ["Import / Export"](#) on page 97

---

**[ :SOURce<hw> ] :CORRection:DEXChange:MODE <Mode>**

Determines import or export of a user correction list.

Specify the source or destination file with the command [\[ :SOURce<hw> \] :CORRection:DEXChange:SELection](#).

**Parameters:**

<Mode>            IMPort | EXPort  
\*RST:            IMPort

**Example:**           See [Example "To export user correction lists"](#) on page 459 .

**Manual operation:** See ["Mode"](#) on page 96

---



**[:SOURCE<hw>]:CORREction:DEXChange:SElect <Filename>**

Selects the ASCII file for import or export, containing a user correction list.

**Parameters:**

<Filename>                    string  
                                   Filename or complete file path; file extension can be omitted.

**Example:**                    See [Example "To export user correction lists"](#) on page 459 .

**Manual operation:**    See ["Select Source/Select ASCII Destination"](#) on page 97

## 12.15.3 SOURCE:FREQUENCY subsystem

The SOURCE:FREQUENCY subsystem contains the commands used to define the frequency settings for the RF sources and sweeps.

**Example: Frequency configuration**

```
SOURCE1:FREQUENCY:MODE CW
SOURCE1:FREQUENCY:CW 6000000000
SOURCE1:FREQUENCY:OFFSET 2000000000
SOURCE1:FREQUENCY:MULTIPLIER 1.5
SOURCE1:FREQUENCY:CW?
// 11000000000

// SOURCE1:FREQUENCY:STEP:MODE USER
// SOURCE1:FREQUENCY:STEP:INCREMENT 1000000
// SOURCE1:FREQUENCY:CW UP

SOURCE1:PHASE 2
SOURCE1:PHASE:REFERENCE
```

<a href="#">[:SOURCE&lt;hw&gt;]:FREQUENCY:MODE</a> .....	466
<a href="#">[:SOURCE&lt;hw&gt;]:FREQUENCY[:CW FIXed]</a> .....	467
<a href="#">[:SOURCE&lt;hw&gt;]:FREQUENCY[:CW FIXed]:RCL</a> .....	467
<a href="#">[:SOURCE&lt;hw&gt;]:FREQUENCY:MANual</a> .....	468
<a href="#">[:SOURCE&lt;hw&gt;]:FREQUENCY:MULTIplier</a> .....	468
<a href="#">[:SOURCE&lt;hw&gt;]:FREQUENCY:OFFSet</a> .....	468
<a href="#">[:SOURCE&lt;hw&gt;]:FREQUENCY:CENTer</a> .....	469
<a href="#">[:SOURCE&lt;hw&gt;]:FREQUENCY:SPAN</a> .....	469
<a href="#">[:SOURCE&lt;hw&gt;]:FREQUENCY:STARt</a> .....	469
<a href="#">[:SOURCE&lt;hw&gt;]:FREQUENCY:STOP</a> .....	470
<a href="#">[:SOURCE&lt;hw&gt;]:FREQUENCY:STEP:MODE</a> .....	470
<a href="#">[:SOURCE&lt;hw&gt;]:FREQUENCY:STEP[:INCRement]</a> .....	470

**[ :SOURce<hw> ] :FREQuency:MODE <Mode>**

Sets the frequency mode for generating the RF output signal. The selected mode determines the parameters to be used for further frequency settings.

**Parameters:**

&lt;Mode&gt;

CW | FIXed | SWEep | LIST | COMBined

**CW|FIXed**

Sets the fixed frequency mode. CW and FIXed are synonyms. The instrument operates at a defined frequency, set with command [ :SOURce<hw> ] :FREQuency [ :CW | FIXed ].

**SWEep**

Sets sweep mode.

The instrument processes frequency (and level) settings in defined sweep steps.

Set the range and current frequency with the commands:

[ :SOURce<hw> ] :FREQuency:START on page 469 and [ :

SOURce<hw> ] :FREQuency:STOP on page 470,

[ :SOURce<hw> ] :FREQuency:CENTer on page 469,

[ :SOURce<hw> ] :FREQuency:SPAN on page 469,

[ :SOURce<hw> ] :FREQuency:MANual on page 468

**LIST**

Sets list mode.

The instrument processes frequency and level settings by means of values loaded from a list.

To configure list mode settings, use the commands of the [Chapter 12.15.6, "SOURce:LIST subsystem"](#), on page 485.

**COMBined**

Sets the combined RF frequency / level sweep mode.

The instrument processes frequency and level settings in defined sweep steps.

Set the range and current frequency with the commands:

[ :SOURce<hw> ] :COMBined:FREQuency:START

on page 528 and [ :SOURce<hw> ] :COMBined:FREQuency:STOP on page 528,

[ :SOURce<hw> ] :COMBined:POWer:START on page 528 and

[ :SOURce<hw> ] :COMBined:POWer:STOP on page 529

\*RST: CW

**Example:** See [Example "Frequency configuration"](#) on page 465,

**Example:** See [Example "Setup an RF frequency or power sweep"](#) on page 520

**Manual operation:** See ["State \(RF frequency sweep\)"](#) on page 131  
See ["State \(RF frequency / level sweep\)"](#) on page 132  
See ["State"](#) on page 142

**[ :SOURce<hw>]:FREQuency[:CW|FIXed] <Fixed>**

Sets the frequency of the RF output signal in the selected path.

The effect depends on the selected mode:

- In CW mode (`FREQ:MODE CW | FIXed`), the instrument operates at a fixed frequency.
- In sweep mode (`FREQ:MODE SWE`), the value applies to the sweep frequency. The instrument processes the frequency settings in defined sweep steps.
- In user mode (`FREQ:STEP:MODE USER`), you can vary the current frequency step by step.

**Parameters:**

<Fixed>

float

The following settings influence the value range:

An offset set with the command `[ :SOURce<hw>]:FREQuency:OFFSet`

**Numerical value**

Sets the frequency in CW and sweep mode

**UP|DOWN**

Varies the frequency step by step in user mode.

The frequency is increased or decreased by the value set with the command `[ :SOURce<hw>]:FREQuency:STEP[:INCRement]`.

Range: (RFmin + OFFSet) to (RFmax + OFFSet)

\*RST: 100 MHz

**Example:** See [Example"Frequency configuration"](#) on page 465

**Example:** See [Example"Setup an RF frequency or power sweep"](#) on page 520

**Manual operation:** See ["Frequency"](#) on page 60

**[ :SOURce<hw>]:FREQuency[:CW|FIXed]:RCL <Rcl>**

Set whether the RF frequency value is retained or taken from a loaded instrument configuration, when you recall instrument settings with command `*RCL`.

**Parameters:**

<Rcl>

INCLude | EXCLude

**INCLude**

Takes the frequency value of the loaded settings.

**EXCLude**

Retains the current frequency when an instrument configuration is loaded.

\*RST: INCLude

**Example:** `SOURce1:FREQuency:CW:RCL INCLude`

**Manual operation:** See ["Exclude Frequency"](#) on page 213

---

**[ :SOURce<hw>]:FREQuency:MANual <Manual>**

Sets the frequency and triggers a sweep step manually if `SWEep:MODE MAN`.

**Parameters:**

<Manual>

float

You can select any frequency within the setting range, where:

START is set with `[ :SOURce<hw> ] :FREQuency:START`

STOP is set with `[ :SOURce<hw> ] :FREQuency:STOP`

OFFSet is set with `[ :SOURce<hw> ] :FREQuency:OFFSet`

Range: (START + OFFSet) to (STOP + OFFSet)

Increment: 0.01Hz

\*RST: 100 MHz

Default unit: Hz

**Example:** See [Example"Setup an RF frequency or power sweep"](#) on page 520

**Manual operation:** See ["Current Frequency"](#) on page 132

---

**[ :SOURce<hw>]:FREQuency:MULTiplier <Multiplier>**

Sets the multiplication factor  $N_{\text{FREQ:MULT}}$  of a subsequent downstream instrument.

The parameters offset  $f_{\text{FREQ:OFFSer}}$  and multiplier  $N_{\text{FREQ:MULT}}$  affect the frequency value set with the command `FREQ`.

The query `FREQ?` returns the value corresponding to the formula:

$$f_{\text{FREQ}} = f_{\text{RFout}} * N_{\text{FREQ:MULT}} + f_{\text{FREQ:OFFSer}}$$

See ["RF frequency and level display with a downstream instrument"](#) on page 58.

**Parameters:**

<Multiplier>

float

Range: -10000 to 10000

Increment: 0.001

\*RST: 1

**Example:** See [Example"Frequency configuration"](#) on page 465

**Manual operation:** See ["Multiplier"](#) on page 61

---

**[ :SOURce<hw>]:FREQuency:OFFSet <Offset>**

Sets the frequency offset  $f_{\text{FREQ:OFFSet}}$  of a downstream instrument.

The parameters offset  $f_{\text{FREQ:OFFSer}}$  and multiplier  $N_{\text{FREQ:MULT}}$  affect the frequency value set with the command `FREQ`.

The query `FREQ?` returns the value corresponding to the formula:

$$f_{\text{FREQ}} = f_{\text{RFout}} * N_{\text{FREQ:MULT}} + f_{\text{FREQ:OFFSer}}$$

See ["RF frequency and level display with a downstream instrument"](#) on page 58.

**Note:** The offset also affects RF frequency sweep.

**Parameters:**

<Offset> float  
 Increment: 0.01  
 \*RST: 0

**Example:** See [Example"Frequency configuration"](#) on page 465

**Manual operation:** See ["Offset"](#) on page 60

**[:SOURce<hw>]:FREQUENCY:CENTer <Center>**

Sets the center frequency of the sweep.

See [Chapter 6.2.1, "Correlating parameters in sweep mode"](#), on page 124.

**Parameters:**

<Center> float  
 Range: 300 kHz to RFmax  
 Increment: 0.01 Hz  
 \*RST: 300E6  
 Default unit: Hz

**Example:** See [Example"Setup an RF frequency or power sweep"](#) on page 520

**Manual operation:** See ["Center Frequency"](#) on page 137

**[:SOURce<hw>]:FREQUENCY:SPAN <Span>**

Sets the span of the frequency sweep range.

See [Chapter 6.2.1, "Correlating parameters in sweep mode"](#), on page 124.

**Parameters:**

<Span> float  
 Full frequency range  
 Increment: 0.01  
 \*RST: 400E6

**Example:** See [Example"Setup an RF frequency or power sweep"](#) on page 520

**Manual operation:** See ["Span"](#) on page 137

**[:SOURce<hw>]:FREQUENCY:STARt <Start>**

Sets the start frequency for the RF sweep.

See [Chapter 6.2.1, "Correlating parameters in sweep mode"](#), on page 124.

**Parameters:**

<Start> float  
 Range: 300kHz to RFmax  
 Increment: 0.01Hz  
 \*RST: 100 MHz

**Example:** See [Example "Setup an RF frequency or power sweep"](#) on page 520

**Manual operation:** See ["Start Frequency/Stop Frequency"](#) on page 137

**[:SOURce<hw>]:FREQUENCY:STOP <Stop>**

Sets the stop frequency range for the RF sweep.

See [Chapter 6.2.1, "Correlating parameters in sweep mode"](#), on page 124.

**Parameters:**

<Stop> float  
 Range: 300kHz to RFmax  
 Increment: 0.01Hz  
 \*RST: 500 MHz  
 Default unit: Hz

**Example:** See [Example "Setup an RF frequency or power sweep"](#) on page 520

**Manual operation:** See ["Start Frequency/Stop Frequency"](#) on page 137

**[:SOURce<hw>]:FREQUENCY:STEP:MODE <Mode>**

Defines the type of step size to vary the RF frequency at discrete steps with the commands [FREQ UP](#) or [FREQ DOWN](#).

**Parameters:**

<Mode> DECimal | USER  
**DECimal**  
 Increases or decreases the level in steps of ten.  
**USER**  
 Increases or decreases the level in increments, set with the command [FREQ:STEP\[:INCR\]](#).  
 \*RST: DECimal

**Example:** See [Example "Frequency configuration"](#) on page 465.

**Manual operation:** See ["Variation Active"](#) on page 61

**[:SOURce<hw>]:FREQUENCY:STEP[:INCRement] <Increment>**

Sets the step width.

You can use this value to vary the RF frequency with command `FREQ UP` or `FREQ DOWN`.

If you have activated `FREQ:STEP:MODE USER`.

**Note:** This value also applies to the step width of the rotary knob on the instrument and, in user-defined step mode, increases or decreases the frequency.

**Parameters:**

<Increment> float  
 Range: 0 Hz to RFmax - 100 kHz  
 Increment: 0.01 Hz  
 \*RST: 1E6

**Example:** See [Example "Frequency configuration"](#) on page 465

**Manual operation:** See ["Variation Step"](#) on page 61

## 12.15.4 SOURce:INPut subsystem

The `SOURce:INPut` subsystem contains the commands for configuring the inputs for external modulation signals. The instrument trigger setting influences all sweeps and is effective in the List mode (Instrument Trigger).

`[:SOURce<hw>]:INPut:MODext:COUPling`.....471  
`[:SOURce<hw>]:INPut:MODext:IMPedance<ch>`.....471  
`[:SOURce]:INPut:TRIGger:SLOPe`.....472

---

**`[:SOURce<hw>]:INPut:MODext:COUPling` <Coupling>**

Selects the coupling mode for an externally applied modulation signal.

**Parameters:**

<Coupling> AC | DC  
**AC**  
 Passes the AC signal component of the modulation signal.  
**DC**  
 Passes the modulation signal with both components, AC and DC.  
 \*RST: AC

**Example:**  
`SOURce1:INPut:MODext:COUPling AC`  
`SOURce1:INPut:MODext:IMPedance G50`

**Manual operation:** See ["Coupling \(AC/DC\)"](#) on page 105

---

**`[:SOURce<hw>]:INPut:MODext:IMPedance<ch>` <Impedance>**

Sets the impedance for the externally supplied modulation signal.

**Parameters:**

<Impedance> G50 | G600 | HIGH  
 G50 = 50 Ohm to ground  
 G600 = 600 Ohm to ground  
 HIGH = 100 kOhm to ground  
 \*RST: HIGH

**Example:**

See [:SOURce<hw>]:INPut:MODext:COUPling on page 471.

**Manual operation:** See "Impedance" on page 105

**[[:SOURce]:INPut:TRIGger:SLOPe <Slope>**

Sets the polarity of the active slope of an applied instrument trigger.

**Parameters:**

<Slope> NEGative | POSitive  
 \*RST: POSitive

**Example:**

INP:TRIG:SLOP NEG  
 Activates the falling slope of the external trigger signal at the trigger input.

**Manual operation:** See "Trigger Slope" on page 135

## 12.15.5 SOURce:LFOutput subsystem

The SOURce:LFOutput subsystem contains the commands for setting the LF signal source in CW and Sweep mode and for analog modulation.

**Example: Setup an LF sweep**

The following example shows a command sequence to set up an LF sweep.

```
// Reset the instrument to start from an initial state
*RST; *CLS

// Set the trigger mode, the sweep mode and the sweep range
TRIGger1:LFFSweep:SOURce SINGLE
SOURce1:LFOutput1:SWEep:FREQuency:MODE AUTO
SOURce1:LFOutput1:FREQuency:START 1 kHz
SOURce1:LFOutput1:FREQuency:STOP 7 kHz

// Select linear spacing
// Select the waveform shape for the frequency sweep cycle
// Set the step width and the dwell time.
SOURce1:LFOutput1:SWEep:FREQuency:SPACing LINear
SOURce1:LFOutput1:SWEep:FREQuency:SHAPE SAWtooth
SOURce1:LFOutput1:SWEep:FREQuency:STEP:LINear 100 Hz
SOURce1:LFOutput1:SWEep:FREQuency:DWELL 150 ms
```



```

// Alternatively to the step width set the number of steps
SOURcel:LFOutput1:SWEep:FREQuency:POINts 61

// Activate change to start frequency while waiting for next trigger
// Prerequisites: sweep mode single and sweep waveform sawtooth
SOURcel:LFOutput:SWEep:FREQuency:RETRace 1

// Activate the LF frequency sweep
SOURcel:LFOutput:FREQuency:MODE SWE

// Trigger the sweep(depending on the set mode) and query the status
// Perform a one-off LF sweep
SOURcel:LFOutput1:SWEep:FREQuency:EXECute
SOURcel:LFOutput1:SWEep:FREQuency:RUNning?
// 1
// the sweep is running

// *****
// For manual step LF sweep use the following commands
*RST; *CLS
SOURcel:LFOutput:SWEep:FREQuency:MODE MANual
// Activate the LF frequency sweep
SOURcel:LFOutput:FREQuency:MODE SWEep
// Activate LF Output1.
SOURcel:LFOutput1:STATe 1
// Input the frequency manually for each step
SOURcel:LFOutput1:FREQuency:MANual 2 kHz
SOURcel:LFOutput1:FREQuency:MANual 2.1 kHz
// Alternatively use UP or DOWN parameter with set step width.
SOURcel:LFOutput1:SWEep:FREQuency:STEP:LINear 500 Hz
SOURcel:LFOutput1:FREQuency:MANual UP

```

### Example: Configuring the LF generator

The following is a simple example on how to configure the LF generator and output the generated signal.

```

// configure the signal of the LF1 generator
SOURcel:LFOutput1:SHAPE SQU
SOURcel:LFOutput1:SHAPE:PULSE:PERiod 0.001
SOURcel:LFOutput1:SHAPE:PULSE:WIDTh 0.0005
SOURcel:LFOutput1:SHAPE:PULSE:DCYCLE 0.5
// configure the signal of the LF1 generator
SOURcel:LFOutput2:SHAPE SINE
SOURcel:LFOutput2:FREQuency 1000000
SOURcel:LFOutput2:PERiod?
// 0.000001

// changing the LF signal shape
// SOURcel:LFOutput2:SHAPE TRAP
// SOURcel:LFOutput2:SHAPE:PULSE:PERiod 0.2

```

```
// SOURce1:LFOutput2:SHApe:TRAPeZe:RISE 0.0001
// SOURce1:LFOutput2:SHApe:TRAPeZe:FALL 0.001
// SOURce1:LFOutput2:SHApe:TRAPeZe:FALL 0.0001
// SOURce1:LFOutput2:SHApe:TRAPeZe:HIGH 0.0005
// SOURce1:LFOutput2:SHApe TRI
// SOURce1:LFOutput2:SHApe:PULSe:PERiod 0.1
// SOURce1:LFOutput2:SHApe:TRIAngle:RISE 0.0001

// activate the LF output and select the LF1 as signal source
// configure the LF output signal
SOURce1:LFOutput1:FREQuency:MODE CW
SOURce1:LFOutput1:STATe 1
SOURce1:LFOutput1:SOURce LF1
SOURce1:LFOutput1:INTernal:VOLTagE 1
SOURce1:LFOutput1:OFFSet 0.001
```

- [LF generator settings](#)..... 474
- [LF sweep settings](#)..... 482

### 12.15.5.1 LF generator settings

With the commands described in this section, you can configure the LF signal source.

<a href="#">[:SOURce]:LFOutput&lt;ch&gt;:BANDwidth?</a> .....	475
<a href="#">[:SOURce]:LFOutput&lt;ch&gt;:FREQuency</a> .....	475
<a href="#">[:SOURce&lt;hw&gt;]:LFOutput&lt;ch&gt;:PERiod?</a> .....	475
<a href="#">[:SOURce&lt;hw&gt;]:LFOutput:FREQuency:MANual</a> .....	476
<a href="#">[:SOURce&lt;hw&gt;]:LFOutput:FREQuency:MODE</a> .....	476
<a href="#">[:SOURce&lt;hw&gt;]:LFOutput:FREQuency:STOP</a> .....	477
<a href="#">[:SOURce&lt;hw&gt;]:LFOutput:FREQuency:START</a> .....	477
<a href="#">[:SOURce]:LFOutput&lt;ch&gt;[:STATe]</a> .....	477
<a href="#">[:SOURce]:LFOutput&lt;ch&gt;:INTernal:VOLTagE</a> .....	477
<a href="#">[:SOURce]:LFOutput:OFFSet</a> .....	477
<a href="#">[:SOURce]:LFOutput&lt;ch&gt;:SOURce</a> .....	478
<a href="#">[:SOURce]:LFOutput:SIMPedance</a> .....	478
<a href="#">[:SOURce]:LFOutput&lt;ch&gt;:SOURce:PATH</a> .....	478
<a href="#">[:SOURce]:LFOutput:VOLTagE</a> .....	479
<a href="#">[:SOURce&lt;hw&gt;]:LFOutput&lt;ch&gt;:SHApe</a> .....	479
<a href="#">[:SOURce&lt;hw&gt;]:LFOutput&lt;ch&gt;:SHApe:PULSe:DCYClE</a> .....	479
<a href="#">[:SOURce&lt;hw&gt;]:LFOutput&lt;ch&gt;:SHApe:PULSe:PERiod</a> .....	480
<a href="#">[:SOURce&lt;hw&gt;]:LFOutput&lt;ch&gt;:SHApe:PULSe:WIDTh</a> .....	480
<a href="#">[:SOURce&lt;hw&gt;]:LFOutput&lt;ch&gt;:SHApe:TRAPeZe:FALL</a> .....	480
<a href="#">[:SOURce&lt;hw&gt;]:LFOutput&lt;ch&gt;:SHApe:TRAPeZe:HIGH</a> .....	480
<a href="#">[:SOURce&lt;hw&gt;]:LFOutput&lt;ch&gt;:SHApe:TRAPeZe:PERiod</a> .....	481
<a href="#">[:SOURce&lt;hw&gt;]:LFOutput&lt;ch&gt;:SHApe:TRAPeZe:RISE</a> .....	481
<a href="#">[:SOURce&lt;hw&gt;]:LFOutput&lt;ch&gt;:SHApe:TRIAngle:PERiod</a> .....	481
<a href="#">[:SOURce&lt;hw&gt;]:LFOutput&lt;ch&gt;:SHApe:TRIAngle:RISE</a> .....	481

**[ :SOURce ]:LFOutput<ch>:BANDwidth?**

Queries the bandwidth of the external LF signal.

**Return values:**

<Bandwidth>            BW0M2 | BW10m  
 \*RST:            BW10m

**Example:**

```
LFO:BAND?
// BW10m
// the bandwidth of the externally supplied LF signal is 10 MHz
```

**Usage:**            Query only

**Manual operation:** See "[Bandwidth](#)" on page 105

**[ :SOURce ]:LFOutput<ch>:FREQuency <Frequency>**

Sets the frequency of the LF signal in [ :SOURce<hw> ] :LFOutput:FREQuency:MODE CW | FIXed mode.

**Note**

- If signal source "Internal" is set, the instrument performs the analog modulations (AM/FM/PhiM/PM) with this frequency.
- In sweep mode ( [ :SOURce<hw> ] :LFOutput:FREQuency:MODE SWE), the frequency is coupled with the sweep frequency.

**Parameters:**

<Frequency>            float  
 Range:            depends on the installed options  
 Increment:    0.01  
 \*RST:            1000  
 Default unit: Hz

**Example:**

```
SOURce1:LFOutput1:FREQuency 5 kHz
// sets the LF frequency
```

**Manual operation:** See "[LF Gen Frequency](#)" on page 81  
 See "[Frequency](#)" on page 103

**[ :SOURce<hw> ]:LFOutput<ch>:PERiod?**

Queries the repetition frequency of the sine signal.

**Return values:**

<LfSinePeriod>        float  
 Range:            1E-6 to 100  
 Increment:    10E-9  
 \*RST:            0.001  
 Default unit: s

**Example:**            See [Example "Configuring the LF generator"](#) on page 473.

**Usage:** Query only

---

**[ :SOURce<hw>]:LFOutput:FREQuency:MANual <Manual>**

Sets the frequency of the subsequent sweep step if `LFO:SWE:MODE MAN`.

Use a separate command for each sweep step.

**Parameters:**

<Manual>

float

You can select any value within the setting range, where:

START is set with `[ :SOURce<hw>]:LFOutput:FREQuency:START`

STOP is set with `[ :SOURce<hw>]:LFOutput:FREQuency:STOP`

Range: START to STOP

Increment: 0.1

\*RST: 1000

**Example:** See [Example"Setup an LF sweep"](#) on page 472.

**Manual operation:** See ["Current Frequency"](#) on page 132

---

**[ :SOURce<hw>]:LFOutput:FREQuency:MODE <Mode>**

Sets the mode for the output of the LF generator frequency, and determines the commands to be used for frequency settings.

**Parameters:**

<Mode>

CW | FIXed | SWEep

**CW|FIXed**

Sets the fixed-frequency mode. CW and FIXed are synonyms.

To set the output frequency, use command `[ :SOURce]:LFOutput<ch>:FREQuency`

**SWEep**

Sets sweep mode.

To set the frequency, use the commands:

`[ :SOURce<hw>]:LFOutput:FREQuency:START` and `[ :SOURce<hw>]:LFOutput:FREQuency:STOP`

Or `[ :SOURce<hw>]:LFOutput:FREQuency:MANual`

\*RST: CW

**Example:** See [Example"Setup an LF sweep"](#) on page 472.

**Manual operation:** See ["State \(LF frequency sweep\)"](#) on page 101

---

**[ :SOURce<hw>]:LFOutput:FREQUENCY:STOP <Stop>**

**[ :SOURce<hw>]:LFOutput:FREQUENCY:START <Start>**

Sets the start/stop frequency for [ :SOURce<hw>]:LFOutput:FREQUENCY:MODE  
SWEep.

**Parameters:**

<Start> float  
Range: 0.1 Hz to 1 MHz  
Increment: 0.1  
\*RST: 1 KHz

**Example:** See [Example "Setup an LF sweep"](#) on page 472.

**Manual operation:** See ["Start Frequency/Stop Frequency"](#) on page 137

---

**[ :SOURce]:LFOutput<ch>[:STATe] <State>**

Activates LF signal output.

**Parameters:**

<State> 1 | ON | 0 | OFF  
\*RST: 0

**Example:** See [Example "Configuring the LF generator"](#) on page 473.

**Manual operation:** See ["State"](#) on page 107

---

**[ :SOURce]:LFOutput<ch>:INTernal:VOLTage <Voltage>**

Sets the output voltage for the LF generators.

The sum of both values must not exceed the overall output voltage, set with command  
[\[:SOURce\]:LFOutput:VOLTage](#).

**Suffix:**

<ch> [1]2  
LF1 and LF2

**Parameters:**

<Voltage> float  
Range: 0 to 4  
Increment: 0.001  
\*RST: 1

**Example:** See [Example "Configuring the LF generator"](#) on page 473.

**Manual operation:** See ["Output Voltage"](#) on page 108

---

**[ :SOURce]:LFOutput:OFFSet <Offset>**

Sets a DC offset at the LF Output.

**Parameters:**

<Offset> float  
 Range: depends on lfo voltage  
 Increment: 0.001  
 \*RST: 0

**Example:** See [Example"Configuring the LF generator"](#) on page 473.

**Manual operation:** See ["DC-Offset"](#) on page 108

**[:SOURce]:LFOutput<ch>:SOURce <Source>**

Determines the LF signal to be synchronized, when monitoring is enabled.

**Parameters:**

<Source> LF1 | LF2 | NOISe | AM | FMPM | EXT1  
**LF1|LF2**  
 Selects an internally generated LF signal.  
**NOISe**  
 Selects an internally generated noise signal.  
**EXT1**  
 Selects an externally supplied LF signal  
**AM**  
 Selects the AM signal.  
**FMPM**  
 Selects the signal also used by the frequency or phase modulations.  
 \*RST: LF1

**Example:** See [Example"Configuring the LF generator"](#) on page 473.

**Manual operation:** See ["Source"](#) on page 108

**[:SOURce]:LFOutput:SIMPedance <SImpedance>**

Selects the impedance of the LF output.

**Parameters:**

<SImpedance> G600 | G50  
 \*RST: G50

**Example:** `SOURce:LFOutput:SIMPedance G600`  
 Sets the output impedance of the LF generator to 600 Ohm.

**Manual operation:** See ["Source Impedance"](#) on page 108

**[:SOURce]:LFOutput<ch>:SOURce:PATH <SourPath>**

Determines the path of the LF output source.

**Parameters:**

<SourPath>           A | B  
 \*RST:                A

**Example:**

LFO:SOUR:PATH?  
 Queries the currently set path for the LF output signal source.

**[[:SOURce]:LFOutput:VOLTage <Voltage>**

Sets the voltage of the LF output.

**Parameters:**

<Voltage>           float  
 Range:             dynamic (see specifications document)  
 Increment:        0.001  
 \*RST:             1

**Example:**

SOURce:LFOutput:VOLTage 1.5

**[[:SOURce<hw>]:LFOutput<ch>:SHAPE <Shape>**

Selects the waveform shape of the LF signal.

**Parameters:**

<Shape>             SINE | SQUARE | PULSE | TRIANGLE | TRAPEZE  
 \*RST:             SINE

**Example:**

See [Example "Configuring the LF generator"](#) on page 473.

**Options:**

R&S SMBB-K24

**Manual operation:**

See ["LF Gen Shape"](#) on page 81  
 See ["Shape"](#) on page 101

**[[:SOURce<hw>]:LFOutput<ch>:SHAPE:PULSE:DCYCLE <DCycle>**

Sets the duty cycle for the shape pulse.

**Parameters:**

<DCycle>           float  
 Range:             1E-6 to 100  
 Increment:        1E-6  
 \*RST:             50  
 Default unit: PCT

**Example:**

See [Example "Configuring the LF generator"](#) on page 473.

**Manual operation:**

See ["Pulse Duty Cycle"](#) on page 103

---

**[[:SOURce<hw>]:LFOutput<ch>:SHAPE:PULSE:PERiod <Period>**

Sets the period of the generated pulse. The period determines the repetition frequency of the internal signal.

**Parameters:**

<Period> float  
Range: 1E-6 to 100  
Increment: 1E-8  
\*RST: 1E-3

**Example:** See [Example"Configuring the LF generator"](#) on page 473.

**Manual operation:** See ["Period"](#) on page 103

---

**[[:SOURce<hw>]:LFOutput<ch>:SHAPE:PULSE:WIDTH <Width>**

Sets the pulse width of the generated pulse.

**Parameters:**

<Width> float  
Range: 1E-6 to 100  
Increment: 1E-8  
\*RST: 5E-4

**Example:** See [Example"Configuring the LF generator"](#) on page 473.

**Manual operation:** See ["Pulse Width"](#) on page 103

---

**[[:SOURce<hw>]:LFOutput<ch>:SHAPE:TRAPEze:FALL <Fall>**

Selects the fall time for the trapezoid shape of the LF generator.

**Parameters:**

<Fall> float  
Range: 1E-6 to 100  
Increment: 10E-9  
\*RST: 250E-6

**Example:** See [Example"Configuring the LF generator"](#) on page 473.

**Manual operation:** See ["Trapezoid Rise / Fall"](#) on page 104

---

**[[:SOURce<hw>]:LFOutput<ch>:SHAPE:TRAPEze:HIGh <High>**

Sets the high time for the trapezoid signal of the LF generator.

**Parameters:**

<High> float  
Range: 1E-6 to 100  
Increment: 10E-9  
\*RST: 250E-6



**Example:** See [Example"Configuring the LF generator"](#) on page 473.

**Manual operation:** See ["Trapezoid High"](#) on page 104

**[:SOURce<hw>]:LFOutput<ch>:SHAPE:TRAPeZe:PERiod <Period>**

Sets the period of the generated trapezoid shape. The period determines the repetition frequency of the internal signal.

**Parameters:**

<Period> float  
 Range: 1E-6 to 100  
 Increment: 1E-8  
 \*RST: 1E-3

**Example:** See [Example"Configuring the LF generator"](#) on page 473.

**Manual operation:** See ["Period"](#) on page 103

**[:SOURce<hw>]:LFOutput<ch>:SHAPE:TRAPeZe:RISE <Rise>**

Selects the rise time for the trapezoid shape of the LF generator.

**Parameters:**

<Rise> float  
 Range: 1E-6 to 100  
 Increment: 10E-9  
 \*RST: 250E-6

**Example:** See [Example"Configuring the LF generator"](#) on page 473.

**Manual operation:** See ["Trapezoid Rise / Fall"](#) on page 104

**[:SOURce<hw>]:LFOutput<ch>:SHAPE:TRlangle:PERiod <Period>**

Sets the period of the generated pulse. The period determines the repetition frequency of the internal signal.

**Parameters:**

<Period> float  
 Range: 1E-6 to 100  
 Increment: 10E-9  
 \*RST: 0.001

**Example:** See [Example"Configuring the LF generator"](#) on page 473.

**Manual operation:** See ["Period"](#) on page 103

**[:SOURce<hw>]:LFOutput<ch>:SHAPE:TRlangle:RISE <Rise>**

Selects the rise time for the triangle single of the LF generator.

**Parameters:**

<Rise> float  
 Range: 1E-6 to 100  
 Increment: 10E-9  
 \*RST: 0.5E-3

**Example:** See [Example"Configuring the LF generator"](#) on page 473.

**Manual operation:** See ["Triangle Rise"](#) on page 104

**12.15.5.2 LF sweep settings**

With the commands described in this section, you can configure the sweep of the LF signal.

<a href="#">[:SOURce&lt;hw&gt;]:LFOutput:SWEep[:FREQUENCY]:DWELI</a> .....	482
<a href="#">[:SOURce&lt;hw&gt;]:LFOutput:SWEep[:FREQUENCY]:EXECute</a> .....	482
<a href="#">[:SOURce&lt;hw&gt;]:LFOutput:SWEep[:FREQUENCY]:MODE</a> .....	483
<a href="#">[:SOURce&lt;hw&gt;]:LFOutput:SWEep[:FREQUENCY]:POINts</a> .....	483
<a href="#">[:SOURce&lt;hw&gt;]:LFOutput:SWEep[:FREQUENCY]:RETRace</a> .....	483
<a href="#">[:SOURce&lt;hw&gt;]:LFOutput:SWEep[:FREQUENCY]:RUNNING?</a> .....	484
<a href="#">[:SOURce&lt;hw&gt;]:LFOutput:SWEep[:FREQUENCY]:SHAPE</a> .....	484
<a href="#">[:SOURce&lt;hw&gt;]:LFOutput:SWEep[:FREQUENCY]:SPACing</a> .....	484
<a href="#">[:SOURce&lt;hw&gt;]:LFOutput:SWEep[:FREQUENCY]:STEP:LOGarithmic</a> .....	484
<a href="#">[:SOURce&lt;hw&gt;]:LFOutput:SWEep[:FREQUENCY]:STEP[LINear]</a> .....	485

**[\[:SOURce<hw>\]:LFOutput:SWEep\[:FREQUENCY\]:DWELI](#) <Dwell>**

Sets the dwell time for each frequency step of the sweep.

**Parameters:**

<Dwell> float  
 Range: 0.001 to 100  
 Increment: 100E-6  
 \*RST: 0.01  
 Default unit: s

**Example:** See [Example"Setup an LF sweep"](#) on page 472.

**Manual operation:** See ["Dwell Time"](#) on page 135

**[\[:SOURce<hw>\]:LFOutput:SWEep\[:FREQUENCY\]:EXECute](#)**

Immediately starts an LF sweep.

[\[:SOURce<hw>\]:LFOutput:SWEep\[:FREQUENCY\]:MODE](#) determines which sweep is executed, e.g. `SOURce:LFOutput:SWEep:FREQUENCY:MODE STEP`.

**Example:** See [Example"Setup an LF sweep"](#) on page 472.

**Usage:** Event

**Manual operation:** See ["Execute Single Sweep"](#) on page 136

---

**[ :SOURce<hw>]:LFOutput:SWEep[:FREQuency]:MODE <Mode>**

Sets the cycle mode of the LF sweep.

**Parameters:**

<Mode>

AUTO | MANual | STEP

**AUTO**

Performs a complete sweep cycle from the start to the end value when a trigger event occurs.

The dwell time determines the time period until the signal switches to the next step.

**MANual**

Performs a single sweep step when a manual trigger event occurs.

The trigger system is not active. To trigger each frequency step of the sweep individually, use the command `[ :SOURce<hw> ] : LFOutput : FREQuency : MANual` on page 476.

**STEP**

Each trigger command triggers one sweep step only.

The frequency increases by the value set with the coammnds:

`[ :SOURce<hw> ] : LFOutput : SWEep [ : FREQuency ] : STEP [ : LINear ]` (linear spacing)

`[ :SOURce<hw> ] : LFOutput : SWEep [ : FREQuency ] : STEP : LOGarithmic` (logarithmic spacing)

\*RST: AUTO

**Example:** See [Example"Setup an LF sweep"](#) on page 472.

**Manual operation:** See ["Mode"](#) on page 132

---

**[ :SOURce<hw>]:LFOutput:SWEep[:FREQuency]:POINTs <Points>**

Sets the number of steps in an LF sweep.

For information on how the value is calculated and the interdependency with other parameters, see [Chapter 6.2.1, "Correlating parameters in sweep mode"](#), on page 124

**Parameters:**

<Points>

integer

Range: 2 to POINTs

\*RST: 50

**Example:** See [Example"Setup an LF sweep"](#) on page 472.

---

**[ :SOURce<hw>]:LFOutput:SWEep[:FREQuency]:RETRace <State>**

Activates that the signal changes to the start frequency value while it is waiting for the next trigger event.

You can enable this feature, when you are working with sawtooth shapes in sweep mode "Single" or "External Single".

**Parameters:**

<State> 1 | ON | 0 | OFF  
 \*RST: 0

**Manual operation:** See ["Retrace"](#) on page 133

**[[:SOURce<hw>]:LFOutput:SWEep[:FREQUENCY]:RUNNING?**

Queries the current status of the LF frequency sweep mode.

**Return values:**

<State> 1 | ON | 0 | OFF

**Example:** See [Example"Setup an LF sweep"](#) on page 472.

**Usage:** Query only

**[[:SOURce<hw>]:LFOutput:SWEep[:FREQUENCY]:SHAPE <Shape>**

Sets the cycle mode for a sweep sequence (shape).

**Parameters:**

<Shape> SAWTooth | TRIangle  
 \*RST: SAWTooth

**Example:** See [Example"Setup an LF sweep"](#) on page 472.

**Manual operation:** See ["Shape"](#) on page 133

**[[:SOURce<hw>]:LFOutput:SWEep[:FREQUENCY]:SPACing <Spacing>**

Selects linear or logarithmic sweep spacing.

**Parameters:**

<Spacing> LINear | LOGarithmic  
 \*RST: LINear

**Example:** See [Example"Setup an LF sweep"](#) on page 472.

**Manual operation:** See ["Spacing"](#) on page 135

**[[:SOURce<hw>]:LFOutput:SWEep[:FREQUENCY]:STEP:LOGarithmic  
 <Logarithmic>**

Sets the step width factor for logarithmic sweeps to calculate the frequencies of the steps.

For information on how the value is calculated and the interdependency with other parameters, see [Chapter 6.2.1, "Correlating parameters in sweep mode"](#), on page 124

**Parameters:**

<Logarithmic> float  
 The unit is mandatory  
 Range: 0.01 to 100  
 Increment: 0.01  
 \*RST: 1  
 Default unit: PCT

**Example:** See [Example "Setup an LF sweep"](#) on page 472.

**Manual operation:** See ["Step Linear/Step Logarithmic"](#) on page 138

**[:SOURce<hw>]:LFOutput:SWEep[:FREQUENCY]:STEP[:LINEar] <Linear>**

Sets the step width for the linear sweep.

For information on how the value is calculated and the interdependency with other parameters, see [Chapter 6.2.1, "Correlating parameters in sweep mode"](#), on page 124

**Parameters:**

<Linear> float  
 Range: 0.1 to STOP-START  
 Increment: 0.1  
 \*RST: 1000

**Example:** See [Example "Setup an LF sweep"](#) on page 472.

**Manual operation:** See ["Step Linear/Step Logarithmic"](#) on page 138

## 12.15.6 SOURce:LIST subsystem

The SOURce:LIST subsystem contains all commands for defining lists and for handling of list files.

List files have the predefined file extension \*.lsw.

Refer to [Chapter 12.5.2, "Handling files in the default or in a specified directory"](#), on page 369 for general information on file handling in the default and in a specific directory.



- \*RST does not affect data lists.
- SCPI refers to the individual lists as segments.

**Example: Create an RF list and activate the list mode**

The following example shows a command sequence to create an RF list and to activate the list mode. Further hardware settings are not considered.

```
// Reset the instrument to start from an initial state
// Query the available list files in the default
// directory /var/user
```

```

// Select the list file or create it (if not existing)
*RST; *CLS
SOUR1:LIST:CAT?
// Response:- shows the name of available list files (if applicable)
SOUR1:LIST:SEL "/var/user/list1.lsw"

// Write the frequency/level/dwell time values in the selected list file
// existing data is overwritten
// Query the number of frequency/power/dwell time entries in the selected list
// Query the amount of free memory (in bytes) for list mode lists
SOUR1:LIST:FREQ 58 MHz, 61 MHz, 73 MHz, 86 MHz, 91 MHz, 92 MHz, 98 MHz
SOUR1:LIST:POW 13 dBm, 12 dBm, 5 dBm, 3 dBm, 0 dBm, 4 dBm, 6 dBm
SOUR1:LIST:DWEL:LIST 10000, 100000, 200000, 19000, 10000, 150000, 220000
SOUR1:LIST:FREQ:POIN?
// 7
SOUR1:LIST:POW:POINT?
// 7
SOUR1:LIST:DWEL:LIST:POIN?
// 7
SOUR1:LIST:FREE?
// 2147483647 (bytes of free memory)

// Use dwell times from list
// Configure the list mode parameters
// Enable RF output
SOUR1:LIST:MODE AUTO
SOUR1:LIST:TRIG:SOUR AUTO
SOUR1:LIST:DWEL:MODE "LIST"

OUTP1:STAT ON

// Use global dwell time
// Set only a part of the list (value pairs 3 to 5) to be processed
// Configure the list mode parameters using global dwell time
// Enable RF output
SOUR1:LIST:IND:START 2
SOUR1:LIST:IND:STOP 4
SOUR1:LIST:MODE AUTO
SOUR1:LIST:TRIG:SOUR AUTO
SOUR1:LIST:DWEL:LIST 500 ms
OUTP1:STAT ON

// Enable the list mode
// Trigger the list (depending on the mode, not needed with trigger
// mode AUTO); query the current index
// Reset the list to the starting point
SOUR1:FREQ:MODE LIST
SOUR1:LIST:TRIG:EXEC
SOUR1:LIST:RUNN?
SOUR1:LIST:IND?
// 3

```

```

// value changes when the value is queried again
SOUR1:LIST:RES

// For list mode STEP use the following commands
*RST; *CLS
// Change list mode to STEP
SOUR1:LIST:MODE STEP
// Activate RF Output1
OUTP1:STAT 1
// Activate the list mode
SOUR1:FREQ:MODE LIST
// For each step: select frequency/powerlevel pair as index from the list
SOUR1:LIST:IND 2
SOUR1:LIST:IND 3
SOUR1:LIST:IND 4

// Use the selected list for path B (with List Mode B default settings)
SOUR2:LIST:SEL "/var/user/list1.lsw"
OUTP2:STAT ON
SOUR2:FREQ:MODE LIST
SOUR2:LIST:IND?
// 2
// value changes when the value is queried again

// Deactivate the list mode
SOUR1:FREQ:MODE CW

```

### Example: List mode data exchange

The following example shows a command sequence to export a list (here the RF list created with the example before) into an ASCII file. Further hardware settings are not considered.

```

*RST; *CLS
LIST:DEXC:MODE EXP

// Set ASCII data parameters
// Set the ASCII file extension, the decimal separator
// and the column separator for the ASCII data
SOUR1:LIST:DEXC:AFIL:EXT CSV
SOUR1:LIST:DEXC:AFIL:SEP:DEC DOT
SOUR1:LIST:DEXC:AFIL:SEP:COL COMM

// Select source and destination path/directory
// Query available listfiles in default directory "/var/user"
SOUR1:LIST:CAT?
// list1
SOUR1:LIST:DEXC:AFIL:SEL "/var/user/list1ASCII"
SOUR1:LIST:DEXC:SEL "/var/user/list1"

// Export the list file data into the ASCII file

```

```
SOUR1:LIST:DEXC:EXEC
```

```
// Query the available ASCII files with extension .csv
```

```
SOUR1:LIST:DEXC:AFIL:CAT?
```

```
// Response: "list1ASCII"
```

```
// Deactivate the list mode
```

```
SOUR1:FREQ:MODE CW
```

- [List mode settings](#)..... 488
- [List mode file operation](#)..... 493
- [List mode data exchange](#)..... 496

### 12.15.6.1 List mode settings

With the following commands, you can create list mode data, select the trigger mode and determine the dwell time.

<a href="#">[:SOURCE&lt;hw&gt;]:LIST:DWELL</a> .....	488
<a href="#">[:SOURCE&lt;hw&gt;]:LIST:DWELL:MODE</a> .....	489
<a href="#">[:SOURCE&lt;hw&gt;]:LIST:DWELL:LIST</a> .....	489
<a href="#">[:SOURCE&lt;hw&gt;]:LIST:DWELL:LIST:POINTS?</a> .....	489
<a href="#">[:SOURCE&lt;hw&gt;]:LIST:FREQUENCY</a> .....	490
<a href="#">[:SOURCE&lt;hw&gt;]:LIST:FREQUENCY:POINTS?</a> .....	490
<a href="#">[:SOURCE&lt;hw&gt;]:LIST:INDEX</a> .....	490
<a href="#">[:SOURCE&lt;hw&gt;]:LIST:INDEX:START</a> .....	491
<a href="#">[:SOURCE&lt;hw&gt;]:LIST:INDEX:STOP</a> .....	491
<a href="#">[:SOURCE&lt;hw&gt;]:LIST:MODE</a> .....	491
<a href="#">[:SOURCE&lt;hw&gt;]:LIST:POWER</a> .....	491
<a href="#">[:SOURCE&lt;hw&gt;]:LIST:POWER:POINTS?</a> .....	492
<a href="#">[:SOURCE&lt;hw&gt;]:LIST:TRIGGER:EXECUTE</a> .....	492
<a href="#">[:SOURCE&lt;hw&gt;]:LIST:TRIGGER:SOURCE</a> .....	492
<a href="#">[:SOURCE&lt;hw&gt;]:LIST:RUNNING?</a> .....	493

---

#### **[[:SOURCE<hw>]:LIST:DWELL <Dwell>**

Sets the global dwell time. The instrument generates the signal with the frequency / power value pairs of each list entry for that particular period.

See also [Significant parameters and functions](#).

#### **Parameters:**

<Dwell>	float
	Range: 1E-3 to 100
	Increment: 1E-6
	*RST: 0.01

**Example:** See [Example "Create an RF list and activate the list mode"](#) on page 485.

**Manual operation:** See ["Global Dwell Time"](#) on page 143



---

**[ :SOURce<hw>]:LIST:DWELI:MODE <DwellMode>**

Selects the dwell time mode.

**Parameters:**

&lt;DwellMode&gt;

LIST | GLOBal

**LIST**

Uses the dwell time, specified in the data table for each value pair individually.

**GLOBal**

Uses a constant dwell time, set with command [ :

[SOURce<hw>\]:LIST:DWELI](#).

\*RST: GLOBal

**Example:**

See [Example"Create an RF list and activate the list mode"](#) on page 485.

**Manual operation:** See ["Dwell Time Mode"](#) on page 142

---

**[ :SOURce<hw>]:LIST:DWELI:LIST <Dwell>**

Enters the dwell time values in the selected list in  $\mu$ s.

**Parameters:**

&lt;Dwell&gt;

&lt;Dwell#1&gt;{, &lt;Dwell#2&gt;, ...} | block data

You can either enter the data as a list of numbers, or as binary block data. The list of numbers can be of any length, with the list entries separated by commas.

In binary block format, 8 (4) bytes are always interpreted as a floating-point number with double accuracy. See also :

[FORMat \[ :DATA\]](#) on page 398 for more details.

**Example:**

See [Example"Create an RF list and activate the list mode"](#) on page 485.

**Manual operation:** See ["Edit List Mode Data"](#) on page 148

---

**[ :SOURce<hw>]:LIST:DWELI:LIST:POINTs?**

Queries the number (points) of dwell time entries in the selected list.

**Return values:**

&lt;Points&gt;

integer

Range: 0 to INT\_MAX

\*RST: 0

**Example:**

See [Example"Create an RF list and activate the list mode"](#) on page 485.

**Usage:**

Query only

**[[:SOURce<hw>]:LIST:FREQuency <Frequency>**

Enters the frequency values in the selected list.

**Parameters:**

<Frequency> <Frequency#1>{, <Frequency#2>, ...} | block data  
 You can either enter the data as a list of numbers, or as binary block data.  
 The list of numbers can be of any length, with the list entries separated by commas.  
 In binary block format, 8 (4) bytes are always interpreted as a floating-point number with double accuracy.  
 See also :FORMat [ :DATA].  
 Range: 300 kHz to RFmax (depends on the installed options)

**Example:** See [Example"Create an RF list and activate the list mode"](#) on page 485.

**Manual operation:** See ["Edit List Mode Data"](#) on page 148

**[[:SOURce<hw>]:LIST:FREQuency:POINts?**

Queries the number (points) of frequency entries in the selected list.

**Return values:**

<Points> integer  
 Range: 0 to INT\_MAX  
 \*RST: 0

**Example:** See [Example"Create an RF list and activate the list mode"](#) on page 485.

**Usage:** Query only

**[[:SOURce<hw>]:LIST:INDex <Index>**

Sets the list index in LIST:MODE STEP.

After the trigger signal, the instrument processes the frequency and level settings of the selected index.

**Parameters:**

<Index> integer  
 \*RST: 0

**Example:** See [Example"Create an RF list and activate the list mode"](#) on page 485.

**Manual operation:** See ["Current Index"](#) on page 142

---

```
[:SOURce<hw>]:LIST:INDEX:START <Start>
```

```
[:SOURce<hw>]:LIST:INDEX:STOP <Stop>
```

Sets the start and stop index of the index range which defines a subgroup of frequency/level value pairs in the current list.

**Parameters:**

<Stop> integer  
 Index range  
 Only values inside this range are processed in list mode  
 Range: 0 to list length  
 \*RST: 0

**Example:** See [Example "Create an RF list and activate the list mode"](#) on page 485.

**Manual operation:** See ["List Range from/to"](#) on page 144

---

```
[:SOURce<hw>]:LIST:MODE <Mode>
```

Sets the list mode.

The instrument processes the list according to the selected mode and trigger source. See [LIST:TRIG:SOUR AUTO](#), [SING](#) or [EXT](#) for the description of the trigger source settings.

**Parameters:**

<Mode> AUTO | STEP  
**AUTO**  
 Each trigger event triggers a complete list cycle.  
**STEP**  
 Each trigger event triggers only one step in the list processing cycle. The list is processed in ascending order.  
 \*RST: AUTO

**Example:** See [Example "Create an RF list and activate the list mode"](#) on page 485.

**Manual operation:** See ["Mode"](#) on page 142

---

```
[:SOURce<hw>]:LIST:POWER <Power>
```

Enters the level values in the selected list. The number of level values must correspond to the number of frequency values. Existing data is overwritten.

**Parameters:**

<Power> <Power#1>{, <Power#2>, ...} | block data  
 You can either enter the data as a list of numbers, or as binary block data.  
 The list of numbers can be of any length, with the list entries separated by commas.

In binary block format, 8 (4) bytes are always interpreted as a floating-point number with double accuracy.

See also : [FORMat \[ : DATA \]](#).

Range: depends on the installed options

Default unit: dBm

**Example:** See [Example "Create an RF list and activate the list mode"](#) on page 485.

**Manual operation:** See ["Edit List Mode Data"](#) on page 148

### **[ :SOURce<hw> ]:LIST:POWer:POINts?**

Queries the number (points) of level entries in the selected list.

#### **Return values:**

<Points> integer  
 Range: 0 to INT\_MAX  
 \*RST: 0

**Example:** See [Example "Create an RF list and activate the list mode"](#) on page 485.

**Usage:** Query only

### **[ :SOURce<hw> ]:LIST:TRIGger:EXECute**

Starts the processing of a list in list mode.

**Example:** See [Example "Create an RF list and activate the list mode"](#) on page 485.

**Usage:** Event

**Manual operation:** See ["Execute Single"](#) on page 143

### **[ :SOURce<hw> ]:LIST:TRIGger:SOURce <Source>**

Selects the trigger source for processing lists.

The designation of the parameters correspond to those in sweep mode. SCPI standard uses other designations for the parameters, which are also accepted by the instrument. The SCPI designation should be used if compatibility is an important consideration. For an overview, see the following table:

Rohde & Schwarz parameter	SCPI parameter	Applies to the list mode parameters:
AUTO	IMMEDIATE	[ :SOURce<hw> ] :LIST:MODE AUTO
SINGLE	BUS	[ :SOURce<hw> ] :LIST:MODE AUTO or [ :SOURce<hw> ] :LIST:MODE STEP
EXTERNAL	EXTERNAL	[ :SOURce<hw> ] :LIST:MODE AUTO or [ :SOURce<hw> ] :LIST:MODE STEP

**Parameters:**

&lt;Source&gt;

AUTO | IMMEDIATE | SINGLE | BUS | EXTERNAL

**AUTO|IMMEDIATE**

The trigger is free-running, i.e. the trigger condition is fulfilled continuously. The selected list is restarted as soon as it is finished.

**SINGLE|BUS**

The list is triggered by the command [ :SOURce<hw> ] :LIST:TRIGGER:EXECUTE. The list is executed once.

**EXTERNAL**

The list is triggered externally and executed once.

\*RST: AUTO

**Example:**

See [Example "Create an RF list and activate the list mode"](#) on page 485.

**Manual operation:** See ["Mode"](#) on page 142

**[ :SOURce<hw> ] :LIST:RUNNING?**

Queries the current state of the list mode.

**Return values:**

&lt;State&gt; 1 | ON | 0 | OFF

**1**

Signal generation based on the list mode is active.

**Example:**

See [Example "Create an RF list and activate the list mode"](#) on page 485.

**Usage:**

Query only

**12.15.6.2 List mode file operation**

The following section covers basic commands to file handling in list mode.

[ :SOURce<hw> ] :LIST:CATALOG?	494
[ :SOURce<hw> ] :LIST:DELETE	494
[ :SOURce<hw> ] :LIST:DELETE:ALL	494

<a href="#">[:SOURCE&lt;hw&gt;]:LIST:FREE?</a> .....	495
<a href="#">[:SOURCE&lt;hw&gt;]:LIST:RESet</a> .....	495
<a href="#">[:SOURCE&lt;hw&gt;]:LIST:SElect</a> .....	495

---

### **[:SOURCE<hw>]:LIST:CATalog?**

Queries the available list files in the specified directory.

#### **Return values:**

<Catalog>                      string  
    List of list filenames, separated by commas

**Example:**                      See [Example "Create an RF list and activate the list mode"](#) on page 485.

**Usage:**                         Query only

**Manual operation:**    See "[List Mode Data](#)" on page 144

---

### **[:SOURCE<hw>]:LIST:DELeTe <Filename>**

Deletes the specified list.

#### **Setting parameters:**

<Filename>                      string  
    Filename or complete file path; file extension is optional.

**Example:**                      See [\[:SOURCE<hw>\]:LIST:DELeTe:ALL](#) on page 494.

**Usage:**                         Setting only

**Manual operation:**    See "[List Mode Data](#)" on page 144

---

### **[:SOURCE<hw>]:LIST:DELeTe:ALL**

Deletes all lists in the set directory.

This command can only be executed, if:

- No list file is selected.
- List mode is disabled.

**Example:**

```

SOUR1:LIST:CAT?
// list,my_list
SOUR1:LIST:DEL "/var/user/list1"
SOUR1:LIST:CAT?
// my_list
SOUR1:FREQ:MODE?
// LIST
SOUR1:LIST:SEL?
// /var/user/my_list.lsw
//deactivate list mode
SOUR1:FREQ:MODE CW
SOUR1:LIST:DELeTe:ALL
SOUR1:LIST:CAT?
// -
// all list files are deleted

```

**Usage:** Event

**Manual operation:** See "[List Mode Data](#)" on page 144

#### **[:SOURce<hw>]:LIST:FREE?**

Queries the amount of free memory (in bytes) for list mode lists.

**Return values:**

<Free>	integer
	Range: 0 to INT_MAX
	*RST: 0

**Example:** See [Example"Create an RF list and activate the list mode"](#) on page 485.

**Usage:** Query only

#### **[:SOURce<hw>]:LIST:RESet**

Jumps to the beginning of the list.

**Example:** See [Example"Create an RF list and activate the list mode"](#) on page 485.

**Usage:** Event

**Manual operation:** See "[Reset](#)" on page 143

#### **[:SOURce<hw>]:LIST:SElect <Filename>**

Selects or creates a data list in list mode.

If the list with the selected name does not exist, a new list is created.

**Parameters:**

<Filename> string  
Filename or complete file path; file extension can be omitted.

**Example:** See [Example "Create an RF list and activate the list mode"](#) on page 485.

**Manual operation:** See ["List Mode Data"](#) on page 144  
See ["Functions for handling of data lists"](#) on page 217

**12.15.6.3 List mode data exchange**

With the following commands, you can configure lists in ASCII format and export or import them accordingly.

<code>[ :SOURce&lt;hw&gt; ] :LIST:DEXChange:AFILe:CATalog?</code>	496
<code>[ :SOURce&lt;hw&gt; ] :LIST:DEXChange:EXECute</code>	496
<code>[ :SOURce&lt;hw&gt; ] :LIST:DEXChange:AFILe:EXTension</code>	497
<code>[ :SOURce&lt;hw&gt; ] :LIST:DEXChange:AFILe:SElect</code>	497
<code>[ :SOURce&lt;hw&gt; ] :LIST:DEXChange:AFILe:SEParator:COLumn</code>	497
<code>[ :SOURce&lt;hw&gt; ] :LIST:DEXChange:AFILe:SEParator:DECimal</code>	497
<code>[ :SOURce&lt;hw&gt; ] :LIST:DEXChange:MODE</code>	498
<code>[ :SOURce&lt;hw&gt; ] :LIST:DEXChange:SElect</code>	498

**[ :SOURce<hw> ] :LIST:DEXChange:AFILe:CATalog?**

Queries the available ASCII files for export or import of list mode data in the current or specified directory.

**Return values:**

<Catalog> string  
List of ASCII files \* .txt or \* .csv, separated by commas.

**Example:** See [Example "List mode data exchange"](#) on page 487.

**Usage:** Query only

**Manual operation:** See ["Select \(ASCII\) Source/Select \(ASCII\) Destination"](#) on page 97

**[ :SOURce<hw> ] :LIST:DEXChange:EXECute**

Executes the import or export of the selected list file, according to the previously set transfer direction with command `[ :SOURce<hw> ] :LIST:DEXChange:MODE`

**Example:** See [Example "List mode data exchange"](#) on page 487.

**Usage:** Event

**Manual operation:** See ["Import / Export"](#) on page 97



---

**[:SOURce<hw>]:LIST:DEXChange:AFILe:EXTension <Extension>**

Determines the extension of the ASCII file for import or export, or to query existing files.

**Parameters:**

<Extension>           TXT | CSV  
\*RST:                TXT

**Example:**            See [Example"List mode data exchange"](#) on page 487.

**Manual operation:** See ["ASCII File Settings"](#) on page 96

---

**[:SOURce<hw>]:LIST:DEXChange:AFILe:SElect <Filename>**

Selects the ASCII file to be imported or exported.

**Parameters:**

<Filename>            string  
Filename or complete file path; file extension can be omitted.

**Example:**            See [Example"List mode data exchange"](#) on page 487.

**Manual operation:** See ["Select \(ASCII\) Source/Select \(ASCII\) Destination"](#) on page 97

---

**[:SOURce<hw>]:LIST:DEXChange:AFILe:SEParator:COLumn <Column>**

Selects the separator between the frequency and level column of the ASCII table.

**Parameters:**

<Column>            TABulator | SEMicolon | COMMa | SPACe  
\*RST:                COMMa

**Example:**            See [Example"List mode data exchange"](#) on page 487.

**Manual operation:** See ["ASCII File Settings"](#) on page 96

---

**[:SOURce<hw>]:LIST:DEXChange:AFILe:SEParator:DECimal <Decimal>**

Sets "." (decimal point) or "," (comma) as the decimal separator used in the ASCII data with floating-point numerals.

**Parameters:**

<Decimal>            DOT | COMMa  
\*RST:                DOT

**Example:**            See [Example"List mode data exchange"](#) on page 487.

**Manual operation:** See ["ASCII File Settings"](#) on page 96

---

**[ :SOURce<hw>]:LIST:DEXChange:MODE <Mode>**

Determines the import or export of a list.

Specify the source or destination file with the command `[ :SOURce<hw>]:LIST:DEXChange:SElect`.

**Parameters:**

<Mode>                   IMPort | EXPort  
\*RST:                   IMPort

**Example:**               See [Example "List mode data exchange"](#) on page 487.

**Manual operation:**   See ["Mode"](#) on page 96

**[ :SOURce<hw>]:LIST:DEXChange:SElect <Filename>**

Selects the ASCII file for import or export, containing a list.

**Parameters:**

<Filename>               string  
Filename or complete file path; file extension can be omitted.

**Example:**               See [Example "List mode data exchange"](#) on page 487.

**Manual operation:**   See ["Select Source/Select ASCII Destination"](#) on page 97

## 12.15.7 SOURce:NOISe subsystem

The SOURce:NOISe subsystem contains the commands for:

- Setting the noise modulation signal. The noise generator is optional.

**Example: Configuring the noise generator**

```
SOURce1:NOISe:DIStributioN GAUSS
SOURce1:NOISe:BANdwidth 10000000

SOURce1:LFOutput1:SOURce NOIS
SOURce1:LFOutput1:STATe 1

SOURce1:NOISe:LEVel:RELative?
// -83.86
SOURce1:NOISe:LEVel:ABSolute?
// -13.86
```

- [Noise generator](#).....499

### 12.15.7.1 Noise generator

<code>[:SOURce&lt;hw&gt;]:NOISE:BANDwidth BWIDTH</code> .....	499
<code>[:SOURce&lt;hw&gt;]:NOISE:DISTRibution</code> .....	499
<code>[:SOURce&lt;hw&gt;]:NOISE:LEVel:RELative?</code> .....	499
<code>[:SOURce&lt;hw&gt;]:NOISE:LEVel[:ABSolute]?</code> .....	499

---

#### `[:SOURce<hw>]:NOISE:BANDwidth|BWIDTH <BWidth>`

Sets the noise level in the system bandwidth when bandwidth limitation is enabled.

##### Parameters:

<code>&lt;BWidth&gt;</code>	float
Range:	100E3 to 10E6
Increment:	100E3
*RST:	100E3

**Example:** See [Example "Configuring the noise generator"](#) on page 498.

**Manual operation:** See ["Bandwidth"](#) on page 106

---

#### `[:SOURce<hw>]:NOISE:DISTRibution <Distribution>`

Sets the distribution of the noise power density.

##### Parameters:

<code>&lt;Distribution&gt;</code>	GAUSs   EQUal
*RST:	GAUSs

**Example:** See [Example "Configuring the noise generator"](#) on page 498.

**Manual operation:** See ["Distribution"](#) on page 106

---

#### `[:SOURce<hw>]:NOISE:LEVel:RELative?`

Queries the level of the noise signal per Hz in the total bandwidth.

##### Return values:

<code>&lt;Relative&gt;</code>	float
Range:	-149.18 to -52.67
Increment:	0.1
*RST:	-69.84

**Example:** See [Example "Configuring the noise generator"](#) on page 498.

**Usage:** Query only

**Manual operation:** See ["Noise Density"](#) on page 109

---

#### `[:SOURce<hw>]:NOISE:LEVel[:ABSolute]?`

Queries the level of the noise signal in the system bandwidth within the enabled bandwidth limitation.

**Return values:**

<Absolute> float  
 Noise level within the bandwidth limitation  
 \*RST: 3.84 MHz

**Example:** See [Example "Configuring the noise generator"](#) on page 498.

**Usage:** Query only

**Manual operation:** See ["Noise Level"](#) on page 109

## 12.15.8 SOURce:PGEN subsystem

The PGEN subsystem contains the commands for setting output of the pulse modulation signal.

### Example: Using pulse generator as source for pulse modulation

```
// select pulse generator as source for pulse modulation
// enable pulse modulation
SOURce1:PULM:SOURce INT
SOURce1:PULM:STATE 1
// pulse generator and signal output are also activated
SOURce1:PGENerator:STATE?
// 1
SOURce1:PGENerator:OUTPut:STATE?
// 1
PGENerator:OUTPut:POLarity NORMal
// to disable pulse generator
SOURce1:PGENerator:STATE 0
// activate the pulse modulation of the RF carrier
SOURce1:PULM:STATE 1
```

```
[SOURce<hw>]:PGENerator:OUTPut:POLarity..... 500
[SOURce<hw>]:PGENerator:OUTPut[:STATE].....501
[SOURce<hw>]:PGENerator:STATE..... 501
```

---

### [SOURce<hw>]:PGENerator:OUTPut:POLarity <Polarity>

Sets the polarity of the pulse output signal.

**Parameters:**

<Polarity> NORMal | INVerted

**NORMal**

Outputs the pulse signal during the pulse width, that means during the high state.

**INVerted**

Inverts the pulse output signal polarity. The pulse output signal is suppressed during the pulse width, but provided during the low state.

\*RST:        NORMal

**Example:**        See [Example"Using pulse generator as source for pulse modulation"](#) on page 500.

**Manual operation:**    See ["Pulse Output Polarity"](#) on page 91

**[:SOURce<hw>]:PGENERator:OUTPut[:STATe] <State>**

Activates the output of the pulse modulation signal.

**Parameters:**

<State>            1 | ON | 0 | OFF  
\*RST:            0

**Example:**        See [Example"Using pulse generator as source for pulse modulation"](#) on page 500.

**Manual operation:**    See ["Pulse Output State"](#) on page 90

**[:SOURce<hw>]:PGENERator:STATe <State>**

Enables the output of the video/sync signal.

If the pulse generator is the current modulation source, activating the pulse modulation automatically activates the signal output and the pulse generator.

**Parameters:**

<State>            1 | ON | 0 | OFF  
\*RST:            0

**Example:**        See [Example"Using pulse generator as source for pulse modulation"](#) on page 500.

## 12.15.9 SOURce:PHASe subsystem

This subsystem contains the commands for adjusting the phase of the RF output signal relative to a reference signal of the same frequency.

**Example: Programming Example**

```
// change the phase relative to the current phase
SOURce1:PHASe 2 DEG
// adopt the setting as the current phase
SOURce1:PHASe:REFerence
```

The following commands are available:

[\[:SOURce<hw>\]:PHASe.....](#) 502  
[\[:SOURce<hw>\]:PHASe:REFerence.....](#) 502

**[ :SOURce<hw>]:PHASe <Phase>**

Sets the phase variation relative to the current phase.

**Parameters:**

<Phase>	float
	Range: -36000 to 36000
	Increment: 0.001
	*RST: 0
	Default unit: DEG

**Example:** See [Example"Programming Example"](#) on page 501.

**Manual operation:** See ["Delta Phase"](#) on page 66

**[ :SOURce<hw>]:PHASe:REfERENCE**

Assigns the value set with command `[ :SOURce<hw> ] : PHASe` as the reference phase.

**Example:** See [Example"Programming Example"](#) on page 501.

**Usage:** Event

**Manual operation:** See ["Reset Delta Phase Display"](#) on page 66

**12.15.10 SOURce:POWer subsystem**

The `SOURce:POWer` subsystem contains the commands for setting the output level, level control and level correction of the RF signal.

The default units are dBm. To change the units, perform one of the following:

- Enter the unit after the numerical value  
Example: `:POW 0.5V`
- Set the unit with the command `:UNIT:POWer`.

**Example: Power configuration**

```
SOURce1:POWer;CW?
// Response -30
SOURce1:POWer:CW -25
SOURce1:POWer:OFFSet?
// Response 0
SOURce1:POWer:OFFSet 2

SOURce1:POWer:STEP:MODE?
// Response: DEC
SOURce1:POWer:STEP:MODE USER
SOURce1:POWer:STEP:INCRement 2
SOURce1:POWer:LEVel:IMMediate:AMPLitude UP
```

**Example: Configure the settings for NRP power control**

The example shows a command sequence to configure the parameters for a closed loop power control setup. It is assumed that you have set up the measurement with the amplifier, external coupler, the power sensor and the R&S SMB100B as described in [Chapter 7.4.4, "NRP power control"](#), on page 176.

```
// Reset the instrument to start from an initial state
*RST; *CLS

// Select the sensor used for nrp power control
// that is e.g., connected to a second USB interface

SOURce1:POWer:SPC:SElect SENS2

// Configure the nrp power control settings
// use the measured peak power for power control
// set the unit dBm for the target level value
// set the target level, e.g. - 10 dBmM
// use the measured target level as reference level
// select single measurement mode to acquire one level value
// set the capture range for the control loop, e.g. +/- 15 dB
// set a time delay between the sensor readings, e.g. 2 ms

SOURce1:POWer:SPC:PEAK ON
SENSE1:UNIT:POWer DMB
SOURce1:POWer:SPC:TARGet -10
SOURce1:POWer:SPC:MEASure
SOURce1:POWer:SPC:MODE SINGLE
SOURce1:POWer:SPC:CRANge 15
SOURce1:POWer:SPC:DELay 2 ms

// Enable NRP power control measurement
// switch on RF output
// start the single measurement manually

Output1:STATe 1
SOURce1:POWer:SPC:STATe ON
SOURce1:POWer:SPC:SINGLE

// Query if the power control works properly
:SOURce1:POWer:SPC:WARning?
// Response: 1 -> power control doew not work as expected
```

<a href="#">[:SOURce&lt;hw&gt;]:POWer:ALC[:STATe]</a> .....	504
<a href="#">[:SOURce&lt;hw&gt;]:POWer:ALC:DSEnsitivity</a> .....	505
<a href="#">[:SOURce&lt;hw&gt;]:POWer:ALC:SONCe</a> .....	505
<a href="#">[:SOURce&lt;hw&gt;]:POWer:ATTenuation:RFOff:MODE</a> .....	505
<a href="#">[:SOURce&lt;hw&gt;]:POWer:EMF:STATe</a> .....	506
<a href="#">[:SOURce&lt;hw&gt;]:POWer:LBEHaviour</a> .....	506
<a href="#">[:SOURce&lt;hw&gt;]:POWer:LIMit[:AMPLitude]</a> .....	506

<code>[:SOURce&lt;hw&gt;]:POWer:MANual</code> .....	506
<code>[:SOURce&lt;hw&gt;]:POWer:MODE</code> .....	507
<code>[:SOURce&lt;hw&gt;]:POWer:POWer</code> .....	507
<code>[:SOURce&lt;hw&gt;]:POWer:START</code> .....	508
<code>[:SOURce&lt;hw&gt;]:POWer:STOP</code> .....	508
<code>[:SOURce&lt;hw&gt;]:POWer:SPC:CRANge</code> .....	508
<code>[:SOURce&lt;hw&gt;]:POWer:SPC:DELAy</code> .....	509
<code>[:SOURce&lt;hw&gt;]:POWer:SPC:MEASure</code> .....	509
<code>[:SOURce&lt;hw&gt;]:POWer:SPC:MODE</code> .....	509
<code>[:SOURce&lt;hw&gt;]:POWer:SPC:PEAK</code> .....	510
<code>[:SOURce&lt;hw&gt;]:POWer:SPC:SELEct</code> .....	510
<code>[:SOURce&lt;hw&gt;]:POWer:SPC:SINGLe</code> .....	510
<code>[:SOURce&lt;hw&gt;]:POWer:SPC:STATe</code> .....	510
<code>[:SOURce&lt;hw&gt;]:POWer:SPC:TARGet</code> .....	511
<code>[:SOURce&lt;hw&gt;]:POWer:SPC:WARNIing?</code> .....	511
<code>[:SOURce&lt;hw&gt;]:POWer:STEP:MODE</code> .....	511
<code>[:SOURce&lt;hw&gt;]:POWer:STEP[:INCRement]</code> .....	512
<code>[:SOURce&lt;hw&gt;]:POWer[:LEVel][:IMMediate]:OFFSet</code> .....	512
<code>[:SOURce&lt;hw&gt;]:POWer[:LEVel][:IMMediate]:RCL</code> .....	513
<code>[:SOURce&lt;hw&gt;]:POWer[:LEVel][:IMMediate][:AMPLitude]</code> .....	513
<code>[:SOURce&lt;hw&gt;]:POWer[:LEVel][:IMMediate]:REFLevel</code> .....	514
<code>[:SOURce&lt;hw&gt;]:POWer:RANGE:LOWer?</code> .....	514
<code>[:SOURce&lt;hw&gt;]:POWer:RANGE:UPPer?</code> .....	514
<code>[:SOURce]:POWer:WIGNore</code> .....	514

---

### `[:SOURce<hw>]:POWer:ALC[:STATe] <State>`

**Parameters:**

&lt;State&gt;

0 | OFF | AUTO | 1 | ON | ONTable | PRESet | OFFTable

**AUTO**

Adjusts the output level to the operating conditions automatically.

**1|ON**

Activates internal level control permanently.

**OFFTable**

Controls the level using attenuation values of the internal ALC table.

**0|OFF**

R&amp;S SMB100B RF instruments only

Deactivates the ALC, but allows you to recalibrate the level at each frequency and level change. The value remains up to the next change.

**ONTable**

Starts with the attenuation setting from the table and continues with automatic level control.

**\*RST:** AUTO**Example:**`POW:ALC ON`

Activates internal level control.



**Manual operation:** See ["State"](#) on page 157

---

**[:SOURce<hw>]:POWer:ALC:DSENSitivity <Sensitivity>**

Sets the sensitivity of the ALC detector.

**Parameters:**

<Sensitivity>

AUTO | FIXed | LOW | MEDium | HIGH

**AUTO**

Selects the optimum sensitivity automatically.

**LOW|MEDium|HIGH**

Sets either low, medium or high sensitivity.

**FIXed**

Fixes the internal level detector.

\*RST: AUTO

**Example:**

POW:ALC:DSEN FIX

**Manual operation:** See ["Detector Sensitivity"](#) on page 158

---

**[:SOURce<hw>]:POWer:ALC:SONCe**

Activates level control for correction purposes temporarily.

**Example:**

POW:ALC OFF

Deactivates automatic level control at the RF output.

POW:ALC:SONC

Executes level control (once).

**Usage:**

Event

**Manual operation:** See ["Readjust"](#) on page 65

---

**[:SOURce<hw>]:POWer:ATTenuation:RFOff:MODE <Mode>**

Selects the state the attenuator is to assume if the RF signal is switched off.

**Parameters:**

<Mode>

UNCHanged | FATTenuation

**FATTenuation**

The step attenuator switches to maximum attenuation

**UNCHanged**

Retains the current setting and keeps the output impedance constant during RF off.

\*RST: n.a. (factory preset: FATTenuation)

**Example:**

SOURce1:POWer:ATTenuation:RFOff:MODE

FATTenuation

uses maximum attenuation when the RF output is turned off.

**Manual operation:** See ["RF OFF Mode"](#) on page 155

**[[:SOURce<hw>]:POWER:EMF:STATe <State>**

Displays the signal level as voltage of the EMF. The displayed value represents the voltage over a 50 Ohm load.

**Parameters:**

<State> 1 | ON | 0 | OFF  
 \*RST: n.a. (factory preset: 0)

**Example:**

POW:EMF:STAT 1  
 Activates voltage level display.

**Manual operation:** See "[Display Level as Voltage of EMF](#)" on page 240

**[[:SOURce<hw>]:POWER:LBEHaviour <Behaviour>**

Selects the level behavior at the RF output over time.

**Parameters:**

<Behaviour> AUTO | UNINterrupted | MONotone | CVSWr | USER | CPHase  
**UNINterrupted|MONotone**  
 Uninterrupted level settings and strictly monotone modes.  
**CWSWr**  
 Constant VSWR  
 \*RST: AUTO

**Example:**

SOURce1:POWER:LBEHaviour AUTO

**Manual operation:** See "[Setting Characteristics](#)" on page 64

**[[:SOURce<hw>]:POWER:LIMit[:AMPLitude] <Amplitude>**

Limits the maximum RF output level in CW and sweep mode.

It does not influence the "Level" display or the response to the query `[[:SOURce<hw>]:POWER[:LEVel] [:IMMediate] [:AMPLitude]`.

**Parameters:**

<Amplitude> float  
 Range: depends on the installed options  
 Increment: 0.01  
 \*RST: n.a. (factory preset: 30)

**Example:**

SOURce1:POWER:LIMit:AMPLitude 10

**Manual operation:** See "[Limit](#)" on page 63

**[[:SOURce<hw>]:POWER:MANual <Manual>**

Sets the level for the subsequent sweep step if `SWE:POW:MODE MAN`.

Use a separate command for each sweep step.

**Parameters:**

<Manual> float

You can select any level within the setting range, where:

START is set with `[ :SOURce<hw> ] :POWER:START`

STOP is set with `[ :SOURce<hw> ] :POWER:STOP`

OFFSet is set with `[ :SOURce<hw> ] :POWER [ :LEVel ] [ :IMMediate ] :OFFSet`

Range: (START + OFFSet) to (STOP + OFFSet)

Increment: 0.01

Default unit: dBm

**Example:** See [Example "Setup an RF frequency or power sweep"](#) on page 520

**Manual operation:** See ["Current Level"](#) on page 132

**[ :SOURce<hw> ] :POWER:MODE <Mode>**

Selects the operating mode of the instrument to set the output level.

**Parameters:**

<Mode> CW | FIXed | SWEep

**CW|FIXed**

Operates at a constant level.

CW and FIXed are synonyms.

To set the output level value, use the command `[ :SOURce<hw> ] :POWER [ :LEVel ] [ :IMMediate ] [ :AMPLitude ]`.

**SWEep**

Sets sweep mode.

Set the range and current level with the commands:

`[ :SOURce<hw> ] :POWER:START` and `[ :SOURce<hw> ] :POWER:STOP`,

`[ :SOURce<hw> ] :POWER:MANual`.

\*RST: CW

**Example:** See [Example "Setup an RF frequency or power sweep"](#) on page 520

**Manual operation:** See ["State \(RF level sweep\)"](#) on page 131  
See ["State \(RF frequency / level sweep\)"](#) on page 132

**[ :SOURce<hw> ] :POWER:POWER <Power>**

Sets the level **at the RF output** connector.

This value does not consider a specified offset.

The command `[ :SOURce<hw> ] :POWer [ :LEVel ] [ :IMMediate ] [ :AMPLitude ]` sets the level of the "Level" display, that means the level containing offset.

See ["RF frequency and level display with a downstream instrument"](#) on page 58.

**Parameters:**

<Power> float  
Level at the RF output, without level offset  
Range: See specifications document.  
Increment: 0.01  
Default unit: dBm

**Example:**

```
SOURce1:POWer:POWer 15
// sets the level at the RF output.
```

**Manual operation:** See ["Amplitude"](#) on page 63  
See ["Generator Settings used for Measurement"](#) on page 168

`[ :SOURce<hw> ] :POWer:STARt <Start>`

`[ :SOURce<hw> ] :POWer:STOP <Stop>`

Sets the RF start/stop level in sweep mode.

**Parameters:**

<Stop> float  
Sets the setting range calculated as follows:  
(Level\_min + OFFSet) to (Level\_max + OFFSet)  
Where the values are set with the commands:  
`[ :SOURce<hw> ] :POWer [ :LEVel ] [ :IMMediate ] :OFFSet`  
`[ :SOURce<hw> ] :POWer:STARt`  
`[ :SOURce<hw> ] :POWer:STOP`  
Range: Minimum level to maximum level  
\*RST: -30 (Start)/ -10 (Stop)  
Default unit: dBm

**Example:** See ["Example"Setup an RF frequency or power sweep"](#) on page 520

**Manual operation:** See ["Start Level / Stop Level"](#) on page 139

`[ :SOURce<hw> ] :POWer:SPC:CRANge <PowCntrlCRANge>`

Defines the capture range of the power control system.

Within the range:

*Target Level +/- Catch Range*

the power control locks and tries to achieve the target level. Readings outside the range are not considered.

**Parameters:**

<PowCntrlCRange> float  
 Range: 0 to 50  
 Increment: 0.01  
 \*RST: 30

**Example:** See [Example"Configure the settings for NRP power control"](#) on page 503

**Manual operation:** See ["Catch Range +/-"](#) on page 179

**[:SOURce<hw>]:POWER:SPC:DELay <PowCntrlDelay>**

Sets a waiting time for the generator to adjust the output level. After the delay time has elapsed, the power sensor measures the next value.

**Parameters:**

<PowCntrlDelay> integer  
 Range: 0 to 1000  
 \*RST: 0

**Example:** See [Example"Configure the settings for NRP power control"](#) on page 503

**Manual operation:** See ["Delay Time"](#) on page 179

**[:SOURce<hw>]:POWER:SPC:MEASure**

Sets the measured power value as reference level.

**Example:** See [Example"Configure the settings for NRP power control"](#) on page 503

**Usage:** Event

**Manual operation:** See ["Take Measurement as Target Level"](#) on page 178

**[:SOURce<hw>]:POWER:SPC:MODE <ControlMode>**

Selects the measurement mode for the power sensor.

**Parameters:**

<ControlMode> AUTO | SINGle  
**AUTO**  
 Measures the level values continuously.  
**SINGle**  
 Executes one measurement, triggered by the command `[ :SOURce<hw> ] :POWER:SPC:SINGle` on page 510.  
 \*RST: AUTO

**Example:** See [Example"Configure the settings for NRP power control"](#) on page 503

**Manual operation:** See ["Mode"](#) on page 179

---

**[[:SOURce<hw>]:POWER:SPC:PEAK <PowCntrlPeak>**

Activates power control by means of the peak power values, provided the power sensor supports this function.

**Parameters:**

<PowCntrlPeak> 1 | ON | 0 | OFF  
\*RST: 0

**Example:** See [Example"Configure the settings for NRP power control"](#) on page 503

---

**[[:SOURce<hw>]:POWER:SPC:SElect <PowCntrlSelect>**

Selects the power sensor used for power control.

**Parameters:**

<PowCntrlSelect> SENS1 | SENS2 | SENS3 | SENS4 | SENSor1 | SENSor2 |  
SENSor3 | SENSor4  
\*RST: SENS1

**Example:** See [Example"Configure the settings for NRP power control"](#) on page 503

**Manual operation:** See ["Sensor"](#) on page 178

---

**[[:SOURce<hw>]:POWER:SPC:SINGle**

Triggers the power sensor to measure the power value once.

**Usage:** Event

**Manual operation:** See ["Execute Single"](#) on page 179

---

**[[:SOURce<hw>]:POWER:SPC:STATe <PowCntrlState>**

Starts power control using the selected sensor. The control loop periodically adjusts the output level of the signal generator. After switching off, the running loop is completed.

**Parameters:**

<PowCntrlState> 1 | ON | 0 | OFF  
\*RST: 0

**Example:** See [Example"Configure the settings for NRP power control"](#) on page 503

**Manual operation:** See ["State"](#) on page 178

**[ :SOURce<hw>]:POWER:SPC:TARGET <PowCntrlTarget>**

Sets the target level required at the DUT. To define the unit of the power value, use command [:UNIT:POWer](#) on page 572.

**Parameters:**

<PowCntrlTarget> float  
 Range: -50 to 30  
 Increment: 0.01  
 \*RST: -10

**Example:** See [Example"Configure the settings for NRP power control"](#) on page 503

**Manual operation:** See ["Target Level"](#) on page 178

**[ :SOURce<hw>]:POWER:SPC:WARNING?**

Queries if the activated power control works properly.

If the power control does not work, the query returns warning state 1. On the screen, the R&S SMB100B indicates a warning icon.

**Return values:**

<WarningState> 1 | ON | 0 | OFF  
 \*RST: 0

**Example:** See [Example"Configure the settings for NRP power control"](#) on page 503.

**Usage:** Query only

**[ :SOURce<hw>]:POWER:STEP:MODE <Mode>**

Defines the type of step width to vary the RF output power step-by-step with the commands [POW UP](#) or [POW DOWN](#).

**Parameters:**

<Mode> DECimal | USER

**DECimal**

Increases or decreases the level in steps of ten.

**USER**

Increases or decreases the level in increments, determined with the command [\[:SOURce<hw>\]:POWER:STEP\[:INCRement\]](#).

\*RST: DECimal

**Example:** See [Example"Power configuration"](#) on page 502.

**Manual operation:** See ["Variation Active"](#) on page 61

**[[:SOURce<hw>]:POWER:STEP[:INCREMENT] <Increment>**

Specifies the step width in the appropriate path for `POW:STEP:MODE USER`.

To adjust the level step-by-step with this increment value, use the command `POW UP`, or `POW DOWN`.

**Note:** The command also sets "Variation Step" in the manual control, that means the user-defined step width for setting the level with the rotary knob or the [Up/Down] arrow keys.

**Parameters:**

<Increment> float  
 Range: 0 to 200  
 Increment: 0.01  
 \*RST: 1  
 Default unit: dB

**Example:** See [Example "Power configuration"](#) on page 502.

**Manual operation:** See ["Variation Step"](#) on page 61

**[[:SOURce<hw>]:POWER[:LEVel]][:IMMediate]:OFFSet <Offset>**

Sets the level offset of a downstream instrument.

The level at the RF output is not changed.

To query the resulting level, as it is at the output of the downstream instrument, use the command `[[:SOURce<hw>]:POWER[:LEVel]][:IMMediate]][:AMPLitude]`.

See ["RF frequency and level display with a downstream instrument"](#) on page 58.

**Note:** The level offset also affects the RF level sweep.

**Parameters:**

<Offset> float  
 Range: -100 to 100  
 Increment: 0.01  
 \*RST: 0  
 Default unit: dB  
 Level offset is always expreced in dB; linear units (V, W, etc.) are not supported

**Example:** `POWER:OFFSet 10`  
 Sets the RF level offset to 10 dB

**Manual operation:** See ["Offset"](#) on page 64  
 See ["Generator Settings used for Measurement"](#) on page 168



---

**[ :SOURce<hw>]:POWER[:LEVel][:IMMediate]:RCL <Rcl>**

Determines whether the current level is retained or if the stored level setting is adopted when an instrument configuration is loaded.

**Parameters:**

<Rcl> INCLude | EXCLude

**INCLude**

Takes the current level when an instrument configuration is loaded.

**EXCLude**

Retains the current level when an instrument configuration is loaded.

\*RST: INCLude

**Example:**

POW:RCL INCL

Takes the level value from an instrument configuration loaded with command \*RCL.

**Manual operation:** See "Exclude Level" on page 213

---

**[ :SOURce<hw>]:POWER[:LEVel][:IMMediate][:AMPLitude] <Amplitude>**

Sets the RF level applied to the DUT.

To activate the RF output use command :OUTPut<hw>[:STATe] ("RF On"/"RF Off").

The following applies  $POWER = RF \text{ output level} + OFFSET$ , where:

- POWER is the values set with [:SOURce<hw>]:POWER[:LEVel][:IMMediate][:AMPLitude]
- RF output level is set with [:SOURce<hw>]:POWER:POWER
- OFFSET is set with [:SOURce<hw>]:POWER[:LEVel][:IMMediate]:OFFSET

**Parameters:**

<Amplitude> float

The following settings influence the value range:

OFFSET set with the command [:SOURce<hw>]:POWER[:LEVel][:IMMediate]:OFFSET

**Numerical value**

Sets the level

**UP|DOWN**

Varies the level step by step.

The level is increased or decreased by the value set with the command [:SOURce<hw>]:POWER:STEP[:INCRement].

Range: (Level\_min + OFFSET) to (Level\_max + OFFSET)

\*RST: -30

Default unit: dBm

**Example:**

POWER -30

Sets the RF level

**Example:** See also `[ :SOURce<hw> ] :POWer:STEP:MODE` on page 511.

**Manual operation:** See "Amplitude" on page 63

**`[ :SOURce<hw> ] :POWer[:LEVel][:IMMediate]:REFLevel <ReferenceLevel>`**

Queries the reference level of the user correction.

The reference level is the sum of the amplitude and the level offset, set with the commands `[ :SOURce<hw> ] :POWer:POWer [ :SOURce<hw> ] :POWer[:LEVel] [:IMMediate]:OFFSet`.

**Parameters:**

`<ReferenceLevel>` float  
 Range: -245 to 120  
 Increment: 0.01  
 \*RST: -30

**Manual operation:** See "Generator Settings used for Measurement" on page 168

**`[ :SOURce<hw> ] :POWer:RANGe:LOWer?`**

**`[ :SOURce<hw> ] :POWer:RANGe:UPPer?`**

Queries the current interruption-free range of the level.

**Return values:**

`<Upper>` float  
 Increment: 0.01  
 Default unit: dBm

**Example:**

```
SOURce1:POWer:RANGe:UPPer?
// -15
SOURce1:POWer:RANGe:LOW?
// -50
```

**Usage:** Query only

**Manual operation:** See "Level Range" on page 65

**`[ :SOURce ] :POWer:WIGNore <State>`**

Ignores level range warnings.

**Parameters:**

`<State>` 1 | ON | 0 | OFF  
 \*RST: n.a. (factory preset: 0)

**Example:** `SOURce:POWer:WIGNore 1`

### 12.15.11 SOURce:ROSCillator subsystem

The SOURce:ROSCillator subsystem contains the commands for setting the external and internal reference frequency.

#### Example: Configuring the reference oscillator

```
// Using 100 MHz external reference source
SOURce:ROSCillator:PRESet
SOURce:ROSCillator:SOURce EXT
SOURce:ROSCillator:EXternal:RFOFF:STATe 1
SOURce:ROSCillator:EXternal:FREQuency 100MHZ
SOURce:ROSCillator:EXternal:SBANdwidth WIDE
// 100 MHz (loop through) and 1 GHz output
SOURce:ROSCillator:OUTPut:FREQuency:MODE LOOP
SOURce:ROSCillator:OUTPut:ALternate:FREQuency:MODE DER1G
SOURce:ROSCillator:INTernal:ADJust:STATe 0

// Variable external reference frequency
// SOURce:ROSCillator:EXternal:FREQuency VAR
// SOURce:ROSCillator:EXternal:FREQuency:VARIABLE 100000000

// Using the internal reference frequency
SOURce:ROSCillator:SOURce INT
SOURce:ROSCillator:INTernal:TUNing:STATe 1
SOURce:ROSCillator:INTernal:TUNing:SLOPe LOW
// 10 MHz and 1 GHz output
SOURce:ROSCillator:OUTPut:FREQuency:MODE DER10M
SOURce:ROSCillator:OUTPut:ALternate:FREQuency:MODE DER1G

// Query calibration value
CALibration:ROSCillator?
// 32767
// Set an internal source
// Activate user-defined adjustment value of 1000
SOURce:ROSCillator:SOURce INT
SOURce:ROSCillator:INTernal:ADJust:STATe 1
SOURce:ROSCillator:INTernal:ADJust:VALue 1000

// to resume calibrated state
SOURce:ROSCillator:INTernal:ADJust:VALue 0
SOURce:ROSCillator:INTernal:ADJust:STATe 0
// or
// SYSTem:FPRest
```

<a href="#">[:SOURce]:ROSCillator:PRESet</a> .....	516
<a href="#">[:SOURce]:ROSCillator:SOURce</a> .....	516
<a href="#">[:SOURce]:ROSCillator:EXternal:RFOFF[:STATe]</a> .....	516
<a href="#">[:SOURce]:ROSCillator:EXternal:FREQuency</a> .....	516
<a href="#">[:SOURce]:ROSCillator:EXternal:FREQuency:VARIABLE</a> .....	517
<a href="#">[:SOURce]:ROSCillator:EXternal:SBANdwidth</a> .....	517

<a href="#">[:SOURce]:ROSCillator:EXTernal:MLRange?</a> .....	517
<a href="#">[:SOURce]:ROSCillator:EXTernal:NSBandwidth?</a> .....	518
<a href="#">[:SOURce]:ROSCillator:OUTPut:FREQuency:MODE</a> .....	518
<a href="#">[:SOURce]:ROSCillator:OUTPut:ALternate:FREQuency:MODE</a> .....	518
<a href="#">[:SOURce]:ROSCillator[:INTernal]:ADJust:VALue</a> .....	519
<a href="#">[:SOURce]:ROSCillator[:INTernal]:ADJust[:STATe]</a> .....	519

---

### **[\[:SOURce\]:ROSCillator:PRESet](#)**

Resets the reference oscillator settings.

**Example:** See [Example"Configuring the reference oscillator"](#) on page 515.

**Usage:** Event

**Manual operation:** See ["Set to Default"](#) on page 195

---

### **[\[:SOURce\]:ROSCillator:SOURce <Source>](#)**

Selects between internal or external reference frequency.

**Parameters:**

<Source>            INTernal | EXTernal  
 \*RST:            n.a. (factory preset: INTernal)

**Example:** See [Example"Configuring the reference oscillator"](#) on page 515.

**Manual operation:** See ["Source"](#) on page 195

---

### **[\[:SOURce\]:ROSCillator:EXTernal:RFOFF\[:STATe\] <State>](#)**

Determines that the RF output is turned off when the external reference signal is selected, but missing.

**Parameters:**

<State>            1 | ON | 0 | OFF  
 \*RST:            n.a. (factory preset: 0)

**Example:** See [Example"Configuring the reference oscillator"](#) on page 515.

**Manual operation:** See ["Deactivate RF Output \(if external reference is missing\)"](#) on page 195

---

### **[\[:SOURce\]:ROSCillator:EXTernal:FREQuency <Frequency>](#)**

Sets the frequency of the external reference.

**Parameters:**

<Frequency>        100MHZ | 1GHZ | VARiable | 10MHZ  
 \*RST:            n.a. (factory preset: 10MHZ)

**Example:** See [Example"Configuring the reference oscillator"](#) on page 515.

**Options:** VARiable requires R&S SMBB-K704

1GHZ requires R&S SMBB-B3

**Manual operation:** See ["External Reference Frequency"](#) on page 195

**[[:SOURce]:ROSCillator:EXTernal:FREQuency:VARIable <Frequency>**

Specifies the user-defined external reference frequency.

**Parameters:**

<Frequency> float  
 Range: 1E6 to 100E6  
 Increment: 0.1  
 \*RST: n.a. (factory preset: 1E7)  
 Default unit: Hz

**Example:** See [Example"Configuring the reference oscillator"](#) on page 515.

**Options:** R&S SMBB-K704

**Manual operation:** See ["Variable Reference Frequency"](#) on page 196

**[[:SOURce]:ROSCillator:EXTernal:SBANDwidth <SBandwidth>**

Selects the synchronization bandwidth for the external reference signal.

Depending on the RF hardware version and the installed options, the synchronization bandwidth varies.

For more information, refer to the specifications document.

**Parameters:**

<SBandwidth> WIDE | NARRow  
**NARRow**  
 The synchronization bandwidth is a few Hz.  
**WIDE**  
 Uses the widest possible synchronization bandwidth.  
 \*RST: n.a. (factory preset: WIDE)

**Example:** See [Example"Configuring the reference oscillator"](#) on page 515.

**Manual operation:** See ["Synchronization Bandwidth"](#) on page 196

**[[:SOURce]:ROSCillator:EXTernal:MLRange?**

Queries the minimum locking range for the selected external reference frequency.

Depending on the RF hardware version, and the installed options, the minimum locking range varies.

For more information, refer to the specifications document.

**Return values:**

<MinLockRange> string

**Example:** SOUR:ROSC:EXT:MLR?  
**Usage:** Query only  
**Manual operation:** See "[Minimum Locking Range](#)" on page 196

#### **[[:SOURce]:ROSCillator:EXTernal:NSBandwidth?**

Queries the nominal synchronization bandwidth for the selected external reference frequency and synchronization bandwidth.

**Return values:**

<NomBandwidth> string

**Example:** SOUR:ROSC:EXT:NSB?

**Usage:** Query only

**Manual operation:** See "[Nominal Synchronization Bandwidth](#)" on page 196

#### **[[:SOURce]:ROSCillator:OUTPut:FREQuency:MODE <OutpFreqMode>**

Selects the mode for the output reference frequency.

**Parameters:**

<OutpFreqMode> DER10M | OFF | LOOPthrough

**OFF**

Disables the output.

**DER10M**

Sets the output reference frequency to 10 MHz.

The reference frequency is derived from the internal reference frequency.

**LOOPthrough**

This setting is unavailable for

ROSCillator:EXTernal:FREQuency 1GHZ.

Forwards the input reference frequency to the reference frequency output.

\*RST: n.a. (factory preset: DER10M)

**Example:** See [Example "Configuring the reference oscillator"](#) on page 515.

**Manual operation:** See "[Reference Output/1 GHz Reference Output](#)" on page 197

#### **[[:SOURce]:ROSCillator:OUTPut:ALTErnate:FREQuency:MODE <OutpFreqMode>**

Sets the output reference frequency.

**Parameters:**

<OutpFreqMode> LOOPthrough | DER1G | OFF

**OFF**

Disables the output.

**DER1G**

Sets the output reference frequency to 1 GHz.  
The reference frequency is derived from the internal reference frequency.

**LOOPthrough**

If `[ :SOURce ] :ROSCillator:EXTernal:FREQuency 1GHZ`, forwards the input reference frequency to the reference frequency output.

\*RST: n.a. (factory preset: OFF)

**Example:** See [Example"Configuring the reference oscillator"](#) on page 515.

**Options:** DER1G requires R&S SMBB-B3

**Manual operation:** See ["Reference Output/1 GHz Reference Output"](#) on page 197

**[ :SOURce ] :ROSCillator [ :INTernal ] :ADJust :VALue <Value>**

Specifies the frequency correction value (adjustment value).

**Parameters:**

<Value> integer

\*RST: 0

**Example:** See `[ :SOURce ] :ROSCillator [ :INTernal ] :ADJust [ :STATe ]` on page 519

**Manual operation:** See ["Adjustment Value"](#) on page 198

**[ :SOURce ] :ROSCillator [ :INTernal ] :ADJust [ :STATe ] <State>**

Determines whether the calibrated (off) or a user-defined (on) **adjustment value** is used for fine adjustment of the frequency.

**Parameters:**

<State> 1 | ON | 0 | OFF

**0**

Fine adjustment with the calibrated frequency value

**1**

User-defined adjustment value.

The instrument is no longer in the calibrated state.

The calibration value is, however, not changed. The instrument resumes the calibrated state if you send

`SOURce:ROSCillator:INTernal:ADJust:STATe 0`.

\*RST: n.a. (factory preset: 0)

**Example:** See [Example"Configuring the reference oscillator"](#) on page 515.

**Manual operation:** See ["Adjustment Active"](#) on page 198

### 12.15.12 SOURce:SWEep subsystem

The SOURce:SWEep subsystem contains the commands for configuring RF sweep signals.



- The keyword [:FREQuency] can be omitted, then the commands are SCPI-compliant.
- To activate an RF sweep mode, use the following commands:
  - RF frequency sweep: SOURce:FREQuency:MODE SWEep (SOURce:FREQuency:MODE CW (off))
  - RF level sweep: SOURce:POWEr:MODE SWEep (SOURce:POWEr:MODE CW (off))
  - RF combined sweep: SOURce:FREQuency:MODE SWEep (SOURce:FREQuency:MODE CW (off))
- All sweeps, including the LF sweep, can be set independently of each other.
- All sweeps can be set independently of each other.

See [Chapter 6.1, "Signal generation and triggering in the sweep and list modes"](#), on page 116.

#### Example: Setup an RF frequency or power sweep

The following example shows a command sequence to set up an RF frequency sweep, triggered by the execute command. For an RF power sweep, replace FREQuency in the SWEep commands with POWEr.

Exceptions are the power spacing (defined with LINear only) and the power step width (defined with LOGarithmic only).

```
// Reset the instrument to start from an initial state
// Switch off display update to improve performance
// (especially with short dwell times)
// Set the sweep mode (first two commands) and the sweep range
// Select linear spacing
// Select the waveform shape for the frequency sweep
*RST; *CLS
SYSTem:DISPlay:UPDate OFF
TRIGger1:FSWep:SOURce SINGLE
SOURce1:SWEep:FREQuency:MODE AUTO
SOURce1:FREQuency:SPAN 300 MHz
SOURce1:FREQuency:CENTer 200 MHz
// Alternatively use
// SOURce1:FREQuency:STARt 50 MHz
// SOURce1:FREQuency:STOP 350 MHz
SOURce1:SWEep:FREQuency:SPACing LINear
SOURce1:SWEep:FREQuency:SHAPE SAWTooth

// Activate change to start frequency while waiting for next trigger
// Prerequisites: sweep mode single and sweep waveform sawtooth
```



```

SOURcel:SWEep:FREQuency:RETRace 1
// Alternatively reset all sweeps to their initial value
SOURcel:SWEep:RESet:ALL

// Set the step width and dwell time
SOURcel:SWEep:FREQuency:STEP:LINear 1 MHz
// Alternatively set the number of steps, then the sweep step width is
// set automatically
SOURcel:SWEep:FREQuency:POINts 301
SOURcel:SWEep:FREQuency:DWELL 500 ms
// With logarithmic spacing select the step width as follows
// (steps of 10 percent of the previous frequency in each instance)
SOURcel:SWEep:FREQuency:SPACing LOG
SOURcel:SWEep:FREQuency:STEP:LOGarithmic 10PCT

// Activate the sweep
// Trigger the sweep (depending on the set mode) and query the status
SOURcel:FREQuency:MODE SWEep
// Perform a one-off RF frequency sweep
SOURcel:SWEep:FREQuency:EXECute
SOURcel:SWEep:FREQuency:RUNning?
// 1
// the frequency sweep is running

// For manual step RF sweep use the following commands
*RST; *CLS
// Activate manual step RF sweep
SOURcel:SWEep:FREQuency:MODE MANual
// Activate the RF frequency sweep.
SOURcel:FREQuency:MODE SWEep
// Activate RF Output1.
Output1:STATe 1
// Input the frequency manually for each step
SOURcel:FREQuency:MANual 200 MHz
SOURcel:FREQuency:MANual 201 MHz
// Alternatively use the UP or DOWN commands with the set step width.
SOURcel:SWEep:FREQuency:STEP:LINear 1 MHz
SOURcel:FREQuency:MANual UP

// Activate a combined RF frequency / level sweep
*RST; *CLS
*RST; *CLS
SYSTEM:DISPlay:UPDate OFF
TRIGger1:FSWep:SOURce SINGle
SOURcel:SWEep:COMBined:MODE AUTO
SOURcel:SWEep:COMBined:COUNT 200
SOURcel:FREQuency:STARt 1000000000 Hz
SOURcel:FREQuency:STOP 5000000000 Hz
SOURcel:POWer:STARt -30 dBm
SOURcel:POWer:STOP -10 dBm

```

```

SOURce1:SWEep:COMBined:RETRace 1
SOURce1:SWEep:COMBined:SHAPE SAWT
SOURce1:SWEep:COMBined:DWELL 0.01
// Activate combined RF frequency/level sweep
SOURce1:FREQuency:MODE COMB
// Activate RF Output1.
Output1:STATe 1
// Execute combined frequency / level sweep
SOURce1:SWEep:COMBined:EXECute

```

[SOURce<hw>]:SWEep:POWer:DWELL.....	522
[SOURce<hw>]:SWEep:POWer:MODE.....	523
[SOURce<hw>]:SWEep:POWer:POINts.....	523
[SOURce<hw>]:SWEep:POWer:SPACing:MODE?.....	523
[SOURce<hw>]:SWEep:POWer:STEP[:LOGarithmic].....	524
[SOURce<hw>]:SWEep[:FREQuency]:DWELL.....	524
[SOURce<hw>]:SWEep[:FREQuency]:MODE.....	524
[SOURce<hw>]:SWEep[:FREQuency]:POINts.....	525
[SOURce<hw>]:SWEep[:FREQuency]:SPACing.....	525
[SOURce<hw>]:SWEep:POWer:SHAPE.....	526
[SOURce<hw>]:SWEep[:FREQuency]:SHAPE.....	526
[SOURce<hw>]:SWEep:POWer:EXECute.....	526
[SOURce<hw>]:SWEep[:FREQuency]:EXECute.....	526
[SOURce<hw>]:SWEep:POWer:RETRace.....	526
[SOURce<hw>]:SWEep[:FREQuency]:RETRace.....	526
[SOURce<hw>]:SWEep:POWer:RUNNing?.....	527
[SOURce<hw>]:SWEep[:FREQuency]:RUNNing?.....	527
[SOURce<hw>]:SWEep[:FREQuency]:STEP:LOGarithmic.....	527
[SOURce<hw>]:SWEep[:FREQuency]:STEP[:LINear].....	527
[SOURce<hw>]:COMBined:FREQuency:STARt.....	528
[SOURce<hw>]:COMBined:FREQuency:STOP.....	528
[SOURce<hw>]:COMBined:POWer:STARt.....	528
[SOURce<hw>]:COMBined:POWer:STOP.....	529
[SOURce<hw>]:SWEep:COMBined:COUNT.....	529
[SOURce<hw>]:SWEep:COMBined:DWELL.....	529
[SOURce<hw>]:SWEep:COMBined:EXECute.....	529
[SOURce<hw>]:SWEep:COMBined:MODE.....	530
[SOURce<hw>]:SWEep:COMBined:RETRace.....	530
[SOURce<hw>]:SWEep:COMBined:SHAPE.....	531
[SOURce<hw>]:SWEep:RESet[:ALL].....	531

---

### [SOURce<hw>]:SWEep:POWer:DWELL <Dwell>

Sets the dwell time for a level sweep step.

#### Parameters:

<Dwell>	float
Range:	0.001 to 100
Increment:	100E-6
*RST:	0.01

**Example:** See [Example "Setup an RF frequency or power sweep"](#) on page 520.

**Manual operation:** See ["Dwell Time"](#) on page 135

**[ :SOURce<hw> ] :SWEep:POWer:MODE <Mode>**

Sets the cycle mode for the level sweep.

**Parameters:**

<Mode> AUTO | MANual | STEP

**AUTO**

Each trigger triggers exactly one complete sweep.

**MANual**

The trigger system is not active. You can trigger every step individually with the command `[ :SOURce<hw> ] :POWer:MANual`.

The level value increases at each step by the value that you define with `[ :SOURce<hw> ] :POWer:STEP [ :INCRement ]`.

Values directly entered with the command `[ :SOURce<hw> ] :POWer:MANual` are not taken into account.

**STEP**

Each trigger triggers one sweep step only. The level increases

by the value entered with `[ :SOURce<hw> ] :POWer:STEP [ :INCRement ]`.

\*RST: AUTO

**Example:** See [Example "Setup an RF frequency or power sweep"](#) on page 520.

**Manual operation:** See ["Mode"](#) on page 132

**[ :SOURce<hw> ] :SWEep:POWer:POINts <Points>**

Sets the number of steps within the RF level sweep range.

See [Chapter 6.2.1, "Correlating parameters in sweep mode"](#), on page 124.

**Parameters:**

<Points> integer

Range: 2 to Max

**Example:** See [Example "Setup an RF frequency or power sweep"](#) on page 520.

**[ :SOURce<hw> ] :SWEep:POWer:SPACing:MODE?**

Queries the level sweep spacing. The sweep spacing for level sweeps is always linear.

**Return values:**

<Mode> LINear

\*RST: LINear

**Example:** `SWE:POW:SPAC:MODE?`  
 queries the sweep spacing for a level sweep at RF output.  
 Result: "LIN"  
 linear spacing

**Usage:** Query only

**[:SOURce<hw>]:SWEep:POWer:STEP[:LOGarithmic] <Logarithmic>**

Sets a logarithmically determined step size for the RF level sweep. The level is increased by a logarithmically calculated fraction of the current level.

See [Chapter 6.2.1, "Correlating parameters in sweep mode"](#), on page 124.

**Parameters:**

<Logarithmic> float  
 The unit dB is mandatory.  
 Range: 0.01 to 139 dB  
 Increment: 0.01  
 \*RST: 1  
 Default unit: dB

**Example:** See [Example "Setup an RF frequency or power sweep"](#) on page 520.

**Manual operation:** See ["Step"](#) on page 139

**[:SOURce<hw>]:SWEep[:FREQuency]:DWELI <Dwell>**

Sets the dwell time for a frequency sweep step.

**Parameters:**

<Dwell> float  
 Range: 0.001 to 100  
 Increment: 100E-6  
 \*RST: 0.01

**Example:** See [Example "Setup an RF frequency or power sweep"](#) on page 520.

**Manual operation:** See ["Dwell Time"](#) on page 135

**[:SOURce<hw>]:SWEep[:FREQuency]:MODE <Mode>**

Sets the cycle mode for the frequency sweep.

**Parameters:**

<Mode> AUTO | MANual | STEP  
**AUTO**  
 Each trigger event triggers exactly one complete sweep.

**MANual**

The trigger system is not active. You can trigger every step individually by input of the frequencies with the command `[ :SOURce<hw> ] :FREQuency:MANual`.

**STEP**

Each trigger event triggers one sweep step. The frequency increases by the value entered with `[ :SOURce<hw> ] :SWEep [ :FREQuency ] :STEP [ :LINear ]` (linear spacing) or `[ :SOURce<hw> ] :SWEep [ :FREQuency ] :STEP:LOGarithmic` (logarithmic spacing).

\*RST: AUTO

**Example:** See [Example"Setup an RF frequency or power sweep"](#) on page 520.

**Manual operation:** See ["Mode"](#) on page 132

**[ :SOURce<hw> ] :SWEep [ :FREQuency ] :POINts <Points>**

Sets the number of steps within the RF frequency sweep range.

See [Chapter 6.2.1, "Correlating parameters in sweep mode"](#), on page 124.

Two separate `POINts` values are used for linear or logarithmic sweep spacing (`[ :SOURce<hw> ] :SWEep [ :FREQuency ] :SPACing LIN | LOG`). The command always affects the currently set sweep spacing.

**Parameters:**

<Points> integer  
Range: 2 to Max

**Example:** See [Example"Setup an RF frequency or power sweep"](#) on page 520.

**[ :SOURce<hw> ] :SWEep [ :FREQuency ] :SPACing <Spacing>**

Selects the mode for the calculation of the frequency intervals, with which the current frequency at each step is increased or decreased.

The keyword `[ :FREQuency ]` can be omitted; then the command is SCPI-compliant.

**Parameters:**

<Spacing> LINear | LOGarithmic

**LINear**

Sets a fixed frequency value as step width and adds it to the current frequency.

The linear step width is entered in Hz, see `[ :SOURce<hw> ] :SWEep [ :FREQuency ] :STEP [ :LINear ]`.

**LOGarithmic**

Sets a constant fraction of the current frequency as step width and adds it to the current frequency.

The logarithmic step width is entered in %, see [ :  
SOURce<hw>]:SWEep[:FREQuency]:STEP:LOGarithmic.

\*RST: LINear

**Example:** See [Example"Setup an RF frequency or power sweep"](#) on page 520.

**Manual operation:** See ["Spacing"](#) on page 135

**[ :SOURce<hw>]:SWEep:POWer:SHAPE <Shape>**

**[ :SOURce<hw>]:SWEep[:FREQuency]:SHAPE <Shape>**

Determines the waveform shape for a frequency sweep sequence.

**Parameters:**

<Shape> SAWTooth | TRIangle

\*RST: SAWTooth

**Example:** See [Example"Setup an RF frequency or power sweep"](#) on page 520.

**Manual operation:** See ["Shape"](#) on page 133

**[ :SOURce<hw>]:SWEep:POWer:EXECute**

**[ :SOURce<hw>]:SWEep[:FREQuency]:EXECute**

Executes an RF frequency sweep.

The command performs a single sweep and is therefore only effective in manual sweep mode.

**Example:** See [Example"Setup an RF frequency or power sweep"](#) on page 520.

**Usage:** Event

**Manual operation:** See ["Execute Single Sweep"](#) on page 136

**[ :SOURce<hw>]:SWEep:POWer:RETRace <State>**

**[ :SOURce<hw>]:SWEep[:FREQuency]:RETRace <State>**

Activates that the signal changes to the start frequency value while it is waiting for the next trigger event.

You can enable this feature, when you are working with sawtooth shapes in sweep mode "Single" or "External Single".

**Parameters:**

<State> 1 | ON | 0 | OFF

\*RST: 0

**Example:** See [Example "Setup an RF frequency or power sweep"](#) on page 520.

**Manual operation:** See ["Retrace"](#) on page 133

**[:SOURce<hw>]:SWEep:POWer:RUNNing?**  
**[:SOURce<hw>]:SWEep[:FREQUency]:RUNNing?**

Queries the current sweep state.

**Return values:**

<State> 1 | ON | 0 | OFF

**Example:** See [Example "Setup an RF frequency or power sweep"](#) on page 520.

**Usage:** Query only

**[:SOURce<hw>]:SWEep[:FREQUency]:STEP:LOGarithmic <Logarithmic>**

Sets a logarithmically determined step width for the RF frequency sweep. The value is added at each sweep step to the current frequency.

See [Chapter 6.2.1, "Correlating parameters in sweep mode"](#), on page 124.

**Parameters:**

<Logarithmic> float  
 The unit is mandatory.  
 Range: 0.01 to 100  
 Increment: 1E-3  
 \*RST: 1  
 Default unit: PCT

**Example:** See [Example "Setup an RF frequency or power sweep"](#) on page 520.

**Manual operation:** See ["Step Linear/Step Logarithmic"](#) on page 138

**[:SOURce<hw>]:SWEep[:FREQUency]:STEP[:LINear] <Linear>**

Sets the step width for linear sweeps.

See [Chapter 6.2.1, "Correlating parameters in sweep mode"](#), on page 124.

Omit the optional keywords so that the command is SCPI-compliant.

**Parameters:**

<Linear> float  
 Range: 0.001 Hz to (STOP - START)  
 Increment: 0.01

**Example:** See [Example "Setup an RF frequency or power sweep"](#) on page 520.

**Manual operation:** See ["Step Linear/Step Logarithmic"](#) on page 138

---

**[:SOURce<hw>]:COMBined:FREQUENCY:START** <CombFreqStart>

Sets the start frequency of the combined RF frequency / level sweep.

See [Chapter 6.2.1, "Correlating parameters in sweep mode"](#), on page 124.

**Parameters:**

<CombFreqStart> float  
Range: -59999E5 to 12E9  
Increment: 0.01  
\*RST: 100E6

**Example:** See [Example"Setup an RF frequency or power sweep"](#) on page 520.

**Manual operation:** See ["Start Frequency/Stop Frequency"](#) on page 137

---

**[:SOURce<hw>]:COMBined:FREQUENCY:STOP** <CombFreqStop>

Sets the end frequency of the combined RF frequency / level sweep.

**Parameters:**

<CombFreqStop> float  
Range: -59999E5 to 12E9  
Increment: 0.01  
\*RST: 500E6

**Example:** See [Example"Setup an RF frequency or power sweep"](#) on page 520.

**Manual operation:** See ["Start Frequency/Stop Frequency"](#) on page 137

---

**[:SOURce<hw>]:COMBined:POWER:START** <CombPowStart>

Sets the start level value of the combined RF frequency / level sweep.

See [Chapter 6.2.1, "Correlating parameters in sweep mode"](#), on page 124.

**Parameters:**

<CombPowStart> float  
Range: -245 to 120  
Increment: 0.01  
\*RST: -30

**Example:** See [Example"Setup an RF frequency or power sweep"](#) on page 520.

**Manual operation:** See ["Start Level / Stop Level"](#) on page 139



---

**[ :SOURce<hw>]:COMBined:POWer:STOP <CombPowStop>**

Sets the stop level value of the combined RF frequency / level sweep.

**Parameters:**

<CombPowStop>	float
	Range: -245 to 120
	Increment: 0.01
	*RST: -10

**Example:** See [Example"Setup an RF frequency or power sweep"](#) on page 520.

**Manual operation:** See ["Start Level / Stop Level"](#) on page 139

---

**[ :SOURce<hw>]:SWEep:COMBined:COUNT <StepCount>**

Defines the number of sweeps you want to execute.

This parameter applies to `[ :SOURce<hw>]:SWEep:COMBined:MODE > SINGLE`. To start the sweep signal generation, use the command `[ :SOURce<hw>]:SWEep:COMBined:EXECute` on page 529.

**Parameters:**

<StepCount>	integer
	Range: 1 to SeMAX_INT_STEP-1
	*RST: 501

**Example:** See [Example"Setup an RF frequency or power sweep"](#) on page 520.

**Manual operation:** See ["Step Count"](#) on page 139

---

**[ :SOURce<hw>]:SWEep:COMBined:DWELI <Dwell>**

Sets the dwell time for the combined frequency / level sweep.

**Parameters:**

<Dwell>	float
	Range: 0.01 to 100
	Increment: 100E-6
	*RST: 0.01

**Example:** See [Example"Setup an RF frequency or power sweep"](#) on page 520.

**Manual operation:** See ["Dwell Time"](#) on page 135

---

**[ :SOURce<hw>]:SWEep:COMBined:EXECute**

Executes an RF frequency / level sweep cycle.

The command triggers one single sweep manually. Therefore, you can use it in manual sweep mode, selected with the command `[ :SOURce<hw> ] :SWEep:COMBined:MODE > MANual`.

**Example:** See [Example "Setup an RF frequency or power sweep"](#) on page 520.

**Usage:** Event

**Manual operation:** See ["Execute Single Sweep"](#) on page 136

`[ :SOURce<hw> ] :SWEep:COMBined:MODE <SweepCombMode>`

Sets the cycle mode for the combined frequency / level sweep.

**Parameters:**

<SweepCombMode> AUTO | MANual | STEP

**AUTO**

Each trigger event triggers exactly one complete sweep.

**MANual**

The trigger system is not active. You can trigger every step individually by input of the frequencies with the commands `[ :SOURce<hw> ] :FREQuency:MANual` and `[ :SOURce<hw> ] :POWer:MANual`.

**STEP**

Each trigger event triggers one sweep step.

\*RST: AUTO

**Example:** See [Example "Setup an RF frequency or power sweep"](#) on page 520.

**Manual operation:** See ["Mode"](#) on page 132

`[ :SOURce<hw> ] :SWEep:COMBined:RETRace <RetraceState>`

Activates that the signal changes to the start level value while it is waiting for the next trigger event.

You can enable this feature, when you are working with sawtooth shapes in sweep mode "Single" or "External Single".

**Parameters:**

<RetraceState> 1 | ON | 0 | OFF

\*RST: 0

**Example:** See [Example "Setup an RF frequency or power sweep"](#) on page 520.

**Manual operation:** See ["Retrace"](#) on page 133

---

**[:SOURce<hw>]:SWEep:COMBined:SHApe <Shape>**

Selects the waveform shape for the combined frequency / level sweep sequence.

**Parameters:**

<Shape>                   SAWTooth | TRlangle  
\*RST:                    SAWTooth

**Example:**                See [Example "Setup an RF frequency or power sweep"](#) on page 520.

**Manual operation:**    See ["Shape"](#) on page 133

---

**[:SOURce<hw>]:SWEep:RESet[:ALL]**

Resets all active sweeps to the starting point.

**Usage:**                    Event

**Manual operation:**    See ["Reset Sweep"](#) on page 136

## 12.16 SYSTem subsystem

The SYSTem subsystem contains a series of commands for general functions which do not directly affect signal generation.

**Example: Retrieving instrument specification**

**Note:** The following values are merely an example.

```
// Retrieve information on data sheet versions.
// Query all data sheet versions saved on the instrument:
SYSTem:SPECification:VERSion:CATalog?
"04.03,04.02,04.01,04.00,03.04,03.03,03.02,03.01,03.00,02.96,02.95,02.94,
02.02,02.01,02.00,01.03,01.02,01.01,01.00"

// Query the initial data sheet version on delivery
SYSTem:SPECification:VERSion:FACTory?
// Response: "04.00"

// Select a specific data sheet version:
SYSTem:SPECification:VERSion "04.01"

// Retrieve information on parameters that belong to a particular data sheet.
// Query the IDs of all parameters listed in the selected version:
SYSTem:SPECification:VERSion "04.03"
SYSTem:SPECification:IDENTification:CATalog?
"ID_RF_FREQ_SETTING_TIME_ALC_ON_MS,ID_RF_FREQ_SETTING_TIME_MS,..."

// Query data sheet information on a specific parameter by its ID.
```

```

SYSTEM:SPECification? "ID_RF_FREQ_SETTING_TIME_ALC_ON_MS"
// Returns the specified value of the parameter.

```

### Example: Retrieving information on network-related settings

```

SYSTEM:COMMunicate:NETWork:STATus?
// 1
SYSTEM:PROTection1:STATe 0,123456

SYSTEM:COMMunicate:NETWork:IPAddress:MODE STAT
SYSTEM:COMMunicate:NETWork:IPAddress "10.113.0.104"
SYSTEM:COMMunicate:NETWork:IPAddress:DNS "10.0.2.166"
SYSTEM:COMMunicate:NETWork:COMMON:HOSTname?
// "SMB100B-102030"
SYSTEM:COMMunicate:NETWork:COMMON:WORKgroup "instrument"
SYSTEM:COMMunicate:NETWork:COMMON:DOMAIN "rsint.net"
SYSTEM:COMMunicate:NETWork:IPAddress:GATeway "10.113.0.1"
SYSTEM:COMMunicate:NETWork:IPAddress:SUBNet:MASK "255.255.252.0"
SYSTEM:COMMunicate:NETWork:MACaddress "08 00 27 a3 a1 70"
SYSTEM:PROTection1:STATe 1

```

### Example: Restarting the network

```

SYSTEM:COMMunicate:NETWork:REStart
// terminates the network connection and sets it up again

```

### Example: Finding out VISA resource strings

```

SYSTEM:COMMunicate:NETWork:RESource?
// Response: "TCPIP::10.113.0.104::inst0::INSTR"

SYSTEM:COMMunicate:HISLip:RESource?
// Response: "TCPIP::10.113.0.104::hislip0::INSTR"

SYSTEM:COMMunicate:SOCKET:RESource?
// Response: "TCPIP::10.113.0.104::5025::SOCKET"

SYSTEM:COMMunicate:USB:RESource?
// "USB::0x0AAD::0x01DE::100001::INSTR"

SYSTEM:COMMunicate:GPIB:RESource?
// Response: "GPIB::28::INSTR"
SYSTEM:COMMunicate:GPIB:SELF:ADDRESS?
// Response: 28
SYSTEM:COMMunicate:GPIB:LTERminator?
// Response: STAN

SYSTEM:COMMunicate:SERial:RESource?
// Response: "ASRL1::INSTR"
SYSTEM:COMMunicate:SERial:SBITS?
// Response: 1
SYSTEM:COMMunicate:SERial:BAUD?
// Response: 115200

```

```
SYSTem:COMMunicate:SERial:PARity?
// Response: NONE
```

### Disabling LAN services

- ▶ **NOTICE!** Risk of loosing access over LAN. Disabling the LAN interface or the common services "LAN", "SCPI over LAN", "VNC" and "HTTP" locks the remote access to the instrument.

Use the commands in [Example "To disable the LAN interface and LAN services"](#) on page 533 to disable or enable the LAN interface and LAN interface services individually.

- a) For the first parameter of the command, enter the security password of your instrument.  
The default password is 123456.
- b) For the second parameter of the command, enter the state: 1 (ON), 0 (OFF)

### Example: To disable the LAN interface and LAN services

```
// *****
// Disable the LAN interface.
// *****
SYSTem:SECurity:NETWork:STATe "<password>", 0

// *****
// Disable the LAN services individually.
// *****
SYSTem:SECurity:NETWork:RAW:STATe "<password>", 0
// Disables remote access over raw socket.
SYSTem:SECurity:NETWork:SOE:STATe "<password>", 0
// Disables SCPI over Ethernet/LAN communication.
SYSTem:SECurity:NETWork:VNC:STATe "<password>", 0
// Disables remote access over VNC.
SYSTem:SECurity:NETWork:HTTP:STATe "<password>", 0
// Disables remote access over HTTP.
SYSTem:SECurity:NETWork:RPC:STATe "<password>", 0
// Disables remote access over remote procedure call (RPC).
SYSTem:SECurity:NETWork:SSH:STATe "<password>", 0
// Disables SSH network protocol that is used for service purposes.
SYSTem:SECurity:NETWork:FTP:STATe "<password>", 0
// Disables FTP for file transfer.
SYSTem:SECurity:NETWork:SMB:STATe "<password>", 0
// Disables shared access over SMB.
SYSTem:SECurity:NETWork:AVAHi:STATe "<password>", 0
// Disables Avahi service for automatic instrument configuration in the network.
SYSTem:SECurity:NETWork:SWUPdate:STATe "<password>", 0
// Disables software updates over LAN.
```

**Example: Querying the error queue**

```
SYSTem:ERRor:STATic?
// Response: -221,"Settings conflict", 153,"Input voltage out of range", ...
// Returns all static errors that are collected in the error queue.
```

```
SYSTem:ERRor:HISTory:CLear
// Deletes the history entries.
```

**Example: Configuring date and time**

```
// Query the date and time setting of the instrument
// Query the current timezone and setting
SYSTem:DATE?
// Response: 2023,1,16;1
SYSTem:TIME?
// Response: 18,15,17;1
SYSTem:TIME:ZONE?
// Response: "";1 //default UTC setting
SYSTem:TIME:PROTOcol?
// Response: "OFF";1 // no protocol selected
SYSTem:NTP:STATe?
// Response: 0;1 // NTP is disabled

// Setting the timezone and NTP time protocol
SYSTem:TIME:ZONE:CATalog?
// Response: "UTC,leap-seconds.list,leapseconds,Africa/Abidjan,..."
SYSTem:TIME:ZONE "Europe/Berlin"
SYSTem:NTP:HOST "timesource.net" // sets the NTP server address
SYSTem:NTP:STATe?
// Response: 1 // the NTP time server is enabled
```

**Commands**

:SYSTem:ERRor:ALL?	536
:SYSTem:ERRor:CODE:ALL?	537
:SYSTem:ERRor:CODE[:NEXT]?	537
:SYSTem:ERRor:COUNT?	537
:SYSTem:ERRor[:NEXT]?	538
:SYSTem:ERRor:GNEXt?	538
:SYSTem:ERRor:HISTory:CLear	539
:SYSTem:ERRor:STATic?	539
:SYSTem:DLOCK	539
:SYSTem:KLOCK	539
:SYSTem:NINformation?	540
:SYSTem:ULOCK	540
:SYSTem:LOCK:OWNer?	541
:SYSTem:LOCK:RELease:ALL	541
:SYSTem:LOCK:REQuest[:EXCLusive]?	541
:SYSTem:SAV	541
:SYSTem:RCL	542

:SYSTem:PROTeCt<ch>[:STATe].....	542
:SYSTem:COMMunicate:GPIB:LTERminator.....	543
:SYSTem:COMMunicate:GPIB:RESource?.....	543
:SYSTem:COMMunicate:GPIB[:SELf]:ADDReSS.....	543
:SYSTem:COMMunicate:HISLip:RESource?.....	543
:SYSTem:COMMunicate:NETWork:IPADdress.....	544
:SYSTem:COMMunicate:NETWork:IPADdress:MODE.....	544
:SYSTem:COMMunicate:NETWork:MAcAddress.....	544
:SYSTem:COMMunicate:NETWork:RESource?.....	544
:SYSTem:COMMunicate:NETWork:REStart.....	545
:SYSTem:COMMunicate:NETWork:STATus?.....	545
:SYSTem:COMMunicate:NETWork[:COMMon]:DOMain.....	545
:SYSTem:COMMunicate:NETWork[:COMMon]:HOSTname.....	545
:SYSTem:COMMunicate:NETWork[:COMMon]:WORKgroup.....	546
:SYSTem:COMMunicate:NETWork[:IPADdress]:DNS.....	546
:SYSTem:COMMunicate:NETWork[:IPADdress]:GATeway.....	546
:SYSTem:COMMunicate:NETWork[:IPADdress]:SUBNet:MASK.....	546
:SYSTem:COMMunicate:SERial:BAUD.....	547
:SYSTem:COMMunicate:SERial:PARity.....	547
:SYSTem:COMMunicate:SERial:RESource?.....	547
:SYSTem:COMMunicate:SERial:SBITs.....	547
:SYSTem:COMMunicate:SOCKet:RESource?.....	547
:SYSTem:COMMunicate:USB:RESource?.....	548
:SYSTem:HELP:EXPort.....	548
:SYSTem:IDENtification.....	548
:SYSTem:IDENtification:PRESet.....	549
:SYSTem:IRESpone.....	549
:SYSTem:ORESpone.....	549
:SYSTem:LANGuage.....	550
:SYSTem:INFormation:SCPI.....	550
:SYSTem:SECurity:NETWork:AVAHI[:STATe].....	550
:SYSTem:SECurity:NETWork:FTP[:STATe].....	550
:SYSTem:SECurity:NETWork:HTTP[:STATe].....	551
:SYSTem:SECurity:NETWork:RAW[:STATe].....	551
:SYSTem:SECurity:NETWork:REMSupport[:STATe].....	551
:SYSTem:SECurity:NETWork:RPC[:STATe].....	551
:SYSTem:SECurity:NETWork:SMB[:STATe].....	552
:SYSTem:SECurity:NETWork:SOE[:STATe].....	552
:SYSTem:SECurity:NETWork:SSH[:STATe].....	552
:SYSTem:SECurity:NETWork:SWUPdate[:STATe].....	553
:SYSTem:SECurity:NETWork:VNC[:STATe].....	553
:SYSTem:SECurity:NETWork[:STATe].....	553
:SYSTem:SECurity:SANitize[:STATe].....	553
:SYSTem:SECurity:SUPolicy.....	554
:SYSTem:SECurity:VOLMode[:STATe].....	554
:SYSTem:SPECification?.....	554
:SYSTem:SPECification:VERSIon.....	555
:SYSTem:SPECification:IDENtification:CATalog?.....	555
:SYSTem:SPECification:PARAmeter?.....	555
:SYSTem:SPECification:VERSIon:CATalog?.....	556

:SYSTem:SPECification:VERsion:FACTory?.....	556
:SYSTem:SRData?.....	556
:SYSTem:STARtup:COMPLete?.....	557
:SYSTem:DATE.....	557
:SYSTem:NTP:HOSTname.....	557
:SYSTem:NTP:STATe.....	558
:SYSTem:TIME.....	558
:SYSTem:TIME:ZONE.....	558
:SYSTem:TIME:ZONE:CATalog?.....	558
:SYSTem:TIME:PROTocol.....	559
:SYSTem:UPTime?.....	559
:SYSTem:BIOS:VERsion?.....	559
:SYSTem:VERsion?.....	559
:SYSTem:OSYStem?.....	560
:SYSTem:MMEMory:PATH:USER?.....	560
:SYSTem:DFPRint.....	560
:SYSTem:REBoot.....	561
:SYSTem:REStart.....	561
:SYSTem:SHUTdown.....	561
:SYSTem:WAIT.....	561
:SYSTem:FILEs:TEMPorary:DELeTe.....	562

---

### :SYSTem:ERRor:ALL?

Queries the error/event queue for all unread items and removes them from the queue.

#### Return values:

<All> string  
 Error/event\_number,"Error/event\_description>[;Device-dependent info]"  
 A comma separated list of error number and a short description of the error in FIFO order.  
 If the queue is empty, the response is 0, "No error"  
 Positive error numbers are instrument-dependent. Negative error numbers are reserved by the SCPI standard.  
 Volatile errors are reported once, at the time they appear. Identical errors are reported repeatedly only if the original error has already been retrieved from (and hence not any more present in) the error queue.

#### Example:

```
SYSTem:ERRor:ALL?
// queries all entries in the error queue.
Response: 0, 'no error'
// no errors have occurred since the error queue was last read out.
```

**Usage:** Query only

**Manual operation:** See "[Clear History](#)" on page 598



---

**:SYSTem:ERRor:CODE:ALL?**

Queries the error numbers of all entries in the error queue and then deletes them.

**Return values:**

<All> string  
Returns the error numbers. To retrieve the entire error text, send the command `:SYSTem:ERRor:ALL?`.

**0**

"No error", i.e. the error queue is empty

**Positive value**

Positive error numbers denote device-specific errors

**Negative value**

Negative error numbers denote error messages defined by SCPI.

**Example:**

```
SYSTem:ERRor:CODE:ALL?  
// queries all entries in the error queue.  
Response: 0  
// no errors have occurred since the error queue was last read out.
```

**Usage:** Query only

---

**:SYSTem:ERRor:CODE[:NEXT]?**

Queries the error number of the oldest entry in the error queue and then deletes it.

**Return values:**

<Next> string  
Returns the error number. To retrieve the entire error text, send the command `:SYSTem:ERRor:ALL?`.

**0**

"No error", i.e. the error queue is empty

**Positive value**

Positive error numbers denote device-specific errors

**Negative value**

Negative error numbers denote error messages defined by SCPI.

**Example:**

```
SYSTem:ERRor:CODE:NEXT?  
// queries the oldest entry in the error queue.  
Response: 0  
// no errors have occurred since the error queue was last read out.
```

**Usage:** Query only

---

**:SYSTem:ERRor:COUNT?**

Queries the number of entries in the error queue.

**Return values:**

<Count> integer

**0**

The error queue is empty.

**Example:**

```

SYSTem:ERRor:COUNT?
// queries the number of entries in the error queue.
Response: 1
// one error has occurred since the error queue was last read out.

```

**Usage:**

Query only

**:SYSTem:ERRor[:NEXT]?**

Queries the error/event queue for the oldest item and removes it from the queue.

**Return values:**

<Next> string

Error/event\_number,"Error/event\_description>[:Device-dependent info]"

Error number and a short description of the error.

If the queue is empty, the response is 0, "No error"

Positive error numbers are instrument-dependent. Negative error numbers are reserved by the SCPI standard.

Volatile errors are reported once, at the time they appear. Identical errors are reported repeatedly only if the original error has already been retrieved from (and hence not any more present in) the error queue.

**Example:**

```

SYSTem:ERRor:NEXT?
// queries the oldest entry in the error queue.
Response: 0, 'no error'
// no errors have occurred since the error queue was last read out.

```

**Usage:**

Query only

**Manual operation:** See "[Static Notifications/History](#)" on page 597

**:SYSTem:ERRor:GNEXT?**

Similar to `:SYSTem:ERRor[:NEXT]?`, but queries the next entry from the global persistent error/event queue.

**Return values:**

<NextGlobalError> string

Error/event number, "Error/event description" [:Device dependent info]"

An error number and a short description of the error.

Positive error numbers are instrument-dependent. Negative error numbers are reserved by the SCPI standard.

**Example:**           SYSTem:ERRor:GNEXt?  
                  // queries the next error message from the global error queue.

**Usage:**            Query only

#### :SYSTem:ERRor:HISTory:CLEar

Clears the error history.

**Example:**            See [Example"Querying the error queue"](#) on page 534

**Usage:**            Event

**Manual operation:** See ["Clear History"](#) on page 598

#### :SYSTem:ERRor:STATIC?

Returns a list of all errors existing at the time when the query is started. This list corresponds to the display on the info page under manual control.

**Return values:**

<StaticErrors>       string

**Example:**            See [Example"Querying the error queue"](#) on page 534

**Usage:**            Query only

**Manual operation:** See ["Static Notifications/History"](#) on page 597

#### :SYSTem:DLOCK <DispLockStat>

Disables the manual operation over the display, including the front panel keyboard of the instrument.

**Parameters:**

<DispLockStat>       1 | ON | 0 | OFF

\*RST:                n.a. (factory preset: 0)

**Example:**            SYST:DLOC ON

Activates the display lock. The instrument cannot be operated via the display until it has been enabled with SYST:DLOC OFF.

**Manual operation:** See ["User Interface"](#) on page 265  
See ["Enabling a locked user interface for manual operation"](#) on page 266

#### :SYSTem:KLOCK <State>

Disables the front panel keyboard of the instrument.

**Parameters:**

<State>               1 | ON | 0 | OFF

\*RST:                n.a. (factory preset: 0)

**Example:**               SYST:KLOC ON  
Locks the front panel and external controls.  
To enable the controls, send SYST:KLOC OFF.

**Manual operation:** See "User Interface" on page 265  
See "Enabling a locked user interface for manual operation"  
on page 266

### :SYSTem:NINFormation?

Queries the oldest information message ("Error History > Level > Info") in the error/event queue.

**Return values:**

<NextInfo>               string

**Example:**

:SYSTem:NINFormation?

Queries the oldest entry in the info message queue.

Response: 90,"Info;=== Instrument startup...  
==="

Information message containing error number 90, that states, that the instrument startup is complete.

**Usage:**                Query only

### :SYSTem:ULOCK <SecPassWord>, <Mode>

Locks or unlocks the user interface of the instrument.

**Parameters:**

<Mode>                    ENABLEd | DONLy | DISabled | TOFF | VNConly

**ENABLEd**

Unlocks the display, the touchscreen and all controls for the manual operation.

**DONLy**

Locks the touchscreen and controls for the manual operation of the instrument. The display shows the current settings.

**VNConly**

Locks the touchscreen and controls for the manual operation, and enables remote operation over VNC. The display shows the current settings.

**TOFF**

Locks the touchscreen for the manual operation of the instrument. The display shows the current settings.

**DISabled**

Locks the display, the touchscreen and all controls for the manual operation.

\*RST:                    n.a. (factory preset: ENABLEd)

**Setting parameters:**

<SecPassWord> string

**Example:**

:SYST:ULOC "<password>", DIS

Activates the user interface lock, including display and controls.

**Manual operation:**

See ["User Interface"](#) on page 265

See ["Enabling a locked user interface for manual operation"](#) on page 266

**:SYSTem:LOCK:OWNer?**

Queries the sessions that have locked the instrument currently.

If an exclusive lock is set, the query returns the owner of this exclusive lock, otherwise it returns `NONE`.

**Return values:**

<Owner> string

**Example:**

SYST:LOCK:OWN?

Returns the owner of locking.

Response: `NONE`

The instrument is not locked.

**Usage:**

Query only

**:SYSTem:LOCK:RELease:ALL**

Revokes the exclusive access to the instrument.

**Usage:**

Setting only

**:SYSTem:LOCK:REQuest[:EXCLusive]?**

Queries whether a lock for exclusive access to the instrument via ethernet exists. If successful, the query returns a 1, otherwise 0.

**Return values:**

<Success> integer

**Example:**

SYST:LOCK:REQ?

Queries the state of exclusive locking.

Response: 1

The exclusive locking is active.

**Usage:**

Query only

**:SYSTem:SAV <Pathname>**

Saves the current R&S SMB100B settings in a file. To determine the file name and storage location, enter the directory and file name with the command. According to the file type, the R&S SMB100B assigns the extension (`*.savrc1txt`) automatically.

**Setting parameters:**

<Pathname> string

**Example:**

```
SYSTem:SAV "/var/user/temp/Test"  
// saves the file "Test.savrcltxt" in the directory /var/user/temp/.
```

**Usage:**

Setting only

**:SYSTem:RCL <Pathname>**

Selects and uploads a \*.savrcltxt file with previously saved R&S SMB100B settings from the default or a specified directory.

**Setting parameters:**

<Pathname> string

**Example:**

```
SYSTem:RCL "/var/user/temp/Test"  
// loads the "Test.savrcltxt" file from the directory /var/user/temp/.
```

**Usage:**

Setting only

**:SYSTem:PROTECT<ch>[:STATe] <State>[, <Key>]**

Activates and deactivates the specified protection level.

**Suffix:**

<ch> Indicates the protection level.  
See also "[Protection](#)" on page 259

**Parameters:**

<State> 1 | ON | 0 | OFF  
\*RST: n.a. (factory preset: 1)

**Setting parameters:**

<Key> integer

The respective functions are disabled when the protection level is activated. No password is required for activation of a level. A password must be entered to deactivate the protection level. The default password for the first level is 123456. This protection level is required to unlock internal adjustments for example.

**Example:**

To activate protection level:  
SYSTem:PROTECT1:STATe 1  
Internal adjustments or hostname cannot be changed.  
To unlock protection level 1:  
SYSTem:PROTECT1:STATe 0,123456  
Internal adjustments are accessible.

**Manual operation:**

See "[Protection Level/Password](#)" on page 261

---

**:SYSTem:COMMunicate:GPIB:LTERminator** <LTerminator>

Sets the terminator recognition for remote control via GPIB interface.

**Parameters:**

<LTerminator>           STANdard | EOI

**EOI**

Recognizes an LF (Line Feed) as the terminator only when it is sent with the line message EOI (End of Line). This setting is recommended particularly for binary block transmissions, as binary blocks may coincidentally contain a character with value LF (Line Feed), although it is not determined as a terminator.

**STANdard**

Recognizes an LF (Line Feed) as the terminator regardless of whether it is sent with or without EOI.

\*RST:           n.a. (factory preset: STANdard)

**Example:**           See [Example"Finding out VISA resource strings"](#) on page 532.

---

**:SYSTem:COMMunicate:GPIB:RESource?**

Queries the visa resource string for remote control via the GPIB interface.

To change the GPIB address, use the command `:SYSTem:COMMunicate:GPIB[:SELF]:ADDRes`.

**Return values:**

<Resource>           string

**Example:**           See [Example"Finding out VISA resource strings"](#) on page 532.

**Usage:**           Query only

---

**:SYSTem:COMMunicate:GPIB[:SELF]:ADDRes** <Address>

Sets the GPIB address.

**Parameters:**

<Address>           integer

Range:           0 to 30

\*RST:           n.a. (factory preset: 28)

**Example:**           See [Example"Finding out VISA resource strings"](#) on page 532.

**Manual operation:** See ["GPIB Channel Address"](#) on page 299

---

**:SYSTem:COMMunicate:HISLip:RESource?**

Queries the VISA resource string. This string is used for remote control of the instrument with HiSLIP protocol.

**Return values:**

<Resource> string

**Example:** See [Example "Finding out VISA resource strings"](#) on page 532.

**Usage:** Query only

**Manual operation:** See ["HISLIP"](#) on page 298  
See ["GPIB"](#) on page 299

**:SYSTem:COMMunicate:NETWork:IPADdress <IpAddress>**

Sets the IP address.

**Parameters:**

<IpAddress> string  
Range: 0.0.0.0. to ff.ff.ff.ff

**Example:** See [Example "Retrieving information on network-related settings"](#) on page 532.

**Manual operation:** See ["IP Address"](#) on page 296

**:SYSTem:COMMunicate:NETWork:IPADdress:MODE <Mode>**

Selects manual or automatic setting of the IP address.

**Parameters:**

<Mode> AUTO | STATic  
\*RST: n.a. (factory preset: AUTO)

**Example:** See [Example "Retrieving information on network-related settings"](#) on page 532.

**Manual operation:** See ["Address Mode"](#) on page 296

**:SYSTem:COMMunicate:NETWork:MACaddress <MacAddress>**

Queries the MAC address of the network adapter.

This is a password-protected function. Unlock the protection level 1 to access it.

**Parameters:**

<MacAddress> string

**Example:** See [Example "Retrieving information on network-related settings"](#) on page 532.

**Manual operation:** See ["MAC Address"](#) on page 297

**:SYSTem:COMMunicate:NETWork:RESource?**

Queries the visa resource string for Ethernet instruments.



**Return values:**

<Resource> string

**Example:** See [Example "Finding out VISA resource strings"](#) on page 532.

**Usage:** Query only

**Manual operation:** See ["VXI11"](#) on page 298

---

**:SYSTem:COMMunicate:NETWork:REStart**

Restarts the network.

**Example:** See [Example "Restarting the network"](#) on page 532.

**Usage:** Event

**Manual operation:** See ["Restart Network"](#) on page 295

---

**:SYSTem:COMMunicate:NETWork:STATus?**

Queries the network configuration state.

**Return values:**

<State> 1 | ON | 0 | OFF

**Example:** See [Example "Retrieving information on network-related settings"](#) on page 532.

**Usage:** Query only

**Manual operation:** See ["Network Status"](#) on page 295

---

**:SYSTem:COMMunicate:NETWork[:COMMON]:DOMain <Domain>**

Determines the primary suffix of the network domain.

**Parameters:**

<Domain> string

**Example:** See [Example "Retrieving information on network-related settings"](#) on page 532.

**Manual operation:** See ["DNS Suffix"](#) on page 297

---

**:SYSTem:COMMunicate:NETWork[:COMMON]:HOSTname <Hostname>**

Sets an individual hostname for the R&S SMB100B.

**Note:** We recommend that you do not change the hostname to avoid problems with the network connection. If you change the hostname, be sure to use a unique name.

This is a password-protected function. Unlock the protection level 1 to access it.

**Parameters:**

<Hostname> string

**Example:** See [Example"Retrieving information on network-related settings"](#) on page 532.

**Manual operation:** See ["Hostname"](#) on page 296

---

**:SYSTem:COMMunicate:NETWork[:COMMON]:WORKgroup** <Workgroup>

Sets an individual workgroup name for the instrument.

**Parameters:**

<Workgroup> string

**Example:** See [Example"Retrieving information on network-related settings"](#) on page 532.

**Manual operation:** See ["Workgroup"](#) on page 296

---

**:SYSTem:COMMunicate:NETWork[:IPADdress]:DNS** <DNS>

Determines or queries the network DNS server to resolve the name.

**Parameters:**

<DNS> string

**Example:** See [Example"Retrieving information on network-related settings"](#) on page 532.

**Manual operation:** See ["DNS Server"](#) on page 297

---

**:SYSTem:COMMunicate:NETWork[:IPADdress]:GATeway** <Gateway>

Sets the IP address of the default gateway.

**Parameters:**

<Gateway> string  
Range: 0.0.0.0 to ff.ff.ff.ff

**Example:** See [Example"Retrieving information on network-related settings"](#) on page 532.

**Manual operation:** See ["Default Gateway"](#) on page 297

---

**:SYSTem:COMMunicate:NETWork[:IPADdress]:SUBNet:MASK** <Mask>

Sets the subnet mask.

**Parameters:**

<Mask> string

**Example:** See [Example"Retrieving information on network-related settings"](#) on page 532.

**Manual operation:** See ["Subnet Mask"](#) on page 296

---

**:SYSTem:COMMunicate:SERial:BAUD <Baud>**

Defines the baudrate for the serial remote control interface.

**Parameters:**

<Baud> 2400 | 4800 | 9600 | 19200 | 38400 | 57600 | 115200  
\*RST: n.a. (factory preset: 115200)

**Example:** See [Example "Finding out VISA resource strings"](#) on page 532.

**Manual operation:** See ["Baud Rate"](#) on page 300

---

**:SYSTem:COMMunicate:SERial:PARity <Parity>**

Enters the parity for the serial remote control interface.

**Parameters:**

<Parity> NONE | ODD | EVEN  
\*RST: n.a. (factory preset: NONE)

**Example:** See [Example "Finding out VISA resource strings"](#) on page 532.

**Manual operation:** See ["Parity"](#) on page 300

---

**:SYSTem:COMMunicate:SERial:RESource?**

Queries the visa resource string for the serial remote control interface. This string is used for remote control of the instrument.

**Return values:**

<Resource> string

**Example:** See [Example "Finding out VISA resource strings"](#) on page 532.

**Usage:** Query only

**Manual operation:** See ["SERIAL"](#) on page 299

---

**:SYSTem:COMMunicate:SERial:SBITs <SBits>**

Defines the number of stop bits for the serial remote control interface.

**Parameters:**

<SBits> 1 | 2  
\*RST: n.a. (factory preset: 1)

**Example:** See [Example "Finding out VISA resource strings"](#) on page 532.

**Manual operation:** See ["Stop Bits"](#) on page 300

---

**:SYSTem:COMMunicate:SOCKet:RESource?**

Queries the visa resource string for remote control via LAN interface, using TCP/IP socket protocol.

**Return values:**

&lt;Resource&gt; string

**Example:** See [Example "Finding out VISA resource strings"](#) on page 532.**Usage:** Query only**Manual operation:** See ["Socket"](#) on page 298**:SYSTem:COMMunicate:USB:RESource?**

Queries the visa resource string for remote control via the USB interface.

**Return values:**

&lt;Resource&gt; string

**Example:** See [Example "Finding out VISA resource strings"](#) on page 532.**Usage:** Query only**Manual operation:** See ["USB"](#) on page 299**:SYSTem:HELP:EXPort**

Saves the online help as zip archive in the user directory.

**Example:**

```
:SYSTem:HELP:EXPort
MMEM:CDIR?
// "/var/user"
MMEM:CAT?
// ..,"Log,DIR,4096","help.tgz,BIN,69836600"
// confirms that help zip archive is saved.
```

**Usage:** Event**Manual operation::** "Setup > Help > Export Help to User Path"**:SYSTem:IDENtification <Identification>**Selects the mode to determine the "IDN String" and the "OPT String" for the instrument, selected with command [:SYSTem:LANGuage](#).**Note:** While working in an emulation mode, the R&S SMB100B specific command set is disabled, that is, the SCPI command `SYST:IDEN` is discarded.**Parameters:**

&lt;Identification&gt; AUTO | USER

**AUTO**

Automatically determines the strings.

**USER**

User-defined strings can be selected.

**\*RST:** n.a. (factory preset: AUTO)

**Example:**               SYST:IDEN AUTO  
Automatically assigns the OPT and IDN strings according to the selected instrument language.

**Manual operation:** See "[Mode](#)" on page 301

#### :SYSTem:IDENtification:PRESet

Sets the \*IDN and \*OPT strings in user defined mode to default values.

**Example:**               SYST:IDEN USER  
                          SYST:IDEN:PRES

**Usage:**                Event

**Manual operation:** See "[Set to Default](#)" on page 301

#### :SYSTem:IRESpOse <IdnResponse>

Defines the user defined identification string for \*IDN.

**Note:** While working in an emulation mode, the instrument's specific command set is disabled, i.e. the SCPI command SYST:IRES is discarded.

##### Parameters:

<IdnResponse>        string

**Example:**               SYST:IDEN USER  
                          // Selects a user-defined identification  
                          SYST:IRES "Test Device"  
                          // Defines identification string 'test device'  
                          \*IDN?  
                          // Response: 'test device'

**Manual operation:** See "[IDN String](#)" on page 302

#### :SYSTem:ORESpOse <OResponse>

Defines the user defined response string for \*OPT.

**Note:** While working in an emulation mode, the instrument's specific command set is disabled, i.e. the SCPI command SYST:ORES is discarded.

##### Parameters:

<OResponse>         string

**Example:**               SYST:IDEN USER  
                          // Selects a user-defined identification  
                          SYST:ORES "Test Option"  
                          // Defines the OPT string 'test option'  
                          \*OPT?  
                          // Response: 'test option'

**Manual operation:** See "[OPT String](#)" on page 302

---

**:SYSTem:LANGUage** <Language>

Sets the remote control command set.

**Parameters:**

<Language>            string

**Example:**

```
SYSTem:LANGUage "SCPI"  
// selects SCPI command set
```

**Manual operation:** See "[Language](#)" on page 301

---

**:SYSTem:INFormation:SCPI** <InfoString>

Inserts system information in recorded SCPI command lists, for example information on a missing command.

**Parameters:**

<InfoString>           string

**Example:**

```
SYST:INF:SCPI "missing command"  
enters the information into a recorded SCPI command list.
```

---

**:SYSTem:SECurity:NETWork:AVAHi[:STATe]** <SecPassWord>, <AvahiState>

Disables the Avahi service for automatic configuration of the instrument in a network.

**Parameters:**

<AvahiState>            1 | ON | 0 | OFF

**Setting parameters:**

<SecPassWord>          string  
Current security password.

**Example:** See [Example "To disable the LAN interface and LAN services"](#) on page 533.

**Manual operation:** See "[LAN Services](#)" on page 268

---

**:SYSTem:SECurity:NETWork:FTP[:STATe]** <SecPassWord>, <FtpState>

Disables FTP protocol for file transfer between the instrument and host.

**Parameters:**

<FtpState>              1 | ON | 0 | OFF

**Setting parameters:**

<SecPassWord>          string  
Current security password.

**Example:** See [Example "To disable the LAN interface and LAN services"](#) on page 533.

**Manual operation:** See "[LAN Services](#)" on page 268

---

---

**:SYSTEM:SECURITY:NETWORK:HTTP[:STATE]** <SecPassWord>, <HttpState>

Disables control of the instrument over HTTP, the protocol for hypermedia information systems.

**Parameters:**

<HttpState> 1 | ON | 0 | OFF

**Setting parameters:**

<SecPassWord> string  
Current security password.

**Example:** See [Example "To disable the LAN interface and LAN services"](#) on page 533.

**Manual operation:** See ["LAN Services"](#) on page 268

---

**:SYSTEM:SECURITY:NETWORK:RAW[:STATE]** <SecPassWord>, <RawState>

Disables the LAN interface for remote control of the instrument over raw socket port.

**Parameters:**

<RawState> 1 | ON | 0 | OFF

**Setting parameters:**

<SecPassWord> string  
Current security password.

**Example:** See [Example "To disable the LAN interface and LAN services"](#) on page 533.

---

**:SYSTEM:SECURITY:NETWORK:REMSupport[:STATE]** <NetRemSupport>

Disables communication over SSH (SCP) for service purposes.

**Parameters:**

<NetRemSupport> 1 | ON | 0 | OFF  
\*RST: n.a. (factory preset: 1)

**Example:** See [Example "To disable the LAN interface and LAN services"](#) on page 533.

**Manual operation:** See ["LAN Services"](#) on page 268

---

**:SYSTEM:SECURITY:NETWORK:RPC[:STATE]** <SecPassWord>, <RpcState>

Enables the LAN interface for remote control of the instrument via remote procedure calls (RPC).

**Parameters:**

<RpcState> 1 | ON | 0 | OFF

**Setting parameters:**

<SecPassWord> string  
Current security password.

**Example:** See [Example "To disable the LAN interface and LAN services"](#) on page 533.

---

**:SYSTem:SECurity:NETWork:SMB[:STATe]** <SecPassWord>, <SmbState>

Disables access to the file system, printers and serial ports in a network over SMB.

**Parameters:**

<SmbState> 1 | ON | 0 | OFF

**Setting parameters:**

<SecPassWord> string  
Current security password.

**Example:** See [Example "To disable the LAN interface and LAN services"](#) on page 533.

**Manual operation:** See ["LAN Services"](#) on page 268

---

**:SYSTem:SECurity:NETWork:SOE[:STATe]** <SecPassWord>, <SoeState>

Disables control of the instrument over LAN using SCPI commands.

**Parameters:**

<SoeState> 1 | ON | 0 | OFF

**Setting parameters:**

<SecPassWord> string  
Current security password.

**Example:** See [Example "To disable the LAN interface and LAN services"](#) on page 533.

**Manual operation:** See ["LAN Services"](#) on page 268

---

**:SYSTem:SECurity:NETWork:SSH[:STATe]** <SecPassWord>, <SshState>

Disables control of the instrument over LAN using the SSH network protocol.

**Parameters:**

<SshState> 1 | ON | 0 | OFF

**Setting parameters:**

<SecPassWord> string  
Current security password.

**Example:** See [Example "To disable the LAN interface and LAN services"](#) on page 533.

**Manual operation:** See ["LAN Services"](#) on page 268



---

**:SYSTEM:SECURITY:NETWORK:SWUPDATE[:STATE]** <SecPassWord>,  
<SwUpdateState>

Disables software update over LAN.

**Parameters:**

<SwUpdateState> 1 | ON | 0 | OFF

**Setting parameters:**

<SecPassWord> string  
Current security password.

**Example:** See [Example "To disable the LAN interface and LAN services"](#) on page 533.

**Manual operation:** See ["LAN Services"](#) on page 268

---

**:SYSTEM:SECURITY:NETWORK:VNC[:STATE]** <SecPassWord>, <VncState>

Disables the VNC interface for remote control of the instrument.

**Parameters:**

<VncState> 1 | ON | 0 | OFF

**Setting parameters:**

<SecPassWord> string  
Current security password.

**Example:** See [Example "To disable the LAN interface and LAN services"](#) on page 533.

**Manual operation:** See ["LAN Services"](#) on page 268

---

**:SYSTEM:SECURITY:NETWORK[:STATE]** <SecPassWord>, <LanStorState>

Disables the LAN interface in general, including all services.

**Parameters:**

<LanStorState> 1 | ON | 0 | OFF

**Setting parameters:**

<SecPassWord> string  
Current security password.  
The default password is 123456.

**Example:** See [Example "To disable the LAN interface and LAN services"](#) on page 533

**Manual operation:** See ["LAN"](#) on page 268

---

**:SYSTEM:SECURITY:SANITIZE[:STATE]** <SecPassWord>, <MmemProtState>

Sanitizes the internal memory.

**Parameters:**

<MmemProtState> 0 | 1 | OFF | ON  
 \*RST: 0

**Setting parameters:**

<SecPassWord> string

**Example:**

SYSTem:SECurity:SANitize[:STATE] 1

**Manual operation:** See "[Sanitize](#)" on page 264

**:SYSTem:SECurity:SUPolicy** <SecPassWord>, <UpdatePolicy>

Configures the automatic signature verification for firmware installation.

**Parameters:**

<UpdatePolicy> STRict | CONFirm | IGNore  
 \*RST: n.a. (factory preset: CONFirm)

**Setting parameters:**

<SecPassWord> string

**Manual operation:** See "[Secure Update Policy](#)" on page 262

**:SYSTem:SECurity:VOLMode[:STATE]** <SecPassWord>, <MmemProtState>

Activates volatile mode, so that no user data can be written to the internal memory permanently.

To enable volatile mode, reboot the instrument. Otherwise the change has no effect.

**Parameters:**

<MmemProtState> 0 | 1 | OFF | ON  
 \*RST: 0

**Setting parameters:**

<SecPassWord> string  
 Current security password  
 The default password is 123456.

**Example:**

SYSTem:SECurity:VOLMode:STATE "123456", 1  
 SYSTem:REBoot

**Manual operation:** See "[Volatile Mode](#)" on page 263

**:SYSTem:SPECification?** <Id>

Retrieves data sheet information for a specific parameter.

**Setting parameters:**

<Id> string  
Identifies the name of the entry in the data sheet, as queried with the command `:SYSTem:SPECification:IDENTification:CATalog?` on page 555

**Return values:**

<ValList> float  
Comma-separated list with the specified and, if available, the typical value of the parameter, as specified in the data sheet. See also [Chapter 11.6.2.4, "Datasheet"](#), on page 322.

**Example:** See [Example "Retrieving instrument specification"](#) on page 531.

**Usage:** Query only

**:SYSTem:SPECification:VERSion <Version>**

Selects a data sheet version from the data sheets saved on the instrument.

Further queries regarding the data sheet parameters (<Id>) and their values refer to the selected data sheet.

To query the list of data sheet versions, use the command `:SYSTem:SPECification:VERSion:CATalog?` on page 556.

**Parameters:**

<Version> string

**Example:** See `:SYSTem:SPECification?` on page 554.

**:SYSTem:SPECification:IDENTification:CATalog?**

Queries the parameter identifiers (<Id>) available in the data sheet.

**Return values:**

<IdList> string  
Comma-separated string of the parameter identifiers (<Id>)

**Example:** See `:SYSTem:SPECification?` on page 554.

**Usage:** Query only

**:SYSTem:SPECification:PARAMeter? <Id>[, <Parameter>]**

Retrieves data sheet information for a specific parameter.

**Setting parameters:**

<Id> string  
Identifies the name of the entry in the data sheet. Query the data sheet parameters with the command `:SYSTem:SPECification:IDENTification:CATalog?`.

<Parameter>	float
	An additional value the result (ValList) depends on.
<b>Return values:</b>	
<ValList>	float
	Comma-separated list with the specified and, if available, the typical value of the parameter, as specified in the data sheet.
<b>Example:</b>	<p><b>Note:</b> The following values are merely an example. Your instrument may not support the same parameters.</p> <pre>SYST:SPEC:PAR? "ID_RF_FREQ_SETTING_TIME_MS",0.1 SYST:SPEC:PAR? "ID_RF_LEVEL_MAX_GENERAL_DBM", 0.1</pre>
<b>Usage:</b>	Query only

**:SYSTem:SPECification:VERSion:CATalog?**

Queries all data sheet versions stored in the instrument.

**Return values:**

<VersCatalog> string

**Example:** See [:SYSTem:SPECification?](#) on page 554.

**Usage:** Query only

**:SYSTem:SPECification:VERSion:FACTory?**

Queries the data sheet version of the factory setting.

**Return values:**

<Version> string

**Example:** See [:SYSTem:SPECification?](#) on page 554.

**Usage:** Query only

**Manual operation:** See ["Versions"](#) on page 604

**:SYSTem:SRData?**

Queries the SCPI recording data from the internal file.

This feature enables you to transfer an instrument configuration to other test environments, as e.g. laboratory virtual instruments.

**Return values:**

<FileData> block data

**Example:**

```
SYSTem:SRData?
// #3118:SOURce1:ROSCillator:SOURce EXT
// :SOURce1:FREQuency:CW 4000000000
// :SOURce1:FREQuency:OFFSet 1000000
// :SOURce1:AM1:STATe 1
// :OUTPut1:STATe 1
```

**Usage:** Query only

### :SYSTem:STARtup:COMPLete?

Queries if the startup of the instrument is completed.

**Return values:**

```
<Complete> 1 | ON | 0 | OFF
*RST:      0
```

**Example:**

```
SYSTem:STARtup:COMPLete?
Response: 1
// the instrument has started and is ready for operation.
```

**Usage:** Query only

### :SYSTem:DATE <Year>, <Month>, <Day>

Queries or sets the date for the instrument-internal calendar.

This is a password-protected function. Unlock the protection level 1 to access it.

**Parameters:**

```
<Year>      integer
<Month>     integer
             Range:    1 to 12
<Day>      integer
             Range:    1 to 31
```

**Example:** See [Example "Configuring date and time"](#) on page 534.

**Manual operation:** See ["Date"](#) on page 614

### :SYSTem:NTP:HOSTname <NTPName>

Sets the address of the NTP server. You can enter the IP address, or the hostname of the time server, or even set up an own vendor zone. See the Internet for more information on NTP.

**Parameters:**

```
<NTPName>   string
```

**Manual operation:** See ["NTP Address"](#) on page 615

---

**:SYSTem:NTP:STAtE** <UseNtpState>

Activates clock synchronization via NTP.

**Parameters:**

<UseNtpState> 1 | ON | 0 | OFF  
 \*RST: n.a. (factory preset: 0)

**Example:** See [Example"Configuring date and time"](#) on page 534.

**Manual operation:** See ["NTP Address"](#) on page 615

---

**:SYSTem:TIME** <Hour>, <Minute>, <Second>

Queries or sets the time for the instrument-internal clock.

This is a password-protected function. Unlock the protection level 1 to access it.

**Parameters:**

<Hour> integer  
 Range: 0 to 23  
 <Minute> integer  
 Range: 0 to 59  
 <Second> integer  
 Range: 0 to 59

**Example:** See [Example"Configuring date and time"](#) on page 534.

**Manual operation:** See ["Time"](#) on page 614

---

**:SYSTem:TIME:ZONE** <TimeZone>

Sets the timezone. You can query the list of the available timezones with [:SYSTem:TIME:ZONE:CATalog?](#).

**Parameters:**

<TimeZone> string

**Example:** See [Example"Configuring date and time"](#) on page 534.

**Manual operation:** See ["Timezone"](#) on page 615

---

**:SYSTem:TIME:ZONE:CATalog?**

Queries the list of available timezones.

**Return values:**

<Catalog>

**Example:** See [Example"Configuring date and time"](#) on page 534.

**Usage:** Query only

---

**Manual operation:** See ["Timezone"](#) on page 615

---

**:SYSTem:TIME:PROTocol** <TimeProtocol>

Sets the date and time of the operating system.

**Parameters:**

<TimeProtocol> OFF | NONE | 0 | NTP | ON | 1

**NONE**

Sets the date and time according to the selected timezone, see [:SYSTem:TIME:ZONE:CATalog?](#) on page 558 and [:SYSTem:TIME:ZONE](#) on page 558.

**NTP**

Sets the date and time derived from the network time protocol. To select the NTP time server, use the commands [:SYSTem:NTP:HOSTname](#) on page 557 and [:SYSTem:NTP:STATe](#) on page 558.

\*RST: n.a. (factory preset: NONE)

**Example:** See [Example"Configuring date and time"](#) on page 534.

**Manual operation:** See ["Time Protocol"](#) on page 615

---

**:SYSTem:UPTime?**

Queries the up time of the operating system.

**Return values:**

<UpTime> "<ddd.hh:mm:ss>"

**Example:**

SYSTem:UPTime?

Response: "0.08:11:00"

**Usage:** Query only

---

**:SYSTem:BIOS:VERSion?**

Queries the BIOS version of the instrument.

**Return values:**

<Version> string

**Example:**

SYST:BIOS:VERS?

queries the BIOS version.

Response: 123456

**Usage:** Query only

---

**:SYSTem:VERSion?**

Queries the SCPI version the instrument's command set complies with.

**Return values:**

<Version> string

**Example:**

```

SYSTem:VERSion
// queries the SCPI version.
Response: "1996"
// the instrument complies with the SCPI version from 1996.

```

**Usage:** Query only

---

**:SYSTem:OSYSstem?**

Queries the operating system of the instrument.

**Return values:**

<OperSystem> string

**Example:**

```

SYSTem:OSYSstem?
Response: "Linux"

```

**Usage:** Query only

---

**:SYSTem:MMEMory:PATH:USER?**

Queries the user directory, that means the directory the R&S SMB100B stores user files on.

**Return values:**

<PathUser> string

**Example:**

```

SYSTem:MMEMory:PATH:USER?
Response: ""/var/user/"

```

**Usage:** Query only

---

**:SYSTem:DFPRint <Directory>**

Creates a file with the device footprint of the product.

The content is formatted in machine-readable form, suitable for automatic further processing.

The generic file name is composed of

DeviceFootprint\_<SerialNumber>\_<Date>\_<Time>.xml. R&S SMB100B saves the file in the definable directory. If the directory is not specified, it saves the footprint file in the internal default directory (/var/lib/Rohde-Schwarz/DeviceFootprint).

You can download the file by using the SCPI commands of the MMEMory subsystem.

**Setting parameters:**

<Directory> string

Path to the directory for saving the device footprint file.

Ensure that you have the permission to write into the directory.



**Return values:****<DeviceFootprint>** string

Information on the product type, identification and the installed hardware, software and further service-related information on the product's configuration.

**Example:**

```
SYSTem:DFPrint "/var/user/devicefootprint"

SYSTem:DFPrint?
// MMEM:DATA?
// returns the device footprint information saved with SYST:DFPrint
```

**:SYSTem:REBoot**

Reboots the instrument including the operating system.

**Usage:** Event**:SYSTem:REStart**

Restarts the instrument without restarting the operating system.

**Usage:** Event**:SYSTem:SHUTdown**

Shuts down the instrument.

**Usage:** Event**Manual operation:** See "[Shut down](#)" on page 622**:SYSTem:WAIT <TimeMs>**

Delays the execution of the subsequent remote command by the specified time.

This function is useful, for example to execute an SCPI sequence automatically but with a defined time delay between some commands.

See [Chapter 10.2.4, "How to assign actions to the \[★ \(User\)\] key"](#), on page 248.

**Setting parameters:**

**<TimeMs>** integer  
 Wait time in ms  
 Range: 0 to 10000  
 \*RST: 0

**Example:**

```
SYSTem:WAIT 10000
// Waits 10s before resetting the instrument.
*RST
```

**Usage:** Setting only

**:SYSTem:FILEs:TEMPorary:DELeTe**

Deletes the temporary files from the internal memory.

**Example:**                   :SYSTem:FILEs:TEMPorary:DELeTe  
                              // temporary files are removed

**Usage:**                    Event

## 12.17 STATus subsystem

This system contains the commands for the status reporting system. See also [Chapter 11.4, "Status reporting system"](#), on page 289 for detailed information.

\*[RST](#) on page 364 has no effect on the status registers.

### Value ranges

- Queries return the current value of the respective register, which permits a check of the device status.  
Return values: A decimal value in the range 0 to 32767 ( $=2^{15}-1$ )
- The configuration commands set the respective register thus determining which status changes of the R&S SMB100B cause the status registers to be changed.  
Setting values: A decimal value in the range 0 to 32767 ( $=2^{15}-1$ )

:STATus:OPERation:CONDition?	562
:STATus:OPERation:ENABle	563
:STATus:OPERation[:EVENT]	563
:STATus:OPERation:NTRansition	563
:STATus:OPERation:PTRansition	563
:STATus:PRESet	564
:STATus:QUEStionable:CONDition	564
:STATus:QUEStionable:ENABle	564
:STATus:QUEStionable[:EVENT]	564
:STATus:QUEStionable:NTRansition	565
:STATus:QUEStionable:PTRansition	565
:STATus:QUEue[:NEXT]?	565

**:STATus:OPERation:CONDition?**

Queries the content of the CONDition part of the STATus:OPERation register.

This part contains information on the action currently being performed in the instrument. The content is not deleted after being read out because it indicates the current hardware status.

**Return values:**

<Condition>               string

**Example:**                   :STATus:OPERation:CONDition?

**Usage:**                    Query only

---

**:STATus:OPERation:ENABle** <Enable>

Sets the bits of the ENABle part of the STATus:OPERation register. This setting determines which events of the Status-Event part are forwarded to the sum bit in the status byte. These events can be used for a service request.

**Parameters:**

<Enable> string

**Example:**

:STAT:OPER:ENAB 32767

all events are forwarded to the sum bit of the status byte.

---

**:STATus:OPERation[:EVENT]** < >

Queries the content of the EVENT part of the STATus:OPERation register. This part contains information on the actions performed in the instrument since the last readout. The content of the EVENT part is deleted after being read out.

**Parameters:**

< > string

**Example:**

:STAT:OPER:EVEN?

queries the STATus:OPERation:EVENT register.

---

**:STATus:OPERation:NTRansition** <Ntransition>

Sets the bits of the NTRansition part of the STATus:OPERation register. If a bit is set, a transition from 1 to 0 in the condition part causes an entry to be made in the EVENT part of the register. The disappearance of an event in the hardware is thus registered, for example the end of an adjustment.

**Parameters:**

<Ntransition> string

**Example:**

:STAT:OPER:NTR 0

a transition from 1 to 0 in the condition part of the Status:Operation register does not cause an entry to be made in the EVENT part.

---

**:STATus:OPERation:PTRansition** <Ptransition>

Sets the bits of the PTRansition part of the STATus:OPERation register. If a bit is set, a transition from 0 to 1 in the condition part causes an entry to be made in the EVENT part of the register. A new event in the hardware is thus registered, for example the start of an adjustment.

**Parameters:**

<Ptransition> string

**Example:**

:STAT:OPER:PTR 32767

all transitions from 0 to 1 in the condition part of the Status:Operation register cause an entry to be made in the EVENT part.

---

**:STATus:PRESet** <Preset>

Resets the status registers. All PTRansition parts are set to FFFFh (32767), i.e. all transitions from 0 to 1 are detected. All NTRansition parts are set to 0, i.e. a transition from 1 to 0 in a CONDition bit is not detected. The ENABLE parts of STATus:OPERation and STATus:QUEStionable are set to 0, i.e. all events in these registers are not passed on.

**Parameters:**

<Preset>                      string

**Example:**

STAT:PRESet  
resets the status registers.

**:STATus:QUEStionable:CONDition** <Condition>

Queries the content of the CONDition part of the STATus:QUEStionable register. This part contains information on the action currently being performed in the instrument. The content is not deleted after being read out since it indicates the current hardware status.

**Parameters:**

<Condition>                      string

**Example:**

:STATus:QUEStionable:CONDition?  
queries the Status:Questionable:Condition register.

**:STATus:QUEStionable:ENABLE** <Enable>

Sets the bits of the ENABLE part of the STATus:QUEStionable register. The enable part determines which events of the STATus:EVENT part are enabled for the summary bit in the status byte. These events can be used for a service request.

If a bit in the ENABLE part is 1, and the corresponding EVENT bit is true, a positive transition occurs in the summary bit. This transition is reported to the next higher level.

**Parameters:**

<Enable>                      string

**Example:**

STAT:QUES:ENAB 1  
Problems when performing an adjustment cause an entry to be made in the sum bit.

**:STATus:QUEStionable[:EVENT]** <>

Queries the content of the EVENT part of the STATus:QUEStionable register. This part contains information on the actions performed in the instrument since the last readout. The content of the EVENT part is deleted after being read out.

**Parameters:**

<>                      string

**Example:**                    `STAT:QUES:EVEN?`  
queries the Status:Questionable:Event register.

---

**:STATus:QUESTionable:NTRansition <Ntransition>**

Sets the bits of the NTRansition part of the STATus:QUESTionable register. If a bit is set, a transition from 1 to 0 in the condition part causes an entry to be made in the EVENT part of the register.

**Parameters:**  
<Ntransition>               string

**Example:**                    `STAT:QUES:NTR 0`  
a transition from 1 to 0 in the condition part of the STATus:QUESTionable register does not cause an entry to be made in the EVENT part

---

**:STATus:QUESTionable:PTRansition <PTransition>**

Sets the bits of the NTRansition part of the STATus:QUESTionable register. If a bit is set, a transition from 1 to 0 in the condition part causes an entry to be made in the EVENT part of the register.

**Parameters:**  
<PTransition>               string

**Example:**                    `STAT:QUES:PTR 32767`  
all transitions from 0 to 1 in the condition part of the STATus:QUESTionable register cause an entry to be made in the EVENT part

---

**:STATus:QUEue[:NEXT]?**

Queries the oldest entry in the error queue and then deletes it. Positive error numbers denote device-specific errors, and negative error numbers denote error messages defined by SCPI. If the error queue is empty, 0 ("No error") is returned.

The command is identical to `:SYSTEM:ERROR[:NEXT]?` on page 538.

**Return values:**  
<Next>                       string

**Example:**                    `:STATus:QUEue?`  
queries the oldest entry in the error queue.  
Response: 0, 'no error'  
no errors have occurred since the error queue was last read out

**Usage:**                       Query only

## 12.18 TEST subsystem

The TEST subsystem contains the commands for performing test routines directly at the hardware assemblies.

The selftest responses with a 0 if the test is performed successfully, otherwise a value other than 0 is returned. None of the commands of this system has a \*RST value.

### Example: Testing the screen display

```
// show the check screen
:TEST:PIXel:WINDow 1
// select the color for the display, e.g. blue
TEST:PIXel:COLor BLUE
// select the sequence for changing the color automatically
TEST:PIXel:COLor AUTO //(~3s per color)
// select a specific RGB color, e.g. black
TEST:PIXel:RGBA 0,0,0,255
// turn on the gradient
TEST:PIXel:GRADient 1
// switch to text mode
:TEST:PIXel:TEXT 1
// set the point size of the text
:TEST:PIXel:POINtsize 600
// exit the check screen
:TEST:PIXel:WINDow 0
```

:TEST<hw>:ALL:START.....	566
:TEST<hw>:ALL:RESult?.....	566
:TEST:PIXel:COLor.....	567
:TEST:PIXel:GRADient.....	567
:TEST:PIXel:POINtsize.....	567
:TEST:PIXel:RGBA.....	567
:TEST:PIXel:TEXT.....	568
:TEST:PIXel:WINDow.....	568

---

#### :TEST<hw>:ALL:START

**Usage:**                   Event

Starts the selftest. Use the command `:TEST<hw>:ALL:RESult?` to query the result.

---

#### :TEST<hw>:ALL:RESult?

Queries the result of the performed selftest. Start the selftest with `:TEST<hw>:ALL:START`.

**Return values:**

<Result>                   0 | 1 | RUNning | STOPped  
 \*RST:                   STOPped

**Usage:** Query only

---

**:TEST:PIXel:COLor** <PixTestColor>

Selects the color of the screen.

"AUTO" switches from one color to the next in time intervals of approximately 3 s per color.

**Setting parameters:**

<PixTestColor> RED | BLUE | WHITE | GREEN | AUTO | GR25 | GR50 | GR75 | BLACK  
 \*RST: RED

**Example:** See [Example "Testing the screen display"](#) on page 566.

**Usage:** Setting only

**Manual operation:** See ["Check Display Screen"](#) on page 620

---

**:TEST:PIXel:GRADient** <PixTestGradStat>

Activates the gradient for display screen test.

**Parameters:**

<PixTestGradStat> 1 | ON | 0 | OFF  
 \*RST: 0

**Example:** See [Example "Testing the screen display"](#) on page 566.

**Manual operation:** See ["Check Display Screen"](#) on page 620

---

**:TEST:PIXel:POINTsize** <PixTestGradStat>

Sets the point size of the test text.

**Parameters:**

<PixTestGradStat> integer  
 Range: 0 to 999  
 \*RST: n.a. (no preset. default: 0)

**Example:** See [Example "Testing the screen display"](#) on page 566.

**Manual operation:** See ["Check Display Screen"](#) on page 620

---

**:TEST:PIXel:RGBA**

Sets a specific RGBA color for the screen.

**Example:** See [Example "Testing the screen display"](#) on page 566.

**Manual operation:** See ["Check Display Screen"](#) on page 620

---

**:TEST:PIXel:TEXT** <PixTestGradStat>

Activats the test text mode.

**Parameters:**

<PixTestGradStat> 1 | ON | 0 | OFF  
\*RST: 0

**Example:** See [Example "Testing the screen display"](#) on page 566.

**Manual operation:** See ["Check Display Screen"](#) on page 620

---

**:TEST:PIXel:WINDow** <PixTestWindow>

Activates the check display screen.

**Setting parameters:**

<PixTestWindow> 1 | ON | 0 | OFF  
\*RST: 0

**Example:** See [Example "Testing the screen display"](#) on page 566.

**Usage:** Setting only

**Manual operation:** See ["Check Display Screen"](#) on page 620

## 12.19 TRIGger subsystem

The TRIGger system contains the commands for selecting the trigger source for the RF and LF sweep.

You can work with an internal or with an externally applied trigger signal. In this case, use the commands in the SOURce:INPut subsystem to configure the signal.

The trigger system of the R&S SMB100B is a simplified implementation of the SCPI trigger system. The TRIGger system differs from the SCPI system as follows:

- No INITiate command; the instrument behaves as if INITiate:CONTinuous ON were set.
- Under TRIGger several sweep subsystems exist.
- The trigger source names correspond directly to the various settings of manual control. SCPI uses different names which are also accepted by the instrument. The SCPI names should be used if compatibility is an important consideration.

In addition to these commands, see more trigger-related commands in the modulation and RF signal subsystems.

*Table 12-1: Cross-reference between the manual and remote control*

R&S proprietary value name	SCPI conform value name	Parameter in manual control
AUTO	IMMediate	"Auto" mode
SINGLE	BUS	"Single" mode.



R&S proprietary value name	SCPI conform value name	Parameter in manual control
EXTernal	EXTernal	"Ext Single" and "Ext Step" mode. Use command <code>LFO:SWEep:MODE</code> to select between the two sweep modes.
EAUTo	-	"Ext Start/Stop" mode.

<code>:TRIGger&lt;hw&gt;:FSweep:SOURce</code> .....	569
<code>:TRIGger&lt;hw&gt;:LFFSweep:SOURce</code> .....	569
<code>:TRIGger&lt;hw&gt;:PSweep:SOURce</code> .....	569
<code>:TRIGger&lt;hw&gt;[:SWEep]:SOURce</code> .....	569
<code>:TRIGger&lt;hw&gt;:FPSweep:SOURce</code> .....	570
<code>:TRIGger&lt;hw&gt;:FSweep[:IMMediate]</code> .....	571
<code>:TRIGger&lt;hw&gt;:LFFSweep:IMMediate</code> .....	571
<code>:TRIGger&lt;hw&gt;:PSweep[:IMMediate]</code> .....	571
<code>:TRIGger&lt;hw&gt;[:SWEep][:IMMediate]</code> .....	571
<code>:TRIGger&lt;hw&gt;:LFFSweep</code> .....	571

---

```

:TRIGger<hw>:FSweep:SOURce <Source>
:TRIGger<hw>:LFFSweep:SOURce <Source>
:TRIGger<hw>:PSweep:SOURce <Source>
:TRIGger<hw>[:SWEep]:SOURce <Source>

```

Selects the trigger source for the corresponding sweeps:

- `FSweep` - RF frequency
- `LFFSweep` - LF frequency
- `PSweep` - RF level
- `SWEep` - all sweeps

The source names of the parameters correspond to the values provided in manual control of the instrument. They differ from the SCPI-compliant names, but the instrument accepts both variants.

Use the SCPI name, if compatibility is an important issue. Find the corresponding SCPI-compliant commands in [Cross-reference between the manual and remote control](#).

#### Setting parameters:

```
<Source>          AUTO | IMMediate | SINGLE | BUS | EXTernal | EAUTo
```

#### **AUTO [IMMediate]**

Executes a sweep automatically.

In this free-running mode, the trigger condition is met continuously. I.e. when a sweep is completed, the next one starts immediately.

**SINGle [BUS]**

Executes one complete sweep cycle.

The following commands initiate a trigger event:

\*TRG on page 365

```
[ :SOURce<hw> ] :SWEep:POWer:EXECute
[ :SOURce<hw> ] :SWEep [ :FREQuency ] :EXECute
:TRIGger<hw> [ :SWEep ] [ :IMMediate ], :TRIGger<hw> :
PSWep [ :IMMediate ] and :TRIGger<hw> :FSWep [ :
IMMediate ].
```

Set the sweep mode with the commands:

```
[ :SOURce<hw> ] :SWEep:POWer:MODEAUTO | STEP
[ :SOURce<hw> ] :SWEep [ :FREQuency ] :MODEAUTO | STEP
[ :SOURce<hw> ] :LFOutput:SWEep [ :FREQuency ] :MODE
AUTO | STEP
```

In step mode (STEP), the instrument executes only one step.

**EXtErnal**

An external signal triggers the sweep.

**EAUTo**

An external signal triggers the sweep. When one sweep is finished, the next sweep starts.

A second trigger event stops the sweep at the current frequency, a third trigger event starts the trigger at the start frequency, and so on.

```
*RST:      AUTO
```

**Example:** See [Example "Setup an LF sweep"](#) on page 472

**Usage:** Setting only

**:TRIGger<hw>:FPSWep:SOURce <FpTrigSource>**

Selects the trigger source for the combined RF frequency / level sweep.

The parameter names correspond to the manual control. If needed, see [table Table 12-1](#) for selecting the trigger source with SCPI compliant parameter names.

**Parameters:**

<FpTrigSource> AUTO | IMMediate | SINGle | BUS | EXtErnal | EAUTo

**AUTO|IMMediate**

Executes the combined RF sweep automatically. In this free-running mode, the trigger condition is met continuously. I.e. as soon as a sweep is completed, the next one starts immediately.

**SINGle|BUS**

Executes one complete sweep cycle triggered by the GPIB commands [ :SOURce<hw> ] :SWEep:COMBined:EXECute or \*TRG. The mode has to be set to [ :SOURce<hw> ] :SWEep:COMBined:MODE > AUTO.

**EXtErnal**

An external signal triggers the sweep.

**EAUTO**

An external signal triggers the sweep. As soon as one sweep is finished, the next sweep starts. A second trigger event stops the sweep at the current frequency and level value pairs, a third trigger event starts the trigger at the start values, and so on.

\*RST: No enum range assigned!

**Manual operation:** See "[Mode](#)" on page 132

**:TRIGger<hw>:FSweep[:IMMediate]**  
**:TRIGger<hw>:LFFSweep:IMMediate**  
**:TRIGger<hw>:PSweep[:IMMediate]**  
**:TRIGger<hw>[:SWEep][:IMMediate]**

Performs a single sweep and immediately starts the activated, corresponding sweep:

- FSweep - RF frequency
- PSweep - RF level
- LFFSweep - LF frequency
- SWEep - all sweeps

Effective in the following configuration:

- TRIG:FSW|LFFS|PSW|[ :SWE ] : SOUR **SING**
- SOUR:SWE:FREQ|POW:MODE **AUTO** or SOUR:LFO:SWE:[FREQ:] MODE **AUTO**

Alternatively, you can use the `IMMediate` command instead of the respective `SWEep` : `[FREQ:] | POW:EXECute` command.

**Example:** TRIG  
Starts all active sweeps.

**Usage:** Event

**Manual operation:** See "[Execute Single Sweep](#)" on page 136

**:TRIGger<hw>:LFFSweep**

Executes an LF frequency sweep in the following configuration:

- TRIG:LFFS:SOUR SING
- LFO:SWE:MODE AUTO

**Example:** LFO:SWE:MODE AUTO  
TRIG:LFFS:SOUR SING  
TRIG:LFFSweep

**Usage:** Event

## 12.20 UNIT subsystem

The `UNIT` subsystem is used to set default units for parameters if no unit is indicated in a command. These settings are valid for the entire instrument.

### Example: Setting default units for remote control

```
UNIT:POW V
UNIT:ANGL DEG
```

Sets V (volts) as unit of all power parameters, DEG (degrees) for the phase modulation angle and KMH for the speed.

```
:UNIT:ANGLE.....572
:UNIT:POWer.....572
```

---

#### :UNIT:ANGLE <Angle>

Sets the default unit for phase modulation angle. The command affects no other parameters, such as RF phase, or the manual control or display.

#### Parameters:

```
<Angle>          DEGRee | DEGRee | RADian
                  *RST:      RADian
```

---

#### :UNIT:POWer <Power>

Sets the default unit for all power parameters. This setting affects the GUI, as well as all remote control commands that determine power values.

#### Parameters:

```
<Power>          V | DBUV | DBM
                  *RST:      DBM
```

## 12.21 Direct commands for the stereo/rds coder option R&S SMBB-B5

The direct commands allow you the access to all functions of the stereo coder option R&S SMBB-B5.

Some of the functions are also available via SCPI commands. In this case, we recommend that you use the SCPI commands to keep the settings of the R&S SMB100B and the stereo coder synchronized. Direct commands for which an SCPI command is available are marked with "for documentation reasons only" and the SCPI command is given.

To send the direct commands, use the command `[ :SOURce ] :STEReo:DIRect "command string"`.

To retrieve information, send the query `[ :SOURCE ] :STEReo:DIRect? "command string"`.

All parameters are string parameters. Send them in quotation marks ("). These characters are part of the full direct command.

Before using the stereo coder, activate stereo modulation of the R&S SMB100B with the command `SOURCE:STEReo:STATe ON`. The SCPI command `SOURCE:STEReo:AUDio:FREQuency` sets the LF-Generator frequency. `SOURCE:STEReo:MMF` limits the modulation frequency. These commands have no counterpart in the direct commands.

### 12.21.1 Programming examples

#### Example: Alternative frequency lists (AF)

Alternative frequency lists can be transmitted in two ways.

- **Method A:**  
Set the frequencies of an AF list one after the other; the frequency currently transmitted has to be specified as the first frequency.
- **Method B:**  
Set the frequencies of an AF list in pairs, where each pair contains the frequency currently transmitted and an alternative frequency.  
Enter the frequency pairs in ascending order.  
Choose descending order only if the alternative frequencies belong to different regions or are used to broadcast different programs at different times.

A maximum of five AF lists can be generated. For type A lists, max. 25 frequencies per list can be specified, for type B lists, max. 12 frequencies per list.



Consider the following:

- Do not combine method A and B.
- You can generate a maximum of five AF lists.  
For type A lists, you can specify up to 25 frequencies per list; for type B - up to 12.
- There is no validity check for the frequency lists. Make sure that the syntax is correct.

```
// Method A
// Generate a new alternative frequency list
STEReo:DIRect "AF=N,87.6,87.7,87.8"
// Set the group sequence
STEReo:DIRect "GS=0A,14A"
// The group sequence must contain group 0A
// The alternative frequencies are now transmitted in group 0A

// Add another alternative frequency list
STEReo:DIRect "AF=+,88.6,88.7,88.8"
```

## Direct commands for the stereo/rds coder option R&amp;S SMBB-B5

```
// Method B
// Generate a new alternative frequency list
STEReo:DIrect "AF=N,87.6,90.2,87.6,90.2"
// Set the group sequence
STEReo:DIrect "GS=0A,14A"
// The group sequence must contain group 0A
// The alternative frequencies are now transmitted in group 0A

// Add another alternative frequency list
STEReo:DIrect "AF=+,88.6,91.2,88.6,91.2"
```

**Example: Creating an EON (Enhanced Other Networks) data set**

```
// Query the list of existing EON data sets
STEReo:DIrect? "EON-PI"
// the list shows the EON PI codes already used and codes remaining for new data sets

// Create an EON data set
STEReo:DIrect "EON-PI=1234"
// Set the program service (PS) name for the EON data set
STEReo:DIrect "EON-PS=1234,TEST EON"
// Set the group sequence, e.g. group 14A with variants 0 to 3
STEReo:DIrect "GS=0A,14A"

// Create an AF list for the EON
// Method A
STEReo:DIrect "EON-AFA=1234,N,87.6,87.7,87.8"
// Add further AF lists for the EON
STEReo:DIrect "EON-AFA=1234,+,88.6,88.7,88.8"
// Query the first AF list of the EON
STEReo:DIrect? "EON-AFA,1234,1"

// Create an AF list for the EON
// Method B
STEReo:DIrect "EON-AFB=1234,N,87.6,87.7,87.8"
// 87.6 = tuned frequency, 87.7 = mapped frequency 1 (variant 5),
// 87.8 = mapped frequency 2 (variant 6)
```

**Example: Free Format Groups (FFGs)**

In the user-definable groups 1A, 3A, 5A, 6A, 7A, 8A, 9A, 10A, 11A, 12A and 13A, any desired data can be transmitted. Five bits of this data are transmitted in block B and 16 bits each in blocks C and D of the specified group.

You can define up to 20 different data sequences.

```
// Define the transmitted data in group 1A
STEReo:DIrect "1A=05,0000000000,1FFFFFFFFF"
// Group 1A transmits 5 times "0000000000" followed by 5 times "1FFFFFFFFF"

// Set the group sequence, e.g. transmit the defined data in group 1A
STEReo:DIrect "GS=0A,1A"
```

**Example: Transparent Mode**

The transparent mode allows you to transmit user-defined binary data instead of the standard RDS data. The transparent mode uses blocks A to D of the RDS groups. Standard RDS data is suppressed and not transmitted.

You can define up to 20 different data sequences.

The binary data is sent even if it constitutes no valid or meaningful RDS data. Always delete the transparent data first, before you resume the transmission of standard RDS data.

```
// Transmit the alternating sequences '0123456789ABCDEF' and
// 'ABCDEF0123456789' instead of the RDS data

// Delete the transparent data
// Enable standard RDS data transmission
STEReo:DIrect "TRANS=0"
```

**12.21.2 Remote-control commands**


---

**STEReo:DIrect "<FFG>=<RetrNumb>,<DataSeq#1>,<DataSeq#2>,..."**  
**STEReo:DIrect? "<FFG>"**

Transmits data via free format groups (FFGs). A free format group can be filled with any desired data. (5 bits in block B and 16 bits each in blocks C and D of the group).

**Note:** This command causes that a queue is filled with data for a specific group. Sends the data only if the group in question is added to the group sequence with the command [STEReo:DIrect](#).

**Setting parameters:**

<RetrNumb>	Number of retransmissions
<DataSeq>	You can define up to 20 different data sequences. Specify at least 10 characters per <DataSeq>. Add leading zeros, if any. 00 Erases the data. Range: 0000000000 to 1FFFFFFFFF (10 ASCII coded hexadecimal characters each)

**Parameters for setting and query:**

<FFG>	1A   3A   5A   6A   7A   8A   9A   10A   11A   12A   13A Determines the free format group. To transmit the FFGs of the B group, use same commands. Replace the A groups are by the B groups in the group sequence. If B groups are transmitted, block C is overwritten with the PI code.
-------	---

Direct commands for the stereo/rds coder option R&amp;S SMBB-B5

**Example:**           STEReo:DIReCt "1A=01,0123456789,1FFFFFFFFF"  
 Fills a queue with the data "0123456789,1FFFFFFFFF". The data is sent in consecutive order in group 1A after group 1A is added to the group sequence.  
 Query the data of group 1A  
 STEReo:DIReCt? "1A"  
 Response: "01,0123456789,1FFFFFFFFF"

**STEReo:DIReCt "AF=<A>,<Freq#1>,<Freq#2>,..."**  
**STEReo:DIReCt? "AF<z>"**

Defines an alternative frequency list.

A maximum of five AF lists with max. 25 frequencies per list can be created.

**Parameters:**

<Freq>               xxx.x  
 Sets the alternative frequencies as ASCII coded decimal numbers.  
 If list <z> is not available, the response is ().  
 Range:           87.6 to 107.9

**Setting parameters:**

<A>                   **N**  
 New AF list  
 +  
 AF list to be added.

**Query parameters:**

<z>                   AF list to be read.  
 Range:           1 to 5

**Example:**           STEReo:DIReCt "AF=N,97.4,98.3"  
 Defines an alternative frequency list, the alternative frequencies 97.4 and 98.3 are inserted.  
 STEReo:DIReCt? "AF1"  
 Response: "97.4,98.3"  
 STEReo:DIReCt "AF=N"  
 Deletes all frequency lists.

**STEReo:DIReCt "ARI=<State>"**  
**STEReo:DIReCt? "ARI"**

(for documentation reasons only)

Activates ARI signal transmission.

Use the command [ :SOURce ] :STEReo:ARI:STATe instead.

**Setting parameters:**

<State>               0 | 1



Direct commands for the stereo/rds coder option R&amp;S SMBB-B5

**Example:**           STEReo:DIReCt "ARI=0"  
Deactivates ARI signal transmission.  
STEReo:DIReCt? "ARI"  
Response: "0"

**STEReo:DIReCt "ARI-DEV=<Deviation>"**  
**STEReo:DIReCt? "ARI-DEV"**

(for documentation reasons only)

Sets the frequency deviation of the ARI signal (max. deviation).

Use the command `[ :SOURce ] :STEReo:ARI [ :DEViAtion ]` instead.

**Setting parameters:**

<Deviation>           Sets the frequency deviation.  
**Note:** Always set a four-digit value. Specify leading zeros, if any.  
Range:           0000 to 1000 (ASCII coded decimal numbers),  
                    corresponding to 0 Hz to 10 kHz

**Example:**           STEReo:DIReCt "ARI-DEV=1000"  
Sets the ARI frequency deviation to 10 kHz.  
STEReo:DIReCt? "ARI"  
Response: "1000"

**STEReo:DIReCt "ARI-ID=<Id>"**  
**STEReo:DIReCt? "ARI-ID"**

(for documentation reasons only)

Selects the ARI identification.

Use the command `[ :SOURce ] :STEReo:ARI :TYPE` instead.

**Parameters:**

<Id>                   0 | 1 | 2 | 3  
**0**  
Off  
**1**  
DK (traffic announcement identification)  
**2**  
BK (area identification)  
**3**  
DK and BK (traffic announcement identification and area identification)

**Example:**           STEReo:DIReCt "ARI-ID=0"  
Deactivates the ARI identification.  
STEReo:DIReCt? "ARI-ID"  
Response: "0"

**STEReo:DIReCt "BIN=<x>"**

Defines and sends, or queries, binary test patterns. The BIN command causes the Stereo/RDS Coder to send periodic binary bit patterns instead of RDS data.

**Parameters:**

<x>	<b>0</b> Binary mode OFF
	<b>1</b> 00000000...,
	<b>2</b> 11111111...,
	<b>3</b> 01010101...,
	<b>4</b> 11001100...

**Example:**

```
STEReo:DIReCt "BIN=2"
```

The binary test pattern is set to "2" so that only "1s" are transmitted.

**STEReo:DIReCt "BK=<Code>"****STEReo:DIReCt? "BK"**

(for documentation reasons only)

Sets the ARI area identification.

Use the command `[ :SOURce ] :STEReo:ARI: BK [ :CODE ]` instead.

**Parameters:**

<Code>	A   B   C   D   E   F
--------	-----------------------

**Example:**

```
STEReo:DIReCt "BK=E"
```

The ARI area identification is set to "E".

```
STEReo:DIReCt? "BK"
```

Response: "E"

**STEReo:DIReCt "CT= <Hour>:<Min>:<Sec>,<Day>.<Month>.<Year>"****STEReo:DIReCt? "CT"**

Sets and activates transmission of the real-time clock.

**Note:** The CT data is transmitted in group 4A. Setting the real-time clock (CT command) automatically adds group 4A to the group sequence.

Do not manually add group 4A to, or remove group 4A from, the group sequence.

To remove group 4A from the group sequence, use the command `STEReo:DIReCt.`

**Setting parameters:**

<Hour>:<Min>:<Sec> Range: 00:00:00 to 23:59:59

Direct commands for the stereo/rds coder option R&amp;S SMBB-B5

<Day>.<Month>.<Year> Range: 01.01.00 to 31.12.85

**Example:** STEReo:DIRect "CT=20:30:59,01.08.03"  
The real-time clock is set.  
STEReo:DIRect? "CT"  
Response: "20:31:06,01.08.03"

**STEReo:DIRect "CT=off"**

Deactivates transmission of the real-time clock signal in the RDS signal.

**Note:** This command is used to remove group 4A from the group sequence. Do not manually remove group 4A from the group sequence.

**Example:** STEReo:DIRect "CT=off"  
The real-time clock signal is no longer transmitted in the RDS signal.

**Usage:** Setting only

**STEReo:DIRect "DI=<x>"****STEReo:DIRect? "DI"**

Sets or reads the decoder information (DI).

This command reads, and if necessary changes, the current decoder operating mode (mono, stereo, etc.).

**Parameters:**

<x> Range: 0 to F (ASCII coded hexadecimal numbers)

**Example:** STEReo:DIRect "DI=4"

**STEReo:DIRect "DS=<x>"****STEReo:DIRect? "DS"**

(for documentation reasons only)

Selects/activates a storage area in the Stereo/RDS Coder.

If activated, the settings stored in the selected area can be loaded.

Use the command [:SOURce]:STEReo:RDS:DATaset instead.

**Parameters:**

<x> Range: 1 to 5

**Example:** STEReo:DIRect "DS=2"  
Storage area 2 is activated.

---

**STEReo:DIRect** "EON-AFA= <PI>,<A>,<Freq#1>,<Freq#2>,..."  
**STEReo:DIRect?** "EON-AFA,<PI>,<z>"

Enhanced Other Networks: Defines type A alternative frequencies for the EON with the selected PI.

**Parameters:**

<PI>                      Range:        0000 to FFFF (ASCII coded hexadecimal numbers)

<Freq>                    xxx.x  
 Sets the alternative frequencies as ASCII coded decimal numbers.

If list <z> is not available, the response is ().

**Note:** For each Enhanced Other Network (EON), a maximum of five type A alternative frequency lists can be created.

Range:        87.6 to 107.9

**Setting parameters:**

<A>                        **N**  
 New AF list  
**+**  
 AF list to be added.

**Query parameters:**

<z>                        AF list to be read.  
 Range:        1 to 5

**Example:**

STEReo:DIRect "EON-AFA=1000,N,97.4,98.3"

Creates a type A alternative frequency list for the EON with PI=1000. The new list contains the alternative frequencies 97.4 MHz and 98.3 MHz.

STEReo:DIRect? "EON-AFA,1000,1"

Queries the first type A alternative frequency list of the EON with PI=1000.

Response: "97.4,98.3"

---

**STEReo:DIRect** "EON-AFB= <PI>,<A>,<Freq#1>,<Freq#2>,..."  
**STEReo:DIRect?** "EON-AFB,<PI>,<z>"

Enhanced Other Networks: Defines type B alternative frequencies for the EON with the selected PI.

**Parameters:**

<PI>                      Range:        0000 to FFFF (ASCII coded hexadecimal numbers)

Direct commands for the stereo/rds coder option R&S SMBB-B5

<Freq>                   xxx.x

Sets the alternative frequencies as ASCII coded decimal numbers.

If list <z> is not available, the response is ().

**Note:** For each Enhanced Other Network (EON), a maximum of five type B alternative frequency lists can be created. Each list contains a maximum of five frequencies, where <Freq#1> is Tuned Frequency (TF) and <Freq#2..5> are the Mapped Frequencies (MF). A minimum of two frequencies per EON is required.

Range:        87.6 to 107.9

**Setting parameters:**

<A>                    **N**

New AF list

**+**

AF list to be added.

**Query parameters:**

<z>                    AF list to be read.

Range:        1 to 5

**Example:**            See [STEReo:DIRect](#).

**STEReo:DIRect "EON-DEL=<PI>"**

Enhanced Other Networks: Deletes the complete EON with selected <PI>.

**Parameters:**

<PI>                   Range:        0000 to FFFF (ASCII coded hexadecimal numbers)

**Example:**            STEReo:DIRect "EON-DEL=1000"

Deletes the EON with PI=1000.

**Usage:**             Setting only

**STEReo:DIRect "EON-PI=<PI>"**

**STEReo:DIRect? "EON-PI"**

Enhanced Other Networks: Creates an EON or reads the list of the program identification (PI) codes of all EONs created so far.

**Note:** A maximum of eight EONs can be created.

**Parameters:**

<PI>                   **Note:** Always set a four-digit value. Leading zeros, if any, must also be specified.

Range:        0000 to FFFF (ASCII coded hexadecimal numbers)

Direct commands for the stereo/rds coder option R&amp;S SMBB-B5

**Example:**                   STEReo:DIRect "EON-PI=1000"  
Creates an EON with PI=1000.

---

**STEReo:DIRect "EON-PS=<PI>,<PS>"**  
**STEReo:DIRect? "EON-PS,<PI>"**

Enhanced Other Networks: Sets the program service (PS) name for the EON with the selected <PI>.

**Parameters:**

<PI>                         Range:        0000 to FFFF (ASCII coded hexadecimal numbers)

**Setting parameters:**

<PS>                         8 ASCII characters

**Note:** Always set an eight-digit value. Blank spaces, if any, must also be entered.

**Example:**                   STEReo:DIRect "EON-PS=1000,Test 123"  
Sets the program service name for the EON with PI=1000 to "Test 123".

---

**STEReo:DIRect "EON-PTY=<PI>,<PTY>"**  
**STEReo:DIRect? "EON-PTY,<PI>"**

Enhanced Other Networks: Sets the program type (PTY) for the EON with the selected <PI>.

**Parameters:**

<PI>                         Range:        0000 to FFFF (ASCII coded hexadecimal numbers)

**Setting parameters:**

<PTY>                        Range:        00 to 31 (ASCII coded decimal numbers)

**Example:**                   STEReo:DIRect "EON-PTY=1000,10"  
Sets the program type for the EON with PI=1000 to "10".

---

**STEReo:DIRect "EON-TA=<PI>,<TA>"**  
**STEReo:DIRect? "EON-TA,<PI>"**

Enhanced Other Networks: Sets the TA flag for the EON with the selected <PI>.

**Parameters:**

<PI>                         Range:        0000 to FFFF (ASCII coded hexadecimal numbers)

**Setting parameters:**

<TA>                         0 | 1

**Example:**                   STEReo:DIRect "EON-TA=1000,1"  
Sets the TA flag for the EON with PI=1000 to "1".

Direct commands for the stereo/rds coder option R&amp;S SMBB-B5

**STEReo:DIRect** "EON-TP=<PI>,<TP>"**STEReo:DIRect?** "EON-TP,<PI>"

Enhanced Other Networks: Sets the TP flag for the EON with the selected &lt;PI&gt;.

**Parameters:**

&lt;PI&gt;                      Range:        0000 to FFFF (ASCII coded hexadecimal numbers)

**Setting parameters:**

&lt;TP&gt;                      0 | 1

**Example:**

STEReo:DIRect "EON-TP=1000,1"

Sets the TP flag for the EON with PI=1000 to "1".

**STEReo:DIRect** "GS=<Group#1>,<Group#2>,...<Group#36>"**STEReo:DIRect?** "GS"

Sets or reads the group sequence.

**Note:** Sends only group A **or** group B data at a time. Transmits only groups that contain data. The groups 4A, 14B and 15B are automatically added to the group sequence and must not be added or removed manually.**Setting parameters:**

&lt;Group&gt;                      0A,1A,2A, ... to 15B

**Example:**

STEReo:DIRect "GS=0A,1B,10A,15A"

The groups 0A, 1B, 10A and 15A are transmitted.

**STEReo:DIRect** "IMP=<x>"**STEReo:DIRect?** "IMP"

(for documentation reasons only)

Sets external L, R impedances.

Use the SCPI command `[ :SOURCE ] :STEReo:EXTernal:IMPedance` instead.**Setting parameters:**<x>                      1 | 2  
                              **1**  
                              600 Ohms  
                              **2**  
                              100 kOhm**Example:**

STEReo:DIRect "IMP=1"

Sets the external impedance to 600 Ohms.

**STEReo:DIRect**

```
"MASK=<NumbGroups>,<ErrFreeGroups>,<BitMaskBlcA>,<BitMaskBlcB>,<BitMaskBlcC>,<BitMaskBlcD>"
```

**STEReo:DIRect? "MASK"**

Sets a bit mask to generate defined bit errors in the RDS data stream.

**Setting parameters:**

<b>&lt;NumbGroups&gt;</b>	<p>Number of groups to be masked.</p> <p>If <b>&lt;NumbGroups&gt;</b> = 0, the RDS groups are continuously linked to the error mask.</p> <p>If <b>&lt;NumbGroups&gt;</b> ≠ 0, this value is decremented after each errored group transmitted. When zero count is reached, no further errored groups are transmitted, and <b>STEReo:DIRect</b> is set to "0".</p> <p>Range: 00 to FF (hexadecimal values)</p>
<b>&lt;ErrFreeGroups&gt;</b>	<p>Number of error-free groups to be inserted after each errored group.</p> <p>Range: 00 to FF (hexadecimal values)</p>
<b>&lt;BitMaskBlc&gt;</b>	<p><b>&lt;BitMaskBlcA&gt;,&lt;BitMaskBlcB&gt;,&lt;BitMaskBlcC&gt;,&lt;BitMaskBlcD&gt;</b></p> <p>Hexadecimal bit mask for blocks A, B, C and D of the RDS groups. For each block, 26 bits (16 data bits and 10 CRC bits) have to be entered in hexadecimal code.</p> <p>Range: 0000000 to 3FFFFFFF</p>

**Example:**

```
STEReo:DIRect
```

```
"MASK=09,01,0000001,0000000,0000000,0000000"
```

In nine RDS groups, the least significant bit of the CRC code of block A is inverted, i.e. an errored bit is sent. After each errored group, one error-free group is inserted. After transmission of the complete sequence, **MASK\_STATE** is set to "0".

With the command **MASK\_STATE=1**, the above sequence (9 errored groups with one error-free group inserted after each errored group) is retransmitted once.

Then, **MASK\_STATE** is again set to "0".

**STEReo:DIRect "MASK\_STATE=<State>"****STEReo:DIRect? "MASK\_STATE"**

Switches on or off the transmission of defined bit errors in the RDS data stream.

**Setting parameters:**

**<State>** 0 | 1



Direct commands for the stereo/rds coder option R&amp;S SMBB-B5

**Example:** `STEReo:DIReCt "MASK_STATE=1"`  
 With the command `MASK_STATE=1`, a sequence of errored groups as defined by the `MASK` command is retransmitted once if the number of groups to be masked is other than zero. Then, `MASK_STATE` is automatically set to "0".  
 If the number of groups to be masked is equal to zero in the `MASK` command (which means continuous error transmission), the masking function can be switched off with `MASK_STATE=0`.

**Example:** `STEReo:DIReCt? "MASK_STATE"`  
 Response: "1"  
 The `MASK_STATE` query provides information whether the RDS data stream is linked to an error mask.

---

**STEReo:DIReCt "MODE=<EMODE>"**  
**STEReo:DIReCt? "MODE"**

(for documentation reasons only)

Sets one of various transmission modes.

Use the command `[ :SOURCE ] :STEReo:AUDio:MODE` instead.

**Setting parameters:**

<EMODE>            1 | 2 | 3 | 4 | 5  
**1**  
 L: Signal in left channel only  
**2**  
 R: Signal in right channel only  
**3**  
 Signal of equal frequency and phase in left and right channel  
**4**  
 Signal of equal frequency and opposite phase in left and right channel  
**5**  
 Different, independent signals in left and right channel  
 (5 is not possible if the internal LF generator is selected as source (SRC = LFGen)).

**Example:** `STEReo:DIReCt "MODE=1"`  
 Only the signal of the left channel is transmitted.

---

**STEReo:DIReCt "MS=<Flag>"**  
**STEReo:DIReCt? "MS"**

Sets or reads the music/speech flag.

The flag signals whether music or speech is being transmitted.

**Setting parameters:**

<Flag>            M | S

Direct commands for the stereo/rds coder option R&S SMBB-B5

**Example:**                    `STEReo:DIReCt "MS=M"`  
 The music/speech flag is set to "M", which signals that music is transmitted.

---

**STEReo:DIReCt "MPX-DEV=<Deviation>"**  
**STEReo:DIReCt? "MPX-DEV"**

(for documentation reasons only)

Sets the MPX frequency deviation (max. deviation).

Use the the command `[ :SOURce ] :STEReo[ :DEViation ]` instead.

**Setting parameters:**

<Deviation>                **Note:** Always set a four-digit value. Leading zeros, if any, must also be specified.

Range:            00000 to 10000 (ASCII coded decimal numbers),  
 corresponding to 0 Hz to 100 kHz

**Example:**                    `STEReo:DIReCt "MPX-DEV=00201"`  
 Sets the MPX frequency deviation to 2.01 kHz.

---

**STEReo:DIReCt "PI=<PI>"**  
**STEReo:DIReCt? "PI"**

Sets or reads the RDS program identification (PI) code.

**Setting parameters:**

<PI>                        **Note:** Always set a four-digit value. Add leading zeros, if any.

Range:            0000 to FFFF (ASCII coded hexadecimal numbers)

**Example:**                    `STEReo:DIReCt "PI=1234"`  
 The program identification code to be transmitted is set to "1234".

---

**STEReo:DIReCt "PIL=<State>"**  
**STEReo:DIReCt? "PIL"**

(for documentation reasons only)

Activates/deactivates the pilot tone.

Use the command `[ :SOURce ] :STEReo:PILot:STATe` instead.

**Setting parameters:**

<State>                    0 | 1

**Example:**                    `STEReo:DIReCt "PIL=1"`  
 The pilot tone is activated.

Direct commands for the stereo/rds coder option R&amp;S SMBB-B5

---

**STEReo:DIRect** "PIL-DEV=<Deviation>"**STEReo:DIRect?** "PIL-DEV"

(for documentation reasons only)

Sets the pilot tone frequency deviation (max. deviation).

Use the command `[ :SOURce ] :STEReo:PILot [ :DEViation ]` instead.**Setting parameters:**

&lt;Deviation&gt;

**Note:** Always set a four-digit value. Add leading zeros, if any.Range: 0000 to 1000 (ASCII coded decimal numbers),  
corresponding to 0 Hz to 10 kHz**Example:**`STEReo:DIRect "PIL-DEV=1000"`

Sets the frequency deviation of the pilot tone to 10 kHz.

---

**STEReo:DIRect** "PIL-PH=<Phase>"**STEReo:DIRect?** "PIL-PH"

(for documentation reasons only)

Sets the pilot tone phase.

Use the command `[ :SOURce ] :STEReo:PILot :PHASe` instead.**Setting parameters:**

&lt;Phase&gt;

**Note:** Always set a two-digit value with a sign ("+" or "-") in front of it. Add leading zeros, if any.Range: -5.0 to +5.0 (ASCII coded decimal numbers), corresponding to  $\pm 5.0$ **Example:**`STEReo:DIRect "PIL-PH=-33"`

Sets the pilot tone phase.

---

**STEReo:DIRect** "PRE=<Preemphasis>"**STEReo:DIRect?** "PRE"

(for documentation reasons only)

Sets one of various preemphasis options.

Use the commands `[ :SOURce ] :STEReo:AUDio:PREemphasis:STATe` and `[ :SOURce ] :STEReo:AUDio:PREemphasis` instead.**Setting parameters:**

&lt;Preemphasis&gt; 0 | 1 | 2

**0**

Off

**1**

50 us

**2**

75 us

Direct commands for the stereo/rds coder option R&amp;S SMBB-B5

**Example:**           STEReo:DIReCt "PRE=1"  
The preemphasis is set to 50 us.

---

#### STEReo:DIReCt "PRESET"

Sets the default settings in accordance with specifications.

**Example:**           STEReo:DIReCt "PRESET"

**Usage:**             Event

---

#### STEReo:DIReCt "PS=<PS>"

#### STEReo:DIReCt? "PS"

Sets or reads the RDS program service (PS) name.

#### Setting parameters:

<PS>                   8 ASCII characters

**Note:** Always set an eight-digit value. Blank spaces, if any, must also be entered.

Special characters in the program service name are entered with a leading back slash (\) followed by the decimal code of the special character according to table E1 of CENELEC.

**Example:**           STEReo:DIReCt "RT=02,0,test text with \217"  
Sets the program service name. 217 denotes the German letter ü.

---

#### STEReo:DIReCt "PS-TABLE=<Table>"

#### STEReo:DIReCt? "PS-TABLE"

Selects the character set table used for the display of the RDS program service (PS) name in the receiver.

The information concerning the character set is transmitted in segment 0 of the PS. Segment 0 is repeatedly transmitted if the value for PS-TABLE > 0. For PS-TABLE = 0 no information concerning the character set is transmitted.

#### Setting parameters:

<Table>               0 | 1 | 2 | 3

**0**

No information concerning the character set table in the PS

**1**

Table E.1 is used.

**2**

Table E.2 is used.

**3**

Table E.3 is used.

Direct commands for the stereo/rds coder option R&amp;S SMBB-B5

**Example:** `STEReo:DIReCt "PS-TABLE=2"`  
 The information concerning the character set is transmitted in segment 0 of the PS in group 0A. To this end, segment 0 is transmitted repeatedly. At the first transmission segment 0 contains the information about the character set, at the second transmission segment 0 contains the first two characters of the PS.

---

**STEReo:DIReCt "PTY=<PTY>"**  
**STEReo:DIReCt? "PTY"**

Sets or reads the program type (PTY).

**Setting parameters:**

<PTY> **Note:** Always set a two-digit value. Add leading zero, if any.  
 Range: 00 to 31 (ASCII coded decimal numbers)

**Example:** `STEReo:DIReCt "PTY=08"`  
 Sets the program type.

---

**STEReo:DIReCt "PTYN=<PTYN>"**  
**STEReo:DIReCt? "PTYN"**

Sets or reads the RDS program type (PTY) name.

**Setting parameters:**

<PTYN> 8 ASCII characters  
**Note:** Always set an eight-digit value. Add blank spaces, if any.

**Example:** `STEReo:DIReCt "PTYN=Football"`  
 Sets the program type name.  
`STEReo:DIReCt "GS=0A,10A"`  
 Group 10A is activated in addition to group 0A.  
 The specified program type name is transmitted.

---

**STEReo:DIReCt "RDS=<State>"**  
**STEReo:DIReCt? "RDS"**

(for documentation reasons only)

Switches RDS on or off.

Use the command `[ :SOURce ] :STEReo:RDS:STATe` instead.

**Setting parameters:**

<State> 0 | 1

**Example:** `STEReo:DIReCt "RDS=1"`  
 Activates RDS.

Direct commands for the stereo/rds coder option R&S SMBB-B5

**STEReo:DIRect** "RDS-PH=<Phase>"  
**STEReo:DIRect?** "RDS-PH"

Sets the RDS phase.

**Setting parameters:**

<Phase>            Range:        000 to 359 (ASCII coded decimal numbers)

**Example:**            STEReo:DIRect "RDS-PH=100"  
 Sets the RDS phase.

**STEReo:DIRect** "RDS-DEV=<Deviation>"  
**STEReo:DIRect?** "RDS-DEV"

(for documentation reasons only)

Sets the RDS frequency deviation (max. deviation).

Use the command `[ :SOURce ] :STEReo:PILot [ :DEViation ]` instead.

**Setting parameters:**

<Deviation>        **Note:** Always set a four-digit value. Add leading zeros, if any.  
 Range:            0000 to 1000 (ASCII coded decimal numbers),  
                      corresponding to 0 Hz to 10.00 kHz)

**Example:**            STEReo:DIRect "RDS-DEV=0201"  
 Sets the RDS frequency deviation to 2.01 kHz.

**STEReo:DIRect** "RDS-PRESET"

All RDS-specific parameters are deleted or set to default values.

**Example:**            STEReo:DIRect "RDS-PRESET"  
 Sets all RDS parameter to their preset values.

**Usage:**                Event

**STEReo:DIRect** "RT=<RetranNumber>,<A/BFlag>,<RadioTextMsg#1>,<RadioTextMsg#2>"  
**STEReo:DIRect?** "RT"

Sets a flag signaling the transmission of new radio text and the message of the radio text.

**Setting parameters:**

<RetranNumber>    Range:        00 to 15 (ASCII coded decimal numbers), number  
                      of retransmissions of radio text message

<A/BFlag>            0 | 1  
 If the A/B flag is set, the A/B bit in group 2A is toggled to signal that a new radio text message is transmitted.

Direct commands for the stereo/rds coder option R&S SMBB-B5

<RadioTextMsg> Max. 64 characters  
 Two texts of 64 characters each can be transmitted in a radio text message.  
**Note:** For group B, the length of a radio text is limited to 32 characters. Special characters in the radio text are entered with a leading back slash (\) followed by the decimal code of the special character according to table E1 of CENELEC.

**Example:** `STEReo:DIRect "RT=02,0,test text with \217"`  
 Sets the radio text message. 217 denotes the German letter ü.

---

**STEReo:DIRect "SPS=<Time>,<PSN#1>,<PSN#2>,...<PSN#20>"**  
**STEReo:DIRect? "SPS"**

Switches program service names (PSN). The program service name automatically changes after the set time interval.

**Parameters:**

<PSN> 8 ASCII characters  
 Max. 20 program service names of eight characters each can be entered.  
**Note:** Enter the program service names as 8-digit texts. Add blank spaces, if any.  
`STEReo:DIRect "SPS=0"` stops the transmission of the scrolling PS and starts the transmission of the standard PS.

**Setting parameters:**

<Time> Time interval in seconds  
 Range: 00 to 59 s

**Example:** `STEReo:DIRect "SPS=05,TEST0123,TEST4567"`  
 Transmits the program service names "TEST0123" and "TEST4567" alternately, each 5 seconds.

---

**STEReo:DIRect "SRC=<SigSource>"**  
**STEReo:DIRect? "SRC"**

(for documentation reasons only)

Selects the signal source.

Use the command `[ :SOURce ] :STEReo:SOURce` instead.

**Setting parameters:**

<SigSource> 0 | 1 | 2 | 3  
**0**  
 Off  
**1**  
 External analog (via L and R inputs)  
**2**  
 External digital

Direct commands for the stereo/rds coder option R&amp;S SMBB-B5

**3**

Internal with LF generator

**Example:** `STEReo:DIRect "SRC=1"`  
Selects the external analog L and R inputs as source.

**STEReo:DIRect? "STATUS"**

Status request whether the encoder or the update loader program is being executed.

**Return values:**

<Status>           **ENC**  
Encoder program is running.  
**UPL**  
Update loader program is running.

**Example:** `STEReo:DIRect? "STATUS"`  
Response: "ENC"

**Usage:**           Query only

**STEReo:DIRect "STORE=<DataSet#>"**

Saves data in the flash memory. All RDS-specific settings are stored in data set &lt;Data-Set#&gt; of the flash memory.

**Setting parameters:**

<DataSet#>           Range:     1 to 5

**Example:** `STEReo:DIRect "STORE=1"`  
Current setting are saved as data set 1.

**Usage:**           Setting only

**STEReo:DIRect "TA=<State>"****STEReo:DIRect? "TA"**

(for documentation reasons only)

Sets or reads the traffic announcement flag.

This flag signals whether traffic information is being broadcast.

Use the command `[ :SOURce ] :STEReo:RDS:TRAFfic:ANNouncement [ :STATe ]` instead.**Setting parameters:**

<State>               0 | 1

**Example:** `STEReo:DIRect "TA=1"`



---

**STEReo:DIRect** "TP=<State>"

**STEReo:DIRect?** "TP"

(for documentation reasons only)

Sets or reads the traffic program flag. This flag signals whether traffic information is transmitted.

Use the command `[ :SOURce ] :STEReo:RDS:TRAFfic:PROGram[:STATe]` instead.

**Setting parameters:**

<State>                    0 | 1

**Example:**                    STEReo:DIRect "TP=1"

---

**STEReo:DIRect** "TRANS<DataNumber>=<DataStream>"

**STEReo:DIRect?** "TRANS<DataNumber>"

Transparent mode.

An RDS data stream of binary data is generated. If transparent data is selected, all other RDS data is ignored.

**Parameters:**

<DataNumber>                Max. 20 different data sequences can be defined.

Range:            0 to 13

<DataStream>                16 ASCII coded hexadecimal characters (blocks A to D of the RDS groups)

TRANS=0 deletes all transparent data and switches back to normal RDS data transmission.

**Note:** 16 characters must be specified for each data sequence. Leading zeros, if any, must also be specified. Transmits the data even if it constitutes no meaningful RDS data.

**Example:**                    STEReo:DIRect "TRANS1=0123456789ABCDEF"  
Sends the data "0123456789ABCDEF" instead of the RDS data.

# 13 Troubleshooting and notifications

## Handling R&S SMB100B start-up issues

If the product does not start, a blown fuse in the power supply can be the cause. Contact the Rohde & Schwarz customer service to confirm the fault symptoms. If the power supply has a blown fuse, you must return the product to the Rohde & Schwarz customer service to have the power supply replaced. Follow the instructions from the Rohde & Schwarz customer service.

If you need to transport or ship the instrument, see [Chapter 14, "Transporting"](#), on page 608.

## Understanding R&S SMB100B notifications

The R&S SMB100B distinguishes between various notifications caused by events or functions. It displays a notification in the "Info" line on the screen temporarily, and saves all notifications in a history list. In addition, an event initiates an entry in the event/error queue of the status reporting system.

See:

- [Chapter 11.4, "Status reporting system"](#), on page 289
- [Chapter 13.4, "Querying notifications"](#), on page 596

## 13.1 Notifications

Notifications inform about operation states of the instrument, and point out deviations, deficiencies or imperfection of functions that initiate an event in the instrument. The instrument distinguishes the notifications according to the significance of the events by different icons.



Some events require that you eliminate the deviation to make sure that the instrument operates correctly.

To access the notifications and history list dialog, see [Chapter 13.4, "Querying notifications"](#), on page 596. In remote control mode, you can query the notifications using the command `:SYSTem:ERRor:ALL?` on page 536.

### 13.1.1 Volatile notifications

Volatile notifications report automatic settings in the instrument (e.g. switching off incompatible types of modulation) or on entries that are not accepted by the instrument (e.g. range violations).

Volatile notifications do not normally demand user actions and disappear automatically after a short period of time. They are saved in the history list, however.

Remote command:

```
:SYSTem:ERRor:ALL? or
:SYSTem:ERRor:CODE[:NEXT]?
```

### 13.1.2 Permanent notifications

Permanent notifications are displayed if an error occurs that impairs further instrument operation, e.g. a hardware fault. The error signaled by a permanent notification must be eliminated before correct instrument operation can be continued.

The message is displayed until the error is eliminated. It covers the status display in the info line. After error elimination, the message automatically disappears and is also recorded in the history.

Remote command:

```
:SYSTem:ERRor:STATic?
```

## 13.2 SCPI notifications

The SCPI notifications are similar for all SCPI instruments. Detailed information and an overview of all notifications as defined in the SCPI standard can be found in the corresponding documentation.

SCPI notifications have negative codes (numbers). The error text being entered into the error/event queue or being displayed is printed in bold face on the left together with the error code. Below the error text, there is an explanation to the respective error.

## 13.3 Device-specific notifications

The following table contains all error messages specific for the instrument, marked by positive error codes in numerical order and an explanation of the error situation.

The device-specific error messages set bit 3 in the ESR register.



The index provides a list of the error messages sorted according to their error codes.

Error code	Error	Description	Remedy
50	External reference out of range or disconnected	The configured reference frequency source is external but there is no physical external signal or this signal is out of range.	In the "RF Frequency" > "Reference Frequency" dialog, set the correct reference signal source.
140	This modulation forces other modulations off	The instrument disables a modulation because you enabled another modulation.	

Error code	Error	Description	Remedy
180	Adjustment failed	The instrument cannot execute an adjustment.	Generate the adjustment data and load it into the device.
182	Adjustment data missing	Adjustment data is missing.	Generate the adjustment data and load it into the device.
183	Adjustment data invalid	Adjustment data is invalid.	Generate the adjustment data and load it into the device.
200	Cannot access hardware	The data transmission to a module was unsuccessful.	The module is not installed, not properly installed or missing.
201	Hardware revision out of date	You cannot execute a specific function because of a too old hardware version. The driver does not support the installed version of a hardware module.	Consider installing a newer hardware module or downgrading the driver version
202	Cannot access the EEPROM	An error occurs when writing or reading a EEPROM.	The EEPROM is possibly defective. Replace it.
203	Invalid EEPROM data	Reading a EEPROM is possible, however the data are inconsistent.	
204	Driver initialization failed	Initialization of a driver fails when booting the instrument firmware.	The driver is not compatible with the hardware or software configuration of the instrument.
241	No current list	There is no list file selected to execute the required operation.	Select a list file with the correct file extension. If no list files is available, create a list file.
242	Unknown list type specified	The list type selected is not valid for the required operation.	Check the selected list type.
460	Cannot open file	You or the application cannot open the selected file.	Check the file path and filename.
461	Cannot write file	You or the application cannot edit or write the selected file.	Check if the file is read-only.
462	Cannot read file	You or the application cannot read the selected file.	Check if the file contents are compatible with the file type.
463	Filename missing	You cannot execute a task because the filename is missing.	Enter the filename.
464	Invalid filename extension	The file extension is not valid for the required operation.	Check the file extension.
465	File contains invalid data	The file with its file extension contains invalid data. The file extension is wrong for the expected data.	Check the file extension.


## 13.4 Querying notifications

The R&S SMB100B monitors the functions performed and automatically detects irregularities. The instrument displays corresponding notifications in the "Info" line and collects all notifications in a history with a detailed description.

Find details to the system notifications in [Chapter 13, "Troubleshooting and notifications"](#), on page 594.

### To monitor static notifications and history


- ▶ In the taskbar, select the "Info" icon.

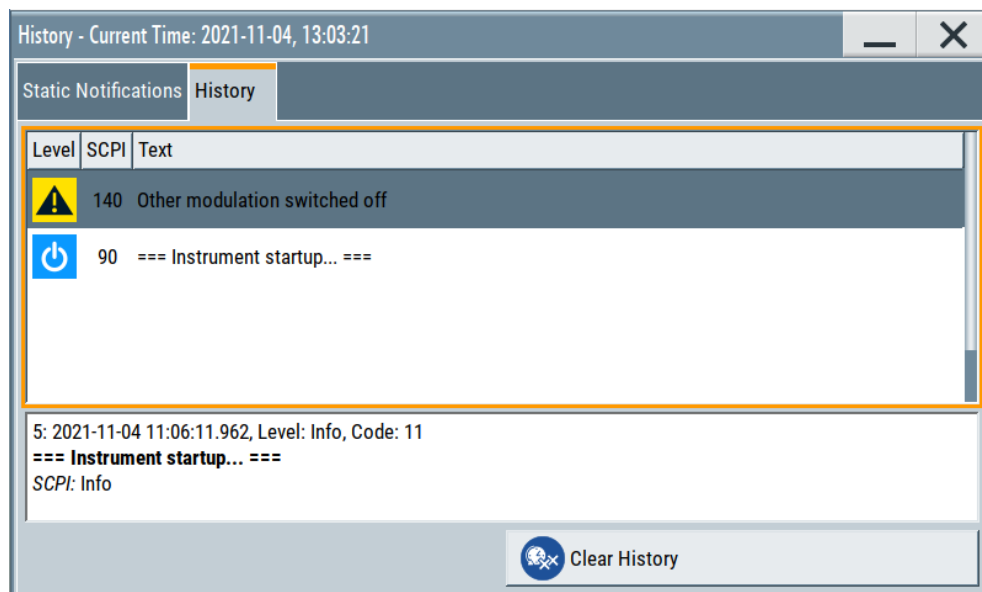

- The "Static Notifications" dialog lists the recently monitored notifications chronologically and displays additional information on the highlighted message.
- The "History" dialog lists the accumulated messages with a short description. The software reports volatile notifications once. The "Info" line displays identical errors repeatedly only if the original error disappeared. Selecting this info line also opens the "Static Notifications" dialog.



### Handling permanent notifications

If any critical error occurs, the R&S SMB100B automatically shows the warning icon  in the taskbar. Select the icon to obtain information on the error and the number of occurrences.

The icon is assigned to permanent notifications. The notification and icon are displayed until the error is eliminated.

### Static Notifications/History

Toggles between "Static Notifications" and the "History" tab in the info dialog.

Remote command:

`:SYSTem:ERRor[:NEXT]?` on page 538

Each time a `SYST:ERR:NEXT?` query is sent, the eldest entry in the error queue is returned and at the same time cleared in the list.

`:SYSTem:ERRor:STATic?` on page 539

Queries the list of all errors.

### Clear History

Clears all messages in the "History" tab.

Remote command:

`:SYSTem:ERRor:ALL?` on page 536

Each time a `SYST:ERR:ALL?` query is sent, the error queue is returned and at the same time cleared.

`:SYSTem:ERRor:HISTory:CLEar` on page 539

Clears the messages in the "History" view.

## 13.5 Resolving network connection failures

Several issues may cause failures in the network connection to the instrument. This section lists the most likely reasons and the recommended solutions.

### Common reasons for network connection failures

- Network connecting cables and cable connectors of poor quality
- Incompatibility between the network interface of the R&S SMB100B and certain switches or routers available on the market
- An invalid IP address assigned to the instrument

### Possible solutions to network connection failures

1. **NOTICE!** Risk of network failure. Connecting to the network can cause network failure. Errors can affect the entire network.

Consult your network administrator before performing the following tasks:

- Connecting the instrument to the network
- Configuring the network
- Changing IP addresses

2. Try out the following to resolve network connection failures:

- Exchange connecting cables, if obvious damage is visible.  
See also "[Cable selection and electromagnetic interference \(EMI\)](#)" on page 24.
- Observe the link status LED on the R&S SMB100B or the connected network device. The link status LED is located next to the LAN connector.  
If a link failure is detected, connect the instrument to a different device port or to a different network device.
- Check whether the LAN interface and the required LAN services are enabled.  
See [Chapter 10.4.3, "Configuring LAN services"](#), on page 266.
- If the IP address is set manually (no DHCP) or obtained with the Zeroconf (Avahi) protocol:
  - Check whether the IP address of the instrument is within the network's address range.
  - Check whether the IP address is valid.

See also "[IP Address](#)" on page 296.

## 13.6 Resolving errors during internal adjustments

Internal adjustments can fail for various reasons, e.g. if the adjustment data is invalid or missing, or if any error causes process to abort.

To resolve a failed adjustment process, you have the following options:

- Abort on error (default setting), see ["To resolve aborted internal adjustments"](#) on page 599
- Continue on error, see ["To continue internal adjustments on error"](#) on page 599

### To resolve aborted internal adjustments

If an error occurs, the R&S SMB100B displays a notification in the "Information" field and saves the notification in the history list.

1. Select "Info".
2. Look up the error code of the notification in the overview of device-specific notifications.  
See [Chapter 13.3, "Device-specific notifications"](#), on page 595.

The overview provides a brief explanation of all notifications and information on how to fix an error.

3. To resolve an adjustment failure, generate adjustment data and load it into the instrument.
4. Restart internal adjustments as described in ["Running internal adjustments"](#) on page 613

If the error persists:

Contact the Rohde & Schwarz customer support, see [Chapter 13.9, "Collecting information for technical support"](#), on page 605.

### To continue internal adjustments on error

If the failed internal adjustments has no significant effect on your application, you can skip it and continue the calibration despite the error message. This function is password-protected.

1. Select "System Config > Setup > Security > Protection".
2. Unlock protection level 1, see ["Protection Level/Password"](#) on page 261.
3. Select "System Config > Setup > Internal Adjustment > Configuration > Continue Adjustment on Error > On".
4. Proceed as described in ["Running internal adjustments"](#) on page 613.

## 13.7 Measuring USB cable quality

To check the quality of the USB cable, see the service manual of the R&S SMB100B.

## 13.8 Checking the instrument configuration

The R&S SMB100B uses various hardware and software components. To get an overview, you can check the instrument assemblies, hardware options, software options and the firmware version. The "Hardware Config" and "Versions/Options" dialogs list all components according to their hardware configuration, software options and connected Rohde & Schwarz equipment, like R&S NRP power sensors.

### Installing software and hardware options

Activate newly purchased software options with a keycode. After purchase, the keycode is part of the delivery of the software option. See also [Chapter 10.3, "Managing licenses and license keys"](#), on page 249.

For installing newly purchased hardware options, contact Rohde & Schwarz customer support.

### Checking the installed hardware options

To find out the installed options:

1. Select "System Config" > "Setup" > "Instrument Assembly" > "Versions / Options".
2. Select "Hardware Options".

Firmware	Hardware Options	Software Options	Versions	
	Option	Designation		
	SMBB-B3	1 GHz Reference		
	SMBB-B5	Stereo/RDS Coder		
	SMBB-B1H	High Performance OCXO		
	SMBB-B86	Remote Control (GPIB and USB)		
	SMBB-B106	RF option 9 KHz to 6 GHz		

The dialog lists installed hardware options on the R&S SMB100B.

Proceed the same way to get information on the firmware or the installed software options in the corresponding tab.

### Checking the RF hardware assembly

To find out the installed RF hardware:

1. Select "System Config" > "Setup" > "Instrument Assembly" > "Hardware Config".



2. Select "RF Assembly".

General		RF Assembly	Counter			X
Assembly	Part Number	Serial Number	Revision	Slot		
STEREOCODER	1407.3240.00	100000	01.00			
FIRMWARE			01.00			
DSP			01.00			
OCX10M	1416.2508.04	100000	04.00			
HP6	1422.4180.02	100000	01.00			
HP6-CPLD (Hw)			00.00			
RFBB	1422.4009.02	100000	01.00			
MOD-FPGA			01.00			
SMBB_MOD (Hw)			00.00			
SMBB_MOD (Fw)			00.00.00.00			

The dialog lists the installed RF hardware components installed on the R&S SMB100B.

Proceed the same way to get information on general or baseband hardware modules or on the operating times of the R&S SMB100B in the corresponding tab.

### 13.8.1 Hardware configuration settings

Access:

- ▶ Select "System Config" > "Setup" > "Instrument Assembly" > "Hardware Config".

Assembly	Part Number	Serial Number	Revision	Slot
SMB100B	1422.1000k02	0		
FRONT.BB	1422.4350.02	100000	01.00	PCI-E slot
MB150	1422.4550.02	100000	01.00	PCI-E slot
PSU150	2118.2067.01	100000	01.00	Not detected, but inserted
IFB.BV	1423.5009.02	100000	01.00	
GPIB-FPGA			01.00	
IPM21	1206.3122.00	100000	01.00	PCI-E slot
BIOS				

The "Hardware Config" dialog lists all installed assemblies and connected external instruments with information on their part and serial numbers, and revision states. Also, it lists the BIOS version. A firmware update does not update the BIOS version. The "Counter" tab provides information on the operation time, the number of times that the instrument was powered on and the last factory calibration of the instrument.

The remote commands required to query the hardware configuration are described in [Chapter 12.7, "DIAGnostic subsystem"](#), on page 382.

#### Assembly

The tables in the tabs show characteristics of the installed assemblies.

"Assembly" Assembly designation.

"Part Number" Part number of the assembly.

"Serial Number" Serial number of the assembly.

"Revision" Revision state of the assembly.

"Slot" Indicates whether the assembly is connected to the serial bus or PCI bus.

Remote command:

[:DIAGnostic<hw>:BGInfo?](#) on page 383

**Counter**

Displays information on the operation times of the R&S SMB100B.

**Operation Time / h ← Counter**

Displays the operation time in hours so far.

Remote command:

[:DIAGnostic:INFO:OTIME?](#) on page 383

**Power On Count ← Counter**

Displays the number the instrument has been turned on.

Remote command:

[:DIAGnostic:INFO:POCount?](#) on page 384

**Last Factory Calibration ← Counter**

Displays the date of the last factory calibration.

Remote command:

[:CALibration:DATA:FACTory:DATE?](#) on page 380

## 13.8.2 Versions and options settings

Access:

- ▶ Select "System Config" > "Setup" > "Instrument Assembly" > "Versions / Options".

Firmware	Hardware Options	Software Options	Versions	Conan Packages
Package	Version			
FW	5.00.113			
Service Pack	not installed			
BIOS Version	VirtualBox			
Downgrade Info				
Package	Version			
Factory Version	5.00.113			
Min. Version	4.30.005.26			
The Min. Version is the first version supporting all hardware modules installed in this instrument. Please read release notes carefully before downgrading, some software options and features may get lost.				
Show Open Source Acknowledgments	LucasFonts RSCorpid EULA			

The "Versions / Options" dialog shows the version of the installed instrument firmware, the hardware and software options, the data sheet and the software components of the firmware. The BIOS version is also listed; firmware updates do not update the BIOS version.

The remote commands required to query the hardware configuration are described in [Chapter 12.7, "DIAGnostic subsystem"](#), on page 382.

**Firmware**

Shows the firmware version and the version of the software platform.

**Note:** Your instrument is delivered with the latest firmware version available. You can download firmware updates and the "Release Notes" that describe the modifications and the firmware update procedure.

See [www.rohde-schwarz.com/firmware/smb100b](http://www.rohde-schwarz.com/firmware/smb100b)

Remote command:

n.a.

**Downgrade Info**

Shows downgrade information, like factory firmware version and minimum firmware version to that the instrument can be downgraded.

Remote command:

n.a.

**Show Open Source Acknowledgments**

Accesses the list of the used open-source software packages and the corresponding verbatim license texts.

**LucasFonts RSCorpid EULA**

Accesses copyright information on LucasFonts font type RSCorpid EULA.

**Hardware Options/Software Options**

The tables in the "Hardware" and "Software" tabs list the installed hardware and software options.

"Option"            Short name of option

"Designation"    Name of option

"Expiration Date"

For regular options, "Permanent" is indicated in this column.

Remote command:

[\\*OPT?](#) on page 363

[\\*IDN?](#) on page 363

**Versions**

The "Versions" tab shows the versions of the technical specification of the R&S SMB100B and of the software components that comprise the firmware.

"Package"            Name of the component.

"Version"            Current issue of the component.

E.g. the data sheet covers the technical data of the hardware components of the factory settings.

See also [Chapter 11.6.2.4, "Datasheet"](#), on page 322.

Remote command:

[:SYSTEM:SPECification:VERSion:FACTory?](#) on page 556

## 13.9 Collecting information for technical support

If you encounter problems that you cannot solve yourself, contact your Rohde & Schwarz support center at [www.rohde-schwarz.com/support](http://www.rohde-schwarz.com/support). Our support center staff is optimally trained to assist you in solving problems.


The support center finds solutions more quickly and efficiently if you provide them with information on the instrument and an error description.

- The following dialog boxes in the "Setup > Instrument Assembly" menu provide useful information:
  - **Hardware Configuration:** hardware assemblies
  - **Software and Options:** the status of all software and hardware options installed on your instrument
- **System Messages:** displayed in the "Info" line and provide information on any errors that have occurred
- **Support file:** a special file (\*.tar.gz file) with important support information that can be created automatically.  
The support \*.tar.gz file has a user-definable name and contains the following files and information:
  - SgErrors.txt: chronological record of errors
  - SystemRestorationSMBB.savrc1.txt: instrument settings at the last correct shutdown of the instrument
  - UndoHistSuppInfo.xml: list of the last user interactions
  - DeviceFootprint\_<SerialNumber>\_<Date>\_<Time>.xml: service-related information on the instrument's configuration.
  - crashlog.txt, coredump: Postmortem debug info
  - Several files with information on the last performed adjustment and self-test.

See also the description of error messages [Chapter 13.1, "Notifications"](#), on page 594.

### To collect error information in a support file

1. Connect a USB device to the R&S SMB100B.
2. Select "System Config > Setup > Maintenance > Create R&S Support Information".
3. In the "Create R&S Support Information" dialog, navigate to the /usb directory. Enter the support filename, for example RSSupport\_DeviceInfo.

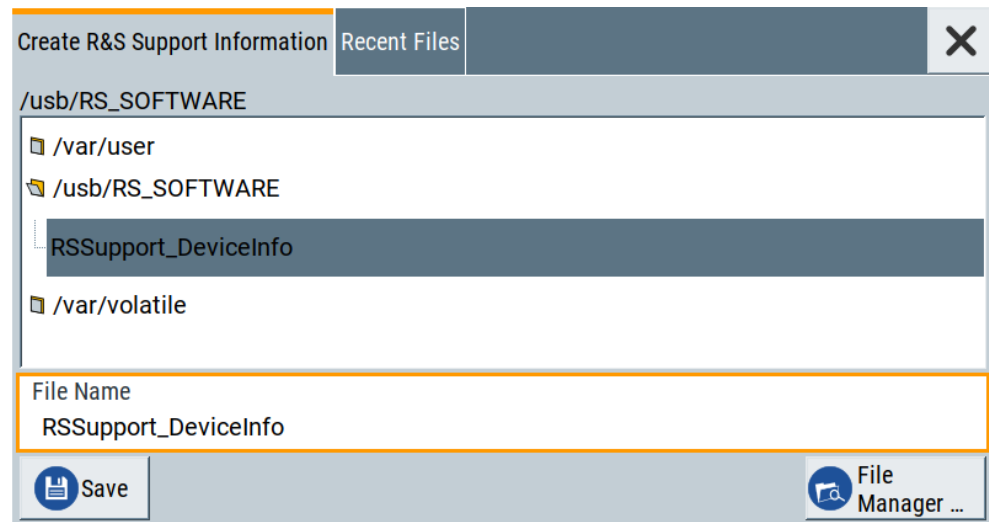

The error information and further required data are collected automatically.

The support file `RSSupport_DeviceInfo.tar.gz` is created and stored in the `/usb` directory.

Collect the error information and attach it to an email in which you describe the problem. Send the email to the customer support address as listed on the Internet ([www.rohde-schwarz.com/support](http://www.rohde-schwarz.com/support)).

#### To remove sensitive data

- ▶ For information on how to handle or remove the sensitive data from your instrument, refer to the description "R&S SMB100B Instrument Security Procedures".

#### To pack and transport the instrument

- ▶ If you need to transport or ship the instrument, see [Chapter 14, "Transporting"](#), on page 608.

## 13.10 Contacting customer support

### Technical support – where and when you need it

For quick, expert help with any Rohde & Schwarz product, contact our customer support center. A team of highly qualified engineers provides support and works with you to find a solution to your query on any aspect of the operation, programming or applications of Rohde & Schwarz products.

### Contact information

Contact our customer support center at [www.rohde-schwarz.com/support](http://www.rohde-schwarz.com/support), or follow this QR code:

# 14 Transporting

## Lifting and carrying

For safety information, see:

- ["Lifting and carrying the product"](#) on page 14
- [Chapter 3.1.1, "Lifting and carrying"](#), on page 21

## Packing

Use the original packaging material. It consists of antistatic wrap for electrostatic protection and packing material designed for the product.

If you do not have the original packaging, use similar materials that provide the same level of protection. You can also contact your local Rohde & Schwarz service center for advice.

## Securing

When moving the R&S SMB100B in a vehicle or using transporting equipment, make sure that the R&S SMB100B is properly secured. Only use items intended for securing objects.

## Transport altitude

The maximum transport altitude without pressure compensation is specified in the specifications document.

# 15 Maintenance, storage and disposal

The product does not require regular maintenance. It only requires occasional cleaning. It is however advisable to check the nominal data from time to time.

## 15.1 Cleaning

How to clean the product is described in "[Cleaning the product](#)" on page 15.

Do not use any liquids for cleaning. Cleaning agents, solvents, acids and bases can damage the front panel labeling, plastic parts and display.

## 15.2 Storage

Protect the product against dust. Ensure that the environmental conditions, e.g. temperature range and climatic load, meet the values specified in the specifications document.

## 15.3 Performing maintenance tasks

The R&S SMB100B is accurate due to integrated adjustment procedures and additional test functions that assure correct functioning.

Internal adjustments are integrated self-calibration routines, which you can execute directly on the instrument.

How to: See [Chapter 15.3.1.3, "How to use the internal adjustments"](#), on page 612.

Self-calibration routines that require additional equipment are performed at an authorized Rohde & Schwarz service center. For description, see the R&S SMB100B service manual.

### 15.3.1 Internal adjustments

Using the integrated adjustment procedures, you can start the calibration directly on the instrument.

#### Minimum power rating required for internal adjustments

Depending on the instrument configuration, it can be required that you have to replace the DUT by an external 50  $\Omega$  termination at the RF output. The following tables show the minimum required power rating of the terminating resistor regarding the output power and frequency options. The termination must be specified for the entire frequency range of the instrument.




**Table 15-1: Standard (no option) or high output power (R&S SMBB-K33/-K35)**

Frequency option	R&S SMBB-B112/-B120	R&S SMBB-B131/-B140(N)
Min. power rating	2 W (33 dBm)	No termination required

### 15.3.1.1 Internal adjustment settings

Access:

- ▶ Select "System Config > Setup > General > Internal Adjustments".

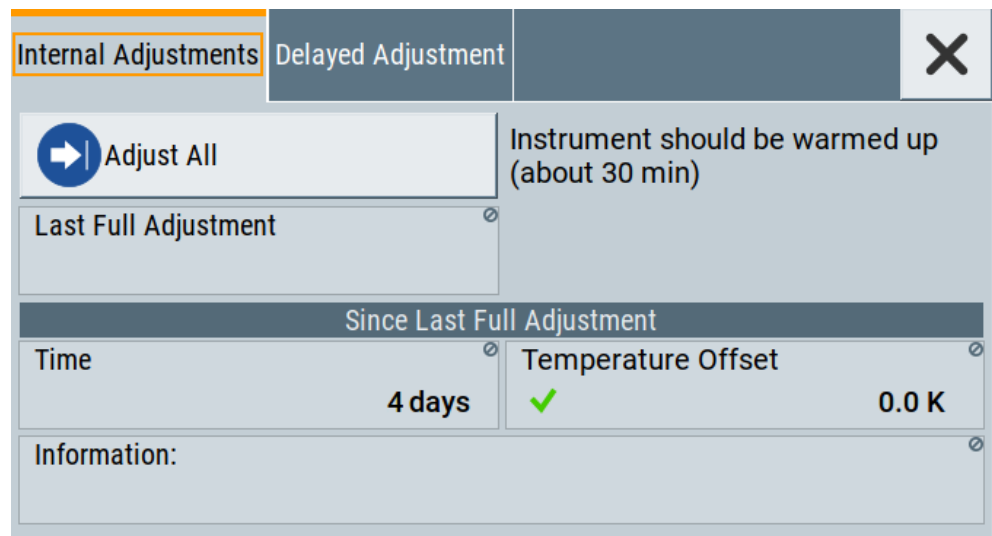

In this dialog, you can perform internal calibration routines, and get information on the last performed calibration.

The "Temperature Offset" indicates the deviation of the current temperature of the instrument, compared to the temperature of the last adjustment.

The remote commands required to define these settings are described in [Chapter 12.6, "CALibration subsystem"](#), on page 378.

How to: See [Chapter 15.3.1.3, "How to use the internal adjustments"](#), on page 612.

#### Settings

##### Adjust All

Executes all available internal calibration routines of the instrument.

**Note:** Before you start the internal adjustment, make sure that you have connected a termination resistor, if necessary.

Remote command:

`:CALibration:ALL[:MEASure]?` on page 378

##### Last Full Adjustment

Displays the date of the last fully performed adjustment.

Remote command:

:CALibration<hw>:ALL:DATE? on page 379

### Time

Displays the elapsed time since the last full adjustment.

Remote command:

:CALibration<hw>:ALL:TIME? on page 380

### Temperature Offset

Displays the temperature difference, comparing the temperature of the last adjustment to the current instrument temperature.

A green checkmark indicates that the offset is within the permitted range. If the temperature deviates more than  $\pm 5$  K, the instrument indicates a warning icon.

Remote command:

:CALibration<hw>:ALL:TEMP? on page 379

### Information

Displays information to the current adjustment state.

Remote command:

:CALibration<hw>:ALL:INformation? on page 379

### Continue Adjustment on Error

Continues the calibration even though an error was detected. By default adjustments are aborted on error.

This function is password-protected. Unlock the protection level 1 to access it.


Remote command:

:CALibration<hw>:CONTInueonerror on page 380

## 15.3.1.2 Delayed adjustment settings

Access:

- ▶ Select "System Config > Setup > General > Delayed Adjustment".

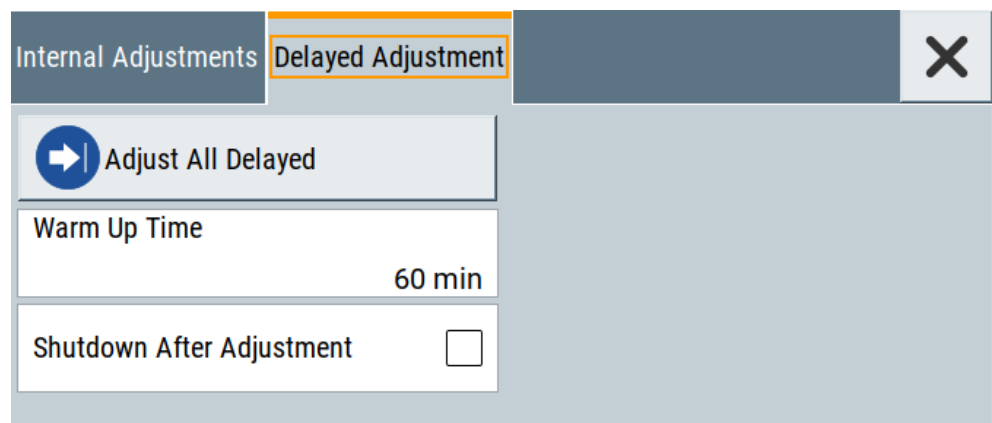

In this dialog, you can set the internal adjustments to start automatically after the selected warm up time and to switch off the instrument after calibration.

The remote commands required to define these settings are described in [Chapter 12.6, "CALibration subsystem"](#), on page 378.

### Settings

<a href="#">Adjust All Delayed</a> .....	612
<a href="#">Warm Up Time</a> .....	612
<a href="#">Shutdown After Adjustment</a> .....	612

#### Adjust All Delayed

Performs all available internal calibration routines of the instrument.

How to: See [Starting internal adjustments automatically](#).

Remote command:

[:CALibration:DElay\[:MEASure\]?](#) on page 381

#### Warm Up Time

Sets the time for warming up the instrument before the calibration starts automatically.

How to: See [Starting internal adjustments automatically](#).

Remote command:

[:CALibration:DElay:MINutes](#) on page 381

#### Shutdown After Adjustment

Enables the automatic shutdown after internal adjustments.

How to: See [Starting internal adjustments automatically](#).

Remote command:

[:CALibration:DElay:SHUTdown\[:STATe\]](#) on page 381

### 15.3.1.3 How to use the internal adjustments

#### Deciding whether to run internal adjustments

1. Select "System Config > Setup > Internal Adjustment".
2. Check the status and color indication in the section "Since Last Full Adjustment".  
Green: internal adjustments are not required.  
Red: internal adjustments are required. Observe also the indication in the "Information" field.
3. We recommend that you run internal adjustments in the following cases:
  - Before starting any application that requires a maximum of level accuracy.
  - When a long period of time has passed since the last adjustments.
  - If the ambient temperature of the instrument significantly differs from the one of the last adjustments.
4. Proceed as described in ["Running internal adjustments"](#) on page 613.

### Running internal adjustments

1. After switching on, the R&S SMB100B requires up to 30 minutes to warm up. Wait until the instrument has reached operating temperature to achieve accurate adjustments.
2. Select "System Config > Setup > Internal Adjustment > Adjust All".
3. Confirm with "Ok".

The adjustment process starts.

The adjustment process takes some time depending on the equipment of the instrument.

If any error occurs, the process aborts. To resolve adjustment issues, see [Chapter 13.6, "Resolving errors during internal adjustments"](#), on page 599.

### Starting internal adjustments automatically

The delayed adjustment function executes the adjustments automatically. You can set the warm-up time and shut down after the adjustment process finishes. Using this function, you can execute adjustments without being on-site and start measurements directly when back.

1. If necessary, terminate the RF 50  $\Omega$  output. See ["Running internal adjustments"](#) on page 613.
2. Select "System Config > Setup > General > Internal Adjustment".
3. Select "Delayed Adjustment".

4. Set the "Warm Up Time", e.g. *40 min*.

The R&S SMB100B requires a warm-up time of at least 30 min.

5. Enable "Shut Down After Adjustment"
6. Select "Adjust All Delayed".

The process starts with warming up the instrument, indicating the progress in a status dialog. In this dialog, you can abort the process again, if necessary.

After warming up, the R&S SMB100B executes the internal adjustments and shuts down when finished.

## 15.3.2 Date and time

The R&S SMB100B uses an internal real-time clock to determine the date and time. It adjusts the time and date to the timezone of your location automatically, by providing a selection list of continents and cities.

The instrument records the time whenever you create or modify files on your instrument or you use timed licenses. By default, the instrument is set to the UTC timezone, but you can select the timezone according to your location.

Moreover, the instrument supports [NTP](#) protocol for synchronizing all connected instruments and computer systems to minimize time delays in the network.

### 15.3.2.1 Date and time settings

Access:

- ▶ Select "System Config" > "Setup" > "Maintenance" > "Date / Time".

The "Date / Time" dialog contains the time and data settings of the operating system.

This function is password-protected. Unlock the protection level 1 to access it.

You can also set the time zone for your location, and select a time protocol controlled by a time server for synchronization.

The required remote commands are described in [Chapter 12.16, "SYSTEM subsystem"](#), on page 531.

#### Settings:

<a href="#">Date</a> .....	614
<a href="#">Time</a> .....	614
<a href="#">Timezone</a> .....	615
<a href="#">Time Protocol</a> .....	615
<a href="#">NTP Address</a> .....	615

#### Date

Displays the date set in the operating system in the format [yyyy.mm.dd].

Remote command:

:SYSTem:DATE on page 557

#### Time

Displays the time set in the operating system in the format [hh.mm.ss].

The time setting corresponds to the selected [Timezone](#).

Remote command:

:SYSTem:TIME on page 558

### Timezone

Selects the timezone in the date and time settings of the operating system.

You can select the timezone according to the major cities on the respective continents.

**Tip:** By typing the first letter, you can quickly navigate through the lists to find the desired destination.

Remote command:

:SYSTem:TIME:ZONE on page 558

:SYSTem:TIME:ZONE:CATalog? on page 558

### Time Protocol

Enables the instrument to refer to a network time protocol.

A network time protocol synchronizes the system clocks of all participating devices in a computer network (Ethernet). A time server in the network provides the time base for the connected devices that refer to this time to synchronize events.

You can select a high-precision time protocol to achieve high clock accuracy and thus reduce the impact of varying network delays.

"None" Refers to the selected timezone, see "Timezone" on page 615.

"NTP" Uses the network time protocol (NTP).

Remote command:

:SYSTem:TIME:PROTOcol on page 559

### NTP Address

Sets the IP address or host name of the NTP server.

When the server is detected and verified, the instrument enables the connection automatically.

Remote command:

:SYSTem:NTP:HOSTname on page 557

:SYSTem:NTP:STATe on page 558

## 15.3.2.2 How to set date and time

### To select the timezone

1. Press the [Setup] key.
2. Select "Maintenance > Date /Time > Timezone".
3. Select continent and city of your location.  
**Tip:** By typing the first letter, you can quickly navigate through the lists to find the desired destination.
4. Close the dialogs.

The instrument adjusts the time according to the selected location.

### To set the date and time

#### 1. **NOTICE!**

This function is password-protected. Unlock the protection level 1 to access it.

Since the date and time settings affect time-based options, changing the date and time can therefore lead to loss of access to the function of the options. We recommend that you only change the system time in urgent cases.

If the time is not displayed correctly, the internal CMOS battery can be discharged. To change the battery, contact your Rohde & Schwarz support center at [www.rohde-schwarz.com/support](http://www.rohde-schwarz.com/support).

Press the [Setup] key.

2. Select "Security > Protection".
3. Enable the "Protection Level 1".  
The default password is 123456.
4. Select "Setup > Maintenance > Date / Time".
5. Adjust the settings.
6. Close the dialogs.

The instrument sets the new date and time.

## 15.3.3 Check front panel

Within this dialog, you can verify the functionality of the control keys.

How To: See [Chapter 15.3.3.2, "How to test the front panel"](#), on page 617

### 15.3.3.1 Check front panel settings

Access:

- ▶ Select "System Config > Setup > Maintenance > Check Front Panel".



Reflecting the front panel, the "Check Front Panel" dialog contains all functions to test the operating elements of the instrument.

### 15.3.3.2 How to test the front panel

See:

- "Testing the key panel" on page 617
- "Testing the touchscreen" on page 618
- "Terminating the test" on page 619
- "Debugging" on page 619

#### Testing the key panel

To perform the key panel test, you operate the keys at the front panel, and check the response of the instrument in the "Check Front Panel" dialog. To perform this test properly, check each key of the front panel. The test is only completed, when you have verified all keys.

During the test, the actual functions of the keys are disabled.

1. Press the [Setup] key.
2. Select "Maintenance > Check Front Panel"  
The "Check Front Panel" dialog opens.
3. Press a key on the front panel.  
Check if the corresponding key in the "Check Front Panel" dialog turns green.
4. Press the same key a second time.  
Check that the key in the dialog turns red.




**Note:** Pressing the same key again has no further effect, except for the [Esc] key. Pressing this key a third time, terminates the test procedure.

- Continue with the next key on the front panel and repeat [step 3](#) to [step 5](#) until all keys are tested.

The test is completed, when each key is verified successfully, confirmed by a "Test passed" message.

### Testing the touchscreen


- Press the [Setup] key.
- Select "Maintenance > Check Touch Panel"  
The "Finger Paint" test window opens.

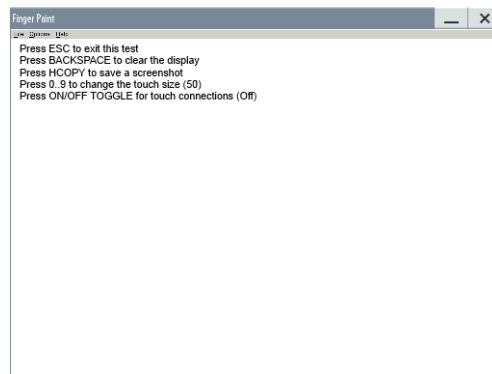


- Drag with your finger one or more lines, for example diagonally across the screen. The test traces the movements of your finger on the screen.

The following results are expected:

- If the lines are uninterrupted, the touchscreen works properly.

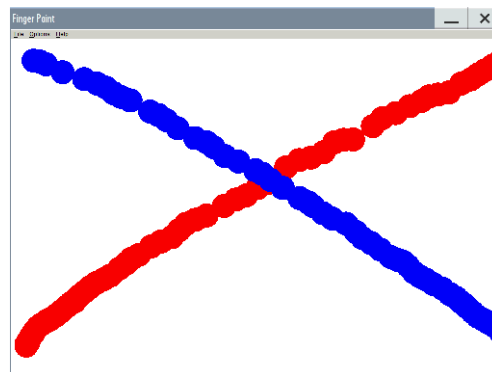

- If there are any gaps, the touch-sensitive functionality is damaged.

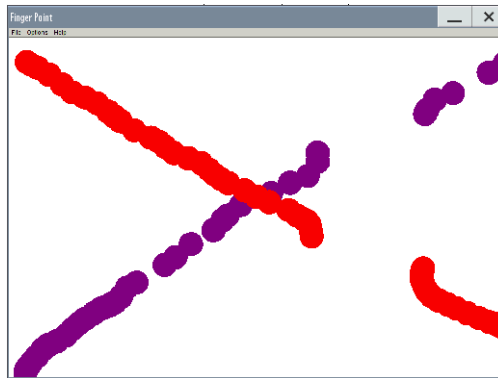

- To return to the "Check Front Panel" dialog, press [Esc].

### Terminating the test

- ▶ Press the [Esc] key.  
Exits the "Check Front Panel" dialog.

### Debugging

1. If you detect a malfunction, for example, when you press the front panel key for the first time, and the color of the button in the dialog turns red (instead of green), the front panel key has probably stuck.
2. Contact the Rohde & Schwarz customer support, see [Chapter 13.9, "Collecting information for technical support"](#), on page 605.

## 15.3.4 Check display screen

Using this function, you can verify the color depth and gradient, pixels and the text display of the screen.


Access:

- ▶ Select "System Config > Setup > Maintenance > Check Display Screen".  
The R&S SMB100B fades out the current display and indicates the screen in red. Short instructions on the screen explain how to execute the test.

The remote commands required to define these settings are described in [Chapter 12.18, "TEST subsystem"](#), on page 566.

### Testing the display screen

1. Press the [Setup] key.
2. Select "Maintenance > Check Display Screen"  
The "Check Display Screen" window opens.
3. Test the color and gradient of the display screen:

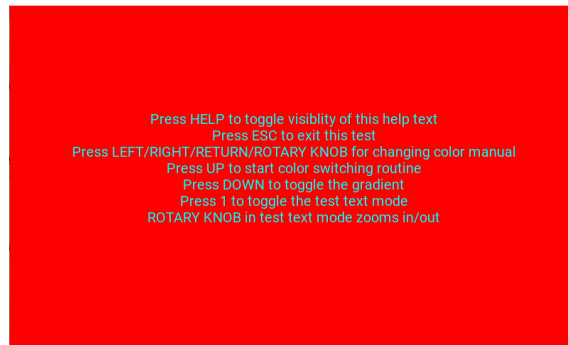

- a) Use the [Help] key to hide the indicated text.
  - b) To toggle between the provided colors manually, use the navigation controls [Left/Right] or the rotary knob.  
 The R&S SMB100B provides the colors red, green, blue, white, three levels of gray shades and black.
  - c) To switch between the screen colors automatically, use the [Up] key.
  - d) To toggle the gradient, use the [Down] key.
4. Check if the R&S SMB100B indicates the text correctly:
    - a) Press [1] on the numeric keypad.  
 The R&S SMB100B displays a test text over the entire screen.
    - b) To inspect the text in detail, you can use the rotary knob to zoom it out.
  5. To exit the test, press the [Esc] key.

[Check Display Screen](#).....620

### Check Display Screen

Opens the test window with instructions on how to perform the test.


Remote command:

`:TEST:PIXel:WINDow` on page 568  
`:TEST:PIXel:COLor` on page 567  
`:TEST:PIXel:RGBA` on page 567  
`:TEST:PIXel:GRADient` on page 567  
`:TEST:PIXel:TEXT` on page 568  
`:TEST:PIXel:POINTsize` on page 567

## 15.3.5 FPGA/uC update settings

Access:

- ▶ Select "System Config > Setup > Maintenance > FPGA/μC Update".

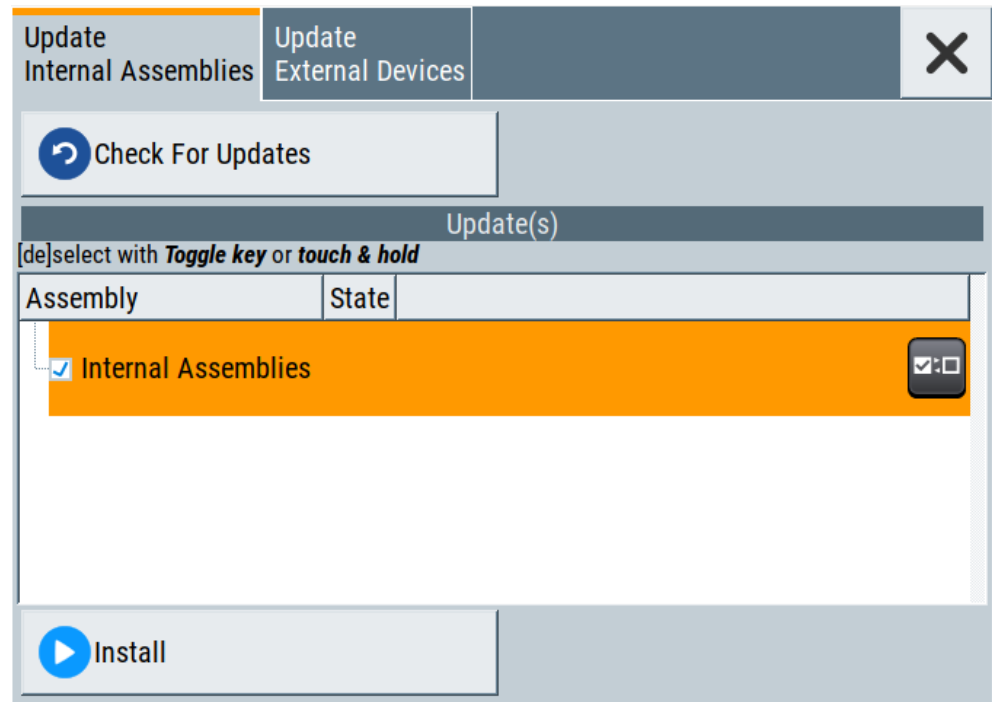

This dialog enables you to check for internal assembly updates and perform updates.

#### Settings:

Check For Updates.....	621
Assembly.....	621
Install.....	621
Shut down.....	622
Update External Devices.....	622
└ Check For Updates.....	622

#### Check For Updates

Check for updates of the FPGA/μC.

Remote command:

n.a.

#### Assembly

The table shows the installed assemblies and their states.

"Assembly"      Assembly designation.

"State"          Indicates the current state of installed assemblies.

#### Install

Install all available updates for the FPGA/μC.

Remote command:

n.a.

### Shut down

For at least one assembly "State = Done" and no pending assemblies, shuts the instrument down to apply installed updates.

Remote command:

:SYSTem:SHUTdown on page 561

### Update External Devices

This dialog shows the update options of external devices connected to the instrument.

### Check For Updates ← Update External Devices

Check for updates of external devices.

Remote command:


n.a.

## 15.3.6 Delete temporary files

During signal processing, the R&S SMB100B creates and saves various temporary files in a predefined directory on its non-volatile memory. This predefined directory is a protected system directory you cannot access in the "File Manager", but you can delete all temporary files saved there.

### To achieve more free disc space on the internal memory

1. Select "System Config > Setup > Maintenance > Delete Temporary Files".

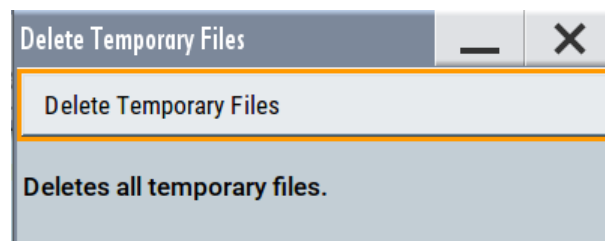

2. Select "Delete Temporary Files".

Deletes the content of the predefined directory.



Another way to achieve more free disc space on the internal memory is to use the [Execute Factory Preset](#).

This function removes all temporary files, too, but also resets several parameters to their factory preset values.

Remote command:

:SYSTem:FILEs:TEMPorary:DElete on page 562

## 15.4 Disposal

Rohde & Schwarz is committed to making careful, ecologically sound use of natural resources and minimizing the environmental footprint of our products. Help us by disposing of waste in a way that causes minimum environmental impact.

### Disposing of electrical and electronic equipment

A product that is labeled as follows cannot be disposed of in normal household waste after it has come to the end of its life. Even disposal via the municipal collection points for waste electrical and electronic equipment is not permitted.



*Figure 15-1: Labeling in line with EU directive WEEE*

Rohde & Schwarz has developed a disposal concept for the eco-friendly disposal or recycling of waste material. As a manufacturer, Rohde & Schwarz completely fulfills its obligation to take back and dispose of electrical and electronic waste. Contact your local service representative to dispose of the product.

# Annex

## A Reference information for remote control

### A.1 Telnet program examples

The following program example shows a simple `TcpClient` class that is intended to explain on how to get started with programming of sockets.

The example sets up a socket communication to R&S SMB100B and opens a simple user interface, very similar to the telnet, which allows input of commands. To enable real automation, further development of the program is required.

#### **TcpClient.h**

```
#include <string>
//defines structs for socket handling
#include <netinet/in.h>
using namespace std;
typedef struct sockaddr_in SockAddrStruct;
typedef struct hostent      HostInfoStruct;
class TcpClient
{
public:
    TcpClient();
    ~TcpClient();
    void connectToServer( string &hostname, int port );
    void disconnect( );
    void transmit( string &txString );
    void receive( string &rxString );
    string getCurrentHostName( ) const;
    int    getCurrentPort( ) const;
private:
    string      currentHostName;
    int         currentPort;
    int         currentSocketDescr;
    SockAddrStruct  serverAddress;
    HostInfoStruct * currentHostInfo;
    bool        clientIsConnected;
    int         receiveBufferSize;
};
```

#### **TcpClient.cpp**

```
#include <string>
//defines structs for socket handling
#include <netinet/in.h>
```

```

using namespace std;
typedef struct sockaddr_in SockAddrStruct;
typedef struct hostent     HostInfoStruct;
class TcpClient
{
public:
    TcpClient();
    ~TcpClient();
    void connectToServer( string &hostname, int port );
    void disconnect( );
    void transmit( string &txString );
    void receive( string &rxString );
    string getCurrentHostName( ) const;
    int    getCurrentPort( ) const;
private:
    string      currentHostName;
    int         currentPort;
    int         currentSocketDescr;
    SockAddrStruct  serverAddress;
    HostInfoStruct * currentHostInfo;
    bool        clientIsConnected;
    int         receiveBufferSize;
};

#include <netdb.h>
#include <netinet/in.h>
#include <unistd.h>
#include "TcpClient.h"
TcpClient::TcpClient()
: currentHostName( "" )
, currentPort( 0 )
, currentSocketDescr( 0 )
, serverAddress ( )
, currentHostInfo( NULL )
, clientIsConnected( false )
, receiveBufferSize( 1024 )
{
}
TcpClient::~~TcpClient()
{
    currentHostInfo = NULL;
}

void TcpClient::connectToServer( string &hostname, int port )
{
    currentHostInfo = gethostbyname( hostname.c_str( ) );
    if( currentHostInfo == NULL )
    {
        currentHostName = "";
        currentPort      = 0;
    }
}

```



```

        currentHostInfo = NULL;
        clientIsConnected = false;
        printf("error connecting host\n" );
    }
    currentHostName = hostname;
    currentPort = port;
    currentSocketDescr = socket(AF_INET, SOCK_STREAM, 0);
    if( currentSocketDescr == 0 )
    {
        currentHostName = "";
        currentPort = 0;
        currentHostInfo = NULL;
        clientIsConnected = false;
        printf("can't create socket\n" );
    }
    serverAddress.sin_family = currentHostInfo->h_addrtype;
    serverAddress.sin_port = htons( currentPort );
    memcpy( (char *) &serverAddress.sin_addr.s_addr,
        currentHostInfo->h_addr_list[0], currentHostInfo->h_length );
    if( connect( currentSocketDescr, ( struct sockaddr *) &serverAddress,
        sizeof( serverAddress ) ) < 0 )
    {
        throw string("can't connect server\n" );
    }
    clientIsConnected = true;
}
void TcpClient::disconnect( )
{
    if( clientIsConnected )
    {
        close( currentSocketDescr );
    }
    currentSocketDescr = 0;
    currentHostName = "";
    currentPort = 0;
    currentHostInfo = NULL;
    clientIsConnected = false;
}
void TcpClient::transmit( string &txString )
{
    if( !clientIsConnected )
    {
        throw string("connection must be established before any data can be sent\n");
    }
    char * transmitBuffer = new char[txString.length() +1];
    memcpy( transmitBuffer, txString.c_str(), txString.length() );
    transmitBuffer[txString.length()] = '\n'; //newline is needed!
    if( send( currentSocketDescr, transmitBuffer, txString.length() + 1, 0 ) < 0 )
    {
        throw string("can't transmit data\n");
    }
}

```

```

    }
    delete [] transmitBuffer;
}
void TcpClient::receive( string &rxString )
{
    if( !clientIsConnected )
    {
        throw string("connection must be established before any data can be received\n");
    }
    char * receiveBuffer = new char[receiveBufferSize];
    memset( receiveBuffer, 0, receiveBufferSize );
    bool receiving = true;
    while( receiving )
    {
        int receivedByteCount = recv( currentSocketDescr,
            receiveBuffer, receiveBufferSize, 0 );
        if( receivedByteCount < 0 )
        {
            throw string("error while receiving data\n");
        }
        rxString += string( receiveBuffer );
        receiving = ( receivedByteCount == receiveBufferSize );
    }
    delete [] receiveBuffer;
}
string TcpClient::getCurrentHostName( ) const
{
    return currentHostName;
}
int TcpClient::getCurrentPort( ) const
{
    return currentPort;
}

```

### TelnetClient.cpp

```

#include <iostream>
#include "TcpClient.h"
void printUsage()
{
    cout<<"usage: EthernetRawCommand <server-ip> [scpi-command]"<<endl;
}
int main( int argc, char *argv[] )
{
    int errorCode          = 0; //no error
    bool useSingleCommand = false;
    string singleCommand  = "";
    string hostname       = "";
    int    port           = 5025;
    string input          = "";
}

```

```
TcpClient client;
switch( argc )
{
  case 3:
    useSingleCommand = true;
    singleCommand    = argv[2];
  case 2:
    hostname         = argv[1];
    break;
  default:
    printUsage();
    return(-1);
}
try
{
  client.connectToServer( hostname, port );
  bool terminate = false;
  while( !terminate )
  {
    char buffer[1024];
    if( useSingleCommand )
    {
      input = singleCommand; //send string
    }
    else
    {
      cin.getline( buffer, 1024 );
      input = buffer;
      if( input == "end" )
      {
        terminate = true;
      }
    }
    if( !terminate)
    {
      client.transmit( input ); //send string
      int qPos = input.find( "?", 0 );
      //receive string only when needed
      if( qPos > 0 )
      {
        string rcStr = "";
        client.receive( rcStr );
        cout << rcStr << endl;
      }
    }
    if( useSingleCommand )
    {
      terminate = true;
    }
  }
}
```

```

    }catch( const string errorString )
    {
        cout<<errorString<<endl;
    }
    client.disconnect( );
    return errorCode;
}

```

## A.2 Extensions for user files

The [Table A-1](#) lists all available file extensions for user files. The currently available files on the instrument depend on the installed options.

**Table A-1: List of the automatically assigned file extensions in the instrument**

Function	List type	Contents	File suffix
Instrument State	Settings	Instrument settings	*.savrc.txt
User Menu	Settings	User-defined favorite settings	*.user_menu
License Key		License Key	*.xml
"User Correction"	List	User-defined level correction values	*.uco
"List Mode"	List	User-defined frequency/level value pairs	*.lsw
	Settings	Response file	*.txt
"Pulse Train"	Settings	Pulse train data	*.pulstrn
"NRP Settings"	Settings	R&S NRP Settings	*.nrp, *.rsu
SCPI command list	List	Export file containing list of SCPIs	*.iecl
SCPI command script		SCPI script file formats: Plain SCPI, MATLAB, NICVI, Python3	*.txt, *.m, *.c, *.py
R&S Support Info Archive	Support File	Automatically collected support information	*.tar.gz
Tutorials	Tutorial files	Lists containing SCPIs and explanations	*.tut

## B Unit shortcuts

When specifying units or quantities during data entry, the R&S SMB100B provides the following shortcuts for simplified input.

Shortcut	Designation	Context	Unit
a, A	ampere	Current	A
	atto-	Area, surface	am <sup>2</sup>
c, C	centi-	Distance, length	cm
d, D	deci-	Distance, length	dm
		Level, power	dB, dBFS, dBm, dBu, dBW
	degree	Phase, polar/spherical coordinates	deg
e, E	exa-	Area, surface	em <sup>2</sup>
f, F	femto-	Area, surface	fm <sup>2</sup>
g, G	giga-	Area, surface	Gm <sup>2</sup>
		Data rate, sample rate, symbol rate	Gbit/s, Gsample/s, Gsymbol/s, Gchip/s
		Frequency	GHz
		Impedance, resistance	GΩ
h, H	hertz	Frequency	Hz
k, K	kilo-	Area, surface	km <sup>2</sup>
		Data rate, sample rate, symbol rate	kbit/s, ksample/s, ksymbol/s, kchip/s
		Distance, length	km
		Frequency	kHz
		Impedance, resistance	kΩ
		Velocity	km/h
m, M	milli-	Area, surface	mm <sup>2</sup>
		Current	mA
		Distance, length	mm
		Electromagnetic force, level	mV
		Power	mW
		Time, period, etc.	ms
	mega-	Area, surface	Mm <sup>2</sup>
		Data rate, sample rate, symbol rate	Mbit/s, Msample/s, Msym/s, Mchip/s
		Frequency	MHz
		Impedance, resistance	MΩ

Shortcut	Designation	Context	Unit
n, N	nano-	Area, surface Current Distance, length Electromagnetic force, level Power Time, period, etc.	nm <sup>2</sup> nA nm nV nW ns
o, O	ohm	Impedance, resistance	Ω
p, P	peta-	Area, surface	pm <sup>2</sup>
	percent	Level, ratio	%
	pico-	Area, surface Current Electromagnetic force, level Power Time, period, etc.	pm <sup>2</sup> pA pV pW ps
r, R	radiant	Phase, polar/spherical coordinates	rad
s, S	second	Time, period, etc.	s
t, T	terra-	Area, surface Data rate, sample rate, symbol rate Frequency Impedance, resistance	Tm <sup>2</sup> Tbit/s, Tsample/s, Tsym/s, Tchip/s THz TΩ
u, U	micro-	Current Distance, length Electromagnetic force, level Power Time, period, etc.	μA μm μV μW μs
v, V	volt	Level, voltage	V
w, W	watt	Level, power	W

## C GPIB interface

Option: R&S SMBB-B86.

This section provides detailed information on the general-purpose interface bus (GPIB) interface "IEC 625/IEEE 488" for remote control of the instrument. It covers the following topics:

- "Pin assignment" on page 632
- "Bus lines" on page 632
- "Interface functions" on page 633

For other remote control interfaces, see [Chapter 11, "Network operation and remote control"](#), on page 279.

### Pin assignment

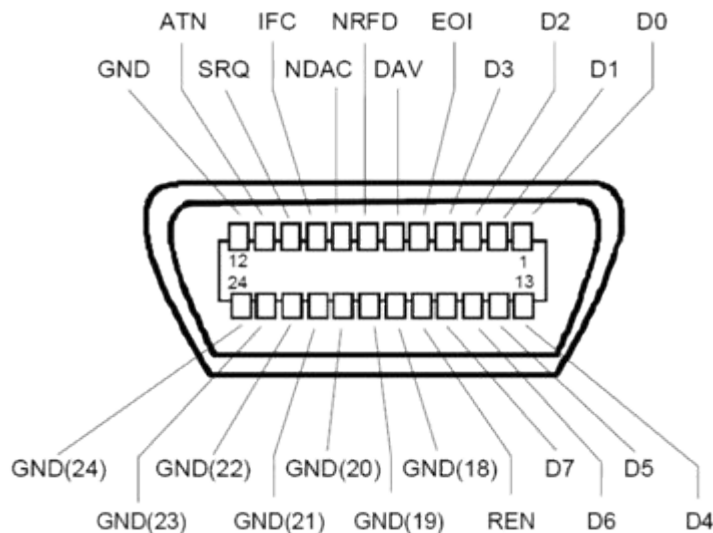


Figure C-1: Pin assignment of the GPIB interface

### Bus lines

- Data bus with eight lines D0 to D7:  
The transmission is bit-parallel and byte-serial in the ASCII/ISO code. D0 is the least significant bit, D7 the most significant bit.
- Control bus with five lines:
  - IFC** (Interface Clear): active LOW resets the interfaces of the instruments connected to the default setting.
  - ATN** (Attention): active LOW signals the transmission of interface messages, inactive HIGH signals the transmission of device messages.
  - SRQ** (Service Request): active LOW enables the connected device to send a service request to the controller.
  - REN** (Remote Enable): active LOW permits switchover to remote control.

**EOI** (End or Identify): two functions in connection with ATN:

- ATN=HIGH active LOW marks the end of data transmission.
- ATN=LOW active LOW triggers a parallel poll.

- Handshake bus with three lines:

**DAV** (Data Valid): active LOW signals a valid data byte on the data bus.

**NRFD** (Not Ready For Data): active LOW signals that one of the connected devices is not ready for data transfer.

**NDAC** (Not Data Accepted): active LOW signals that the instrument connected is accepting the data on the data bus.

### Interface functions

You can use different interface functions to control the instrument via the GPIB interface. [Table C-1](#) lists the interface functions for the R&S SMB100B.

**Table C-1: GPIB interface functions**

Control character	Interface function
SH1	Handshake source function (source handshake), full capability
AH1	Handshake sink function (acceptor handshake), full capability
L4	Listener function, full capability, de-addressed by MTA.
T6	Talker function, full capability, ability to respond to serial poll, deaddressed by MLA
SR1	Service request function (Service Request), full capability
PP1	Parallel poll function, full capability
RL1	Remote/Local switch-over function, full capability
DC1	Reset function (Device Clear), full capability
DT1	Trigger function (Device Trigger), full capability

For more information, refer to the specifications document.



# Glossary: Terms and abbreviations

## A

**Avahi:** A licensed [Zeroconf](#) networking feature, including DNS service. The feature enables a device to self-configure an IP address and subnet mask automatically, when a [DHCP](#) server in the LAN is not available.

## C

**Clock:** A mandatory internal or an external reference clock signal for generating the timing pulse in the instrument.

**Complete file path:** The complete file path specifies the root directory and all subdirectories that contain a file or folder.

Synonyms to this expression are "full file path" and "absolute file path".

See also [Chapter 12.5.2, "Handling files in the default or in a specified directory"](#), on page 369.

**Computer name:** [Hostname](#)

## D

**daisy chain:** A connection scheme in which instruments are connected together in sequence, i.e. an output of the first one is connected to an input of the second one, etc.

**DHCP:** Dynamic host configuration protocol

**DNS:** Domain name system server

## E

**e.g.:** For example

**External mass memory:** External memory, connected to the instrument via USB connector (Type A female). It can hold stored files with user data.

See also [System drive](#)

## F

**File transfer:** The transmission of files from or to the instrument by a remote client. The instrument supports the standard methods [FTP](#) and file sharing according to [SAMBA/SMB](#).

**FTP:** File transfer protocol

## G

**Glossary:** List of the often used terms and abbreviations

**GUI:** Graphical user interface

**H**

**Hostname:** An unambiguous indication of the instrument in a LAN that uses a [DNS](#) server.

The default hostname follows the syntax `SMBB-<serial number>`, e.g.

`SMB100B-102030`.

See [Serial number](#).

Synonym: [Computer name](#)

**HUMS:** Health and utilization monitoring system.

**I**

**i.e.:** That is

**L**

**LF:** Low frequency

**LSB:** Least significant bit

**M**

**MIMO:** Multiple input multiple outputs

**MSB:** Most significant bit

**N**

**NTP:** Network Time Protocol synchronizes all connected instruments and computer systems to minimize time delays in the network.

**P**

**PC:** Personal computer

**Power:** A term describing the signal level of the RF signal

**product page:** A designation of the R&S SMB100B product page [www.rohde-schwarz.com/product/SMA100B.html](http://www.rohde-schwarz.com/product/SMA100B.html)

**R**

**Remote access:** [Remote operation](#)

**Remote control:** The operation of the R&S SMB100B by remote control commands or programs to perform automated tests.

The instrument is connected to a system controller via LAN/VXI-11, GPIB or USB using [VISA](#). The instrument is controlled directly or supported by instrument drivers.

**Remote device:** External device controls the R&S SMB100B in remote operation mode, see [Remote operation](#).

Synonyms: External controller, client device

**Remote operation:** Allows you to operate the R&S SMB100B from a remote device via VNC.

Both the R&S SMB100B and the remote device are connected in a LAN.

Synonym: Remote access

**Removable memory:** General term describing mass memory that can be unmounted from the instrument.

**RF:** Radio frequency

## S

**SAMBA/SMB:** Server message protocol

**Serial number:** Unique instrument identification, provided on the rear panel of the instrument and required to build the [Computer name](#).

The serial number are the last 6 digits in the string <stock no.>-<serial number>, e.g. SMB100B-102030

**Smart device:** A mobile, cordless device, such as a smartphone or tablet, capable of Internet browsing.

Synonyms: Smartphone, tablet

**System drive:** The system drive is a built-in internal memory that holds the operating system, the firmware, and the stored user data.

Throughout this description, the system drive is referred as an internal memory.

See also [Removable memory](#)

## T

**Trigger:** Internally generated or externally supplied signal which starts signal generation at a particular point in time.

**Trigger event:** A trigger event is caused by the received trigger signal or executed manual trigger.

## U

**UE:** User equipment

**USBTC:** (USB test & measurement class)

A protocol built on top of USB for communication with USB devices. Using [VISA](#) library, it supports service request, triggers, and other specific operations, similar to GPIB.

**User directory:** Describes the default file storage location for user data.

Depending on the installed options, the user directory is physically located on the [System drive](#) or on the [Removable memory](#)

In the file system, user directory is always indicated as `/var/user`

**V**

**VISA:** Virtual instrument software architecture

**Z**

**Zeroconf:** Zero-configuration, see [Avahi](#).

## List of commands

:CALibration:ALL[:MEASure]?	378
:CALibration:DATA:EXPort	380
:CALibration:DATA:FACTory:DATE?	380
:CALibration:DELAy:MINutes	381
:CALibration:DELAy:SHUTdown[:STATe]	381
:CALibration:DELAy[:MEASure]?	381
:CALibration<hw>:ALL:DATE?	379
:CALibration<hw>:ALL:INFormation?	379
:CALibration<hw>:ALL:TEMP?	379
:CALibration<hw>:ALL:TIME?	380
:CALibration<hw>:CONTInueonerror	380
:DEVice:PRESet	367
:DIAGnostic:INFO:OTIME?	383
:DIAGnostic:INFO:POCount?	384
:DIAGnostic<hw>:BGInfo:CATalog?	383
:DIAGnostic<hw>:BGInfo?	383
:DIAGnostic<hw>:POINT:CATalog?	384
:DIAGnostic<hw>[:MEASure]:POINT?	384
:DISPlay:ANNotation:AMPLitude	395
:DISPlay:ANNotation:FREQuency	395
:DISPlay:ANNotation[:ALL]	395
:DISPlay:BRIGhtness	394
:DISPlay:BUtTon:BRIGhtness	394
:DISPlay:DIALog:CLoSe	396
:DISPlay:DIALog:CLoSe:ALL	397
:DISPlay:DIALog:ID?	395
:DISPlay:DIALog:OPEN	396
:DISPlay:PSAVe:HOLDoff	393
:DISPlay:PSAVe[:STATe]	393
:DISPlay:UPDate[:STATe]	394
:FORMat:BOReD	397
:FORMat:SREGister	398
:FORMat[:DATA]	398
:FPANel:KEYBoard:LAYout	404
:HCOPY:DATA?	400
:HCOPY:DEVice:LANGuage	400
:HCOPY:FILE[:NAME]	400
:HCOPY:FILE[:NAME]:AUTO:DIRectory	401
:HCOPY:FILE[:NAME]:AUTO:DIRectory:CLear	402
:HCOPY:FILE[:NAME]:AUTO:FILE?	402
:HCOPY:FILE[:NAME]:AUTO:STATe	402
:HCOPY:FILE[:NAME]:AUTO?	401
:HCOPY:FILE[:NAME]:AUTO[:FILE]:DAY:STATe	402
:HCOPY:FILE[:NAME]:AUTO[:FILE]:MONTH:STATe	402
:HCOPY:FILE[:NAME]:AUTO[:FILE]:NUMBer?	403
:HCOPY:FILE[:NAME]:AUTO[:FILE]:PREFix	403
:HCOPY:FILE[:NAME]:AUTO[:FILE]:PREFix:STATe	403

:HCOPY:FILE[:NAME]:AUTO[:FILE]:YEAR:STATe.....	402
:HCOPY:IMAGe:FORMat.....	400
:HCOPY:REGion.....	400
:HCOPY[:EXECute].....	401
:INITiate<hw>[:POWer]:CONTInuous.....	413
:KBOard:LAYout.....	404
:MEMory:HFRee?.....	377
:MMEMory:CATalog:LENGth?.....	373
:MMEMory:CATalog?.....	372
:MMEMory:CDIRectory.....	373
:MMEMory:COPI.....	373
:MMEMory:DATA.....	374
:MMEMory:DCATalog:LENGth?.....	375
:MMEMory:DCATalog?.....	375
:MMEMory:DELeTe.....	375
:MMEMory:LOAD:STATe.....	375
:MMEMory:MDIRectory.....	376
:MMEMory:MOVE.....	376
:MMEMory:MSIS.....	376
:MMEMory:RDIRectory.....	376
:MMEMory:RDIRectory:RECURSive.....	377
:MMEMory:STORe:STATe.....	377
:OUTPut:ALL[:STATe].....	405
:OUTPut<hw>:AFIXed:RANGe:LOWer?.....	406
:OUTPut<hw>:AFIXed:RANGe:UPPer?.....	406
:OUTPut<hw>:AMODE.....	406
:OUTPut<hw>:IMPedance?.....	406
:OUTPut<hw>:PROTection:CLear.....	407
:OUTPut<hw>:PROTection:TRIPped?.....	407
:OUTPut<hw>[:STATe].....	405
:OUTPut<hw>[:STATe]:PON.....	405
:READ<ch>[:POWer]?.....	414
:SENSe<ch>:UNIT[:POWer].....	415
:SENSe<ch>[:POWer]:APERTure:DEFault:STATe.....	415
:SENSe<ch>[:POWer]:APERTure:TIME.....	415
:SENSe<ch>[:POWer]:CORRection:SPDevice:LIST?.....	416
:SENSe<ch>[:POWer]:CORRection:SPDevice:SELeCt.....	416
:SENSe<ch>[:POWer]:CORRection:SPDevice:STATe.....	416
:SENSe<ch>[:POWer]:DISPlay:PERManent:PRiority.....	416
:SENSe<ch>[:POWer]:DISPlay:PERManent:STATe.....	417
:SENSe<ch>[:POWer]:FILTer:LENGth:AUTO?.....	417
:SENSe<ch>[:POWer]:FILTer:LENGth[:USER].....	417
:SENSe<ch>[:POWer]:FILTer:NSRatio.....	418
:SENSe<ch>[:POWer]:FILTer:NSRatio:MTIME.....	418
:SENSe<ch>[:POWer]:FILTer:SONCe.....	418
:SENSe<ch>[:POWer]:FILTer:TYPE.....	419
:SENSe<ch>[:POWer]:FREQuency.....	419
:SENSe<ch>[:POWer]:LOGGing:STATe.....	420
:SENSe<ch>[:POWer]:OFFSet.....	420
:SENSe<ch>[:POWer]:OFFSet:STATe.....	420

:SENSe<ch>[:POWer]:SNUMber?	421
:SENSe<ch>[:POWer]:SOURce	421
:SENSe<ch>[:POWer]:STATus[:DEVice]?	421
:SENSe<ch>[:POWer]:SVERSion?	422
:SENSe<ch>[:POWer]:TYPE?	422
:SENSe<ch>[:POWer]:ZERO	422
:SLIST:CLEAr:LAN	412
:SLIST:CLEAr:USB	412
:SLIST:CLEAr[:ALL]	413
:SLIST:ELEMent<ch>:MAPPing	413
:SLIST:SCAN:LSENSor	411
:SLIST:SCAN:USENSor	412
:SLIST:SCAN[:STATe]	411
:SLIST:SENSor:MAP	413
:SLIST[:LIST]?	411
:SOURce<hw>:PRESet	367
:STATus:OPERation:CONDition?	562
:STATus:OPERation:ENABLE	563
:STATus:OPERation:NTRansition	563
:STATus:OPERation:PTRansition	563
:STATus:OPERation[:EVENT]	563
:STATus:PRESet	564
:STATus:QUESTionable:CONDition	564
:STATus:QUESTionable:ENABLE	564
:STATus:QUESTionable:NTRansition	565
:STATus:QUESTionable:PTRansition	565
:STATus:QUESTionable[:EVENT]	564
:STATus:QUEEue[:NEXT]?	565
:SYSTem:BIOS:VERSion?	559
:SYSTem:COMMunicate:GPIB:LTERminator	543
:SYSTem:COMMunicate:GPIB:RESource?	543
:SYSTem:COMMunicate:GPIB[:SELF]:ADDRess	543
:SYSTem:COMMunicate:HISLip:RESource?	543
:SYSTem:COMMunicate:NETWork:IPADDRess	544
:SYSTem:COMMunicate:NETWork:IPADDRess:MODE	544
:SYSTem:COMMunicate:NETWork:MACAddress	544
:SYSTem:COMMunicate:NETWork:RESource?	544
:SYSTem:COMMunicate:NETWork:REStart	545
:SYSTem:COMMunicate:NETWork:STATus?	545
:SYSTem:COMMunicate:NETWork[:COMMOn]:DOMain	545
:SYSTem:COMMunicate:NETWork[:COMMOn]:HOSTName	545
:SYSTem:COMMunicate:NETWork[:COMMOn]:WORKGroup	546
:SYSTem:COMMunicate:NETWork[:IPADDRess]:DNS	546
:SYSTem:COMMunicate:NETWork[:IPADDRess]:GATeway	546
:SYSTem:COMMunicate:NETWork[:IPADDRess]:SUBNet:MASK	546
:SYSTem:COMMunicate:SERial:BAUD	547
:SYSTem:COMMunicate:SERial:PARity	547
:SYSTem:COMMunicate:SERial:RESource?	547
:SYSTem:COMMunicate:SERial:SBITs	547
:SYSTem:COMMunicate:SOCKet:RESource?	547

:SYSTem:COMMunicate:USB:RESource?.....	548
:SYSTem:DATE.....	557
:SYSTem:DFPPrint.....	560
:SYSTem:DLOCK.....	539
:SYSTem:ERRor:ALL?.....	536
:SYSTem:ERRor:CODE:ALL?.....	537
:SYSTem:ERRor:CODE[:NEXT]?.....	537
:SYSTem:ERRor:COUNT?.....	537
:SYSTem:ERRor:GNEXT?.....	538
:SYSTem:ERRor:HISTory:CLEar.....	539
:SYSTem:ERRor:STATic?.....	539
:SYSTem:ERRor[:NEXT]?.....	538
:SYSTem:FILEs:TEMPorary:DELeTe.....	562
:SYSTem:FPReset.....	367
:SYSTem:HELP:EXPort.....	548
:SYSTem:IDENtification.....	548
:SYSTem:IDENtification:PRESet.....	549
:SYSTem:INFormaTion:SCPI.....	550
:SYSTem:IRESpOse.....	549
:SYSTem:KLOCK.....	539
:SYSTem:LANGUage.....	550
:SYSTem:LOCK:OWNer?.....	541
:SYSTem:LOCK:RELease:ALL.....	541
:SYSTem:LOCK:REQuEst[:EXCLusive]?.....	541
:SYSTem:MMEMory:PATH:USER?.....	560
:SYSTem:NINFormaTion?.....	540
:SYSTem:NTP:HOSTname.....	557
:SYSTem:NTP:STATe.....	558
:SYSTem:ORESpOse.....	549
:SYSTem:OSYStem?.....	560
:SYSTem:PRESet.....	367
:SYSTem:PROTect<ch>[:STATe].....	542
:SYSTem:RCL.....	542
:SYSTem:REBoot.....	561
:SYSTem:REStArT.....	561
:SYSTem:SAV.....	541
:SYSTem:SECurity:NETWork:AVAHi[:STATe].....	550
:SYSTem:SECurity:NETWork:FTP[:STATe].....	550
:SYSTem:SECurity:NETWork:HTTP[:STATe].....	551
:SYSTem:SECurity:NETWork:RAW[:STATe].....	551
:SYSTem:SECurity:NETWork:REMSupport[:STATe].....	551
:SYSTem:SECurity:NETWork:RPC[:STATe].....	551
:SYSTem:SECurity:NETWork:SMB[:STATe].....	552
:SYSTem:SECurity:NETWork:SOE[:STATe].....	552
:SYSTem:SECurity:NETWork:SSH[:STATe].....	552
:SYSTem:SECurity:NETWork:SWUPdate[:STATe].....	553
:SYSTem:SECurity:NETWork:VNC[:STATe].....	553
:SYSTem:SECurity:NETWork[:STATe].....	553
:SYSTem:SECurity:SANitizE[:STATe].....	553
:SYSTem:SECurity:SUPolicy.....	554



:SYSTem:SECurity:VOLMode[:STATe].....	554
:SYSTem:SHUTdown.....	561
:SYSTem:SPECification:IDENtification:CATalog?.....	555
:SYSTem:SPECification:PARAmeter?.....	555
:SYSTem:SPECification:VERSion.....	555
:SYSTem:SPECification:VERSion:CATalog?.....	556
:SYSTem:SPECification:VERSion:FACTory?.....	556
:SYSTem:SPECification?.....	554
:SYSTem:SRData?.....	556
:SYSTem:STARTup:COMPLete?.....	557
:SYSTem:TIME.....	558
:SYSTem:TIME:PROTocol.....	559
:SYSTem:TIME:ZONE.....	558
:SYSTem:TIME:ZONE:CATalog?.....	558
:SYSTem:ULOCK.....	540
:SYSTem:UPTime?.....	559
:SYSTem:VERSion?.....	559
:SYSTem:WAIT.....	561
:TEST:PIXel:COLor.....	567
:TEST:PIXel:GRADient.....	567
:TEST:PIXel:POINtsize.....	567
:TEST:PIXel:RGBA.....	567
:TEST:PIXel:TEXT.....	568
:TEST:PIXel:WINDow.....	568
:TEST<hw>:ALL:RESult?.....	566
:TEST<hw>:ALL:STARt.....	566
:TRIGger<hw>:FPSWeep:SOURce.....	570
:TRIGger<hw>:FSWeep:SOURce.....	569
:TRIGger<hw>:FSWeep[:IMMediate].....	571
:TRIGger<hw>:LFFSweep.....	571
:TRIGger<hw>:LFFSweep:IMMediate.....	571
:TRIGger<hw>:LFFSweep:SOURce.....	569
:TRIGger<hw>:PSWeep:SOURce.....	569
:TRIGger<hw>:PSWeep[:IMMediate].....	571
:TRIGger<hw>[:SWEep]:SOURce.....	569
:TRIGger<hw>[:SWEep][:IMMediate].....	571
:UNIT:ANGLE.....	572
:UNIT:POWer.....	572
[:SOURce]:CORRection:CSET:CATalog?.....	462
[:SOURce]:CORRection:CSET:DELeTe.....	462
[:SOURce]:INPut:TRIGger:SLOPe.....	472
[:SOURce]:LFOutput:OFFSet.....	477
[:SOURce]:LFOutput:SIMPedance.....	478
[:SOURce]:LFOutput:VOLTage.....	479
[:SOURce]:LFOutput<ch>:BANDwidth?.....	475
[:SOURce]:LFOutput<ch>:FREQuency.....	475
[:SOURce]:LFOutput<ch>:INTernal:VOLTage.....	477
[:SOURce]:LFOutput<ch>:SOURce.....	478
[:SOURce]:LFOutput<ch>:SOURce:PATH.....	478
[:SOURce]:LFOutput<ch>[:STATe].....	477

[[:SOURce]:PM<ch>[:DEViation].....	437
[[:SOURce]:POWER:WIGNore.....	514
[[:SOURce]:PULM[:INTERNAL]:TRAIIn]:TRIGger:IMMediate.....	440
[[:SOURce]:ROSCillator:EXTErnal:FREQUency.....	516
[[:SOURce]:ROSCillator:EXTErnal:FREQUency:VARIable.....	517
[[:SOURce]:ROSCillator:EXTErnal:MLRAnge?.....	517
[[:SOURce]:ROSCillator:EXTErnal:NSBAndwidth?.....	518
[[:SOURce]:ROSCillator:EXTErnal:RFOFF[:STATe].....	516
[[:SOURce]:ROSCillator:EXTErnal:SBANdwidth.....	517
[[:SOURce]:ROSCillator:OUTPut:ALTErnate:FREQUency:MODE.....	518
[[:SOURce]:ROSCillator:OUTPut:FREQUency:MODE.....	518
[[:SOURce]:ROSCillator:PRESet.....	516
[[:SOURce]:ROSCillator:SOURce.....	516
[[:SOURce]:ROSCillator[:INTERNAL]:ADJJust:VALue.....	519
[[:SOURce]:ROSCillator[:INTERNAL]:ADJJust[:STATe].....	519
[[:SOURce]:STEReo:ARI:BK[:CODE].....	455
[[:SOURce]:STEReo:ARI:STATe.....	454
[[:SOURce]:STEReo:ARI:TYPE.....	455
[[:SOURce]:STEReo:ARI:TYPE:STATe.....	455
[[:SOURce]:STEReo:ARI[:DEViation].....	454
[[:SOURce]:STEReo:AUDio:MODE.....	451
[[:SOURce]:STEReo:AUDio:PREEmphasis.....	453
[[:SOURce]:STEReo:AUDio:PREEmphasis:STATe.....	453
[[:SOURce]:STEReo:DIRect.....	450
[[:SOURce]:STEReo:EXTErnal:IMPedance.....	452
[[:SOURce]:STEReo:MMF.....	452
[[:SOURce]:STEReo:PILOt:PHASe.....	454
[[:SOURce]:STEReo:PILOt:STATe.....	453
[[:SOURce]:STEReo:PILOt[:DEViation].....	453
[[:SOURce]:STEReo:RDS:DATaset.....	456
[[:SOURce]:STEReo:RDS:STATe.....	456
[[:SOURce]:STEReo:RDS:TRAFfic:ANNouncement[:STATe].....	457
[[:SOURce]:STEReo:RDS:TRAFfic:PROGram[:STATe].....	456
[[:SOURce]:STEReo:RDS[:DEViation].....	456
[[:SOURce]:STEReo:SOURce.....	452
[[:SOURce]:STEReo:STATe.....	451
[[:SOURce]:STEReo[:DEViation].....	451
[[:SOURce<hw>]:AM:DEPTH:SUM.....	427
[[:SOURce<hw>]:AM:DEViation:MODE.....	428
[[:SOURce<hw>]:AM:RATIo.....	428
[[:SOURce<hw>]:AM<ch>:SENSitivity.....	428
[[:SOURce<hw>]:AM<ch>:SOURce.....	426
[[:SOURce<hw>]:AM<ch>:STATe.....	426
[[:SOURce<hw>]:AM<ch>[:DEPTH].....	427
[[:SOURce<hw>]:COMBined:FREQUency:START.....	528
[[:SOURce<hw>]:COMBined:FREQUency:STOP.....	528
[[:SOURce<hw>]:COMBined:POWER:START.....	528
[[:SOURce<hw>]:COMBined:POWER:STOP.....	529
[[:SOURce<hw>]:CORRection:CSET:DATA:FREQUency.....	460
[[:SOURce<hw>]:CORRection:CSET:DATA:FREQUency:POINts?.....	460

[:SOURce<hw>]:CORRection:CSET:DATA:POWer.....	460
[:SOURce<hw>]:CORRection:CSET:DATA:POWer:POINts?.....	460
[:SOURce<hw>]:CORRection:CSET:DATA[:SENSor<ch>][:POWer]:SONCe.....	460
[:SOURce<hw>]:CORRection:CSET:DATA[:SENSor<ch>][:POWer]:SONCe.....	462
[:SOURce<hw>]:CORRection:CSET[:SELEct].....	461
[:SOURce<hw>]:CORRection:DEXChange:AFILe:CATALog?.....	463
[:SOURce<hw>]:CORRection:DEXChange:AFILe:EXTension.....	463
[:SOURce<hw>]:CORRection:DEXChange:AFILe:SELEct.....	463
[:SOURce<hw>]:CORRection:DEXChange:AFILe:SEParator:COLumn.....	464
[:SOURce<hw>]:CORRection:DEXChange:AFILe:SEParator:DECimal.....	464
[:SOURce<hw>]:CORRection:DEXChange:EXECute.....	464
[:SOURce<hw>]:CORRection:DEXChange:MODE.....	464
[:SOURce<hw>]:CORRection:DEXChange:SELEct.....	465
[:SOURce<hw>]:CORRection:VALue?.....	461
[:SOURce<hw>]:CORRection:ZERoing:STATe.....	461
[:SOURce<hw>]:CORRection[:STATe].....	462
[:SOURce<hw>]:FM:DEViation:MODE.....	432
[:SOURce<hw>]:FM:DEViation:SUM.....	432
[:SOURce<hw>]:FM:MODE.....	433
[:SOURce<hw>]:FM:RATio.....	432
[:SOURce<hw>]:FM:SENSitivity?.....	433
[:SOURce<hw>]:FM<ch>:SOURce.....	431
[:SOURce<hw>]:FM<ch>:STATe.....	430
[:SOURce<hw>]:FM<ch>[:DEViation].....	431
[:SOURce<hw>]:FREQuency:CENTer.....	469
[:SOURce<hw>]:FREQuency:MANual.....	468
[:SOURce<hw>]:FREQuency:MODE.....	466
[:SOURce<hw>]:FREQuency:MULTIplier.....	468
[:SOURce<hw>]:FREQuency:OFFSet.....	468
[:SOURce<hw>]:FREQuency:SPAN.....	469
[:SOURce<hw>]:FREQuency:STARt.....	469
[:SOURce<hw>]:FREQuency:STEP:MODE.....	470
[:SOURce<hw>]:FREQuency:STEP[:INCRement].....	470
[:SOURce<hw>]:FREQuency:STOP.....	470
[:SOURce<hw>]:FREQuency[:CW FIXed].....	467
[:SOURce<hw>]:FREQuency[:CW FIXed]:RCL.....	467
[:SOURce<hw>]:INPut:MODext:COUPLing.....	471
[:SOURce<hw>]:INPut:MODext:IMPedance<ch>.....	471
[:SOURce<hw>]:LFOutput:FREQuency:MANual.....	476
[:SOURce<hw>]:LFOutput:FREQuency:MODE.....	476
[:SOURce<hw>]:LFOutput:FREQuency:STARt.....	477
[:SOURce<hw>]:LFOutput:FREQuency:STOP.....	477
[:SOURce<hw>]:LFOutput:SWEep[:FREQuency]:DWELl.....	482
[:SOURce<hw>]:LFOutput:SWEep[:FREQuency]:EXECute.....	482
[:SOURce<hw>]:LFOutput:SWEep[:FREQuency]:MODE.....	483
[:SOURce<hw>]:LFOutput:SWEep[:FREQuency]:POINts.....	483
[:SOURce<hw>]:LFOutput:SWEep[:FREQuency]:RETRace.....	483
[:SOURce<hw>]:LFOutput:SWEep[:FREQuency]:RUNNing?.....	484
[:SOURce<hw>]:LFOutput:SWEep[:FREQuency]:SHAPE.....	484
[:SOURce<hw>]:LFOutput:SWEep[:FREQuency]:SPACing.....	484

[:SOURce<hw>]:LFOutput:SWEep[:FREQuency]:STEP:LOGarithmic.....	484
[:SOURce<hw>]:LFOutput:SWEep[:FREQuency]:STEP[:LINear].....	485
[:SOURce<hw>]:LFOutput<ch>:PERiod?.....	475
[:SOURce<hw>]:LFOutput<ch>:SHApe.....	479
[:SOURce<hw>]:LFOutput<ch>:SHApe:PULSe:DCYCLE.....	479
[:SOURce<hw>]:LFOutput<ch>:SHApe:PULSe:PERiod.....	480
[:SOURce<hw>]:LFOutput<ch>:SHApe:PULSe:WIDTh.....	480
[:SOURce<hw>]:LFOutput<ch>:SHApe:TRAPeZe:FALL.....	480
[:SOURce<hw>]:LFOutput<ch>:SHApe:TRAPeZe:HIGH.....	480
[:SOURce<hw>]:LFOutput<ch>:SHApe:TRAPeZe:PERiod.....	481
[:SOURce<hw>]:LFOutput<ch>:SHApe:TRAPeZe:RISE.....	481
[:SOURce<hw>]:LFOutput<ch>:SHApe:TRiangle:PERiod.....	481
[:SOURce<hw>]:LFOutput<ch>:SHApe:TRiangle:RISE.....	481
[:SOURce<hw>]:LIST:CATalog?.....	494
[:SOURce<hw>]:LIST:DELete.....	494
[:SOURce<hw>]:LIST:DELete:ALL.....	494
[:SOURce<hw>]:LIST:DEXChange:AFILe:CATalog?.....	496
[:SOURce<hw>]:LIST:DEXChange:AFILe:EXTension.....	497
[:SOURce<hw>]:LIST:DEXChange:AFILe:SELect.....	497
[:SOURce<hw>]:LIST:DEXChange:AFILe:SEParator:COLumn.....	497
[:SOURce<hw>]:LIST:DEXChange:AFILe:SEParator:DECimal.....	497
[:SOURce<hw>]:LIST:DEXChange:EXECute.....	496
[:SOURce<hw>]:LIST:DEXChange:MODE.....	498
[:SOURce<hw>]:LIST:DEXChange:SELect.....	498
[:SOURce<hw>]:LIST:DWELI.....	488
[:SOURce<hw>]:LIST:DWELI:LIST.....	489
[:SOURce<hw>]:LIST:DWELI:LIST:POINts?.....	489
[:SOURce<hw>]:LIST:DWELI:MODE.....	489
[:SOURce<hw>]:LIST:FREE?.....	495
[:SOURce<hw>]:LIST:FREQuency.....	490
[:SOURce<hw>]:LIST:FREQuency:POINts?.....	490
[:SOURce<hw>]:LIST:INDex.....	490
[:SOURce<hw>]:LIST:INDex:STARt.....	491
[:SOURce<hw>]:LIST:INDex:STOP.....	491
[:SOURce<hw>]:LIST:MODE.....	491
[:SOURce<hw>]:LIST:POWer.....	491
[:SOURce<hw>]:LIST:POWer:POINts?.....	492
[:SOURce<hw>]:LIST:RESet.....	495
[:SOURce<hw>]:LIST:RUNNing?.....	493
[:SOURce<hw>]:LIST:SELect.....	495
[:SOURce<hw>]:LIST:TRIGger:EXECute.....	492
[:SOURce<hw>]:LIST:TRIGger:SOURce.....	492
[:SOURce<hw>]:MODulation[:ALL][:STATe].....	423
[:SOURce<hw>]:NOISe:BANDwidth BWIDth.....	499
[:SOURce<hw>]:NOISe:DIStribution.....	499
[:SOURce<hw>]:NOISe:LEVel:RELative?.....	499
[:SOURce<hw>]:NOISe:LEVel[:ABSolute]?.....	499
[:SOURce<hw>]:PGENerator:OUTPut:POLarity.....	500
[:SOURce<hw>]:PGENerator:OUTPut[:STATe].....	501
[:SOURce<hw>]:PGENerator:STATe.....	501

[:SOURce<hw>]:PHASe.....	502
[:SOURce<hw>]:PHASe:REFerence.....	502
[:SOURce<hw>]:PM:DEViation:MODE.....	436
[:SOURce<hw>]:PM:DEViation:SUM.....	437
[:SOURce<hw>]:PM:MODE.....	436
[:SOURce<hw>]:PM:RATio.....	437
[:SOURce<hw>]:PM:SENSitivity?.....	437
[:SOURce<hw>]:PM<ch>:SOURce.....	435
[:SOURce<hw>]:PM<ch>:STATe.....	435
[:SOURce<hw>]:POWer:ALC:DSensitivity.....	505
[:SOURce<hw>]:POWer:ALC:SONCe.....	505
[:SOURce<hw>]:POWer:ALC[:STATe].....	504
[:SOURce<hw>]:POWer:ATTenuation:RFOff:MODE.....	505
[:SOURce<hw>]:POWer:EMF:STATe.....	506
[:SOURce<hw>]:POWer:LBEHaviour.....	506
[:SOURce<hw>]:POWer:LIMit[:AMPLitude].....	506
[:SOURce<hw>]:POWer:MANual.....	506
[:SOURce<hw>]:POWer:MODE.....	507
[:SOURce<hw>]:POWer:POWer.....	507
[:SOURce<hw>]:POWer:RANGe:LOWer?.....	514
[:SOURce<hw>]:POWer:RANGe:UPPer?.....	514
[:SOURce<hw>]:POWer:SPC:CRANGe.....	508
[:SOURce<hw>]:POWer:SPC:DELay.....	509
[:SOURce<hw>]:POWer:SPC:MEASure.....	509
[:SOURce<hw>]:POWer:SPC:MODE.....	509
[:SOURce<hw>]:POWer:SPC:PEAK.....	510
[:SOURce<hw>]:POWer:SPC:SElect.....	510
[:SOURce<hw>]:POWer:SPC:SINGle.....	510
[:SOURce<hw>]:POWer:SPC:STATe.....	510
[:SOURce<hw>]:POWer:SPC:TARGet.....	511
[:SOURce<hw>]:POWer:SPC:WARning?.....	511
[:SOURce<hw>]:POWer:STARt.....	508
[:SOURce<hw>]:POWer:STEP:MODE.....	511
[:SOURce<hw>]:POWer:STEP[:INCRement].....	512
[:SOURce<hw>]:POWer:STOP.....	508
[:SOURce<hw>]:POWer[:LEVel][:IMMEDIATE]:OFFSet.....	512
[:SOURce<hw>]:POWer[:LEVel][:IMMEDIATE]:RCL.....	513
[:SOURce<hw>]:POWer[:LEVel][:IMMEDIATE]:REFLevel.....	514
[:SOURce<hw>]:POWer[:LEVel][:IMMEDIATE][:AMPLitude].....	513
[:SOURce<hw>]:PULM:DELay.....	441
[:SOURce<hw>]:PULM:DOUBle:DELay.....	441
[:SOURce<hw>]:PULM:DOUBle:STATe.....	442
[:SOURce<hw>]:PULM:DOUBle:WIDTh.....	441
[:SOURce<hw>]:PULM:IMPedance.....	443
[:SOURce<hw>]:PULM:MODE.....	439
[:SOURce<hw>]:PULM:OUTPut:SYNC[:STATe].....	443
[:SOURce<hw>]:PULM:PERiod.....	440
[:SOURce<hw>]:PULM:POLarity.....	443
[:SOURce<hw>]:PULM:SOURce.....	442
[:SOURce<hw>]:PULM:STATe.....	442

[:SOURce<hw>]:PULM:TRAI:n:CATalog?	445
[:SOURce<hw>]:PULM:TRAI:n:DELeTe	445
[:SOURce<hw>]:PULM:TRAI:n:DEXChange:AFILe:CATalog?	448
[:SOURce<hw>]:PULM:TRAI:n:DEXChange:AFILe:EXTension	447
[:SOURce<hw>]:PULM:TRAI:n:DEXChange:AFILe:SELEct	448
[:SOURce<hw>]:PULM:TRAI:n:DEXChange:AFILe:SEParator:COLumn	448
[:SOURce<hw>]:PULM:TRAI:n:DEXChange:AFILe:SEParator:DECimal	448
[:SOURce<hw>]:PULM:TRAI:n:DEXChange:EXECute	449
[:SOURce<hw>]:PULM:TRAI:n:DEXChange:MODE	447
[:SOURce<hw>]:PULM:TRAI:n:DEXChange:SELEct	449
[:SOURce<hw>]:PULM:TRAI:n:OFFTime	445
[:SOURce<hw>]:PULM:TRAI:n:OFFTime:POINts?	446
[:SOURce<hw>]:PULM:TRAI:n:ONTime	445
[:SOURce<hw>]:PULM:TRAI:n:ONTime:POINts?	446
[:SOURce<hw>]:PULM:TRAI:n:REPetition	446
[:SOURce<hw>]:PULM:TRAI:n:REPetition:POINts?	446
[:SOURce<hw>]:PULM:TRAI:n:SELEct	446
[:SOURce<hw>]:PULM:TRIGger:MODE	440
[:SOURce<hw>]:PULM:TTYPe	442
[:SOURce<hw>]:PULM:WIDTh	441
[:SOURce<hw>]:SWEep:COMBined:COUNT	529
[:SOURce<hw>]:SWEep:COMBined:DWELI	529
[:SOURce<hw>]:SWEep:COMBined:EXECute	529
[:SOURce<hw>]:SWEep:COMBined:MODE	530
[:SOURce<hw>]:SWEep:COMBined:RETRace	530
[:SOURce<hw>]:SWEep:COMBined:SHAPE	531
[:SOURce<hw>]:SWEep:POWer:DWELI	522
[:SOURce<hw>]:SWEep:POWer:EXECute	526
[:SOURce<hw>]:SWEep:POWer:MODE	523
[:SOURce<hw>]:SWEep:POWer:POINts	523
[:SOURce<hw>]:SWEep:POWer:RETRace	526
[:SOURce<hw>]:SWEep:POWer:RUNNing?	527
[:SOURce<hw>]:SWEep:POWer:SHAPE	526
[:SOURce<hw>]:SWEep:POWer:SPACing:MODE?	523
[:SOURce<hw>]:SWEep:POWer:STEP[:LOGarithmic]	524
[:SOURce<hw>]:SWEep:RESEt[:ALL]	531
[:SOURce<hw>]:SWEep[:FREQUency]:DWELI	524
[:SOURce<hw>]:SWEep[:FREQUency]:EXECute	526
[:SOURce<hw>]:SWEep[:FREQUency]:MODE	524
[:SOURce<hw>]:SWEep[:FREQUency]:POINts	525
[:SOURce<hw>]:SWEep[:FREQUency]:RETRace	526
[:SOURce<hw>]:SWEep[:FREQUency]:RUNNing?	527
[:SOURce<hw>]:SWEep[:FREQUency]:SHAPE	526
[:SOURce<hw>]:SWEep[:FREQUency]:SPACing	525
[:SOURce<hw>]:SWEep[:FREQUency]:STEP:LOGarithmic	527
[:SOURce<hw>]:SWEep[:FREQUency]:STEP[:LINear]	527
*CLS	362
*ESE	362
*ESR?	362
*IDN?	363

*IST?.....	363
*OPC.....	363
*OPT?.....	363
*PRE.....	364
*PSC.....	364
*RCL.....	364
*RST.....	364
*SAV.....	365
*SRE.....	365
*STB?.....	365
*TRG.....	365
*TST?.....	366
*WAI.....	366
DIAGnostic:HUMS:DELeTe:ALL.....	385
DIAGnostic:HUMS:DEVice:HISTory:DELeTe:ALL.....	386
DIAGnostic:HUMS:DEVice:HISTory?.....	386
DIAGnostic:HUMS:FORMat.....	387
DIAGnostic:HUMS:SAVE.....	387
DIAGnostic:HUMS:STATe.....	387
DIAGnostic:HUMS:TAGS:ALL?.....	387
DIAGnostic:HUMS:TAGS:DELeTe.....	388
DIAGnostic:HUMS:TAGS:DELeTe:ALL.....	388
DIAGnostic:HUMS:TAGS[:VALue].....	388
STEReo:DIRect.....	575
STEReo:DIRect.....	576
STEReo:DIRect.....	576
STEReo:DIRect.....	577
STEReo:DIRect.....	577
STEReo:DIRect.....	578
STEReo:DIRect.....	578
STEReo:DIRect.....	578
STEReo:DIRect.....	579
STEReo:DIRect.....	579
STEReo:DIRect.....	579
STEReo:DIRect.....	580
STEReo:DIRect.....	580
STEReo:DIRect.....	581
STEReo:DIRect.....	581
STEReo:DIRect.....	582
STEReo:DIRect.....	582
STEReo:DIRect.....	582
STEReo:DIRect.....	583
STEReo:DIRect.....	583
STEReo:DIRect.....	583
STEReo:DIRect.....	584
STEReo:DIRect.....	584
STEReo:DIRect.....	585
STEReo:DIRect.....	585
STEReo:DIRect.....	586
STEReo:DIRect.....	586

STEReo:DIReCt.....	586
STEReo:DIReCt.....	587
STEReo:DIReCt.....	587
STEReo:DIReCt.....	587
STEReo:DIReCt.....	588
STEReo:DIReCt.....	588
STEReo:DIReCt.....	588
STEReo:DIReCt.....	589
STEReo:DIReCt.....	589
STEReo:DIReCt.....	589
STEReo:DIReCt.....	590
STEReo:DIReCt.....	590
STEReo:DIReCt.....	590
STEReo:DIReCt.....	590
STEReo:DIReCt.....	591
STEReo:DIReCt.....	591
STEReo:DIReCt.....	592
STEReo:DIReCt.....	592
STEReo:DIReCt.....	593
STEReo:DIReCt.....	593
STEReo:DIReCt?.....	592
SYSTem:COMMunicate:REST:ENABle.....	389
SYSTem:COMMunicate:SNMP:COMMunity:RO.....	389
SYSTem:COMMunicate:SNMP:COMMunity:RW.....	389
SYSTem:COMMunicate:SNMP:CONtAct.....	390
SYSTem:COMMunicate:SNMP:LOCation.....	390
SYSTem:COMMunicate:SNMP:USM:USER.....	390
SYSTem:COMMunicate:SNMP:USM:USER:ALL?.....	391
SYSTem:COMMunicate:SNMP:USM:USER:DELete.....	391
SYSTem:COMMunicate:SNMP:USM:USER:DELete:ALL.....	391
SYSTem:COMMunicate:SNMP:VERSion.....	392



# Index

## Symbols

/var/user directory .....	368
/var/volatile directory .....	368
&GTL .....	337
&LLO .....	337
&NREN .....	337
50 - Extern reference out of range or disconnected .....	595
140 - This modulation forces other modulations off .....	595
180 - Adjustment failed .....	596
182 - Adjustment data missing .....	596
183 - Adjustment data invalid .....	596
200 - Cannot access hardware .....	596
201 - Hardware revision out of date .....	596
202 - Cannot access the EEPROM .....	596
203 - Invalid EEPROM data .....	596
204 - river initialization failed .....	596
241 - No current list .....	596
242 - Unknown list type specified .....	596
460 - Cannot open the file .....	596
461 - Cannot write file .....	596
462 - Cannot read file .....	596
463 - Filename missing .....	596
464 - Invalid filename extension .....	596
465 - File contains invalid data .....	596

## A

### About

ALC states and their effects .....	156
Attenuator .....	153
Internal adjustments .....	609
Power-On/EMF .....	240
Reference oscillator .....	193
Selftests .....	609
UCOR .....	158, 159
Accept	
Security settings .....	270
Access modes	
Overview .....	280
Active connections	
Remote access .....	302
Active elements .....	49
Add LAN sensor	
NRP sensor mapping .....	187
Add sensor	
NRP sensor mapping .....	187
Add USBTMC sensor	
NRP sensor mapping .....	188
Add, change, delete	
User key action .....	247
Address	
GPIB interface .....	299
Adjust	
Display and keyboard .....	237
Display settings .....	236
Keyboard settings .....	236
Adjustment frequency	
Reference oscillator .....	198
Adjustments	
All .....	610
All delayed .....	612
Continue .....	611

Delay settings .....	611
Information .....	611
Last full adjustment .....	610
Settings .....	610
Shutdown .....	612
Warm up time .....	612
Advanced configuration	
LXI .....	319
ALC	
Detector sensitivity .....	158
Settings .....	157
State .....	157
ALC states and their effects .....	156
All packages	
Secure update policy .....	262
Alphanumeric keys	
Front panel keyboard .....	239
Alphanumeric parameters .....	52
AM .....	68
Deviation mode .....	77
Overview .....	111
Ratio .....	78
Subsystem .....	424
Total deviation .....	78
Amplitude modulation .....	77
Depth .....	77
Deviation mode .....	77
Ratio .....	78
Sensitivity .....	77
Subsystem .....	424
Analog modulation	
Options .....	68
Overview .....	109
Signal source .....	68
Annotation	
Disable amplitude display .....	265
Disable frequency display .....	264
Disable level .....	265
Aperture time	
Power sensors .....	185
Application cards .....	20
Application notes .....	20
ARI	
BK code .....	84
Deviation .....	84
Enabling .....	84
Identification of ARI signal .....	84
ATN .....	632
Attention .....	632
Attenuator	
About .....	153
RF signal .....	153
Settings .....	154
Attenuator settings	
Level range .....	155
Mode .....	154
RF OFF mode .....	155
Auto once	
Power sensors .....	184
Power viewer .....	184
Automatic level control	
Detector sensitivity .....	158
Readjust internal switch position .....	65, 155

- Settings ..... 157
- State ..... 157
- Automation ..... 279
- Autonegotiation
  - Failed ..... 598
- Avahi
  - LAN services ..... 268
- Average level
  - Power viewer ..... 182
- B**
- Bandwidth
  - Modulation input ..... 105
  - Noise generator ..... 106
- Basics
  - Editor ..... 94, 149, 165
  - Export list files ..... 95, 169
  - Fill with sensor list files ..... 167
  - Import list files ..... 95, 169
- Baud rate
  - RS232 interface ..... 300
- Bench top, placing ..... 22
- Brochures ..... 20
- Browser settings
  - LXI ..... 316
- Bytes order
  - Definition ..... 397
- C**
- Calibrate RF output level with power sensor ..... 188
- Calibration certificate ..... 20
- CALibration subsystem ..... 378
- Carrying the instrument ..... 21
- Catch range
  - NRP power control ..... 179
- Central storage
  - Accessing ..... 229
- Change
  - GPIO address ..... 327, 335
- Change password
  - Setup (security) ..... 272
- Change user password
  - Setup (security) ..... 272
- Check display screen
  - Display screen test ..... 619
- Check front panel
  - Key panel test ..... 617
  - Performing ..... 617
  - Settings ..... 616
- Check touch panel
  - Touchscreen test ..... 618
- Checking the instrument ..... 21
- Cleaning ..... 609
- Clear
  - NRP sensor mapping ..... 187
  - RF output protection ..... 155
  - User menu ..... 243
- Clear history
  - Undo/Redo ..... 277
- Clear status
  - Remote ..... 362
- Close
  - Show SCPI command ..... 341
- Combined RF frequency / level sweep
  - Step count ..... 139
- Combined sweep
  - Spacing ..... 135, 137
- Command sequence
  - Remote ..... 366
- Commands of all settings
  - SCPI list ..... 213
- Computer name
  - see hostname ..... 325
- Configuration
  - Restoring ..... 214
  - Restoring instrument settings ..... 211
- Configuring LAN services ..... 266
- Confirm unsigned
  - Secure update policy ..... 262
- Confirm user password
  - Setup (security) ..... 271, 272
- Connecting
  - Keyboard ..... 25
  - LAN ..... 25
  - Memory stick ..... 25
  - Mouse ..... 25
  - Power ..... 24
  - To Ref In/Ref Out ..... 28
  - To RF ..... 28
  - To RF coaxial connectors ..... 26
  - USB devices ..... 25
- Connecting to RF coaxial connectors
  - To connect to pluggable connectors ..... 27
  - To connect to screwable connectors ..... 27
  - To prepare for connecting ..... 26
- Connection fault
  - 169.254.\*.\* ..... 598
- Connector
  - AC power supply ..... 37
  - GPIO ..... 36
  - IEC/IEEE ..... 36
  - Inst Trig ..... 38
  - LAN ..... 37
  - LF ..... 37
  - Mod. Ext. .... 37
  - Pulse Ext. .... 37
  - Pulse Video ..... 37
  - Ref In ..... 37
  - Ref Out ..... 37
  - RF 50 Ω ..... 34
  - S/P Dif ..... 37
  - Signal Valid ..... 38
  - Stereo L/R ..... 37
  - USB ..... 34, 36
  - USB In ..... 36
- Context-sensitive menu ..... 49
- Continue
  - Internal adjustments ..... 611
- Continue on error
  - Failed internal adjustments ..... 599
- Control bus ..... 632
- Copy
  - Instrument settings ..... 220
  - Several files ..... 218, 226, 227
  - Show SCPI command ..... 341
- Counter ..... 603
- Coupling mode
  - AM, FM, PhiM ..... 105
  - External modulation input ..... 105
- Create
  - New directory ..... 220

- Current frequency
  - Sweep ..... 132
- Current index
  - List mode ..... 142
- Current level
  - Sweep ..... 132
- Customer support ..... 606
- Cut
  - Instrument settings ..... 220
- CW
  - Frequency ..... 60
- CW mode
  - Output level ..... 63
- CW signal
  - Settings ..... 57
- D**
- Data entry ..... 51
- Data format
  - Definition ..... 398
- Data list
  - Access ..... 215
  - How to open ..... 369
  - Select, edit, new ..... 217
- Data sheets ..... 20
- Data valid ..... 632
- Datasheet
  - LXI ..... 322
- Date ..... 614
- DAV ..... 632
- Deactivate RF output ..... 195
- Deactivated licenses ..... 252
- Declassification ..... 264
- Default directory
  - Mass memory ..... 368
  - User data ..... 203, 368
- Default values
  - Remote ..... 364
- Define
  - User key action ..... 248
- Delay
  - Double pulse (PULM) ..... 90
  - PULM ..... 90
- Delay time
  - NRP power control ..... 179
- Delete
  - Instrument settings ..... 220
  - List mode file ..... 144
- Delete instrument settings ..... 375
- Delete temporary files ..... 622
- Delta phase
  - RF frequency ..... 66
- Detector sensitivity
  - Automatic level control ..... 158
- Deviation
  - Fixed total deviation ..... 75, 76
  - PhiM ..... 76
- Deviation mode
  - AM ..... 77
  - Amplitude modulation ..... 77
  - FM ..... 75
  - Frequency modulation ..... 75
  - Phase modulation ..... 76
  - PhiM ..... 76
- Device ID ..... 251
  - NRP sensor mapping ..... 188
- Device reset ..... 367
- Device-specific notifications ..... 595
- DHCP ..... 324
- Dialog boxes ..... 50
- Directory
  - Temporary data ..... 368
  - User data ..... 368
- Disable
  - Frequency display ..... 264
  - Level display ..... 265
- Display
  - Active elements ..... 49
  - Brightness ..... 238, 239
  - Context-sensitive menu ..... 49
  - Info line ..... 49
  - Information ..... 47
  - Lock ..... 265
  - On-screen keypad ..... 49
  - Overview ..... 31
  - Power sensors ..... 182
  - SCPI list ..... 341
  - Screen saver ..... 238
  - Settings ..... 237
  - Setup ..... 237
  - Status bar ..... 48
  - Tab labels ..... 49
  - Taskbar ..... 48
  - Tile diagram ..... 48
  - USB keyboard ..... 239
  - Wait time (screen saver) ..... 238
- Display correction file data
  - UCOR ..... 163
- Display correction value
  - UCOR ..... 162
- Display permanent
  - Power sensors ..... 182
- Display screen
  - Checking ..... 619
- Display screen test
  - Perform ..... 619
- DISPlay subsystem ..... 392
- Disposal ..... 609
- Distribution
  - Noise generator ..... 106
- DNS server ..... 297
- DNS suffix ..... 297
- Documentation overview ..... 19
- Double pulse delay
  - PULM ..... 90
- Double pulse width
  - PULM ..... 90
- Downgrade information ..... 604
  - Factory version ..... 604
  - Min. version ..... 604
- Dwell time
  - Sweep ..... 135
- Dwell time mode
  - List mode ..... 142
- E**
- Edit
  - Editor ..... 94, 149, 166
  - List mode data ..... 144
  - UCOR data ..... 163

- Editor
  - Basics ..... 94, 149, 165
  - Edit ..... 94, 149, 166
  - Fill with sensor ..... 149, 166
  - Goto ..... 94, 149, 165
  - Save ..... 94, 149, 166
  - Save as ..... 94, 149, 166
- EMF display
  - RF level ..... 240
- Emulating front panel keys ..... 55
- Emulation
  - IDN string ..... 302
  - Language ..... 301
  - Mode ..... 301
  - Set IDN and OPT to default ..... 301
- Enable
  - LAN interface ..... 268
- Enable registers
  - Remote ..... 364
- Enter license key ..... 251
- Enter password
  - Setup (security) ..... 270
- EOI ..... 632
- Error log ..... 605
- Error messages ..... 596
  - Adjustment data invalid (183) ..... 596
  - Adjustment data missing (182) ..... 596
  - Adjustment failed (180) ..... 596
  - Cannot access hardware (200) ..... 596
  - Cannot access the EEPROM (202) ..... 596
  - Cannot open file (460) ..... 596
  - Cannot read file (462) ..... 596
  - Cannot write file (461) ..... 596
  - Driver initialization failed (204) ..... 596
  - Extern reference out of range or disconnected (50) . 595
  - File contains invalid data (465) ..... 596
  - Filename missing (463) ..... 596
  - Hardware revision out of date (201) ..... 596
  - Invalid EEPROM data (203) ..... 596
  - Invalid filename extension (464) ..... 596
  - No current list (241) ..... 596
  - SCPI ..... 595
  - See notifications ..... 594
  - This modulation forces other modulations off (140) .. 595
  - Unknown list type specified (242) ..... 596
- Event status enable register (ESE)
  - Remote ..... 362
- Event status register (ESR)
  - Remote ..... 362
- Exclude frequency ..... 213
- Exclude level ..... 213
- Execute
  - Single sweep ..... 136
  - Trigger (list mode) ..... 143
- Execute single
  - NRP power control ..... 179
- Expiration date of option ..... 604
- Export
  - Execute ..... 97, 146, 171
  - SCPI ..... 217
  - SCPI export ..... 343
  - SCPI list ..... 342
  - SCPI settings ..... 342
  - Export deactivation response ..... 252
  - Export license key ..... 252
  - Export list files
    - Basics ..... 95, 169
  - Express level in
    - Volts ..... 502
  - External frequency
    - Reference oscillator ..... 195
- F**
- Factory
  - Preset ..... 207
- Factory preset
  - Change GPIB address ..... 327
  - GPIB address ..... 335
- Factory version
  - Firmware ..... 604
- File
  - SCPI export ..... 343
- File catalog
  - List mode ..... 144
- File content
  - SCPI export ..... 343
- File handling ..... 203
- File list ..... 372
- File manager ..... 218
- File name ..... 231
- File select
  - Dialog ..... 215
- File server
  - Data exchange ..... 229
- File sharing ..... 224
- File storage location ..... 368
- File system ..... 202
  - Accessing ..... 224
- File transfer ..... 203
  - From file server ..... 229
  - FTP/SAMBA ..... 279
  - How to ..... 224
- File type selection ..... 219
- Filename
  - Pulse graph ..... 98
- Files
  - User data ..... 202
- Fill
  - User correction data ..... 94, 149, 166
- Fill table
  - Automatically ..... 94, 149, 166
  - UCOR ..... 163
- Fill with sensor
  - Basics ..... 167
  - Editor ..... 149, 166
- Filter
  - Power sensors ..... 183
- Filter length
  - Auto ..... 184
  - User-defiend ..... 184
- Finding out the default directory ..... 203, 368
- Firmware
  - Factory version ..... 604
  - Min. version ..... 604
  - Version ..... 604
- Fixed
  - Frequency ..... 60
- Floating licenses ..... 604
- FM ..... 68
  - Deviation ..... 74
  - Deviation mode ..... 75
  - Ratio ..... 75

- Subsystem ..... 429
- Total deviation ..... 75
- FM deviation
  - Stereo modulation ..... 80
- Format
  - SCPI Export ..... 343
- FORMat subsystem ..... 397
- FPGA/μC
  - Check for updates ..... 621
  - Check for updates of external ..... 622
  - Shut down after update internal ..... 622
  - Update installation internal assembly ..... 621
  - Update table ..... 621
- Free space
  - internal memory ..... 622
- Frequency
  - Annotation disable ..... 264
  - CW, fixed ..... 60
  - LF gen frequency ..... 81
  - LF generator ..... 103
  - LF sweep ..... 103
  - Multiplier ..... 61
  - Offset ..... 60
  - Power sensors ..... 183
  - RF signal ..... 59
  - UCOR ..... 163
- Frequency modulation ..... 74
  - Deviation mode ..... 75
  - Ratio ..... 75
  - Subsystem ..... 429
- Frequency, internal
  - AM ..... 103
  - FM ..... 103
- Front panel
  - Checking ..... 616
- Front panel test
  - Performing ..... 617
- Front panel tour ..... 30
- FTP
  - How to access the instrument ..... 224
  - LAN services ..... 268
- Function keys
  - Overview ..... 32
- G**
- Gateway ..... 297
- General configuration of instrument ..... 236
- General instrument functions
  - User key ..... 242
  - User menu ..... 242
- General instrument settings ..... 236
- Generating an unmodulated signal ..... 57
- Getting started ..... 19
- Global dwell time
  - List mode ..... 143
- Goto
  - Editor ..... 94, 149, 165
- GPIB
  - Address ..... 299
  - Change address ..... 327, 335
  - Channel address ..... 299
  - Characteristics ..... 285
  - Interface ..... 285
  - Set up remote control ..... 335
  - Visa resource string ..... 299
- GPIB address
  - Factory preset ..... 335
- GUI
  - Setting ..... 241
- GUI update
  - Setup ..... 236
- H**
- Hard copy
  - Create, how to ..... 234
  - File format ..... 232
  - Print, how to ..... 234
- Hard disk
  - Deleting temp files ..... 622
- Hardcopy ..... 230
  - Options ..... 232
- Health and utilization
  - LXI ..... 322
- Help ..... 19, 53
- HiSlip
  - Visa resource string ..... 298
- HiSLIP
  - Resource string ..... 283
- History
  - Undo/Redo ..... 277
- Host name
  - NRP sensor mapping ..... 187
  - see hostname ..... 325
- Hostname ..... 296
  - Changing ..... 325
  - LXI ..... 315
  - Syntax ..... 325
  - Use instead of IP address ..... 325
- How to
  - Calibrate RF output level with power sensor ..... 188
  - Change the default directory ..... 369
  - Checking hardware options ..... 600
  - Checking RF assembly ..... 600
  - Internal adjustments ..... 612
  - Resolve adjustments errors ..... 599
  - Run delayed adjustments ..... 613
  - Use an complete file path ..... 369
  - Use the hostname instead of IP address ..... 325
  - User key ..... 248
  - User menu ..... 244
  - Using power sensors ..... 171
- How to:
  - Enable VNC ..... 350
  - Remote control with LXI browser ..... 329
- HTTP
  - LAN services ..... 268
- HUMS ..... 304
  - About ..... 293
  - Add device tags ..... 314
  - Delete device tag entry ..... 314
  - Delete device tags ..... 314
  - Delete history ..... 305
  - Device ID ..... 313
  - Device tag key ..... 313
  - Device tag value ..... 313
  - Device tags ..... 312
  - Enhanced settings ..... 305
  - Export history ..... 305
  - LXI ..... 322
  - Protocol settings ..... 306
  - REST ..... 307

SNMP protocol .....	307	Internal adjustments	
SNMPv2 access .....	307	How to .....	612
SNMPv2 community .....	308	Internal adjustment	
SNMPv2 configuration .....	307	Continue on error .....	599
SNMPv3 user .....	308	Internal adjustments	
State .....	305	Abort on error .....	599
		About .....	609
<b>I</b>		Troubleshooting .....	599
Identification		internal memory	
Emulation mode .....	301	Deleting temp files .....	622
Remote .....	363	IP address .....	283
IDN string		Changing .....	324
Emulation mode .....	302	Dynamic .....	296
IEC/IEEE bus interface		LXI .....	315
Channel address .....	299	Not recognized .....	598
IFC .....	632	NRP sensor mapping .....	187
Impedance		Zeroconf .....	296
External modulation source .....	105	IP address mode .....	296
Impedance audio signal .....	81	IP configuration	
Import		LXI .....	318
Execute .....	97, 146, 171	IST flag	
SCPI .....	217	Remote .....	363
Import license key .....	252		
Import list files		<b>K</b>	
Basics .....	95, 169	Key	
Import/Export		★ (User) .....	33
Lists .....	144	Access on a remote computer .....	55
Select file .....	97, 146, 170, 171	Arrow .....	33
Inactive licenses .....	252	Backspace .....	32
Index		Down .....	33
List mode .....	142	Emulation .....	55
Info line .....	49, 596	Enter .....	32
Information		Esc .....	32
Internal adjustments .....	611	Freq .....	32
Input		Help .....	31
Impedance external modulations .....	105	Home .....	33
Pulse polarity .....	99	Left .....	33
Stereo modulation .....	78	Level .....	32
Trigger impedance .....	99	Local .....	31
Input connector .....	37	Mod on/off .....	32, 70
Input connectors		Next window .....	33
S/P Dif .....	37	On/Off .....	33
Stereo L/R .....	37	On/Standby .....	35
Installed assembly .....	602	Preset .....	31
Instrument		Resize window .....	33
Carrying .....	21	RF on/off .....	32
Checking .....	21	Right .....	33
Lifting .....	21	Setup .....	31
Operating site .....	21, 22	Up .....	33
Unpacking .....	21	Key panel test	
Instrument control .....	45	Check front panel .....	617
Instrument emulations .....	292, 301	Keyboard	
Instrument help .....	19	On-screen .....	51
Instrument security procedures .....	19	Setting .....	241
Instrument settings		Settings .....	237
Recall .....	364, 375	Setup .....	237
Save .....	365, 377	Subsystem .....	403
Instrument tour .....	29	Usage .....	46
Interface		Keypad	
Functions (GPIB) .....	633	On-screen .....	51
GPIB .....	285	Overview .....	34
Interface clear .....	632		
Interfaces			
GPIB .....	285		
RS232 .....	284		
USB .....	284		

- L**
- LAN
    - Connecting ..... 25
    - Environment ..... 25
    - Interface ..... 282
    - IP address ..... 283
    - Main services ..... 268
    - Reset ..... 316
    - Samba services ..... 269
    - Services ..... 266
  - LAN configuration ..... 323
    - LXI ..... 318
  - LAN interface
    - Avahi ..... 268
    - Enable ..... 268
    - FTP ..... 268
    - HTTP ..... 268
    - LAN over SCPI ..... 268
    - SMB (Samba) ..... 268
    - SSH ..... 268
    - VNC ..... 268
  - LAN status
    - LXI ..... 315
  - Language
    - Emulation ..... 301
  - Last factory calibration ..... 603
  - Last full adjustment
    - Internal adjustments ..... 610
  - Layout
    - USB keyboard ..... 239
  - Level
    - Annotation disable ..... 265
    - Behavior (RF) ..... 64, 139, 180
    - Noise generator ..... 109
  - Level default unit
    - Change ..... 502
  - Level in SCPI in V ..... 502
  - Level limit ..... 63, 179
  - Level offset
    - Power sensors ..... 183
    - RF level ..... 64
    - State (power sensors) ..... 183
  - Level range
    - Attenuator settings ..... 155
  - Level settings
    - On start-up ..... 240
  - LF frequency sweep
    - State ..... 101, 132
  - LF generator
    - Shape ..... 101
  - LF Out
    - Overview ..... 110
  - LF output ..... 107
    - Load impedance ..... 108
    - Offset ..... 108
    - Period ..... 103
    - Pulse duty cycle ..... 103
    - Pulse width ..... 103
    - Shape ..... 101
    - Source ..... 108, 111
    - Source impedance ..... 108
    - Sweep reset ..... 136
    - Trapezoid high ..... 104
    - Trapezoid rise, fall ..... 104
    - Triangle rise ..... 104
    - Voltage ..... 108
  - LF sweep
    - Frequency ..... 103
  - License
    - Keys ..... 249
    - License for software option ..... 604
    - Infos ..... 604
  - Licenses ..... 249
    - Server ..... 253
    - Settings ..... 250
  - Lifting the instrument ..... 21
  - Limit
    - RF level ..... 63, 179
  - List
    - Define ..... 144
    - Range ..... 144
    - State ..... 142
    - Values, defining ..... 148, 165
  - List file
    - Catalog ..... 144
  - List mode
    - Create list automatically ..... 94, 149, 166
    - Current index ..... 142
    - Dwell time mode ..... 142
    - Edit ..... 144
    - Execute trigger ..... 143
    - Export user data ..... 97, 146, 171
    - File settings, import/export ..... 96, 145, 170
    - Global dwell time ..... 143
    - Import/export ..... 96, 144, 145, 170
    - Load from file ..... 97, 146, 170
    - Load user data ..... 144
    - Reset ..... 143
    - Select file ..... 144
    - Settings ..... 140
    - State ..... 142
    - Trigger execute ..... 143
    - Trigger source ..... 142
  - Load
    - Impedance ..... 108
    - See recall ..... 211
  - Load instrument settings ..... 364, 375
  - Loading
    - Trying out ..... 43
  - Local to remote switch over ..... 337
  - Lock
    - Display ..... 265
  - LSB/MSB order
    - Definition ..... 397
  - LucasFonts
    - RSCorpid EULA ..... 604
  - LXI
    - Advanced configuration ..... 319
    - Browser settings ..... 316
    - Configuration ..... 355
    - Datasheet ..... 322
    - Health and utilization ..... 322
    - Hostname ..... 315
    - IP address ..... 315
    - IP configuration ..... 318
    - LAN configuration ..... 318
    - LAN status ..... 315
    - MAC address ..... 315
    - Ping ..... 320
    - Remote trace (SCPI) ..... 320
    - Reset (LXI) ..... 316
    - Status settings ..... 315
    - Tracing ..... 337

- LXI browser
  - Starting remote control ..... 329
- LXI settings ..... 315
- M**
- Mac address ..... 297
- MAC address
  - LXI ..... 315
- Maintenance ..... 609
- Managing license keys ..... 249
- Managing licenses ..... 249
- Manual interaction ..... 46
- Map network share
  - Settings ..... 219, 220
- Mapping network folders ..... 222
- Mass storage location ..... 368
- Maximal deviation
  - Frequency modulation ..... 74
  - PhiM ..... 76
- Maximal modulation frequency ..... 82
- Measured level
  - NRP level control ..... 178
- Min. version
  - Firmware ..... 604
- Minimum locking range ..... 196
- Mode
  - Attenuator settings ..... 154
  - Emulation ..... 301
  - Frequency modulation ..... 75
  - IP address ..... 296
  - List ..... 142
  - NRP power control ..... 179
  - PhiM ..... 77
  - PULM ..... 88
  - Pulse modulation ..... 88
  - Sweep ..... 132
  - User variation ..... 61, 65
- Modulation
  - AM ..... 71
  - Analog ..... 68
  - Bandwidth, external input ..... 105
  - External coupling ..... 105
  - FM ..... 71
  - Input impedance ..... 105
  - Overview ..... 109
  - Phase ..... 71
  - PhiM ..... 71
  - PM ..... 71
  - Pulse ..... 71
  - Source ..... 74
  - State ..... 74
  - Stereo modulation ..... 71, 78
- Modulation depth
  - AM ..... 77
- Modulation sensitivity
  - AM ..... 77
- Modulations state
  - Toggle ..... 70
- More free disc space
  - Deleting temp files ..... 622
- Mounting, in a rack ..... 23
- Mouse
  - Usage ..... 46
- Multiple files
  - Copy ..... 218, 226, 227
- Multiplier
  - Frequency ..... 61
- N**
- Naming conventions
  - Allowed file names ..... 202
- Navigation
  - Keys ..... 33
- Navigation controls
  - Overview ..... 32
- NDAC ..... 632
- Network
  - Connection fails ..... 598
  - Environment ..... 25
  - Settings ..... 294
- Network share
  - Mapping ..... 220, 222
  - Network status ..... 295
- New password
  - Setup (security) ..... 272
- New user password
  - Setup (security) ..... 271
- Noise
  - Distribution ..... 106
- Noise bandwidth limitation
  - System bandwidth ..... 106
- Noise generator
  - Bandwidth ..... 106
- Noise level
  - Absolute system bandwidth ..... 109
  - Relative system bandwidth ..... 109
- Noise ratio
  - Power sensors ..... 184
- Notifications ..... 594, 596
  - Device-specific ..... 595
- NRFD ..... 632
- NRP level control
  - Measured level ..... 178
- NRP power control ..... 176
  - Catch range ..... 179
  - Delay time ..... 179
  - Execute single ..... 179
  - Mode ..... 179
  - Reference level ..... 178
  - Remote command sequence ..... 503
  - Select sensor ..... 178
  - Settings ..... 177
  - State ..... 178
  - Take measured level as reference ..... 178
  - Target level ..... 178
- NRP power viewer ..... 175
  - Settings ..... 175
  - Use S-Parameter ..... 185
- NRP sensor configuration ..... 181
- NRP sensor mapping ..... 185
  - Add LAN sensor ..... 187
  - Add sensor ..... 187
  - Add USBTMC sensor ..... 188
  - Clear ..... 187
  - Connector ..... 186
  - Device ID ..... 188
  - Host name ..... 187
  - IP address ..... 187
  - Protocol ..... 186
  - Scan ..... 187
  - Sensor name ..... 186, 188



Serial number .....	188	Enter (security password) .....	270
Settings .....	186	New (security password) .....	272
NTP		New (user password (security)) .....	271
Address .....	615	Old (security password) .....	272
Number of licenses .....	604	Old user password .....	271
Numeric data entry .....	51	Protection level .....	261
Numeric parameters .....	52	Password management	
<b>O</b>		Security .....	270
Offset		Paste	
Frequency .....	60	Instrument settings .....	220
Old password		PCI bus .....	602
Setup (security) .....	272	Phase	
Old user password		Subsystem .....	501
Setup .....	271	Phase modulation .....	76
On-screen keyboard .....	52	Deviation .....	76
On-screen keypad .....	49	Deviation mode .....	76
Open source acknowledgment (OSA) .....	20	Mode .....	77
Open-source acknowledgments .....	604	Ratio .....	76
Operating site		Subsystem .....	433
Choosing .....	21	Phase reference .....	66
Setting up the instrument .....	22	Phase settings	
Operation		RF signal .....	66
Manual .....	46	PhiM	
Operation complete		Deviation mode .....	76
Remote .....	363	Mode .....	77
Operation hours .....	603	Ratio .....	76
Operation mode .....	211	Settings .....	76
Operation status register .....	291	Total deviation .....	76
Option		Pilot tone	
Expiration date .....	604	Enabling .....	83
Option: expiration date .....	604	Pilot deviation .....	83
Options		Pilot phase .....	83
Analog modulation .....	68	Ping	
Identification (remote) .....	363	LXI .....	320
Oscillator		Placing, on a bench top .....	22
Reference .....	193	PM .....	68
Output		Subsystem .....	433
LF .....	108	Polarity	
SCPI list (select file) .....	343	Pulse generator output .....	91
Source (LF output) .....	111	Pulse modulation .....	99
OUTPut		Power	
Subsystem .....	404	Connecting the instrument .....	24
Output connector .....	37, 38	UCOR .....	163
Output connectors		Power On .....	35
RF 50 Ω .....	34	Power sensors	
Output, LF		Activation .....	182
Offset .....	108	Aperture time .....	185
Voltage .....	108	Auto once .....	184
Overview		Filter .....	183
AM .....	111	Filter length .....	184
LF Out .....	110	Frequency .....	183
<b>P</b>		Level (average) .....	182
Parallel poll register enable		Level (peak) .....	182
Remote .....	364	Level offset .....	183
Parameters		Noise ratio .....	184
Entering .....	52	NRP power control .....	176
Parity		Serial number .....	182
RS232 interface .....	300	Source .....	183
Password		State .....	182
Change (security password) .....	272	State (level offset) .....	183
Change (user password (security)) .....	272	Timeout .....	184
Confirm (security password) .....	272	Unit .....	182
Confirm (user password (security)) .....	271	Update .....	174
		Use default aperture time .....	184
		Zero .....	182

Power Sensors	
Display	182
Display permanent	182
Power supply	
Connector	37
Power viewer	
Auto once	184
Power-On	
Settings	240
Power-On count	603
Power-On state	
RF level	240
Power-On/EMF	
About	240
RF signal	240
Preemphasis	81
Prefix, year, month, Day	233
Preparing for use	21
Preset	
Factory preset	207
Print	
Hard copy	234
Protection	
Settings	260
Setup	259
Protection level	
1	259
2	259
3, 4, 5	259
Adjustments	259
Calibration	259
Factory only	259
Protection level	261
Service department	259
PULM	
Delay	90
Double pulse delay	90
Double pulse width	90
Impedance (trigger input)	99
Mode	88
Period	90
Pulse polarity (input)	99
see PM	71
Source	72
State	71
Subsystem	438
Transition type	72
Width	90
Pulse	
Duty cycle	103
Length (PULM)	90
Period	103
Width	103
Width (PULM)	90
Pulse generator	
Delay	90
Output polarity	91
Output state	90
Pulse sync signal output	91
Single Trigger	91
Subsystem	500
Width	90
Pulse graph	
Filename	98
Zoom In/Out	98
Zoom position	98
Zooming	98
Pulse modulation	71
Double pulse delay	90
Double pulse width	90
Mode	88
Period	90
Pulse polarity (input)	99
Repetition frequency	90
see PM	71
Select pulse train file	93
Source	72
State	71, 72
Subsystem	438
Trigger input impedance	99
Trigger mode	89
Pulse sync out	
Pulse generator	91
Pulse train	
File catalog	93
Import/export	96, 145, 170
On/off time	94
Repetition	94
Select	93
<b>Q</b>	
QR code	314
Questionable status register	291
<b>R</b>	
R&S signed packages	
Secure update policy	262
Rack, mounting	23
Ratio	
AM	78
Amplitude modulation	78
FM	75
Frequency modulation	75
Phase modulation	76
PhiM	76
RDS	
Data set	86
Deviation	86
Enable identification of program	86
Enable traffic announcement function	87
Enable traffic program function	86
Enabling	85
Show program service name	86
Readjust	
Automatic level control	65, 155
Recall	
Instrument settings	214
User menu	244
Recall instrument settings	364, 375
Recall intermediate	214, 364
Recorded SCPI commands	
SCPI list	341
Redo	276
Clear history	277
History	277
Settings	277
State	277
Reference frequency output	
1 GHz	197
10 MHz, 100 MHz	197
Loop through	197

- Reference oscillator ..... 193
  - Adjustment ..... 198
  - Adjustment frequency ..... 198
  - External frequency ..... 195
  - Output frequency ..... 197
  - Preset ..... 195
  - Reference frequency, variable ..... 196
  - RF off state ..... 195
  - Source ..... 195
  - Synchronization bandwidth ..... 196
- Release notes ..... 20
- Reload
  - SCPI list ..... 343
- Remote access ..... 279
  - Active connections ..... 302
  - DNS server ..... 297
  - DNS suffix ..... 297
  - GPIB address ..... 299
  - GPIB resource (VISA resource string) ..... 299
  - HILIP resource (VISA resource string) ..... 298
  - HUMS ..... 304
  - Identification ..... 301
  - IDN string ..... 302
  - IEC/ IEEE bus address ..... 299
  - Instrument emulations ..... 301
  - IP address mode ..... 296
  - Language ..... 301
  - Network gateway ..... 297
  - Network hostname ..... 296
  - Network IP address ..... 296
  - Network Mac address ..... 297
  - Network resource (Ethernet resource string) ..... 298
  - Network settings ..... 294
  - Network status ..... 295
  - OPT string ..... 302
  - QR code ..... 314
  - RS232 ..... 300
  - see Remote operation from a computer ..... 46
  - Serial resource (VISA resource string) ..... 299
  - Set IDN and OPT to default ..... 301
  - Settings ..... 292
  - Socket resource (VISA resource string) ..... 298
  - Subnet mask ..... 296
  - USB resource (VISA resource string) ..... 299
  - Visa resource strings ..... 297
  - VX111 resource (VISA resource string) ..... 298
  - Workgroup name ..... 296
- Remote control ..... 54
  - Access modes ..... 280
  - GPIB ..... 335
  - GPIB interface ..... 285
  - Interfaces and protocols ..... 281
  - Programming examples ..... 361
  - Programs and libraries ..... 286
  - SCPI ..... 279
  - Source subsystem ..... 422
- Remote interfaces and protocols ..... 281
- Remote operation ..... 55
  - VNC ..... 279
- Remote trace
  - LXI ..... 320
- Removing sensitive data ..... 605
- REN ..... 632
- Rename
  - File ..... 376
  - Instrument settings ..... 220
- Reset
  - List mode ..... 143
  - RF frequency (delta phase) ..... 66
  - Sweep ..... 136
- Reset device parameters ..... 367
- Reset values
  - Remote ..... 364
- Resolving internal adjustment failures ..... 599
- Resource string
  - RS232 ..... 285
  - USB ..... 285
  - VISA ..... 283
- Restoring configuration ..... 206
- Resulting file name ..... 233
- Retrace
  - Sweep ..... 133
- RF 50  $\Omega$  connector ..... 34
- RF combined sweep
  - State ..... 132
- RF frequency
  - Configuring ..... 57
- RF frequency sweep
  - State ..... 131
- RF level
  - Configuring ..... 57
  - EMF display ..... 240
  - Offset ..... 64
  - Power-On state ..... 240
  - Setting characteristics ..... 64, 139, 180
  - Settings ..... 61
- RF level sweep
  - State ..... 131
- RF OFF mode
  - Attenuator settings ..... 155
- RF off state
  - Reference oscillator ..... 195
- RF ON, RF OFF, RF ON/OFF ..... 57
- RF output
  - Amplitude ..... 63
  - Impedance ..... 57
  - Protection ..... 155
  - State ..... 57
- RF Output
  - Level range ..... 65, 140
- RF output signal
  - Phase ..... 66
  - Phase reference ..... 66
- RF phase
  - Configuring ..... 57
- RF signal
  - Analog modulation ..... 68
  - Attenuator ..... 153
  - Frequency ..... 59
  - Phase settings ..... 66
  - Power-On/EMF ..... 240
  - User correction ..... 158
- Rotary knob ..... 32
  - User variation ..... 61, 65
- RS232
  - Baud rate ..... 300
  - Interfaces ..... 284
  - Parity ..... 300
  - Remote access ..... 300
  - Resource string ..... 285
  - Serial (VISA resource string) ..... 299
  - Stop bits ..... 300

## S

S-Parameter	
Activate corrections	185
S/P Dif connector	37
Safety instructions	13, 19
Samba services	
SMB client	269
SMB server	270
SAMBA/SMB	
How to access the instrument	224
Sanitize	264
save	
Save	211
Save	
Editor	94, 149, 166
Instrument settings	213
User menu	243
Save and load	211
Save as	
Editor	94, 149, 166
Save hard copy as	
bmp, jpg, png	232
Save immediate	213
Save instrument settings	365, 377
Save intermediate	365
Save/Recall	211
Dialog	211
How to	214
SCPI-Export	344
Saving	43
Saving files	369
Scan	
NRP sensor mapping	187
SCPI	
Error messages	595
Export	217
Export settings	342
Import	217
LAN services	268
Output file	343
SCPI export	343
File content	343
Select file	343
SCPI Export	
Format	343
SCPI list	
Commands of all settings	213
Display	341
Export	342
Recorded SCPI commands	341
Show all commands	213
SCPI remote trace	
LXI	320
SCPI script	
Select	247
SCPI-Export	
Save/Recall	344
Screen saver	
Activate	241
State	238
Wait time	238
SD card slot	34
Secure update policy	
All packages	262
Confirm unsigned	262
R&S signed packages	262
Security	
Accept settings	270
Change password (setup)	272
Change user password (setup)	272
Confirm password (setup)	272
Confirm user password (setup)	271
Display lock	265
Enter password (setup)	270
New password (setup)	272
New user password (setup)	271
Old password (setup)	272
Old user password	271
Password management	270
Sanitize	264
Secure update policy	262
Security password	272
Settings	261
Setup	259
USB storage (setup)	263
User name (setup)	271
User password	271
Volatile memory	263
Security password	
Security	272
Setup	272
Security procedures	19
Security settings	259
Select	
List mode data file	144
Setup file	247
User correction data file	162
Select file	217
Self-test	
Remote	366
Selftests	
About	609
Sensitive information	
Protecting	203, 210
Sensor	
NRP power control	178
Sensor name	
NRP sensor mapping	188
Serial	
Visa resource string	299
Serial bus	602
Serial number	325
NRP sensor mapping	188
Power sensors	182
Service manual	19
Service request enable register (SRE)	
Remote	365
Services	
LAN	266
Set IDN and OPT to default	
Emulation mode	301
Set up remote control	
GPIB	335
Settings	
Active connections	302
ALC	157
AM	77
Attenuator	154
Automatic level control	157
Check front panel	616
Delayed adjustment	611
Display	237
Instrument emulations	301

- Internal adjustments ..... 610
- Keyboard ..... 237
- Licenses ..... 250
- List mode ..... 140
- Managing ..... 202
- NRP power control ..... 177
- NRP power viewer ..... 175
- NRP sensor mapping ..... 186
- On power-on ..... 240
- Phase ..... 66
- Protection ..... 260
- Remote access ..... 292
- RF level ..... 61
- SCPI export ..... 342
- Security ..... 261
- Show SCPI command ..... 340
- UCOR ..... 161
- Undo/Redo ..... 277
- User key ..... 246
- Setup
  - Accept security settings ..... 270
  - Adjusting display ..... 236
  - Adjusting keyboard ..... 236
  - Annotation frequency ..... 264
  - Annotation level ..... 265
  - Change password ..... 272
  - Change password (security) ..... 272
  - Confirm password ..... 271
  - Confirm password (security) ..... 272
  - Display lock ..... 265
  - Enter password (security) ..... 270
  - GUI update ..... 236
  - Keyboard settings ..... 237
  - Layout (front panel keyboard) ..... 239
  - Layout (USB keyboard) ..... 239
  - New password ..... 271
  - New password (security) ..... 272
  - Old password (security) ..... 272
  - Password (protection) ..... 261
  - Performing the front panel test ..... 617
  - Protection level ..... 261
  - Screen saver ..... 238
  - Secure update policy ..... 262
  - Security password ..... 272
  - USB storage (security) ..... 263
  - User name (security) ..... 271
  - User password ..... 271
  - Wait time ..... 238
- Setup files
  - Data exchange ..... 229
- Setup key ..... 236
- Shape
  - LF gen shape ..... 81
  - LF generator ..... 101
  - LF output ..... 101
  - Period ..... 103
  - Pulse duty cycle ..... 103
  - Pulse width ..... 103
  - Sweep ..... 133
  - Trapeze high ..... 104
  - Trapezoid rise, fall ..... 104
  - Triangle rise ..... 104
- Show
  - SCPI list ..... 213
- Show SCPI command
  - Close ..... 341
  - Copy ..... 341
  - Settings ..... 340
- Signal output
  - LF ..... 107
- Signal source
  - Analog modulation ..... 68
- Single
  - Execute (list mode) ..... 143
- SMB (Samba)
  - LAN services ..... 268
- Socket
  - Visa resource string ..... 298
- Softkey bar
  - See Taskbar ..... 48
- Source
  - AM, FM,  $\Phi$ M ..... 74
  - Analog modulation ..... 68
  - Impedance ..... 108
  - LF output ..... 108, 111
  - Power sensors ..... 183
  - Pulse modulation ..... 72
  - Reference oscillator ..... 195
  - Sweep trigger ..... 132
- Source subsystem
  - Remote control commands ..... 422
- Spacing
  - Frequency sweep ..... 135, 137
  - RF frequency / level sweep ..... 135, 137
  - RF level sweep ..... 139
- Span
  - Frequency sweep ..... 137
- Specifications ..... 20
- SRQ ..... 632
- SSH
  - LAN services ..... 268
- Standby ..... 35
- Start
  - Frequency sweep ..... 137
  - RF level sweep ..... 139
- State
  - Adjustment (reference oscillator) ..... 198
  - AM, FM, PhiM ..... 74
  - Automatic level control ..... 157
  - LF frequency sweep ..... 101, 132
  - List mode ..... 142
  - NRP power control ..... 178
  - Power sensors ..... 182
  - Pulse generator output ..... 90
  - Pulse modulation ..... 71
  - RF frequency / level sweep ..... 132
  - RF frequency sweep ..... 131
  - RF level sweep ..... 131
  - RF output ..... 57
  - RF output protection ..... 155
  - Screen saver ..... 238
  - Stereo modulation ..... 80
  - UCOR ..... 162
  - Undo/Redo ..... 277
- Status bar
  - Display ..... 48
- Status byte
  - Remote ..... 362, 365
- Status information ..... 252
- Status register
  - Response format definition ..... 398

- Status reporting system ..... 289
  - Common commands ..... 362
  - Overview of status registers ..... 289
- Status settings
  - LXI ..... 315
- Step
  - Frequency sweep ..... 138
  - Linear (frequency sweep) ..... 138
  - Logarithmic (frequency sweep) ..... 138
  - RF level sweep ..... 139
- Step count
  - Combined RF frequency / level sweep ..... 139
- Step width
  - User variation ..... 61, 65
- Stereo L/R connector ..... 37
- Stereo modulation ..... 68, 78
  - Change modes ..... 80
  - Enabling ..... 80
  - Frequency of LF generator signal ..... 81
  - Impedance of external analog audio signal ..... 81
  - Maximal modulation frequency ..... 82
  - MPX deviation ..... 80
  - Preemphasis ..... 81
  - Shape of LF generator signal ..... 81
  - Source of audio signal ..... 81
- Stop
  - Frequency sweep ..... 137
  - RF level sweep ..... 139
- Stop bits
  - RS232 interface ..... 300
- Storage ..... 609
- Storage location
  - /usb/ ..... 202
  - /var/user ..... 202
  - /var/volatile ..... 202
  - Mass memory ..... 368
- Subnet mask ..... 296
- Subsystem
  - AM ..... 424
  - FM ..... 429
  - Keyboard ..... 403
  - Phase ..... 501
  - PM ..... 433
  - Power ..... 502
  - PULM ..... 438
  - Pulse generator ..... 500
  - Stereo modulation ..... 449
- Support ..... 605
- Sweep
  - Center frequency ..... 137
  - Current frequency ..... 132
  - Current level ..... 132
  - Dwell time ..... 135
  - Execute single ..... 136
  - Frequency span ..... 137
  - Mode ..... 132
  - Reset ..... 136
  - Retrace ..... 133
  - Shape ..... 133
  - Spacing ..... 135, 137, 139
  - Start/stop frequency ..... 137
  - Start/stop level ..... 139
  - State (LF frequency) ..... 101, 132
  - State (RF combined) ..... 132
  - State (RF frequency) ..... 131
  - State (RF level) ..... 131
- Step
  - Step ..... 138, 139
  - Trigger manually ..... 136
- Switching
  - On or off ..... 28
- Synchronization bandwidth
  - Reference oscillator ..... 196
- System
  - Factory preset ..... 207
- System bandwidth
  - Noise level (absolute) ..... 109
  - Noise level (relative) ..... 109
- T**
- Tab labels ..... 49
- Take measured level as reference
  - NRP power control ..... 178
- Target level
  - NRP power control ..... 178
- Temperature offset
  - Internal adjustments ..... 611
- Temporary files ..... 203, 210
- Test
  - Check front panel ..... 617
- Text entry ..... 51
- Tile diagram
  - Display ..... 48
- Time
  - UTC ..... 614
- Time protocol
  - Settings ..... 615
- Timeout
  - Filter (power sensors) ..... 184
- Tooltips
  - Show ..... 53
- Touchscreen ..... 31
  - Compared with mouse ..... 46
  - Usage ..... 46
- Touchscreen test
  - Perform ..... 618
- Tracing
  - Messages ..... 337
  - SCPI commands ..... 337
- Transition
  - PULM ..... 72
  - Pulse modulation ..... 72
- Transporting ..... 608
- Trapezoid
  - High (LF generator) ..... 104
  - Rise, fall ..... 104
- Triangle
  - Rise ..... 104
- Trigger
  - Event (remote) ..... 365
  - Execute (list mode) ..... 143
  - Sweep, manually ..... 136
- Trigger source
  - List mode ..... 142
  - Sweep ..... 132
- Tripped
  - RF output protection ..... 155
- U**
- UCOR
  - About ..... 159
  - Calibrate RF output level with power sensor ..... 188

- Data ..... 162
- Display correction file data ..... 163
- Display correction value ..... 162
- Edit data ..... 163
- Export user data ..... 97, 146, 171
- File catalog ..... 162
- File settings, import/export ..... 96, 145, 170
- Fill with sensor ..... 168
- Import/export ..... 96, 144, 145, 170
- Load from file ..... 97, 146, 170
- RF signal ..... 158
- Select file ..... 162
- Settings ..... 161
- State ..... 162
- Values, defining ..... 148, 165
- Undo ..... 276
  - Clear history ..... 277
  - History ..... 277
  - Settings ..... 277
  - State ..... 277
- Unpacking the instrument ..... 21
- USB
  - Interfaces ..... 284
  - Resource string ..... 285
  - Storage (security) ..... 263
  - Visa resource string ..... 299
- Use default aperture time
  - Power sensors ..... 184
- User correction
  - see UCOR ..... 158
- User data
  - Access ..... 215
  - Load from a specific directory ..... 370
- User files ..... 202
- User interface
  - Front panel keyboard ..... 239
  - Lock ..... 265
- User key ..... 242
  - Action name ..... 246
  - Add, change, delete action ..... 247
  - Assign actions ..... 248
  - Define action ..... 247, 248
  - SCPI command ..... 247
  - Select dialog ID ..... 247
  - Settings ..... 246
  - Toggle between define and execute mode ..... 247
- User manual ..... 19
- User menu ..... 242
  - Access ..... 244
  - Clear ..... 243
  - Create ..... 244
  - Recall ..... 244
  - Save ..... 243
  - Settings ..... 243
- User name
  - Setup (security) ..... 271
- User password
  - Security ..... 271
  - Setup ..... 271
- User preset ..... 206
- User variation
  - Activating ..... 61, 65
  - Level ..... 61, 65
  - RF ..... 61, 65
- User-definable preset
  - Recall ..... 243
- Utility keys
  - Overview ..... 31
- V**
- Variable reference frequency ..... 196
- Varying
  - RF frequency and level ..... 61, 65
- Version
  - Firmware ..... 604
- Videos ..... 20
- VISA ..... 282
  - Resource string ..... 283
- Visa resource string
  - Ethernet ..... 298
  - GPIB ..... 299
  - HISLIP ..... 298
  - Serial ..... 299
  - Socket ..... 298
  - USB ..... 299
  - VXI11 ..... 298
- Visa resource strings ..... 297
- VNC
  - How to enable ..... 350
  - LAN services ..... 268
  - Using in a LAN ..... 55
- Volatile memory ..... 203, 210
- Volatile mode
  - Activate ..... 263
- VXI11
  - Visa resource string ..... 298
- W**
- Wait
  - Remote ..... 366
- Wait time
  - Screen saver ..... 238
- Warnings ..... 594, 596
- What's new ..... 18
- White papers ..... 20
- Wi-Fi
  - WLAN ..... 352
- Width
  - Double pulse (PULM) ..... 90
  - PULM ..... 90
  - Pulse modulation ..... 90
- Workgroup name ..... 296
- Z**
- Zero
  - Power Sensors ..... 182
- Zeroconf
  - IP address ..... 598
- Zeroconf (Avahi) protocol ..... 324
- Zoom In/Out
  - Pulse graph ..... 98
- Zoom position
  - Pulse graph ..... 98
- Zooming
  - Pulse graph ..... 98