

# AmpFlex<sup>®</sup> A110

# AmpFlex<sup>®</sup> A130



**Flexible AC current sensors**

*Measure up*














# ENGLISH

Thank you for purchasing an **AmpFlex® A110 or A130** flexible current sensor.

For best results from your instrument:

- **read** these operating instructions carefully,
- **comply** with the precautions for use.

	WARNING, risk of DANGER! The operator must refer to these instructions whenever this danger symbol appears.
	WARNING, risk of electric shock. The voltage applied to parts marked with this symbol may be hazardous.
	Equipment protected by double insulation.  Earth.
	Application or withdrawal authorized on conductors carrying dangerous voltages. Type B current sensor as per IEC 61010-2-032.
	Battery.  Direction of the current.
	The product is declared recyclable following an analysis of the life cycle in accordance with standard ISO14040.
	Chauvin Arnoux has adopted an Eco-Design approach in order to design this appliance. Analysis of the complete lifecycle has enabled us to control and optimize the effects of the product on the environment. In particular this appliance exceeds regulation requirements with respect to recycling and reuse.
	The CE marking indicates conformity with European directives, in particular LVD and EMC.
	The rubbish bin with a line through it indicates that, in the European Union, the product must undergo selective disposal in compliance with Directive WEEE 2002/96/EC.

## Definition of measurement categories:

- Measurement category IV corresponds to measurements taken at the source of low-voltage installations.  
Example: power feeders, counters and protection devices.
- Measurement category III corresponds to measurements on building installations.  
Example: distribution panel, circuit-breakers, machines or fixed industrial devices
- Measurement category II corresponds to measurements taken on circuits directly connected to low-voltage installations.  
Example: power supply to electro-domestic devices and portable tools.

# PRECAUTIONS FOR USE

The A110 is protected against voltages up to 600 V with respect to earth in measurement category IV, or 1000 V in category III. The A130 is protected against voltages up to 600 V with respect to earth in measurement category III. The protection assured by the current sensor can be compromised if it is used in a way that is not recommended by the manufacturer.

- Comply with the rated maximum voltage and current and the measurement category.
- Never exceed the protection limits stated in the specifications.
- Comply with the conditions of use, that is to say temperature, humidity, altitude, degree of pollution and location of use.
- Do not use the instrument if it is open, damaged, or incorrectly reassembled. Before each use, check the integrity of the insulation on the coil, the leads, and the electronic unit.
- The application or withdrawal of the sensor on uninsulated conductors at dangerous voltages requires the use of suitable safety equipment.
- If it is not possible to power down the installation, follow safe operating procedures and use suitable means of protection.
- All troubleshooting and metrological checks must be done by competent, accredited personnel.

## CONTENTS

<b>1. PRESENTATION</b> .....	<b>26</b>	<b>4. MAINTENANCE</b> .....	<b>41</b>
1.1. General .....	26	4.1. Cleaning .....	41
1.2. Single-phase AmpFlex® .....	26	4.2. Replacing the batteries.....	41
1.3. Three-phase AmpFlex® .....	27	<b>5. WARRANTY</b> .....	<b>42</b>
<b>2. CURRENT MEASUREMENT</b> .....	<b>28</b>	<b>6. TO ORDER</b> .....	<b>43</b>
2.1. Measurement principle .....	28	6.1. Accessories and spares.....	43
2.2. Use .....	28	6.2. Specific models .....	44
2.3. Mains adapter (option).....	32		
<b>3. CHARACTERISTICS</b> .....	<b>34</b>		
3.1. Reference conditions.....	34		
3.2. Electrical characteristics .....	34		
3.3. Variations in the range of use .....	35		
3.4. Typical frequency response curves .....	36		
3.5. Frequency limitation as a function of amplitude .....	38		
3.6. Power supply .....	38		
3.7. Environmental conditions .....	39		
3.8. Construction specifications.....	40		
3.9. Conformity to international standards.....	40		
3.10. Electromagnetic compatibility (CEM) .....	40		

# 1. PRESENTATION

## 1.1. GENERAL


AmpFlex® sensors take the form of a flexible coil connected by a shielded lead to a housing containing the signal processing electronics, powered by batteries.

The flexibility of the sensors facilitates the clamping of the conductor to be measured, whatever its nature (cable, bar, strand, etc.) and its accessibility. The design of the coil opening and closing device, by snap locking, allows handling while wearing protective gloves.

The electronic unit can be connected to the mVAC or VAC input of a measuring instrument having an input impedance of  $\geq 1 \text{ M}\Omega$ .

## 1.2. SINGLE-PHASE AMPFLEX®


AmpFlex® series A110 single-phase sensors constitute a line of three models, 45, 80, and 120 cm long, that convert alternating currents ranging from 3 to 3000 A (for the 45 and 80 cm models) or from 30 to 30,000 A (for the 120 cm model) into proportional AC voltages.

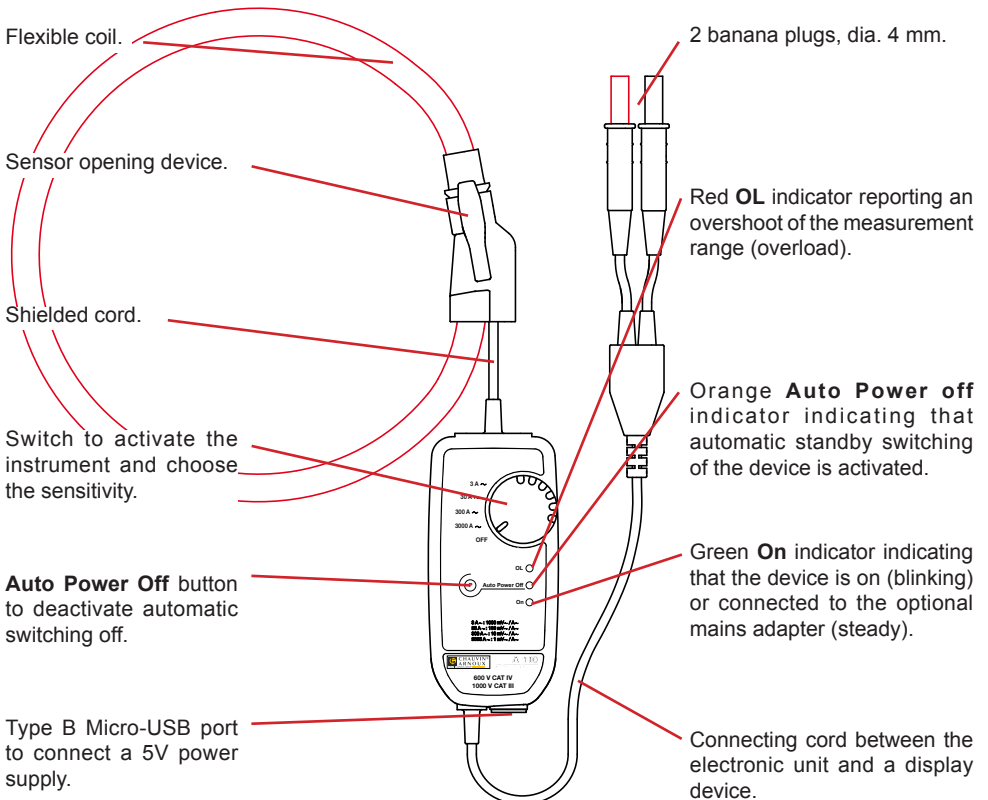

### 1.3. THREE-PHASE AMPFLEX®

The AmpFlex® series A130 sensor converts alternating currents ranging from 30 to 3000 A into proportional AC voltages. It comprises 3 sensors 80 cm long connected to the electronic unit. The output is via 3 BNC connectors on which it is possible to place the adapters provided in order to obtain outputs with 2 safety plugs.

The three outputs of the electronic unit can be connected to a standard wattmeter (as auxiliary inputs), to multimeters, to a recorder, etc.

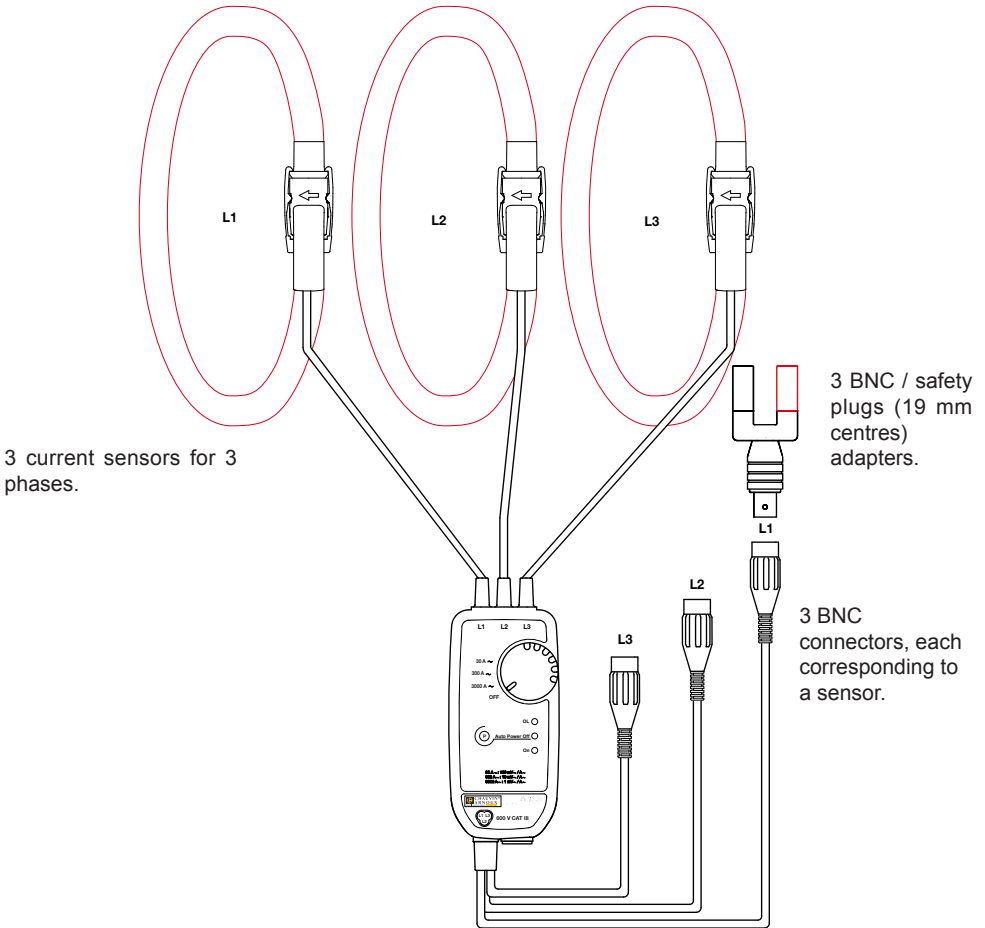

The multimeter or instrument connected must have a maximum voltage and a measurement category at least equal to those of the AmpFlex® sensor, since otherwise the maximum voltage and category of the assembly will be those of the lowest-rated component.

## 2. CURRENT MEASUREMENT

### 2.1. MEASUREMENT PRINCIPLE

The sensors use the principle of the Rogowski coil.


The sensor used achieves:

- very good linearity and no saturation effect (and so no overheating);
- a wide measurement dynamic, up to several kA;
- insensitivity to DC (measurement of the AC component of any AC + DC signal);
- light weight (no magnetic circuit).

### 2.2. USE

#### 2.2.1. CONNECTING THE A110


Connect the output leads to a measuring instrument having an input impedance  $\geq 1 \text{ M}\Omega$ . Switch it on and set to AC voltage measurement.

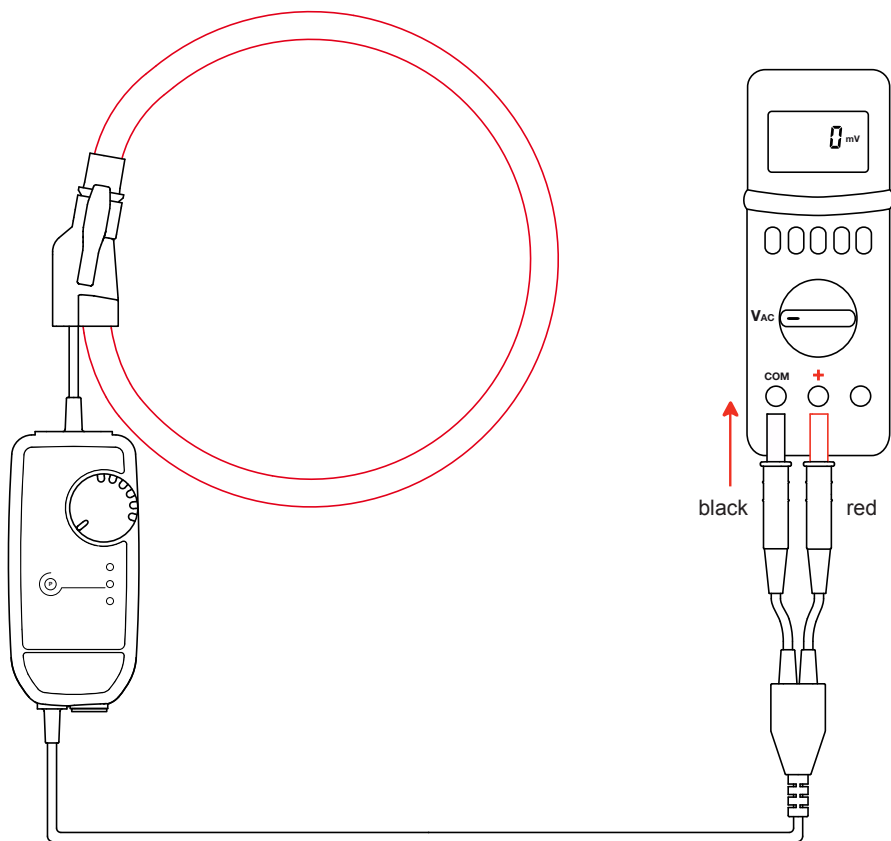

Put the electronic unit into operation by turning the switch to some position. The green **On** indicator starts blinking.




Press both sides of the opening device to open the flexible coil.

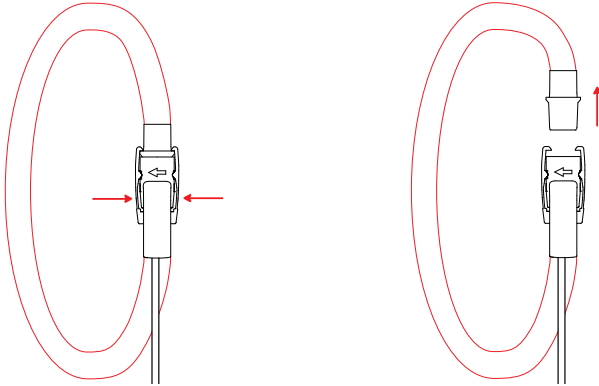

Open it and place it around the conductor carrying the current to be measured (only one conductor in the sensor). Close the coil. You must hear the “click”.



In the case of an uninsulated conductor at a dangerous voltage, use individual protection equipment.

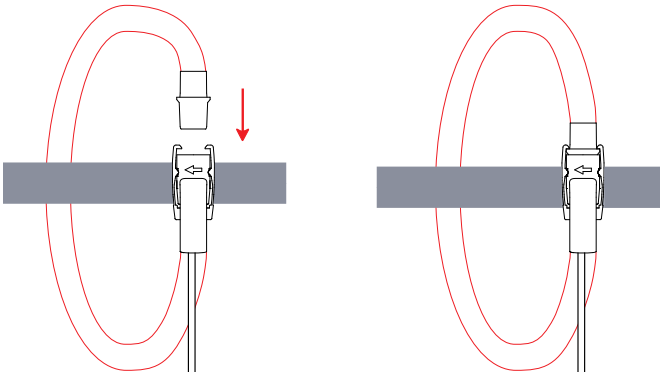

To optimize measurement quality, centre the conductor in the coil.

Set the switch of the electronic unit to the range providing the best sensitivity and check that the red **OL** indicator is off (saturation of the electronics entailing a measurement error).

Read the measurement on the multimeter, applying the reading coefficient indicated on the label on the electronic unit corresponding to the setting of the switch.

3 A~ range	1000 mV~/A~	and	30 A~ range	100 mV~/A~
30 A~ range	100 mV~/A~		300 A~ range	10 mV~/A~
300 A~ range	10 mV~/A~		3000 A~ range	1 mV~/A~
3000 A~ range	1 mV~/A~		30000 A~ range	0.1 mV~/A~

Multiply the reading by the coefficient.

For example, a reading of 1 V on the measuring instrument corresponds to a current of  $\frac{1 \text{ V}}{10 \text{ mV/A}} = 100 \text{ A}$  in the 300 A~ range.


### 2.2.2. DISCONNECTING THE A110

Withdraw the flexible coil from the conductor, set the switch to **OFF**, and disconnect the electronic unit from the multimeter.

### 2.2.3. IDENTIFYING THE SENSORS OF THE A130

To identify the sensors and the output leads, you can mark them with the coloured rings provided with the device.

Clip rings of the same colour on the sensor and on the corresponding output leads.

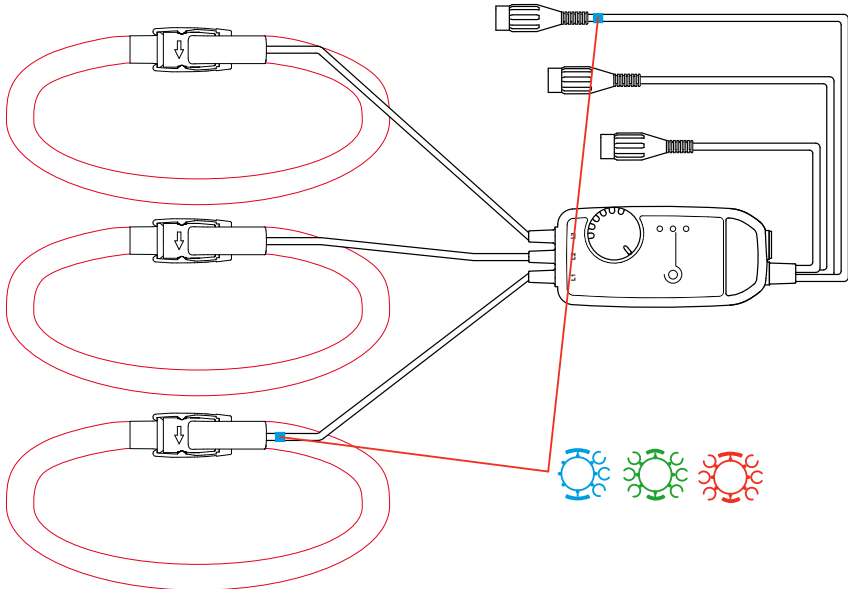





## 2.2.4. CONNECTING THE A130

Proceed as for the A110:

- Connect the output leads to a measuring instrument.
- Put the electronic unit into operation by turning the switch to some position. The green **On** indicator starts blinking.



- Open the 3 sensors and place them on the 3 phases.

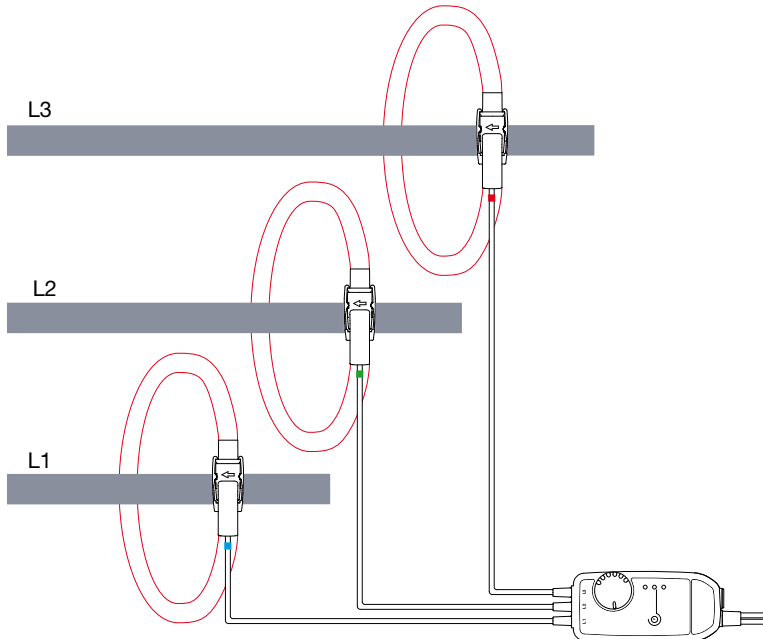

- Set the switch on the electronic unit to the range providing the best sensitivity and check that the red **OL** indicator is off (saturation of the electronics entailing a measurement error).
- Read the measurement on the display device and apply the reading coefficient indicated on the label on the electronic unit corresponding to the setting of the switch.

30 A~ range	100 mV~/A~
300 A~ range	10 mV~/A~
3000 A~ range	1 mV~/A~

## 2.2.5. DISCONNECTING THE A130

Withdraw the 3 sensors from the 3 conductors, set the switch to **OFF**, and disconnect the electronic unit from the display device.


### 2.2.6. AUTOMATIC SLEEP MODE

When the device is started up, it operates for 10 minutes, then automatically switches itself to sleep mode in order to save the batteries.

To report that the automatic power off function is active, the orange **Auto Power Off** indicator is lit.




It is possible to override automatic power off. This is done by switching the device on by turning the switch to one of the measurement positions and at the same time pressing the **Auto Power Off** button for more than 2 seconds. The orange **Auto Power Off** indicator remains off.

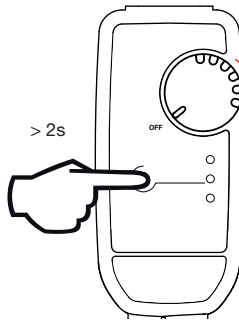


### 2.3. MAINS ADAPTER (OPTION)

For long-duration measurements, it is possible to connect the electronic unit to line power.

Withdraw the protection from the type B micro-USB connector, then connect the lead. You can use any mains/micro-USB adapter that delivers 100 mA or more.

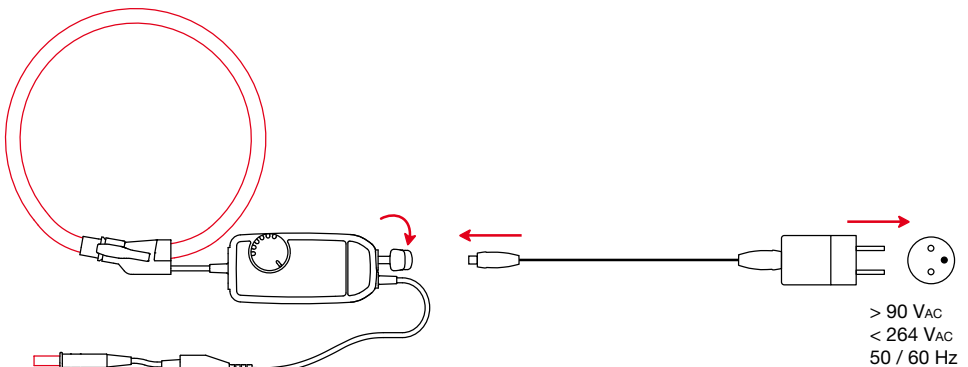

The green **On** indicator remains on but its brightness varies to indicate that the batteries are OK.

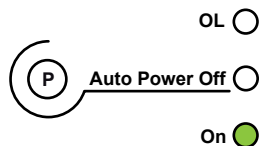

While the external power supply is present, automatic power off is disabled. But if the supply is cut off, the batteries take over and automatic power off acts at the end of 10 minutes.

If you make long-duration records, you must deactivate automatic power off (see § 2.2.6).

The insulation between the type B micro-USB connector and the measurement output is 1000 V CAT III or 600 V CAT IV. That makes it possible to connect the device without risk to wattmeters having uninsulated inputs. The type B micro-USB connector must not be in contact with conductors or uninsulated parts at dangerous voltages.

## 3. CHARACTERISTICS

### 3.1. REFERENCE CONDITIONS

Quantity of influence	Reference values
Temperature	23 ± 5 °C
Relative humidity	20 to 75 % RH
Frequency of the signal measured	30 to 440 Hz
Type of signal	sinusoidal
Instrument turn-on time	1 minute
External electric field	null
External DC magnetic field (earth's field)	< 40 A/m
External AC magnetic field	null
Position of the conductor in the coil	centred
Shape of the measurement coil	circular, no applied stress
Input impedance of the display device connected to the electronic unit	≥ 1 MΩ

### 3.2. ELECTRICAL CHARACTERISTICS

Model	Single-phase 45 and 80 cm		Single-phase 120 cm		Three-phase 80 cm
Range	3 A	<ul style="list-style-type: none"> <li>▪ 30 A</li> <li>▪ 300 A</li> <li>▪ 3 000 A</li> </ul>	30 A	<ul style="list-style-type: none"> <li>▪ 300 A</li> <li>▪ 3 000 A</li> <li>▪ 30 000 A</li> </ul>	<ul style="list-style-type: none"> <li>▪ 30 A</li> <li>▪ 300 A</li> <li>▪ 3 000 A</li> </ul>
Specified measurement range	0,5 ... 3 A	<ul style="list-style-type: none"> <li>▪ 2 ... 30 A</li> <li>▪ 5 ... 300 A</li> <li>▪ 50 ... 3000 A</li> </ul>	0,5 ... 30 A	<ul style="list-style-type: none"> <li>▪ 10 ... 300 A</li> <li>▪ 10 ... 3 000 A</li> <li>▪ 50 ... 30 000 A</li> </ul>	<ul style="list-style-type: none"> <li>▪ 5 ... 30 A</li> <li>▪ 5 ... 300 A</li> <li>▪ 50 ... 3000 A</li> </ul>
Output/input ratio (mV~/A~)	1000	<ul style="list-style-type: none"> <li>▪ 100</li> <li>▪ 10</li> <li>▪ 1</li> </ul>	100	<ul style="list-style-type: none"> <li>▪ 10</li> <li>▪ 10</li> <li>▪ 0.1</li> </ul>	<ul style="list-style-type: none"> <li>▪ 100</li> <li>▪ 10</li> <li>▪ 1</li> </ul>
Maximum peak factor	1.5 at I <sub>N</sub> (I nominal)				
Intrinsic uncertainty (% of output signal)	≤1% + 40 mV	<ul style="list-style-type: none"> <li>▪ ≤1% + 4 mV</li> <li>▪ ≤1.5% + 0.4 mV (I&lt;10% I<sub>N</sub>)</li> <li>▪ ≤1% + 0.4 mV (I≥10% I<sub>N</sub>)</li> <li>▪ ≤1.5%+ 0.04 mV (I&lt;10% I<sub>N</sub>)</li> <li>▪ ≤1% + 0.04 mV (I≥10% I<sub>N</sub>)</li> </ul>	≤1% + 4 mV	<ul style="list-style-type: none"> <li>▪ ≤1% + 0.4 mV</li> <li>▪ ≤1.5% + 40μV (I&lt;10% I<sub>N</sub>)</li> <li>▪ ≤1% + 40μV (I≥10% I<sub>N</sub>)</li> <li>▪ ≤1.5%+ 4μV (I&lt;10% I<sub>N</sub>)</li> <li>▪ ≤1% + 4μV (I≥10% I<sub>N</sub>)</li> </ul>	<ul style="list-style-type: none"> <li>▪ ≤1% + 4 mV</li> <li>▪ ≤1.5% + 0.4 mV (I&lt;10% I<sub>N</sub>)</li> <li>▪ ≤1% + 0.4 mV (I≥10% I<sub>N</sub>)</li> <li>▪ ≤1.5%+ 0.04 mV (I&lt;10% I<sub>N</sub>)</li> <li>▪ ≤1% + 0.04 mV (I≥10% I<sub>N</sub>)</li> </ul>
Max. offset voltage	0 mV <sub>DC</sub>				
Phase shift at 50 Hz	≤1° (0.5° typical)				

Model	Single-phase 45 and 80 cm		Single-phase 120 cm		Three-phase 80 cm
Max. output voltage	- 4.5 V <sub>peak</sub> ≤ V ≤ + 4.5 V <sub>peak</sub>				
Frequency response (3)	10 Hz to 10 kHz	10 Hz to 20 kHz	10 Hz to 5 kHz	10 Hz to 20 kHz	10 Hz to 20 kHz

(3): Beyond 300 A<sub>RMS</sub>, see the curves at § 3.5.



The peak value is limited only by the electronics of the measurement unit (red **OL** indicator on).  
The coil alone can briefly withstand higher peak factors with no risk of overheating or destruction.


### 3.3. VARIATIONS IN THE RANGE OF USE

Quantity of influence	Range of influence	Error in % of reading	
		Typical	Maximum
Battery voltage	1.8 to 3.2V	0.02 %	0.1 %
Temperature	-10 to + 55 °C	0.15 % / 10 °C	0.50 % / 10 °C
Relative humidity	10 to 90%RH	0.2 %	0.5 %
USB supply voltage	5 V	0.5 %	1.5 %
Position of the conductor in the undeformed sensor	Any position	1 %	2.5 %
Adjacent conductor carrying an AC voltage	Conductor touching sensor	0.2 %	1 % (2 % near snap lock)
Deformation of the sensor	Oblong shape	0.2 %	1 %
Common mode rejection	600 V between the jacket and the secondary	100 dB	80 dB


### 3.4. TYPICAL FREQUENCY RESPONSE CURVES

#### 3.4.1. AMPLITUDE ERROR

Single-phase, 3A, 30A, 300A and 3000A ranges

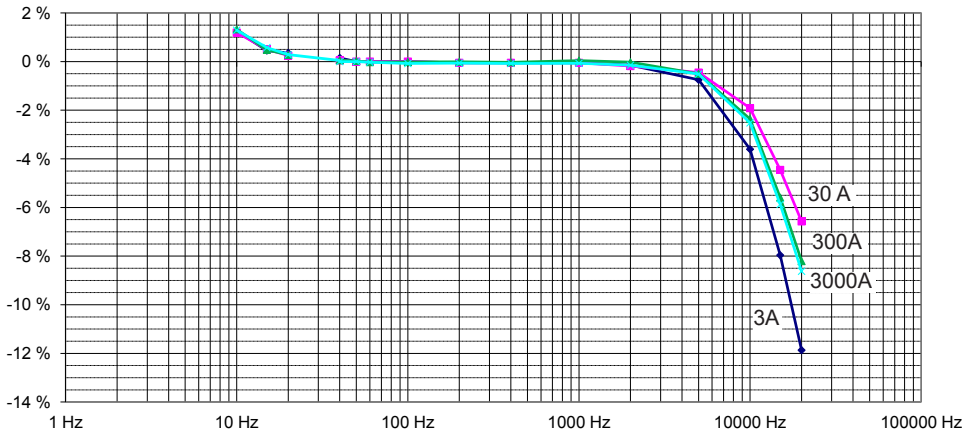


Three-phase, 30A, 300A and 3000A ranges

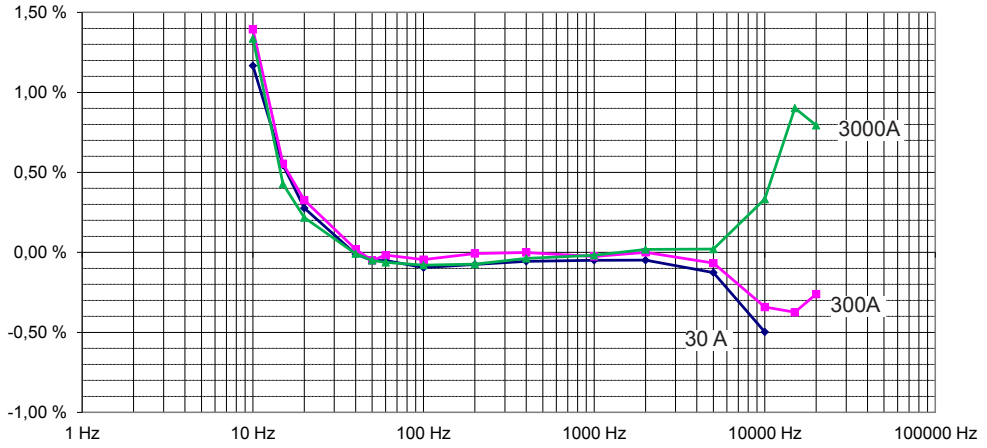


### 3.4.2. PHASE ERROR

#### Single-phase, 3A, 30A and 300A ranges

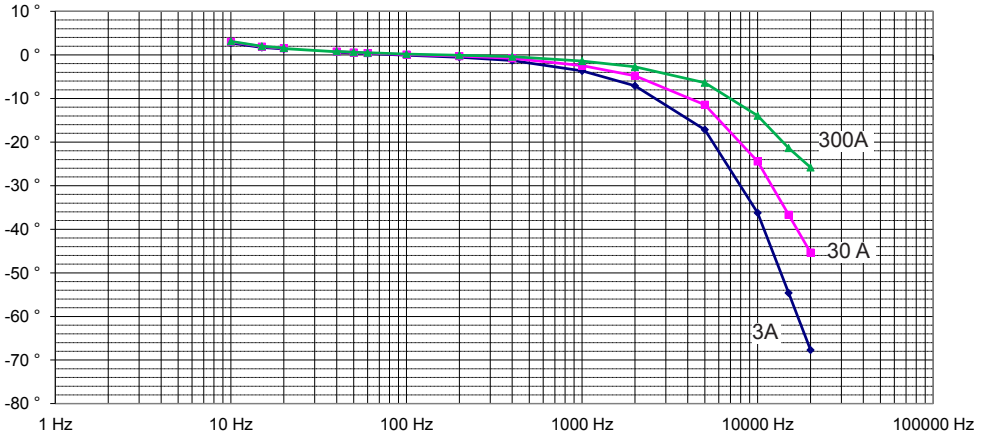

#### Three-phase, 30A, 300A and 3000A ranges

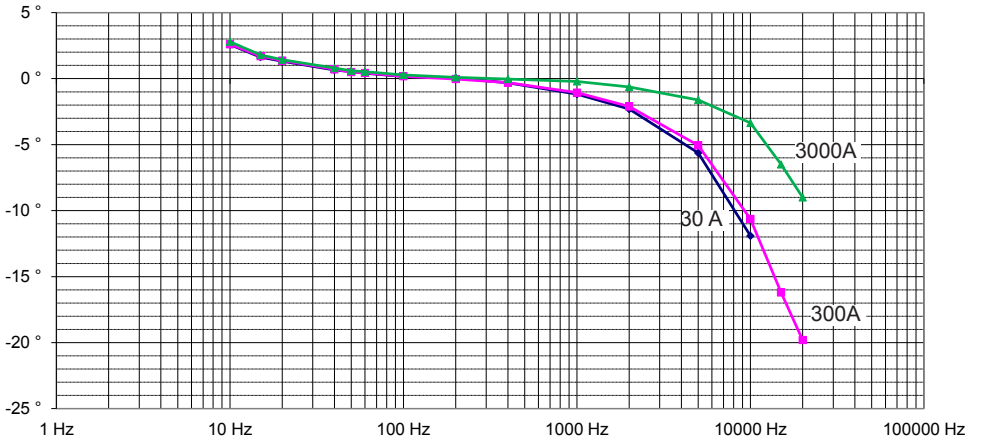


### 3.5. FREQUENCY LIMITATION AS A FUNCTION OF AMPLITUDE


In the 3A, 30A, 300A and 3000 A ranges:

In the 3A, 30A, and 300A ranges, with a frequency  $\leq 20$  kHz, there is no frequency derating.

3,000A range

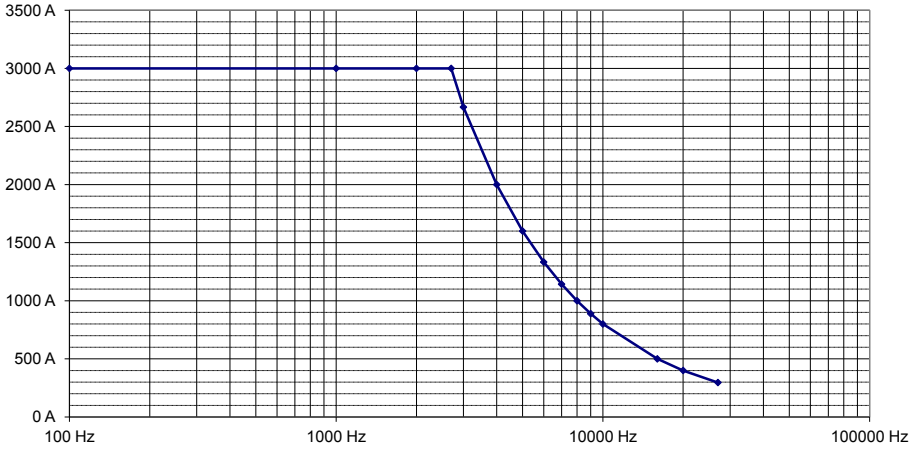

30,000A range

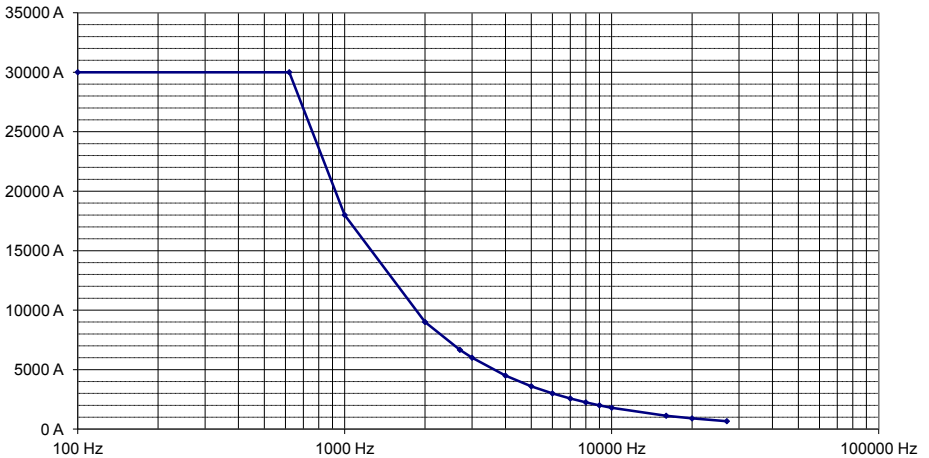

### 3.6. POWER SUPPLY

#### 3.6.1 BY BATTERIES

The device is powered by two 1.5 V alkaline batteries (type AA or LR6).

The nominal operating voltage is lies between 1.8 and 3.2 V.



The mean battery life is:

- A110 single-phase
  - 300 h in continuous operation
  - 1,800 10-minute measurements
- A130 three-phase
  - 500 h in continuous operation
  - 3,000 10-minute measurements

When the device is not connected to line power and the green **On** indicator goes off, the batteries must be replaced (see § 4.2).

### 3.6.2. MAINS ADAPTER (OPTION)

The device can be powered by a standard mains adapter (5 V<sub>DC</sub>, 100 mA) with a type B micro-USB connector.


When the adapter is connected and the switch is set to **OFF**, the **On** indicator is lit steadily.

When the device is on, the brightness of the **On** indicator varies to indicate that the batteries are OK. If the indicator remains on steadily, the batteries must be replaced.

## 3.7. ENVIRONMENTAL CONDITIONS

The device must be used in the following conditions:

% RH

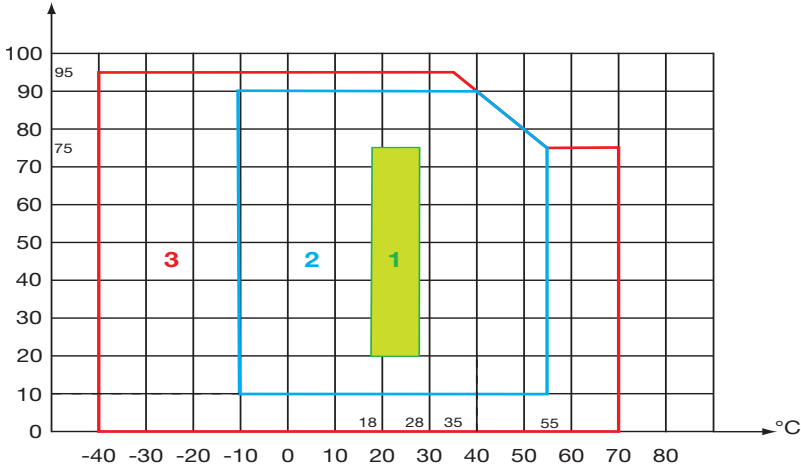

- 1: Range of reference
- 2: Operating range
- 3: Storage range (without battery)

For an extended period of non-use or storage, withdraw the batteries from the electronic unit. The sensor by itself can withstand a maximum temperature of 90°C for 10 minutes.

Degree of pollution: 2.

Altitude: < 2000 m.

### 3.8. CONSTRUCTION SPECIFICATIONS

Coil

Length (mm)	450	800	1200
Clamping diameter (mm)	120	235	360

Shielded lead 4 mm in diameter between the sensor and the electronic unit:

- A110: 2 metres long
- A130: 3 metres long

Electronic unit:

- Overall dimensions: 120 x 58 x 36 mm
- A110: Output by a cable 50 cm long and 2 plugs 4 mm in diameter.
- A130: Output by a cable 50 cm long and 3 BNC connectors.

Mass of the device:

- A110: approximately 360, 450, and 500 g, depending on the size of the sensor.
- A130: approximately 1 kg.

Protection index:

IP 54 for the electronic unit and IP 67 for the flexible sensor per IEC 60529.

The flexible coil stands up well to oils and aliphatic hydrocarbons.

### 3.9. CONFORMITY TO INTERNATIONAL STANDARDS

Electrical safety per IEC 61010-2-032 for type B sensors.

Single-phase electronic unit and connecting cable to the measuring instrument	Three-phase electronic unit and connecting cable to the measuring instrument	Sensor and connecting cable to the electronic unit
Double insulation	Double insulation	Double insulation
Measurement category: IV	Measurement category: III	Measurement category: IV
Rated voltage: 600V <sup>(1)</sup>	Rated voltage: 600 V	Rated voltage: 1000 V

(1): or 1000 V in category III.

The 250 V mains adapter (option).

### 3.10. ELECTROMAGNETIC COMPATIBILITY (CEM)

Emissions and immunity in an industrial environment per IEC 61326-1.

## 4. MAINTENANCE



Except for the batteries, the instrument contains no parts that can be replaced by personnel who have not been specially trained and accredited. Any unauthorized repair or replacement of a part by an “equivalent” may gravely impair safety.

### 4.1. CLEANING

Disconnect the unit completely and turn the rotary switch to OFF.


Use a soft cloth, dampened with soapy water. Rinse with a damp cloth and dry rapidly with a dry cloth or forced air. Do not use alcohol, solvents, or hydrocarbons.

See to it that no foreign body interferes with the operation of the snap lock device of the sensor.

### 4.2. REPLACING THE BATTERIES

The batteries must be replaced when the **On** indicator remains off upon switching on.

- Disconnect the unit completely and turn the rotary switch to OFF.
- Use a screwdriver to unscrew the two screws closing the electronic unit.
- Replace the spent batteries with new batteries (1.5V AA or LR6 alkaline batteries).
- Place the batteries in their compartment, taking care with the polarities.
- Close the electronic unit and make sure that it is completely and correctly closed.
- Screw the two screws back in.

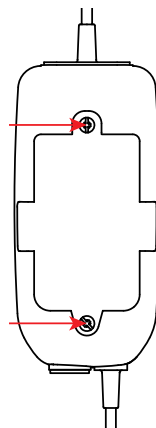

Spent primary and storage batteries must not be treated as ordinary household waste. Take them to the appropriate collection point for recycling.

## 5. WARRANTY

---

Except as otherwise stated, our warranty is valid for **24 months** starting from the date on which the equipment was sold. Extract from our General Conditions of Sale provided on request.

- The warranty does not apply in the following cases:
- Inappropriate use of the equipment or use with incompatible equipment;
- Modifications made to the equipment without the explicit permission of the manufacturer's technical staff;
- Work done on the device by a person not approved by the manufacturer;
- Adaptation to a particular application not anticipated in the definition of the equipment or not indicated in the user's manual;
- Damage caused by shocks, falls, or floods.

## 6. TO ORDER

### AmpFlex® series A110 single-phase sensor - 45, 80 or 120 cm

Supplied in a cardboard box with:

- two 1.5 V batteries (AA or LR6),
- one multilingual safety data sheet,
- a user manual in 5 languages,
- a verification certificate.


### AmpFlex® series A130 three-phase sensor - 80 cm

Supplied in a cardboard box with:

- two 1.5 V batteries (AA or LR6),
- one set of 12 inserts and rings to identify the current sensors and the leads,
- 3 female BNC / 2 male plug adapters  $\varnothing$  4mm (one red and one black), 19 mm centres,
- one multilingual safety data sheet,
- a user manual in 5 languages,
- a verification certificate.

## 6.1. ACCESSORIES AND SPARES


Type B 5V 1A mains-micro USB adapter



Set of 5 Velcro fasteners

Set of inserts and rings to identify phases and current sensors

Set of 2 adapters, female BNC to 2 male plugs 4mm in diameter (one red and one black) with 19mm spacing

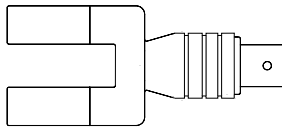

For the accessories and spares, consult our web site:

[www.chauvin-arnoux.com](http://www.chauvin-arnoux.com)

## 6.2. SPECIFIC MODELS

### AmpFlex® series A110 single-phase sensor

- The sensors are available in specific lengths, from 50 cm to 10 m in 5-cm increments.
- The connecting cable between the sensor and the electronic unit is available in specific lengths, from 50 to 1000 cm in 10-cm increments.

### AmpFlex® series A110 three-phase sensor

- The sensors are available in specific lengths, from 50 cm to 10 m in 5-cm increments.
- The connecting cable between the sensor and the electronic unit is available in specific lengths, from 50 to 1000 cm in 10-cm increments.
- The output can take the form of:
  - 3 leads (from 50 cm to 300 cm long, in 10-cm increments) with two stripped and tinned conductors (instrument 600 V cat. III provided that a 600V cat. III connector is added on the conductors)
  - 3 coaxial cables 50 cm long terminated by an insulated male BNC connector (instrument 600 V cat. III)
  - 3 leads 50 cm long terminated by 2 insulated 4mm banana plugs, one red and one black (instrument 600 V cat. IV)

The characteristics of the sensors will be identical to those of the A110 and A130, but the pass band will be specified only up to 5 kHz.

The length of the cables may introduce further influences.



In all cases, for specific models, get in touch with our sales staff.



北京海洋兴业科技股份有限公司 (证券代码: 839145)

北京市西三旗东黄平路19号龙旗广场4号楼 (E座) 906室

邮编: 100096

电话: 010-62176775 62178811 62176785

传真: 010-62176619

企业QQ: 800057747 维修QQ: 508005118

邮箱: market@oitek.com.cn

企业官网: www.hyxyq.com

购线网: www.gooxian.com



扫描二维码关注我们

查找微信公众号: 海洋仪器